

**2005 Acura RL**

2005-06 ACURA RL

**2005-06 ACURA****RL****BUZZERS, RELAYS & TIMERS****BUZZERS, RELAYS & TIMERS LOCATION**

<b>Component</b>	<b>Location</b>
Accessory Power Socket Relay (20)	In driver's under-dash fuse/relay box. See <b>Fig. 193</b> .
A/C Compressor Clutch Relay (2)	In under-hood fuse/relay box. See <b>Fig. 191</b> .
ACC Relay (2)	In auxiliary under-dash relay box. See <b>Fig. 196</b> .
A/F Sensor Relay (21)	In driver's under-dash fuse/relay box. See <b>Fig. 193</b> .
Blower Motor Relay (1)	In under-hood fuse/relay box. See <b>Fig. 191</b> .
DRL Relay (1)	In auxiliary under-hood relay box. See <b>Fig. 192</b> .
Fog Light Relay (14)	In under-hood fuse/relay box. See <b>Fig. 191</b> .
Fuel Fill Door Opener Relay (5)	In passenger's under-dash fuse/relay box. See <b>Fig. 194</b> .
HVAC Control Motor Relay	Behind right side of dash. See <b>Fig. 92</b> .
Ignition Coil Relay (24)	In driver's under-dash fuse/relay box. See <b>Fig. 193</b> .
IG2 Relay (1)	In auxiliary under-dash relay box. See <b>Fig. 196</b> .
Keyless Answer Back Buzzer	Behind middle of rear bumper. See <b>Fig. 168</b> .
Optional Relay (12)	In passenger's under-dash fuse/relay box. See <b>Fig. 194</b> .
PGM-FI Main Relay 1 (22)	In driver's under-dash fuse/relay box. See <b>Fig. 193</b> .
PGM-FI Main Relay 2 (25)	In driver's under-dash fuse/relay box. See <b>Fig. 193</b> .
Radiator Fan Control (RFC) Unit Relay (2)	In auxiliary under-hood relay box. See <b>Fig. 192</b> .
Rear Window Defogger Relay (3)	In under-hood fuse/relay box. See <b>Fig. 191</b> .
Seat Heater Relay (4)	In passenger's under-dash fuse/relay box. See <b>Fig. 194</b> .
SH-AWD Relay	Behind rear seat. See <b>Fig. 150</b> .
Starter Cut Relay 1 (1) (2005)	In auxiliary under-dash relay holder. See <b>Fig. 195</b> .
Starter Cut Relay 1 (1) (2006)	In auxiliary under-dash relay holder. See <b>Fig. 203</b> .
Starter Cut Relay 2 (19)	In driver's under-dash fuse/relay box. See <b>Fig. 193</b> .
Throttle Actuator Control Module Relay (13)	In passenger's under-dash fuse/relay box. See <b>Fig. 194</b> .
Turn Signal/Hazard Relay 2 (Sounder)	Under left side of dash. See <b>Fig. 43</b> .
Turn Signal/Hazard Relay (4)	In driver's under-dash fuse/relay box. See <b>Fig. 193</b> .

Windshield Wiper Motor Relay (15)

In under-hood fuse/relay box. See **Fig. 191** .

## CIRCUIT PROTECTION DEVICES

### CIRCUIT PROTECTION DEVICES LOCATION

Component	Location
Auxiliary Under-Dash Fuse Holder	Under left side of dash. See <b>Fig. 65</b> .
Auxiliary Under-Dash Relay Box	Under left side of dash. See <b>Fig. 64</b> .
Auxiliary Under-Dash Relay Holder	Under left side of dash. See <b>Fig. 65</b> .
Auxiliary Under-Hood Relay Box	Left rear of engine compartment. See <b>Fig. 35</b> .
Battery Terminal Fuse Box (+)	In battery terminal fuse box. See <b>Fig. 33</b> .
Driver's Under-Dash Fuse/Relay Box	Behind left kick panel. See <b>Fig. 61</b> .
Passenger's Under-Dash Fuse/Relay Box	Behind right kick panel. See <b>Fig. 97</b> .
Under-Hood Fuse/Relay Box	Left rear of engine compartment. See <b>Fig. 31</b> .

## CONTROL UNITS

### CONTROL UNITS LOCATION

Component	Location
ACC Control Unit (2006)	Behind right side of dash. See <b>Fig. 201</b> .
Active Noise Control Unit	Right side of trunk. See <b>Fig. 165</b> .
AcuraLink Control Unit (XM Receiver)	On left side of trunk. See <b>Fig. 157</b> .
Adaptive Front Lighting Control Unit	Under left side of dash. See <b>Fig. 66</b> .
Driver's MPCS Unit	In driver's door. See <b>Fig. 134</b> .
DRL Control Unit	Under left side of dash. See <b>Fig. 67</b> .
ECPS Control Unit	Under left side of dash. See <b>Fig. 66</b> .
E-Tensioner Unit (2006)	Under middle of dash. See <b>Fig. 199</b> .
Front Passenger's MPCS Unit	In front passenger's door. See <b>Fig. 135</b> .
Fuel Pump Control Module	In left "C" pillar. See <b>Fig. 149</b> .
Hands FreeLink Control Unit	Behind right kick panel. See <b>Fig. 99</b> .
Immobilizer Control Unit-Receiver	On right side of steering column. See <b>Fig. 49</b> .
Imoes Unit	Under right side of dash. See <b>Fig. 90</b> .
Keyless Access Control Unit	Under left side of dash. See <b>Fig. 60</b> .
Keyless Access RF Unit 1	Behind middle of dash. See <b>Fig. 75</b> .
Keyless Access RF Unit 2	Middle of rear shelf. See <b>Fig. 161</b> .
Main Antenna Module	In right "C" pillar. See <b>Fig. 142</b> .
Moonroof Control Unit	Rear of roof. See <b>Fig. 141</b> .
Navigation Unit	In trunk, below left side of package tray. See <b>Fig. 158</b> .
OnStar Control Unit	Behind rear seat. See <b>Fig. 151</b> .
OPDS Unit	In front passenger's seat back. See <b>Fig. 110</b> .
PCM	Under middle of dash. See <b>Fig. 82</b> .
Power Rear Window Sunshade Control Unit	Middle of rear shelf. See <b>Fig. 160</b> .
Power Seat Control Unit	Under driver's seat. See <b>Fig. 106</b> .



**2005 Acura RL**

2005-06 ACURA RL

Power Tilt/Telescopic Steering Control Unit	Under left side of dash. See <b>Fig. 42</b> .
RFC Unit	Front middle of engine compartment. See <b>Fig. 29</b> .
SH-AWD Control Unit	Behind rear seat. See <b>Fig. 154</b> .
SRS Unit	Under lower middle of dash. See <b>Fig. 80</b> .
Sub-Antenna Module	In left "C" pillar. See <b>Fig. 146</b> .
Throttle Actuator Control Module	Behind right kick panel. See <b>Fig. 100</b> .
VSA Modulator-Control Unit	On right side of engine compartment. See <b>Fig. 2</b> .

## MOTORS

### MOTORS LOCATION

<b>Component</b>	<b>Location</b>
Blower Motor	Under right side of dash. See <b>Fig. 94</b> .
Center/Left/Right Rear Headrest Actuator	Behind respective rear seat headrest. See <b>Fig. 117</b> .
Driver's Air Mix Control Motor	Below left side of dash. See <b>Fig. 69</b> .
Driver's Cool Vent Control Motor	Under left side of dash. See <b>Fig. 68</b> .
Driver's Lumbar Support Motor Connector	Under right side of driver's seat. See <b>Fig. 103</b> .
Driver's Power Seat Slide Motor	Under driver's seat. See <b>Fig. 106</b> .
Driver's Power Window Motor	Center of driver's door. See <b>Fig. 132</b> .
Front Passenger's Air Mix Control Motor	Behind right side of dash. See <b>Fig. 89</b> .
Front Passenger's Cool Vent Control Motor	Behind right side of dash. See <b>Fig. 89</b> .
Front Passenger's Lumbar Support Motor Connector	Under front passenger's seat. See <b>Fig. 111</b> .
Front Passenger's Power Seat Slide Motor	Under front passenger's seat. See <b>Fig. 114</b> .
Front Passenger's Power Window Motor	Center of front passenger's door. See <b>Fig. 132</b> .
Fuel Tank Unit	Under rear seat. See <b>Fig. 122</b> .
Left Power Mirror Connector	In driver's door. See <b>Fig. 129</b> .
Left Rear Power Window Motor	Center of left rear door. See <b>Fig. 137</b> .
Left/Right Adaptive Front Lighting Gear Box	Behind respective headlight assembly. See <b>Fig. 27</b> .
Left/Right Headlight Leveling Motor	Behind respective headlight assembly. See <b>Fig. 28</b> .
Mode Control Motor	Under left side of dash. See <b>Fig. 67</b> .
Rear Vent Control Motor	Under middle of dash. See <b>Fig. 83</b> .
Recirculation Control Motor	Behind glove box. See <b>Fig. 92</b> .
Right Rear Power Window Motor	Center of right rear door. See <b>Fig. 137</b> .
Starter	Left side of engine. See <b>Fig. 23</b> .
Windshield Washer Motor	In bottom of washer reservoir. See <b>Fig. 169</b> .
Windshield Wiper Motor	Left rear of engine compartment, under cowl cover. See <b>Fig. 38</b> .

## SENDING UNITS & SENSORS

### SENDING UNITS & SENSORS LOCATION

**2005 Acura RL**

2005-06 ACURA RL

<b>Component</b>	<b>Location</b>
A/C Pressure Sensor	Right side of engine compartment. See <b>Fig. 4</b> .
APP Sensor	Under left side of dash. See <b>Fig. 65</b> .
ATF Transmission Sensor	On transmission housing. See <b>Fig. 182</b> .
Automatic Lighting Sensor/Sunlight Sensor	Front center of dash. See <b>Fig. 71</b> .
CKP Sensor 1 & 2	Right side of engine. See <b>Fig. 175</b> .
CMP Sensor	Right side of engine. See <b>Fig. 8</b> .
Differential Oil Temperature Sensor Connector	On rear differential. See <b>Fig. 189</b> .
Driver's Door Outer Handle Light/Touch Sensor Connector	Center of driver's door. See <b>Fig. 133</b> .
Driver's Power Seat Front Up-Down Motor/Position Sensor Connector	Right side of driver's seat. See <b>Fig. 102</b> .
Driver's Power Seat Rear Up-Down Motor/Position Sensor Connector	Left side of driver's seat. See <b>Fig. 101</b> .
Driver's Power Seat Recline Motor/Position Sensor Connector	Under driver's seat. See <b>Fig. 103</b> .
Driver's Power Seat Slide Position Sensor	Under driver's seat. See <b>Fig. 107</b> .
Driver's Seat Position Sensor	Under front of driver's seat. See <b>Fig. 109</b> .
Driver's Vent Air Temperature Sensor	Behind left side of gauge control module. See <b>Fig. 51</b> .
ECT Sensor 1	On top left side of engine. See <b>Fig. 20</b> .
ECT Sensor 2	Left side of engine. See <b>Fig. 18</b> .
EGR Valve Position Sensor	Left side of engine. See <b>Fig. 20</b> .
Evaporator Temperature Sensor Connector	Under left side of dash. See <b>Fig. 68</b> .
Front A/F Sensor (B2, S1) Connector	Middle of engine. See <b>Fig. 16</b> .
Front Passenger's Door Outer Handle Light/Touch Sensor Connector	Center of front passenger's door. See <b>Fig. 133</b> .
Front Passenger's Power Seat Recline Motor/Position Sensor Connector	Under front passenger's seat. See <b>Fig. 111</b> .
Front Passenger's Vent Air Temperature Sensor	Under right side of dash. See <b>Fig. 90</b> .
Front Secondary HO2S (B2, S2) Connector	Middle of engine. See <b>Fig. 16</b> .
FTP Sensor	Above rear differential. See <b>Fig. 190</b> .
Headlight Leveling Sensor	Under left rear of vehicle. See <b>Fig. 184</b> .
Hypoid Gear Speed Sensor	On rear differential. See <b>Fig. 186</b> .
IAT Sensor	Left side of engine. See <b>Fig. 20</b> .
In-Car Temperature Sensor	On dash, right of steering column. See <b>Fig. 39</b> .
Input Shaft (Mainshaft) Speed Sensor	In transmission housing. See <b>Fig. 25</b> .
Knock Sensor	On top middle of engine, below intake manifold. See <b>Fig. 14</b> .
Left Front Impact Sensor	Behind left side of front bumper. See <b>Fig. 173</b> .
Left Front Pressure Sensor	Left side of engine compartment. See <b>Fig. 197</b> .
Left Front Wheel Speed Sensor Connector	Left side of engine compartment. See <b>Fig. 36</b> .
Left Rear Wheel Speed Sensor Connector	Under left rear of vehicle. See <b>Fig. 184</b> .
Left Side Impact Sensor	At base of left "B" pillar. See <b>Fig. 125</b> .
Left Side Impact Sensor (2nd)	In left "C" pillar. See <b>Fig. 147</b> .

**2005 Acura RL**

2005-06 ACURA RL

MAP Sensor	Left side of engine. See <b>Fig. 17</b> .
Output Shaft (Countershaft) Speed Sensor	In transmission housing. See <b>Fig. 182</b> .
Outside Air Temperature Sensor	Behind middle of front bumper. See <b>Fig. 172</b> .
Rear A/F Sensor (B1, S1) Connector	Middle of engine. See <b>Fig. 9</b> .
Rear Safing Sensor	Under rear seat. See <b>Fig. 124</b> .
Rear Secondary HO2S (B1, S2) Connector	Middle of engine. See <b>Fig. 9</b> .
Right Front Impact Sensor	Behind right side of front bumper. See <b>Fig. 173</b> .
Right Front Pressure Sensor	Left side of engine compartment. See <b>Fig. 197</b> .
Right Front Wheel Speed Sensor Connector	On right side of engine compartment. See <b>Fig. 1</b> .
Right Rear Wheel Speed Sensor Connector	Under right rear of vehicle. See <b>Fig. 184</b> .
Right Side Impact Sensor	At base of right "B" pillar. See <b>Fig. 125</b> .
Right Side Impact Sensor (2nd)	In right "C" pillar. See <b>Fig. 147</b> .
Seat Weight Sensor Unit	Under front passenger's seat. See <b>Fig. 115</b> .
Secondary Fuel Gauge Sending Unit	Under rear seat. See <b>Fig. 123</b> .
Steering Angle Sensor	On side of steering column. See <b>Fig. 46</b> .
Telescopic Motor/Position Sensor Connector	Under steering column cover. See <b>Fig. 50</b> .
Tilt Motor/Position Sensor Connector	Under steering column cover. See <b>Fig. 50</b> .
TP Sensor/Throttle Actuator	On throttle body. See <b>Fig. 19</b> .
Yaw Rate-Lateral Acceleration Sensor	Under center console. See <b>Fig. 84</b> .

**SOLENOIDS & SOLENOID VALVES****SOLENOIDS & SOLENOID VALVES LOCATION**

<b>Component</b>	<b>Location</b>
A/C Compressor Connector	Right side of engine compartment. See <b>Fig. 178</b> .
A/T Clutch Pressure Control Solenoid Valve A	On transmission housing. See <b>Fig. 24</b> .
A/T Clutch Pressure Control Solenoid Valve B	On transmission housing. See <b>Fig. 24</b> .
A/T Clutch Pressure Control Solenoid Valve C	On transmission housing. See <b>Fig. 26</b> .
Driver's Seat Belt Tension Reducer Solenoid Connector	On base of left "B" pillar. See <b>Fig. 125</b> .
ECPS Valve Connector	Left side of engine compartment. See <b>Fig. 22</b> .
EGR Valve	Left side of engine. See <b>Fig. 20</b> .
Engine Mount Control Solenoid Valve	Middle of engine. See <b>Fig. 21</b> .
EVAP Canister Purge Valve	At left side of engine compartment, near strut tower. See <b>Fig. 17</b> .
EVAP Canister Vent Shut Valve	Under rear of vehicle. See <b>Fig. 70</b> .
Front Passenger's Seat Belt Tension Reducer Solenoid Connector	On base of right "B" pillar. See <b>Fig. 125</b> .
Fuel Fill Door Opener Solenoid	On left side of trunk. See <b>Fig. 156</b> .
IMT Valve	Right side of engine. See <b>Fig. 8</b> .
Injector No. 1	Middle of engine. See <b>Fig. 12</b> .
Injector No. 2	Middle of engine. See <b>Fig. 12</b> .
Injector No. 3	Middle of engine. See <b>Fig. 12</b> .
Injector No. 4	Middle of engine. See <b>Fig. 13</b> .

**2005 Acura RL**

2005-06 ACURA RL

Injector No. 5	Middle of engine. See <b>Fig. 13</b> .
Injector No. 6	Middle of engine. See <b>Fig. 13</b> .
Left Clutch Electromagnetic Coil	On rear differential. See <b>Fig. 187</b> .
Right Clutch Electromagnetic Coil	On rear differential. See <b>Fig. 189</b> .
Shift Lock Solenoid	Under center console. See <b>Fig. 84</b> .
Shift Solenoid Valve	On rear differential. See <b>Fig. 188</b> .
Starter Solenoid	On starter. See <b>Fig. 23</b> .
VTEC Solenoid Valve Connector	Right side of engine. See <b>Fig. 176</b> .

**SWITCHES****SWITCHES LOCATION**

<b>Component</b>	<b>Location</b>
Brake Fluid Level Switch	Integral to brake fluid reservoir cap. See <b>Fig. 37</b> .
Brake Pedal Position Switch	Near brake pedal. See <b>Fig. 59</b> .
Driver's Seat Belt Switch Connector	Under driver's seat. See <b>Fig. 109</b> .
Front Passenger's Seat Belt Switch Connector	Under front passenger's seat. See <b>Fig. 112</b> .
Oil Pressure Switch	Right side of engine. See <b>Fig. 175</b> .
Parking Brake Switch	Under left side of dash. See <b>Fig. 59</b> .
PSP Switch	Right side of engine. See <b>Fig. 177</b> .
Security Hood Switch Connector	Behind middle of front bumper. See <b>Fig. 171</b> .
Transmission Range Switch	On transaxle. See <b>Fig. 25</b> .
VTEC Oil Pressure Switch	Right side of engine. See <b>Fig. 175</b> .
Washer Fluid Level Switch Connector	Behind right side of front bumper. See <b>Fig. 169</b> .
2nd Clutch Transmission Fluid Pressure Switch	Top left side of engine. See <b>Fig. 21</b> .
3rd Clutch Transmission Fluid Pressure Switch	On transmission. See <b>Fig. 182</b> .
4th Clutch Transmission Fluid Pressure Switch Connector	On transmission. See <b>Fig. 26</b> .

**MISCELLANEOUS****MISCELLANEOUS LOCATION**

<b>Component</b>	<b>Location</b>
Active Noise Control Front Microphone	In center front of roof. See <b>Fig. 139</b> .
AcuraLink (USA)	Left side of trunk. See <b>Fig. 156</b> .
Alternator	Right front of engine compartment. See <b>Fig. 4</b> .
AM Signal Main Window Antenna	Right "C" pillar. See <b>Fig. 142</b> .
Antenna Sub-Lead Connector	Behind right kick panel. See <b>Fig. 99</b> .
Audio Amplifier	Right side of trunk. See <b>Fig. 164</b> .
Blower Power Transistor	Behind right side of dash, left of blower motor. See <b>Fig. 93</b> .
Cable Reel Connector A	On steering column. See <b>Fig. 48</b> .
Cable Reel Connector B	On steering column. See <b>Fig. 47</b> .
Cable Reel Connector C	On steering wheel. See <b>Fig. 45</b> .

**2005 Acura RL**

2005-06 ACURA RL

Cellular Phone Antenna/OnStar System GPS Antenna Connector	Rear of roof. See <b>Fig. 141</b> .
Data Link Connector (DLC)	Under left side of dash. See <b>Fig. 52</b> .
Driver's Airbag First & Second Inflators Connector	In base of steering column. See <b>Fig. 44</b> .
Driver's Seat Belt Tensioner Connector	At base of left "B" pillar. See <b>Fig. 126</b> .
Driver's Seat Heater Connector	Under driver's seat. See <b>Fig. 104</b> .
Driver's Side Airbag Inflator Connector	Under driver's seat. See <b>Fig. 105</b> .
FM Signal Main Window Antenna	Right "C" pillar. See <b>Fig. 142</b> .
FM Signal Sub-Window Antenna	In left "C" pillar. See <b>Fig. 146</b> .
Front Interior LF Antenna	Behind middle of dash. See <b>Fig. 77</b> .
Front Passenger's Airbag First & Second Inflators Connector	Behind glove box. See <b>Fig. 89</b> .
Front Passenger's Seat Belt Tensioner Connector	At base of right "B" pillar. See <b>Fig. 126</b> .
Front Passenger's Seat Heater Connector	Under front passenger's seat. See <b>Fig. 114</b> .
Front Passenger's Side Airbag Inflator Connector	Under front passenger seat. See <b>Fig. 113</b> .
GPS Antenna	Middle of rear shelf. See <b>Fig. 160</b> .
High Horn	Behind middle of front bumper. See <b>Fig. 171</b> .
Ignition Coil No. 1	Middle of engine. See <b>Fig. 10</b> .
Ignition Coil No. 2	Middle of engine. See <b>Fig. 10</b> .
Ignition Coil No. 3	Middle of engine. See <b>Fig. 10</b> .
Ignition Coil No. 4	Middle of engine. See <b>Fig. 15</b> .
Ignition Coil No. 5	Middle of engine. See <b>Fig. 15</b> .
Ignition Coil No. 6	Middle of engine. See <b>Fig. 15</b> .
Junction Connector C105	Middle of engine. See <b>Fig. 11</b> .
Junction Connector C106	Top of transmission. See <b>Fig. 26</b> .
Junction Connector C107 (2006)	Middle of engine. See <b>Fig. 11</b> .
Junction Connector C202 (2006)	Behind right side of dash. See <b>Fig. 201</b> .
Junction Connector C203 (2006)	Right side of engine compartment. See <b>Fig. 2</b> .
Junction Connector C305	Under left side of dash. See <b>Fig. 58</b> .
Junction Connector C306	Under left side of dash. See <b>Fig. 58</b> .
Junction Connector C310 (2006)	Left side of engine compartment. See <b>Fig. 35</b> .
Junction Connector C404 (2005)	Under left side of dash. See <b>Fig. 56</b> .
Junction Connector C404 (2006)	Under left side of dash. See <b>Fig. 198</b> .
Junction Connector C405	Under steering column cover. See <b>Fig. 48</b> .
Junction Connector C507	Behind left side of dash. See <b>Fig. 41</b> .
Junction Connector C508	Behind left side of dash. See <b>Fig. 41</b> .
Junction Connector C509	Behind left side of dash. See <b>Fig. 41</b> .
Junction Connector C510	Behind left side of dash. See <b>Fig. 40</b> .
Junction Connector C511	Behind left side of dash. See <b>Fig. 40</b> .
Junction Connector C512	Behind left side of dash. See <b>Fig. 40</b> .
Junction Connector C513	Behind left side of dash. See <b>Fig. 40</b> .
Junction Connector C514	Under left side of dash. See <b>Fig. 56</b> .
Junction Connector C515	Behind middle of dash. See <b>Fig. 73</b> .

**2005 Acura RL**

2005-06 ACURA RL

Junction Connector C516	Behind middle of dash. See <b>Fig. 73</b> .
Junction Connector C517	Behind middle of dash. See <b>Fig. 73</b> .
Junction Connector C518	Behind middle of dash. See <b>Fig. 76</b> .
Junction Connector C519	Behind middle of dash. See <b>Fig. 76</b> .
Junction Connector C520	Under center console. See <b>Fig. 86</b> .
Junction Connector C521	Behind middle of dash. See <b>Fig. 74</b> .
Junction Connector C522	Behind middle of dash. See <b>Fig. 74</b> .
Junction Connector C523	Behind middle of dash. See <b>Fig. 79</b> .
Junction Connector C524	Behind middle of dash. See <b>Fig. 74</b> .
Junction Connector C525	Under right side of dash. See <b>Fig. 96</b> .
Junction Connector C526	Under right side of dash. See <b>Fig. 96</b> .
Junction Connector C607	Behind left kick panel. See <b>Fig. 63</b> .
Junction Connector C608	Behind left kick panel. See <b>Fig. 62</b> .
Junction Connector C609	Behind left kick panel. See <b>Fig. 62</b> .
Junction Connector C610	Under driver's seat. See <b>Fig. 108</b> .
Junction Connector C612	In left "C" pillar. See <b>Fig. 148</b> .
Junction Connector C613	In left "C" pillar. See <b>Fig. 148</b> .
Junction Connector C615	In left "C" pillar. See <b>Fig. 149</b> .
Junction Connector C616	In left "C" pillar. See <b>Fig. 149</b> .
Junction Connector C660	At base of right "B" pillar. See <b>Fig. 126</b> .
Junction Connector C661	At base of left "B" pillar. See <b>Fig. 126</b> .
Junction Connector C662	Behind rear seat. See <b>Fig. 153</b> .
Junction Connector C663	Behind rear seat. See <b>Fig. 153</b> .
Junction Connector C702	On left side of trunk. See <b>Fig. 155</b> .
Junction Connector C755	In driver's door. See <b>Fig. 134</b> .
Junction Connector C756	In driver's door. See <b>Fig. 134</b> .
Junction Connector C757	In driver's door. See <b>Fig. 130</b> .
Junction Connector C775	In front passenger's door. See <b>Fig. 130</b> .
Junction Connector C776	In front passenger's door. See <b>Fig. 135</b> .
Junction Connector C783	In left rear door. See <b>Fig. 131</b> .
Junction Connector C793	In right rear door. See <b>Fig. 131</b> .
Junction Connector C833	Middle of trunk. See <b>Fig. 167</b> .
Junction Connector C852	In left front of roof. See <b>Fig. 138</b> .
Left Front TPMS Initiator	Behind left side of front bumper. See <b>Fig. 173</b> .
Left Rear TPMS Initiator	On left rear fenderwell. See <b>Fig. 183</b> .
Left Search Coil	On rear differential. See <b>Fig. 188</b> .
Left Side Curtain Airbag Inflator Connector	In left "C" pillar. See <b>Fig. 146</b> .
Low Horn	Behind middle of front bumper. See <b>Fig. 171</b> .
MES Connector	Under left side of dash. See <b>Fig. 58</b> .
Millimeter Wave Radar (2006)	Behind front grille. See <b>Fig. 171</b> .
Navigation Service Check Connector	Under navigation unit. See <b>Fig. 159</b> .
Noise Reduction Condenser Connector	In right "C" pillar. See <b>Fig. 145</b> .
Rear Accessory Power Socket	Rear of center console. See <b>Fig. 72</b> .
Rear Bumper LF Antenna Connector	Behind middle of rear bumper. See <b>Fig. 168</b> .



**2005 Acura RL**

2005-06 ACURA RL

Rear Interior LF Antenna	Under rear of center console. See <b>Fig. 88</b> .
Rear Shelf LF Antenna	Middle of rear shelf. See <b>Fig. 162</b> .
Right Front TPMS Initiator	Behind right side of front bumper. See <b>Fig. 173</b> .
Right Rear TPMS Initiator	On right rear fenderwell. See <b>Fig. 183</b> .
Right Search Coil	On rear differential. See <b>Fig. 185</b> .
Right Side Curtain Airbag Inflator Connector	In right "C" pillar. See <b>Fig. 143</b> .
TPMS Receiver Unit	Right side of rear shelf. See <b>Fig. 163</b> .
T1	In under-hood fuse/relay box. See <b>Fig. 32</b> .
T3	Left rear of engine, near starter solenoid. See <b>Fig. 23</b> .
T10 (Terminal Joint)	Top left side of engine. See <b>Fig. 21</b> .
T11 (Terminal Joint)	Right side of engine compartment. See <b>Fig. 3</b> .
T12 (Terminal Joint)	Top left side of engine. See <b>Fig. 21</b> .
T15	On rear differential. See <b>Fig. 186</b> .
T16	Behind left side rear seat headrest. See <b>Fig. 117</b> .
T17	Behind center rear seat headrest. See <b>Fig. 117</b> .
T18	Behind right side rear seat headrest. See <b>Fig. 117</b> .
T101	In under-hood fuse/relay box. See <b>Fig. 32</b> .
T102	Right side of engine compartment. See <b>Fig. 5</b> .
XM Antenna Satellite Signal Connector	Center rear of roof. See <b>Fig. 140</b> .
XM Antenna Terrestrial Signal Connector	Center rear of roof. See <b>Fig. 140</b> .

## CONNECTORS

### CONNECTORS LOCATION

Component	Location
C101 (Black, 33 Pin)	Left side of engine compartment. See <b>Fig. 36</b> .
C102 (Gray, 33 Pin)	Left side of engine compartment. See <b>Fig. 36</b> .
C103 (Black, 23 Pin)	Left side of engine compartment. See <b>Fig. 36</b> .
C104 (Gray, 1 Pin)	Left side of engine compartment, near shock tower. See <b>Fig. 34</b> .
C108 (Black, 5 Pin)	Top of transmission housing. See <b>Fig. 25</b> .
C151 (Black, 6 Pin)	Right side of engine. See <b>Fig. 176</b> .
C152 (Black, 1 Pin)	Top middle of engine. See <b>Fig. 14</b> .
C201 (White, 18 Pin)	Behind right kick panel. See <b>Fig. 99</b> .
C251 (White, 13 Pin)	Under right side of dash. See <b>Fig. 93</b> .
C301 (White, 34 Pin)	Under left side of dash. See <b>Fig. 55</b> .
C302 (Brown, 3 Pin)	Behind lower left side of dash. See <b>Fig. 55</b> .
C303 (Yellow, 4 Pin)	Behind lower left side of dash. See <b>Fig. 55</b> .
C304 (White, 5 Pin)	Behind lower left side of dash. See <b>Fig. 57</b> .
C308 (Gray, 2 Pin)	Left side of engine compartment. See <b>Fig. 181</b> .
C308 (Gray, 2 Pin)	Left side of engine compartment. See <b>Fig. 181</b> .
C309 (Gray, 4 Pin)	Left side of engine compartment. See <b>Fig. 180</b> .
C401 (White, 14 Pin)	Under left side of dash. See <b>Fig. 54</b> .

**2005 Acura RL**

2005-06 ACURA RL

C402 (White, 34 Pin)	Under left side of dash. See <b>Fig. 54</b> .
C403 (Yellow, 4 Pin)	Under left side of dash. See <b>Fig. 54</b> .
C501 (White, 17 Pin)	Under middle of dash. See <b>Fig. 81</b> .
C502 (White, 12 Pin)	Behind right side of dash. See <b>Fig. 95</b> .
C503 (Brown, 2 Pin)	Behind right side of dash. See <b>Fig. 95</b> .
C505 (USA) (Gray/White, 2 Pin)	Behind middle of dash. See <b>Fig. 78</b> .
C551 (2005) (Gray, 6 Pin)	Under center console. See <b>Fig. 87</b> .
C551 (2006) (Light Blue, 6 Pin)	Under center console. See <b>Fig. 87</b> .
C599 (Gray, 8 Pin)	Under center console. See <b>Fig. 86</b> .
C601 (White, 23 Pin)	Behind left kick panel. See <b>Fig. 63</b> .
C602 (White, 20 Pin)	Behind left kick panel. See <b>Fig. 62</b> .
C603 (2006) (Light Blue, 6 Pin)	Behind middle of dash. See <b>Fig. 78</b> .
C604 (Yellow, 16 Pin)	Behind middle of dash. See <b>Fig. 78</b> .
C606 (White, 24 Pin)	In left "C" pillar. See <b>Fig. 145</b> .
C631 (White, 24 Pin)	Under left side of dash. See <b>Fig. 57</b> .
C632 (White, 8 Pin)	Under left side of dash. See <b>Fig. 57</b> .
C633 (White, 6 Pin)	In right "C" pillar. See <b>Fig. 144</b> .
C651 (White, 34 Pin)	Behind right kick panel. See <b>Fig. 98</b> .
C652 (White, 8 Pin)	Behind right kick panel. See <b>Fig. 98</b> .
C653 (White, 23 Pin)	Behind rear seat. See <b>Fig. 152</b> .
C654 (White, 12 Pin)	Behind rear seat. See <b>Fig. 152</b> .
C655 (Yellow, 16 Pin)	Behind rear seat. See <b>Fig. 152</b> .
C656 (White, 20 Pin)	In right "C" pillar. See <b>Fig. 144</b> .
C657 (White, 12 Pin)	Right side of trunk. See <b>Fig. 166</b> .
C658 (White, 12 Pin)	Behind rear seat. See <b>Fig. 153</b> .
C659 (White, 8 Pin)	Behind rear seat. See <b>Fig. 153</b> .
C698 (Gray, 10 Pin)	Near rear differential. See <b>Fig. 185</b> .
C699 (Gray, 6 Pin)	Near rear differential. See <b>Fig. 185</b> .
C701 (White, 20 Pin)	Left side of trunk. See <b>Fig. 155</b> .
C751 (White, 14 Pin)	Under left side of dash. See <b>Fig. 57</b> .
C752 (White, 20 Pin)	Front of driver's door. See <b>Fig. 128</b> .
C754 (White, 28 Pin)	In driver's door. See <b>Fig. 129</b> .
C771 (White, 20 Pin)	Under right side of dash. See <b>Fig. 95</b> .
C772 (Light Blue, 6 Pin)	Behind right kick panel. See <b>Fig. 99</b> .
C773 (White, 20 Pin)	In front passenger's door. See <b>Fig. 129</b> .
C774 (White, 20 Pin)	Front of front passenger's door. See <b>Fig. 128</b> .
C781 (White, 18 Pin)	Left "B" pillar. See <b>Fig. 127</b> .
C782 (White, 6 Pin)	In left rear door. See <b>Fig. 136</b> .
C791 (Gray, 17 Pin)	Right "B" pillar. See <b>Fig. 127</b> .
C792 (White, 6 Pin)	In right rear door. See <b>Fig. 136</b> .
C801 (Gray, 4 Pin)	Under front passenger's seat. See <b>Fig. 113</b> .
C831 (White, 12 Pin)	Middle of trunk. See <b>Fig. 167</b> .
C851 (White, 8 Pin)	Rear of roof. See <b>Fig. 141</b> .
C901 (White, 23 Pin)	Under driver's seat. See <b>Fig. 105</b> .

**2005 Acura RL**

2005-06 ACURA RL


C903 (Gray, 2 Pin)	Under driver's seat. See <b>Fig. 105</b> .
C951 (Gray, 3 Pin)	Under rear seat. See <b>Fig. 120</b> .
C961 (Gray, 3 Pin)	Right side of rear seat. See <b>Fig. 118</b> .
C962 (Gray, 3 Pin)	Behind center of rear seat. See <b>Fig. 119</b> .
C963 (Gray, 3 Pin)	Behind center of rear seat. See <b>Fig. 119</b> .
C971 (Gray, 19 Pin)	Under driver's seat. See <b>Fig. 109</b> .
C981 (Gray, 6 Pin)	Under front passenger's seat. See <b>Fig. 116</b> .
C991 (2006) (White, 12 Pin)	Under middle of dash. See <b>Fig. 200</b> .
C992 (2006) (White, 5 Pin)	Behind right kick panel. See <b>Fig. 202</b> .
C993 (2006) (White, 2 Pin)	Behind right kick panel. See <b>Fig. 202</b> .

**GROUND S****GROUND S LOCATION**

<b>Component</b>	<b>Location</b>
G1	Left side of engine compartment. See <b>Fig. 30</b> .
G2	Top of transmission housing. See <b>Fig. 25</b> .
G3	Right side of engine compartment. See <b>Fig. 3</b> .
G4	Right side of engine compartment. See <b>Fig. 3</b> .
G101	Left side of engine. See <b>Fig. 18</b> .
G102	On right front of engine. See <b>Fig. 7</b> .
G201	Behind right side of front bumper. See <b>Fig. 170</b> .
G202	Right side of engine compartment. See <b>Fig. 6</b> .
G301	Behind left side of front bumper. See <b>Fig. 174</b> .
G351	Middle of engine compartment. See <b>Fig. 179</b> .
G401	Under right side of dash. See <b>Fig. 91</b> .
G501	Under left side of dash. See <b>Fig. 53</b> .
G502	Under left side of dash. See <b>Fig. 53</b> .
G503	Under middle of dash. See <b>Fig. 77</b> .
G504	Under middle of dash. See <b>Fig. 79</b> .
G505	Under center console. See <b>Fig. 85</b> .
G506	Behind glove box. See <b>Fig. 90</b> .
G601	At left side of floor. See <b>Fig. 121</b> .
G602	In left "C" pillar. See <b>Fig. 147</b> .
G603	In left "C" pillar. See <b>Fig. 148</b> .
G604	In left "C" pillar. See <b>Fig. 146</b> .
G651	At right side of floor. See <b>Fig. 121</b> .
G652	In right "C" pillar. See <b>Fig. 147</b> .
G653 (2006)	Behind right kick panel. See <b>Fig. 202</b> .
G701	Left side of trunk. See <b>Fig. 155</b> .
G851	In right "C" pillar. See <b>Fig. 143</b> .


**COMPONENT LOCATION GRAPHICS**

**NOTE:** Figures may show multiple component locations. Refer to appropriate table for proper figure references.

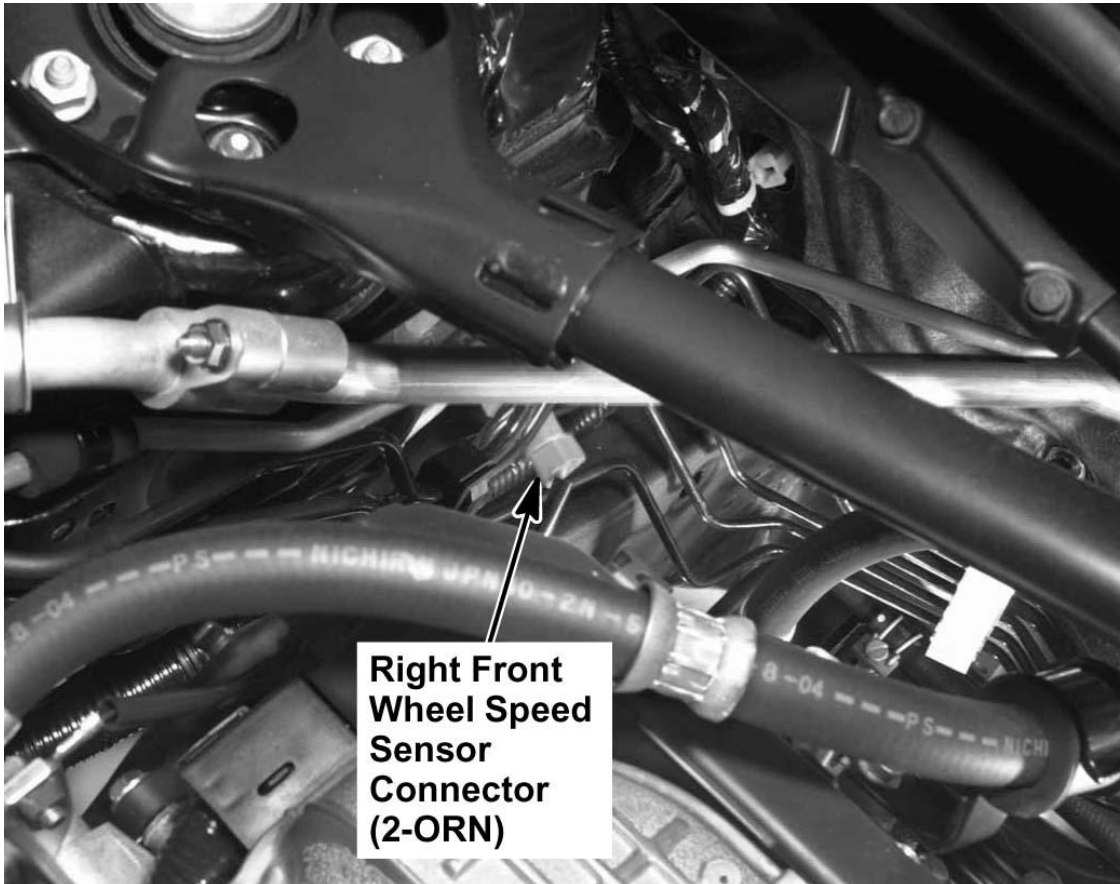

G00363455


**Fig. 1: Right Side Of Engine Compartment**  
Courtesy of AMERICAN HONDA MOTOR CO., INC.

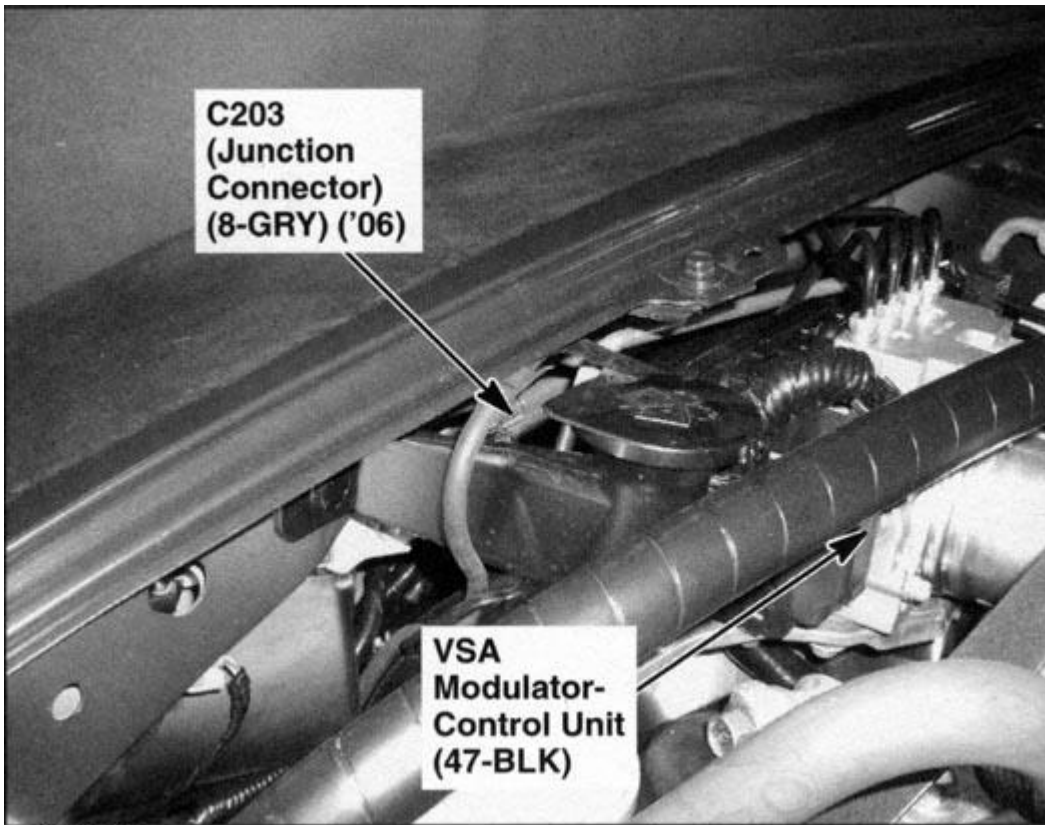

G00430623

**Fig. 2: Right Side Of Engine Compartment**  
Courtesy of AMERICAN HONDA MOTOR CO., INC.




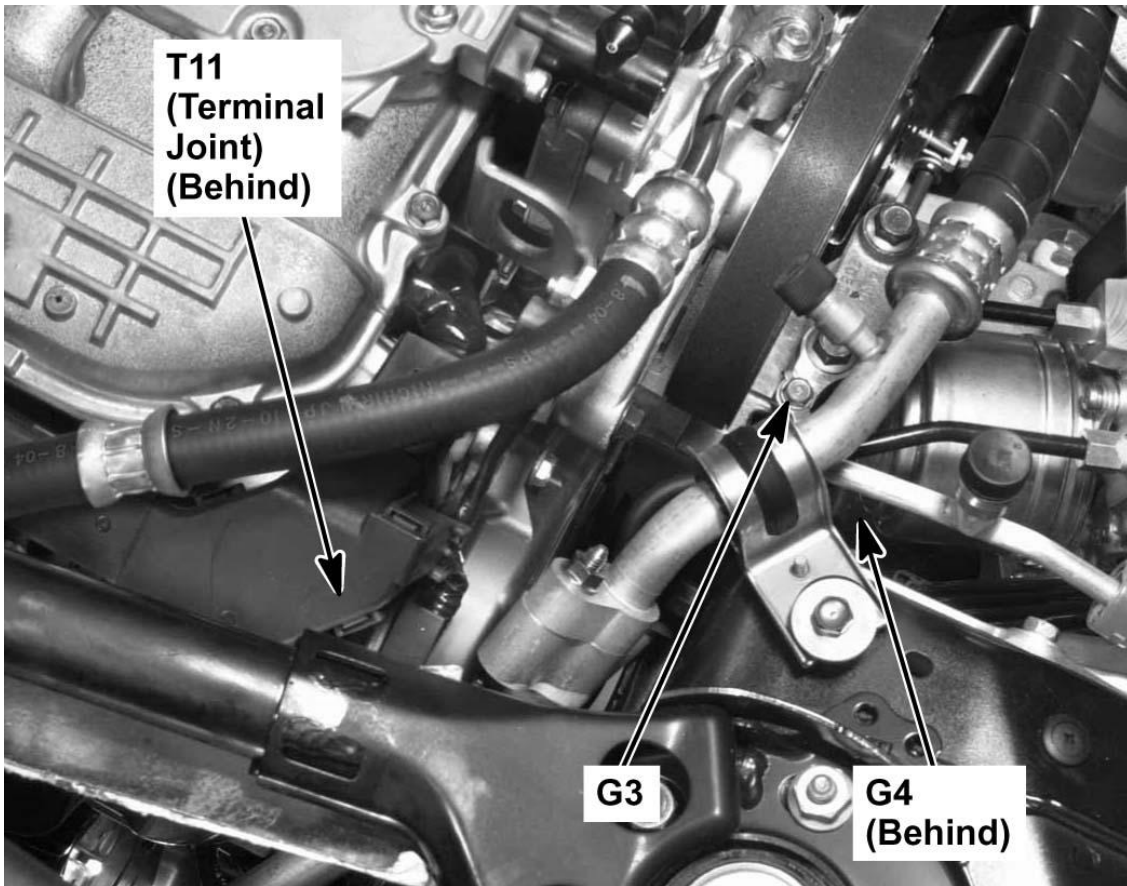

G00363457


**Fig. 3: Right Side Of Engine Compartment**  
Courtesy of AMERICAN HONDA MOTOR CO., INC.



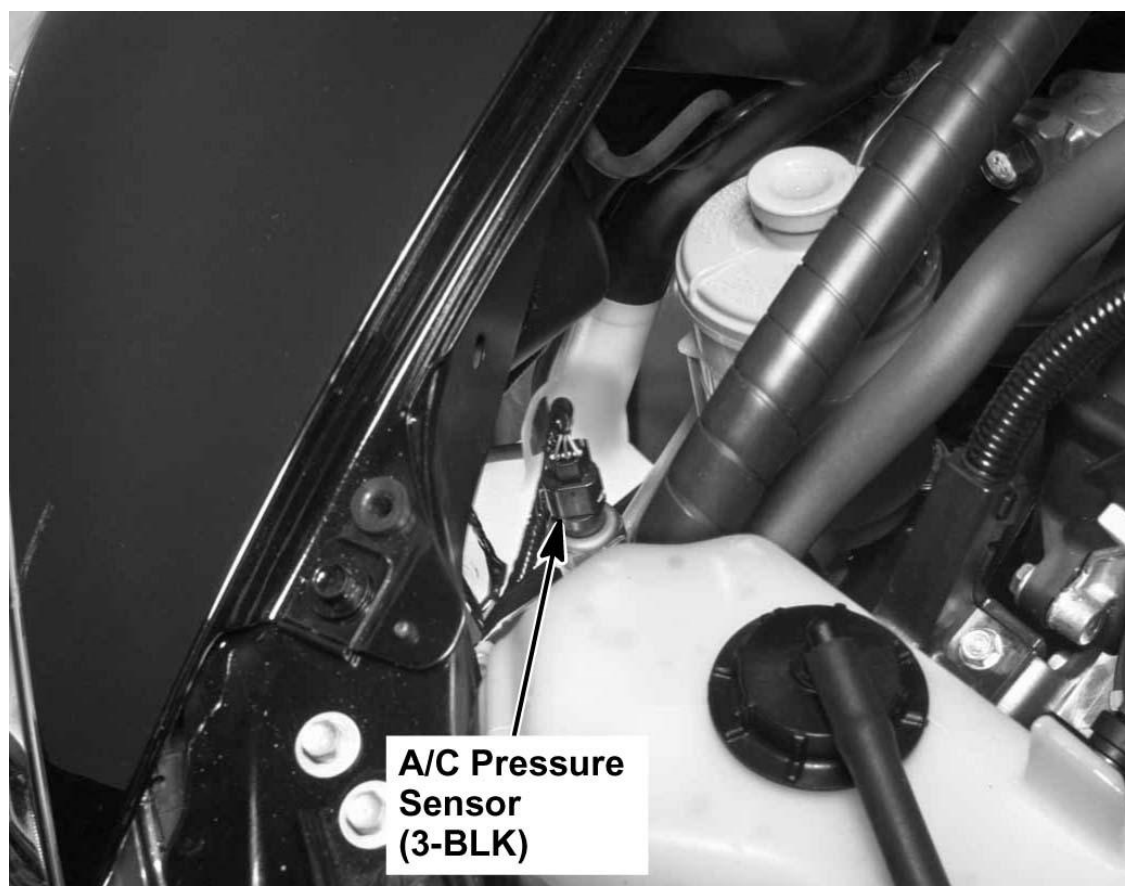


G00363458

**Fig. 4: Right Side Of Engine Compartment**  
Courtesy of AMERICAN HONDA MOTOR CO., INC.

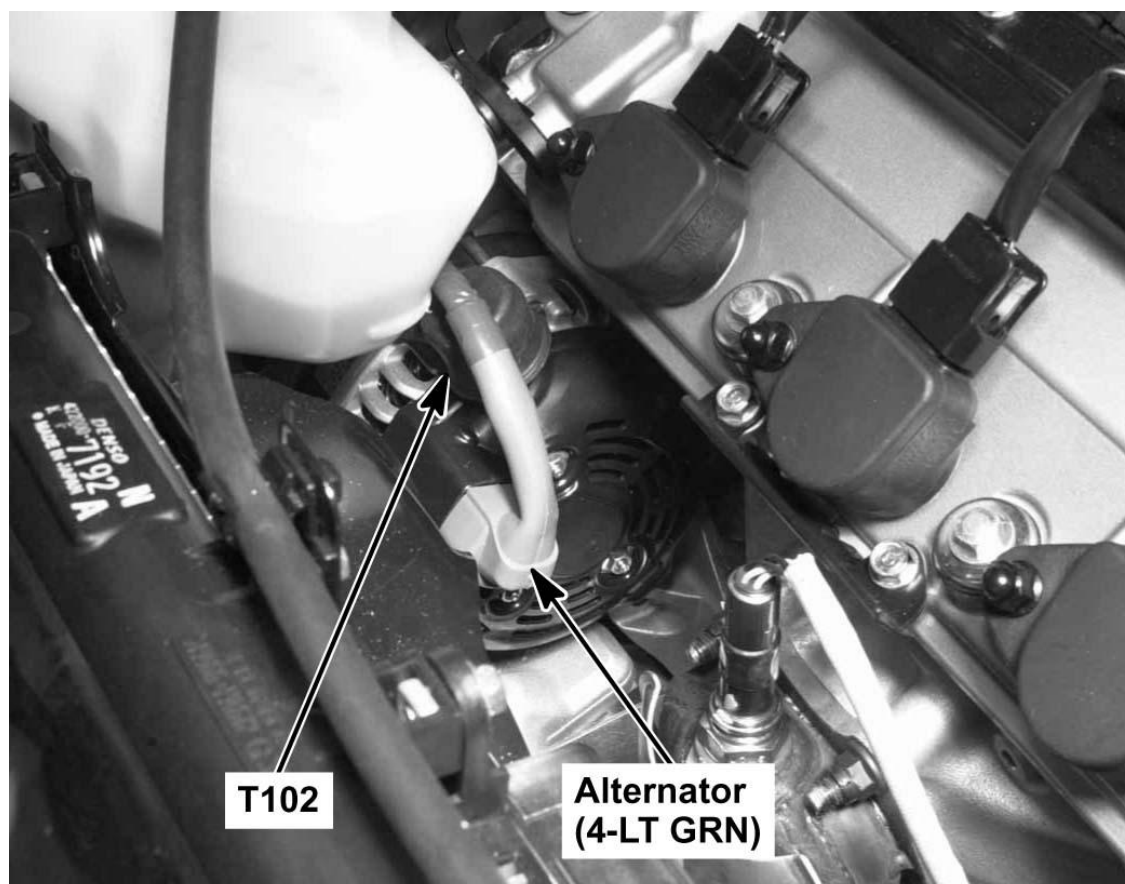


G00363459

**Fig. 5: Right Side Of Engine Compartment**  
Courtesy of AMERICAN HONDA MOTOR CO., INC.

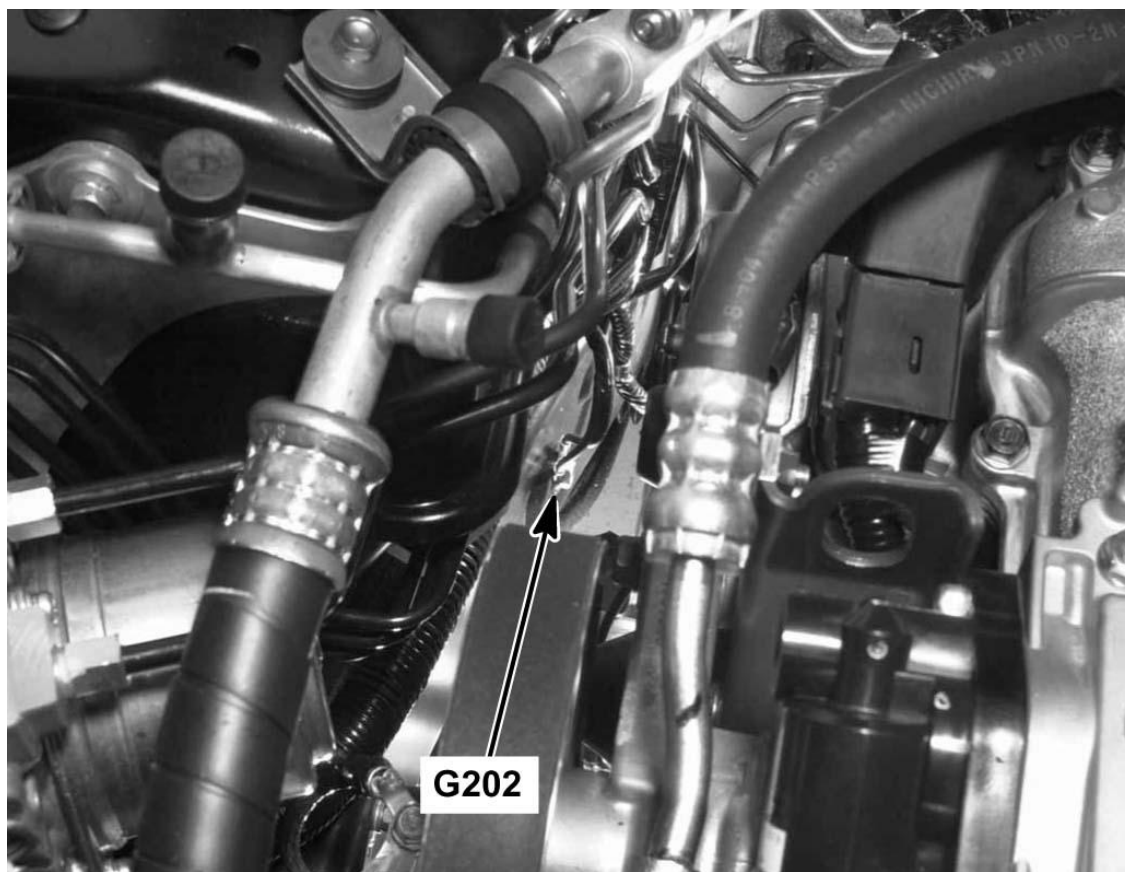

G00363460


**Fig. 6: Right Side Of Engine Compartment**  
Courtesy of AMERICAN HONDA MOTOR CO., INC.

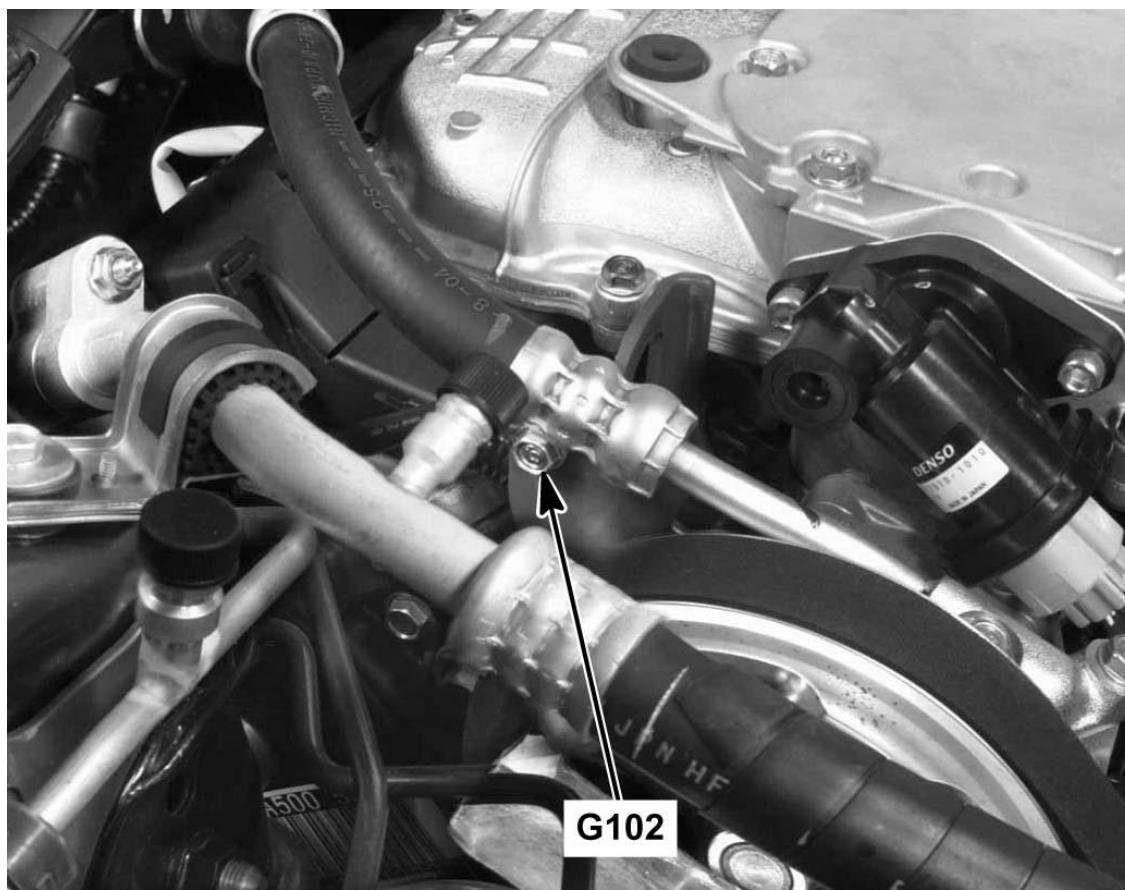

G00363461

**Fig. 7: Right Side Of Engine**

Courtesy of AMERICAN HONDA MOTOR CO., INC.

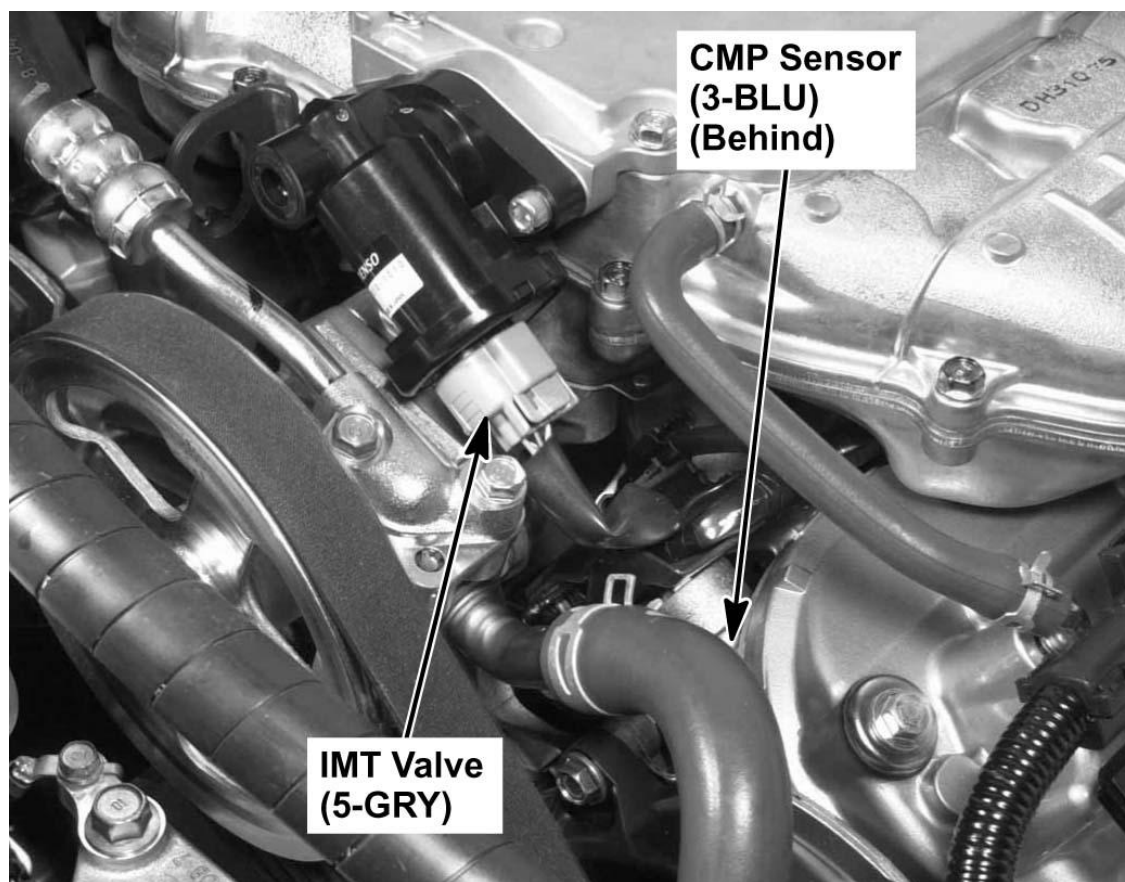


G00363462

**Fig. 8: Right Side Of Engine**

Courtesy of AMERICAN HONDA MOTOR CO., INC.



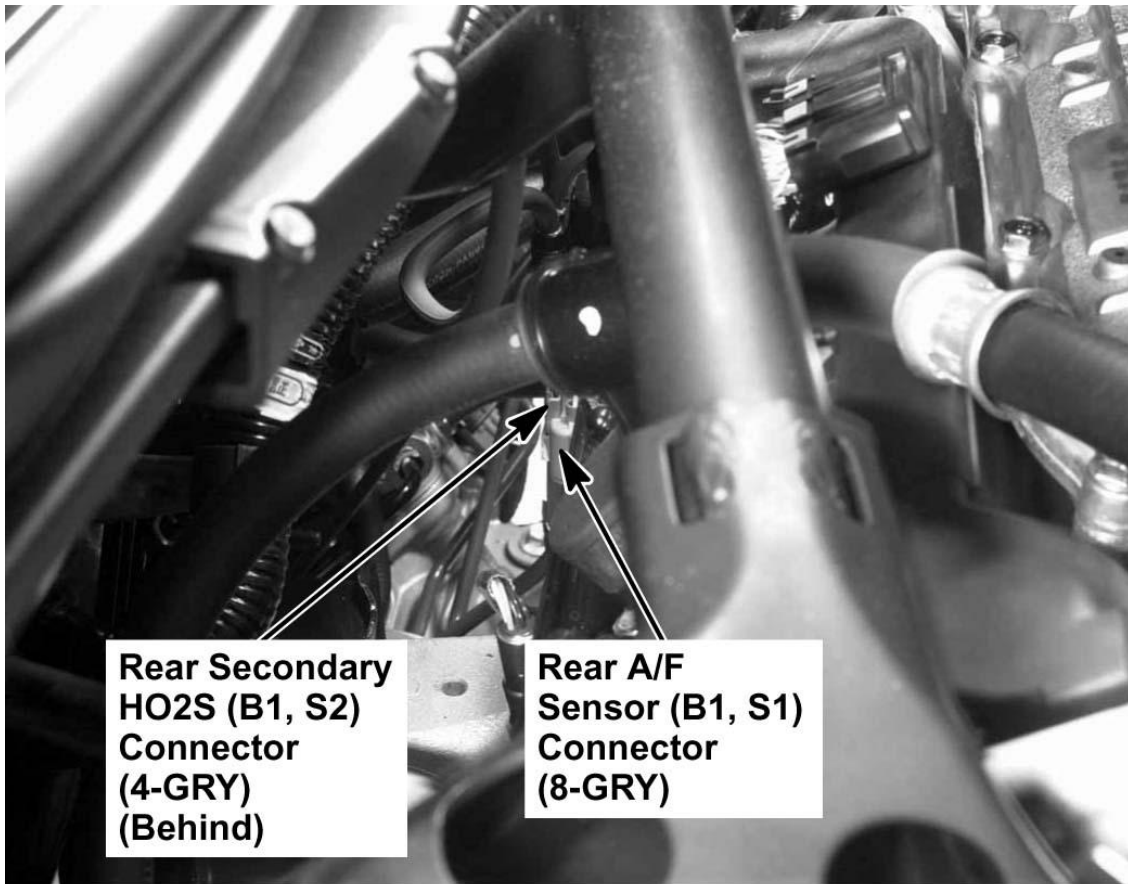


G00363463

**Fig. 9: Middle Of Engine**

Courtesy of AMERICAN HONDA MOTOR CO., INC.




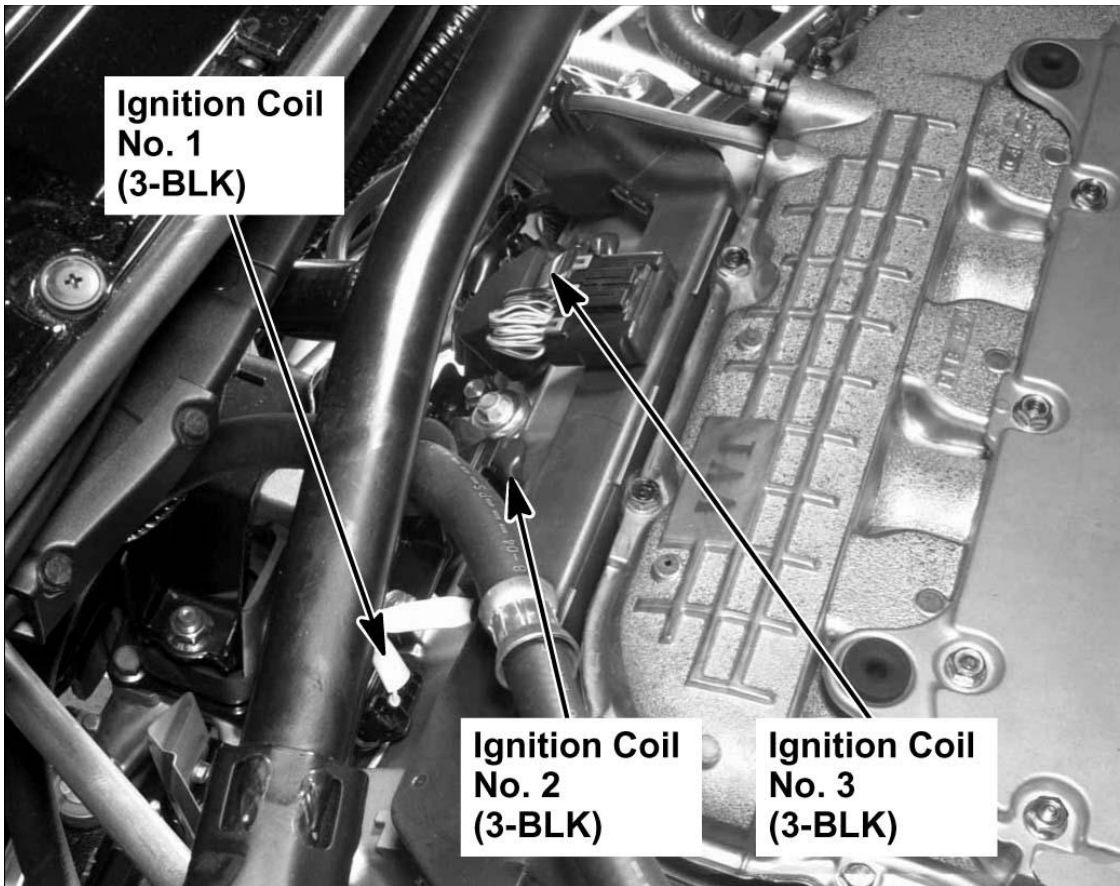

G00363464

**Fig. 10: Middle Of Engine**


Courtesy of AMERICAN HONDA MOTOR CO., INC.

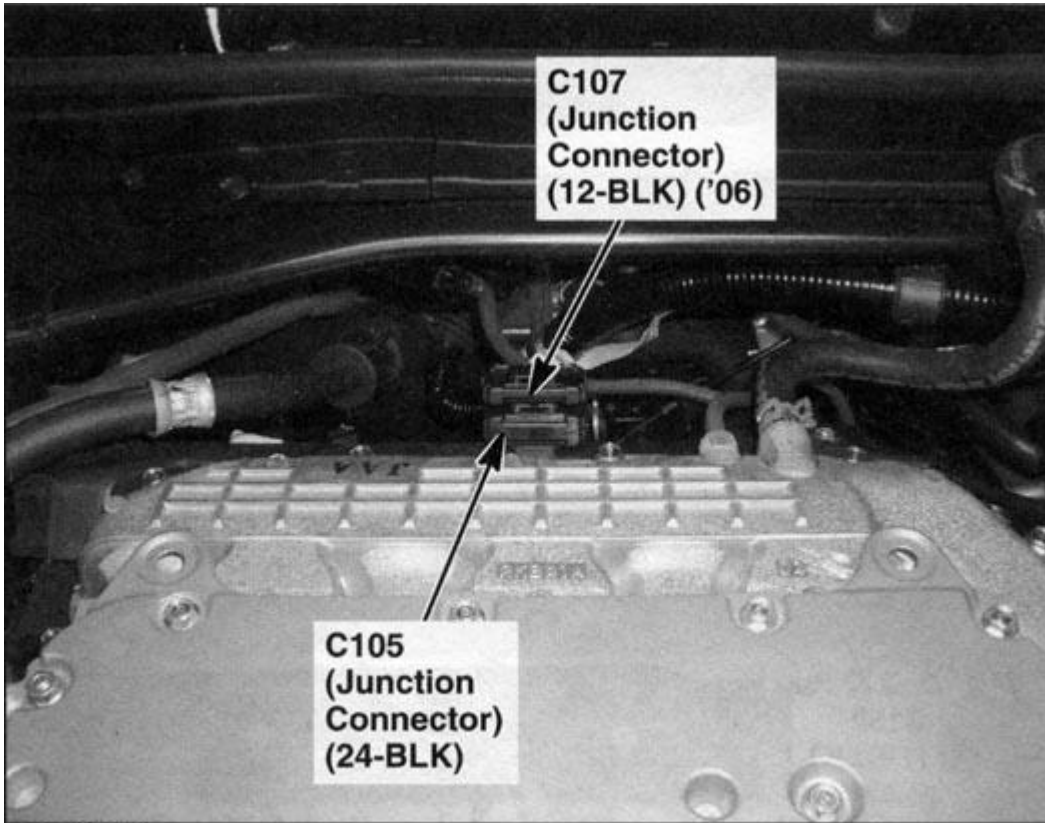

G00430624

**Fig. 11: Middle Of Engine**


Courtesy of AMERICAN HONDA MOTOR CO., INC.

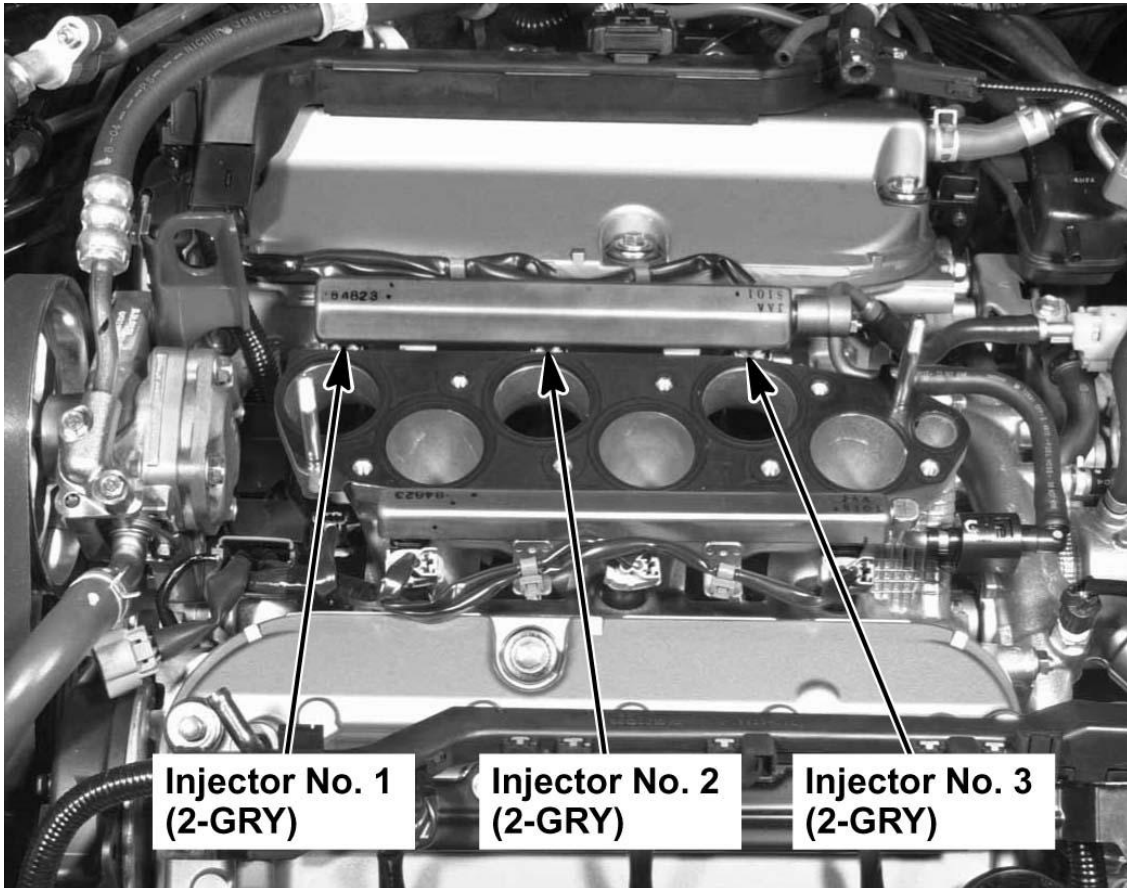

G00363466

**Fig. 12: Middle Of Engine**

Courtesy of AMERICAN HONDA MOTOR CO., INC.

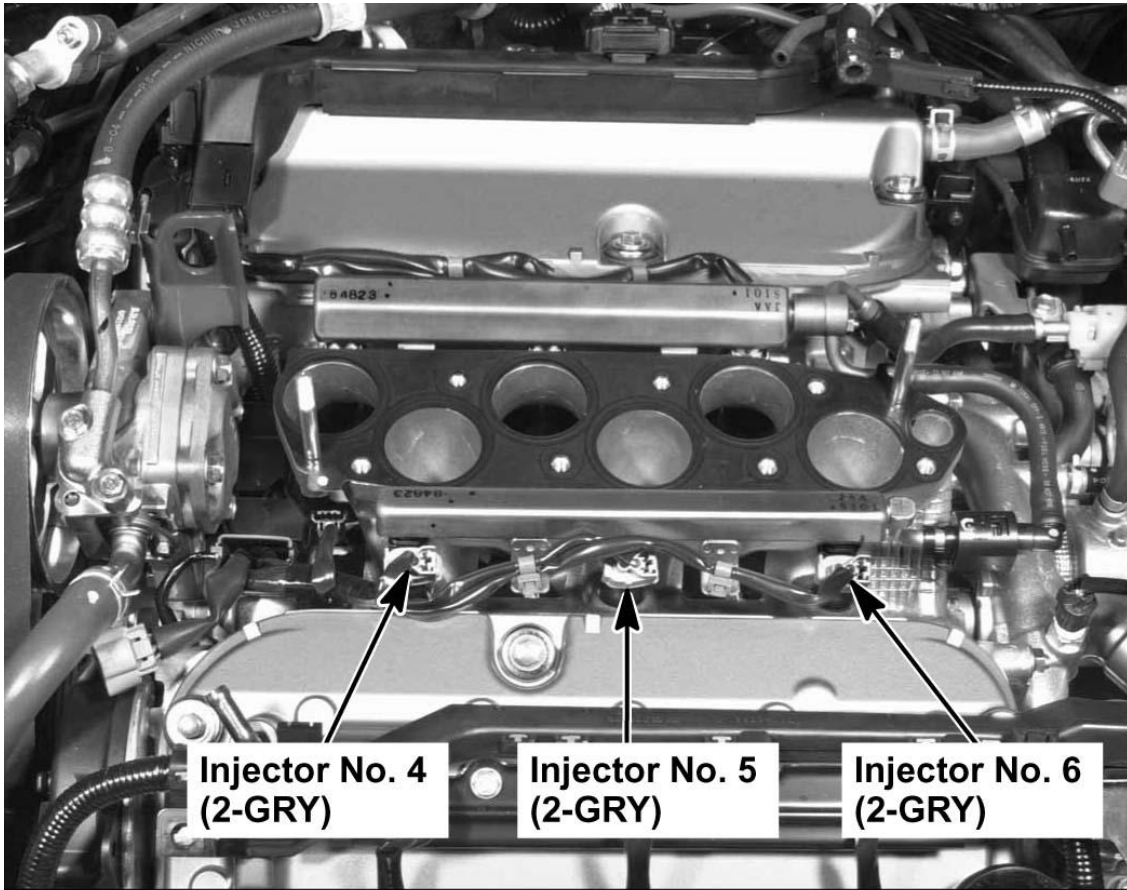


G00363467

**Fig. 13: Middle Of Engine**

Courtesy of AMERICAN HONDA MOTOR CO., INC.




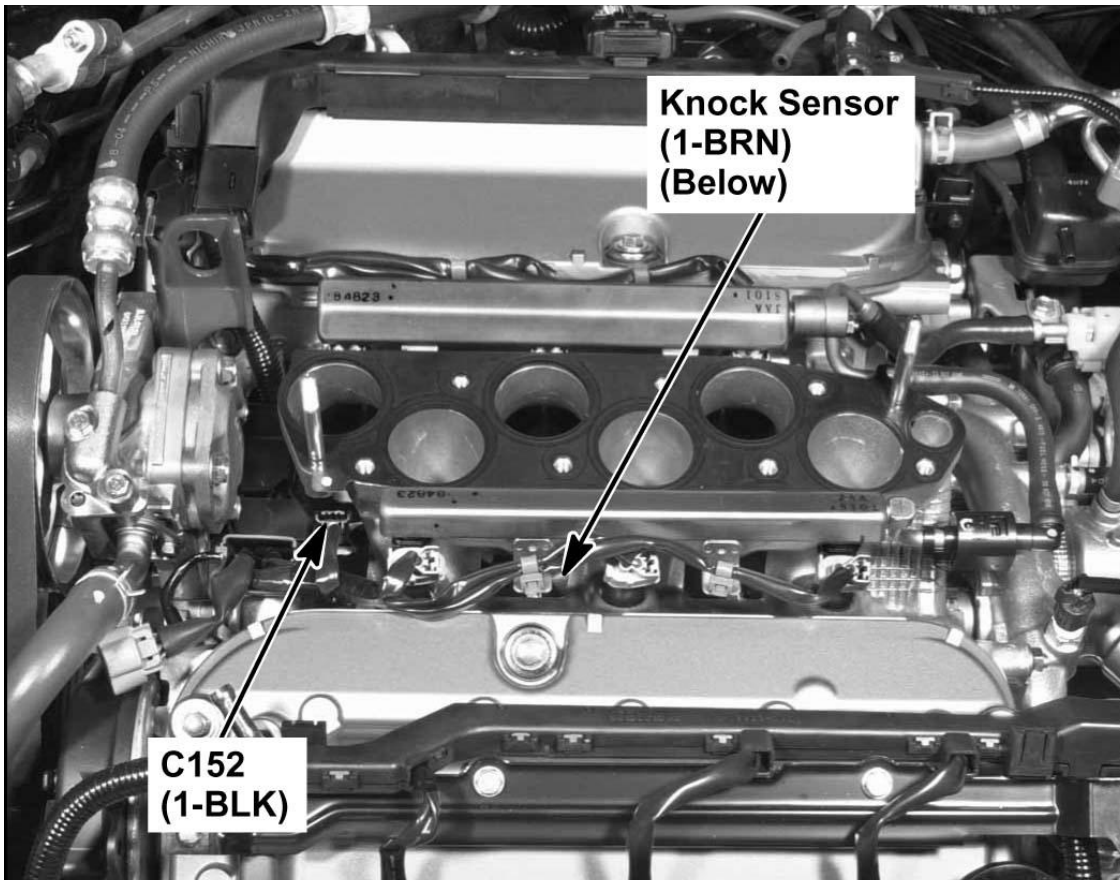

G00363468

**Fig. 14: Middle Of Engine**

Courtesy of AMERICAN HONDA MOTOR CO., INC.

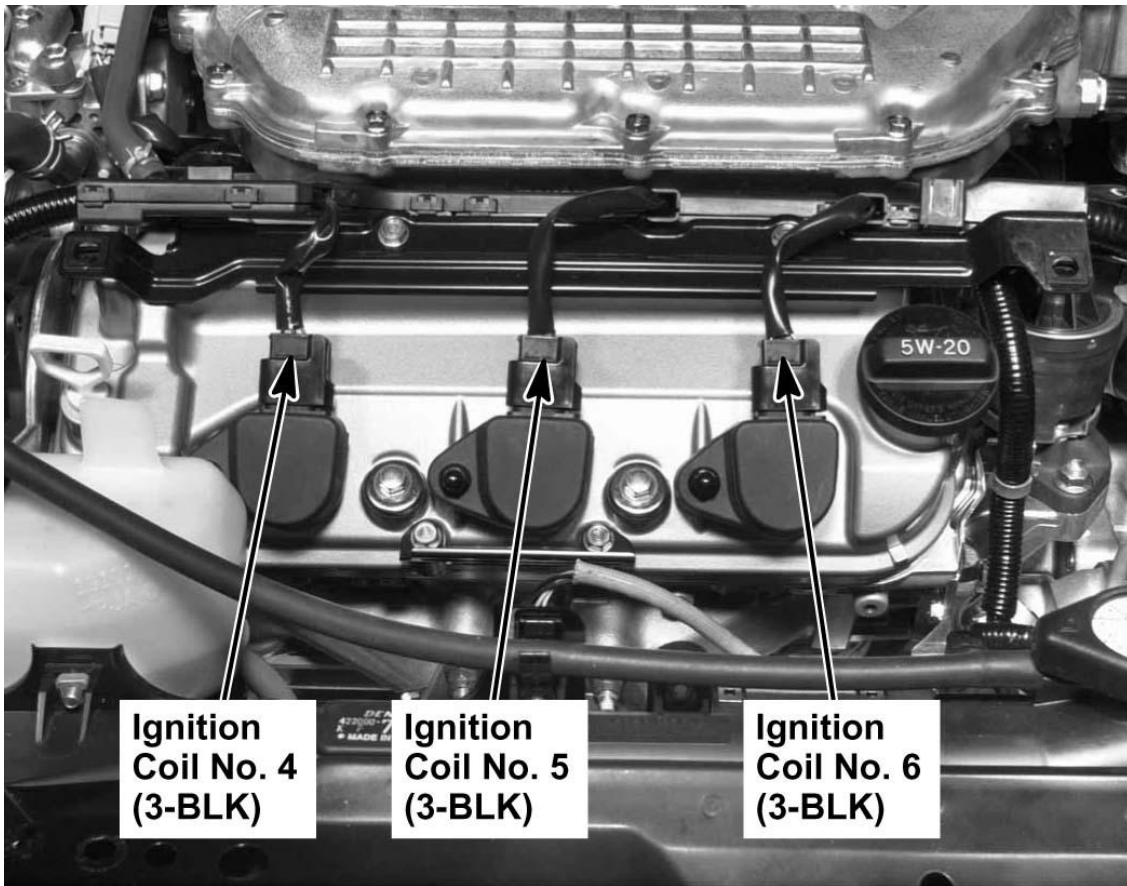


G00363469

**Fig. 15: Middle Of Engine**

Courtesy of AMERICAN HONDA MOTOR CO., INC.




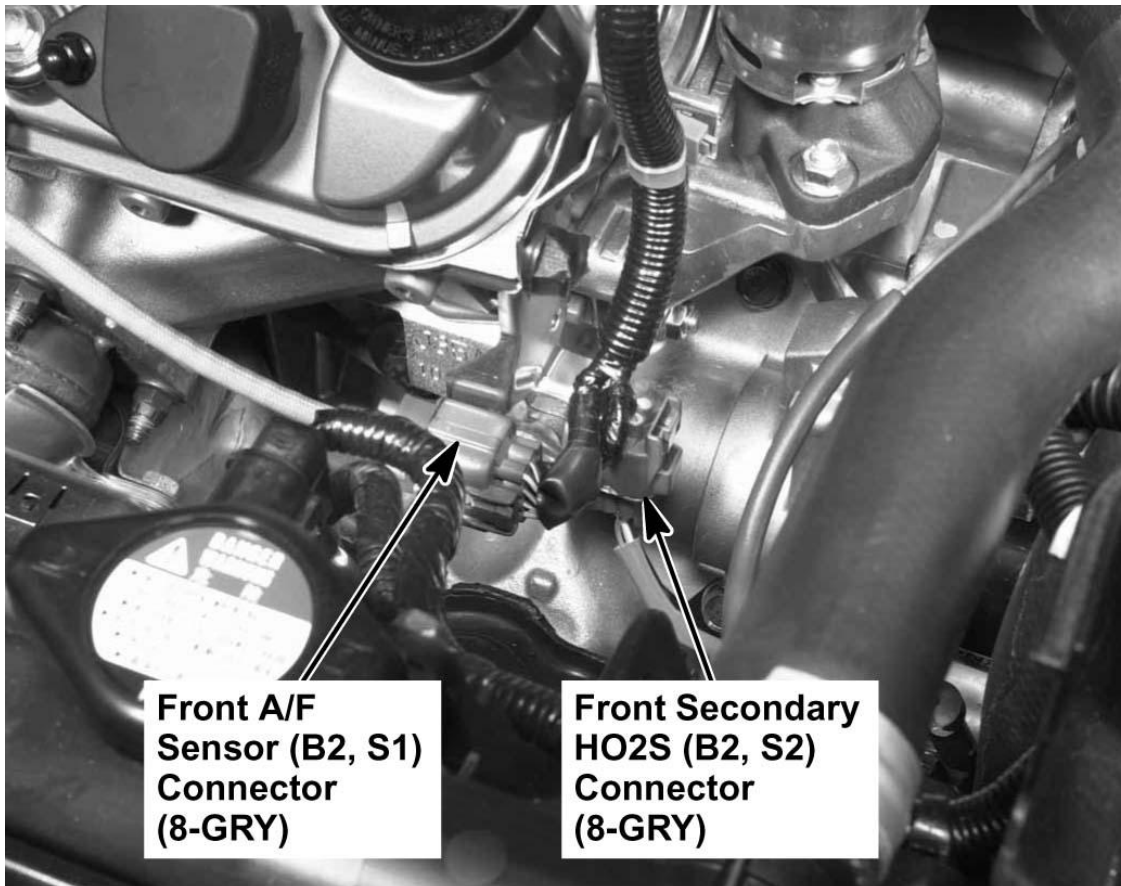

G00363470


**Fig. 16: Middle Of Engine**

Courtesy of AMERICAN HONDA MOTOR CO., INC.

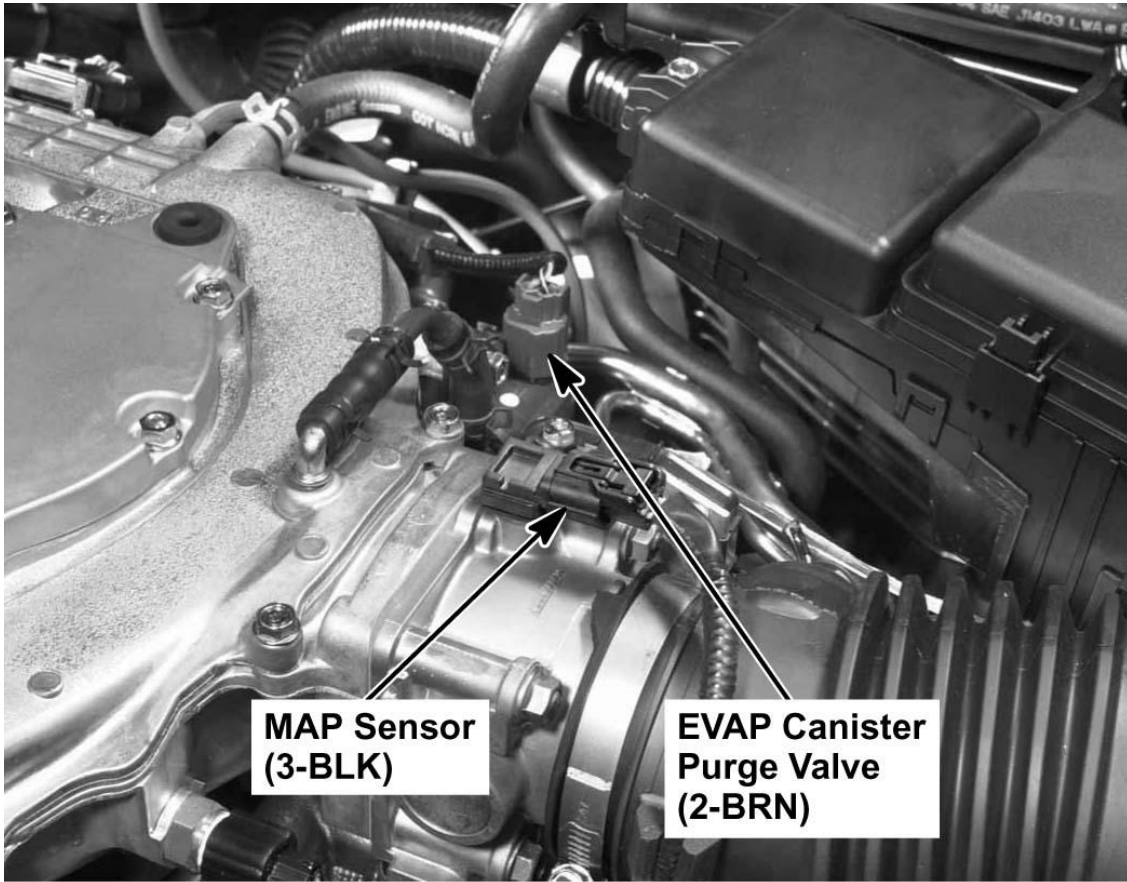


G00363471

**Fig. 17: Left Side Of Engine**  
Courtesy of AMERICAN HONDA MOTOR CO., INC.

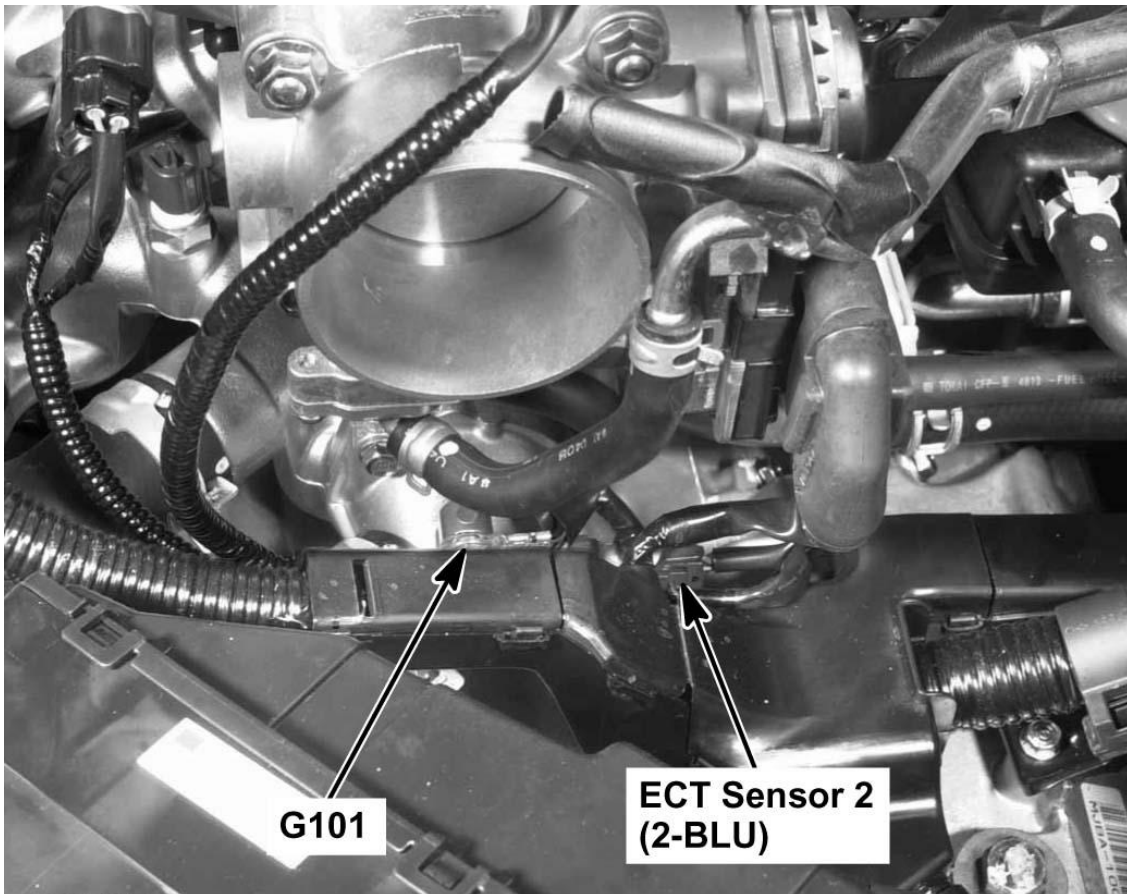

G00363472


**Fig. 18: Left Side Of Engine**  
Courtesy of AMERICAN HONDA MOTOR CO., INC.

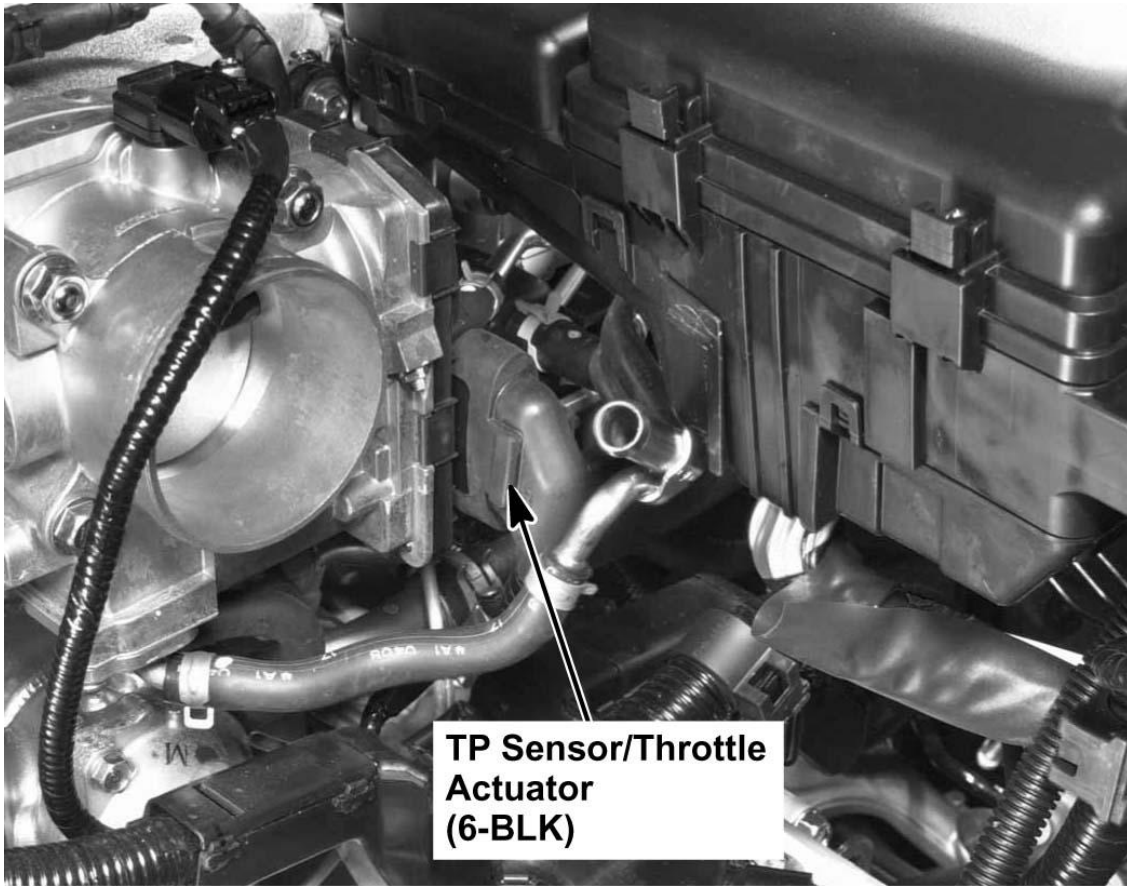

G00363473

**Fig. 19: Left Side Of Engine**  
Courtesy of AMERICAN HONDA MOTOR CO., INC.




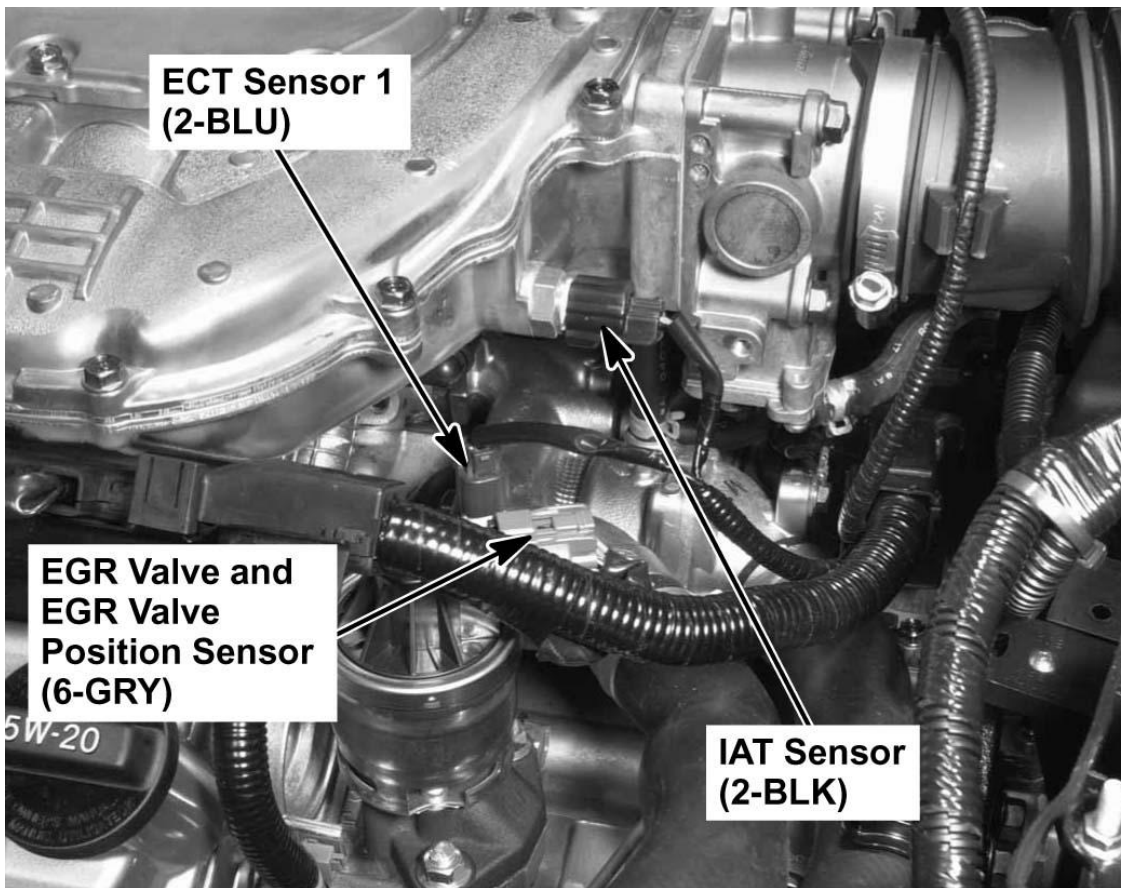

G00363474


**Fig. 20: Left Side Of Engine**  
Courtesy of AMERICAN HONDA MOTOR CO., INC.



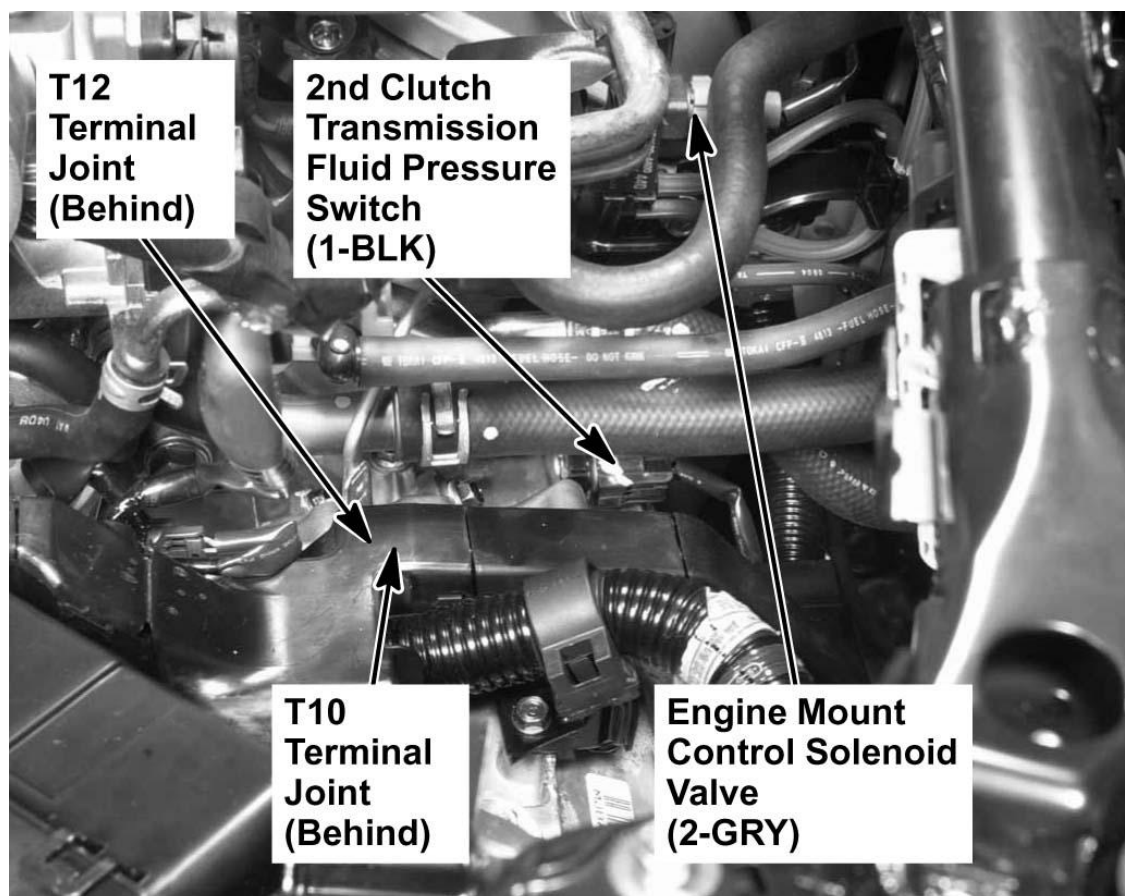


G00363475

**Fig. 21: Left Side Of Engine**  
Courtesy of AMERICAN HONDA MOTOR CO., INC.

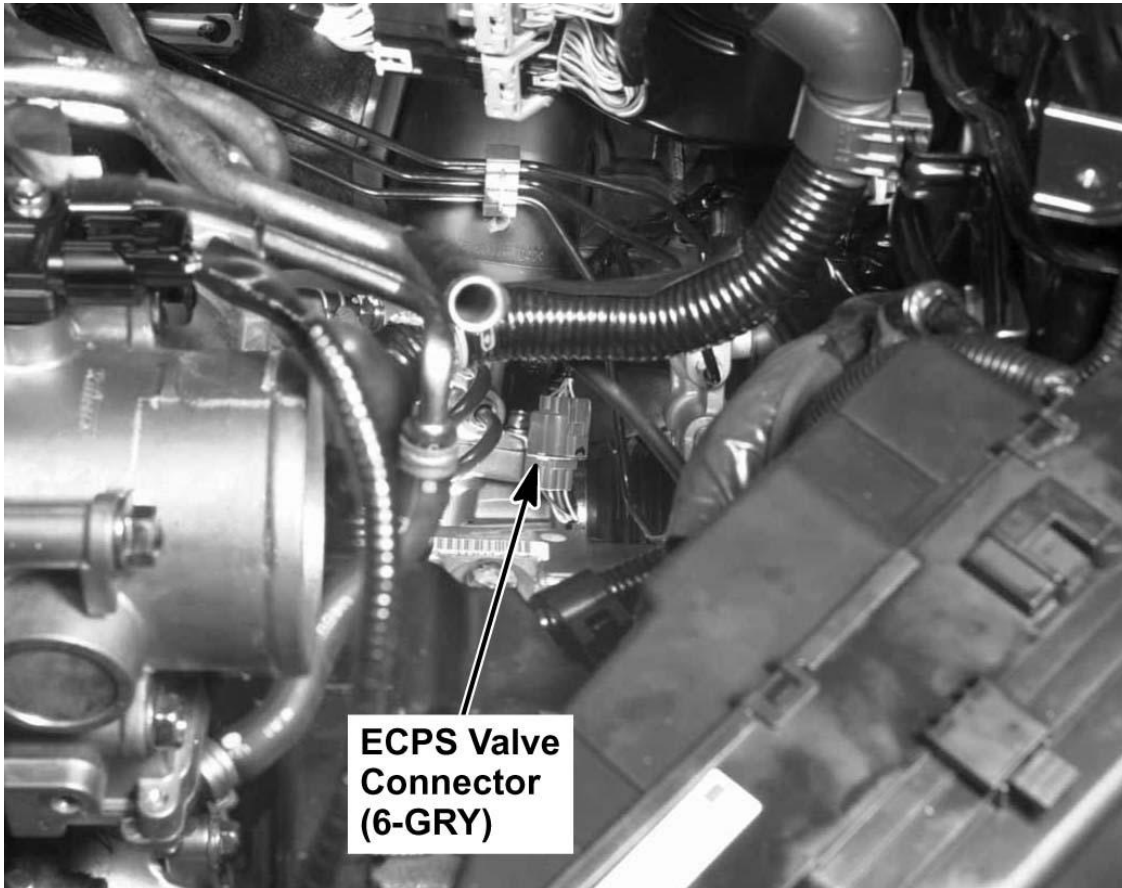


G00363476

**Fig. 22: Left Side Of Engine Compartment**  
Courtesy of AMERICAN HONDA MOTOR CO., INC.

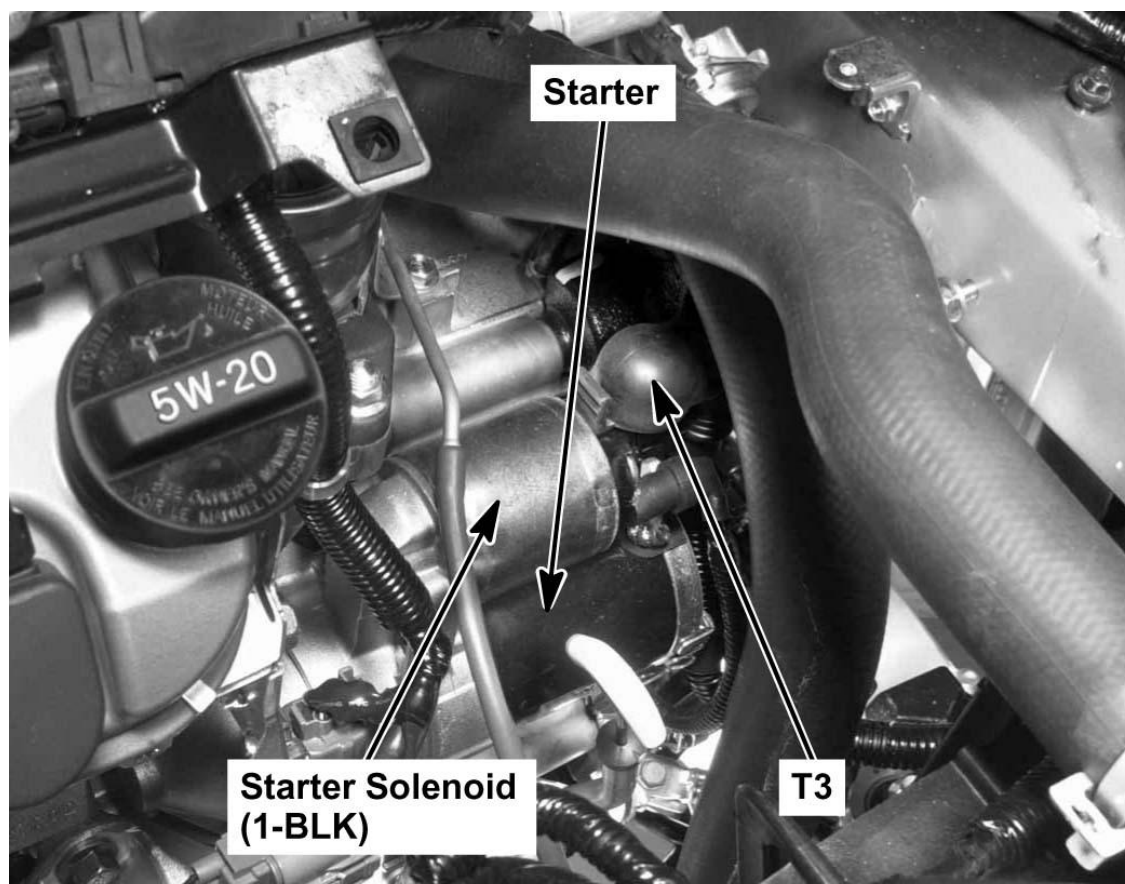

G00363477


**Fig. 23: Transmission Housing**  
Courtesy of AMERICAN HONDA MOTOR CO., INC.

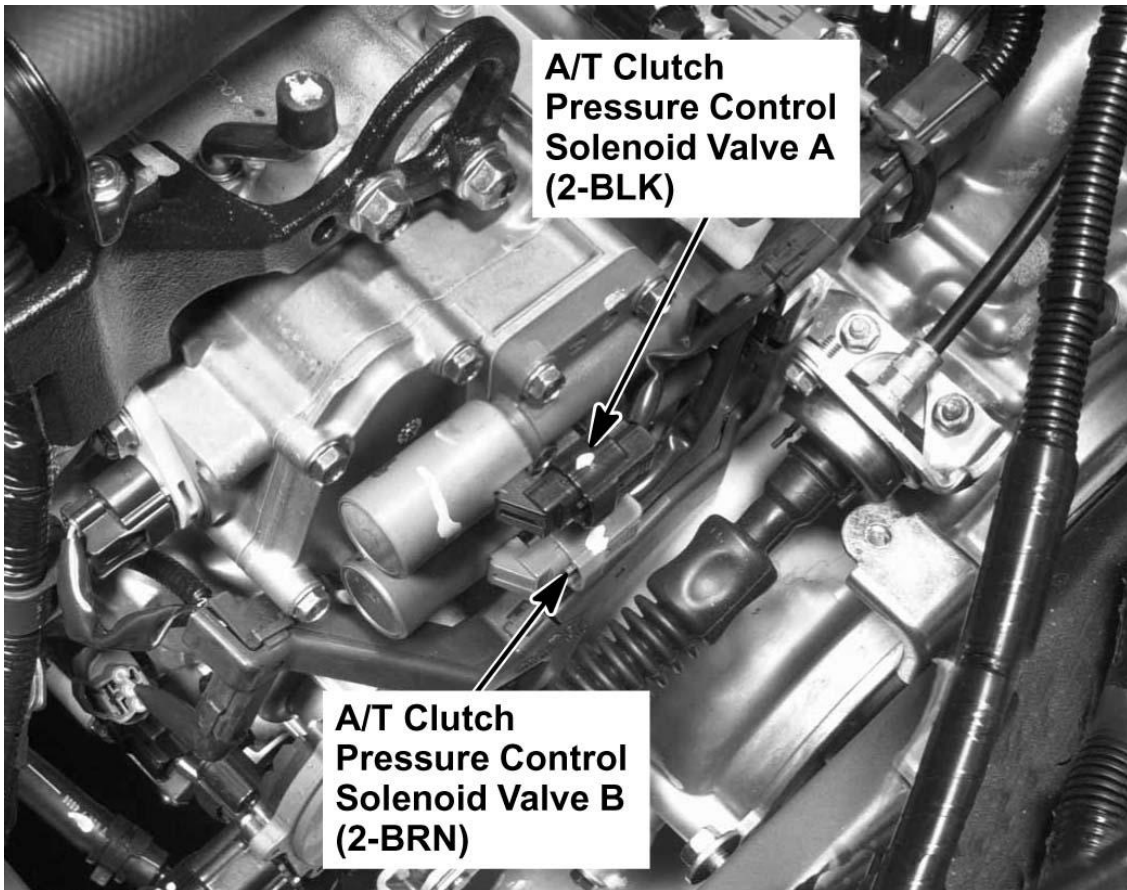

G00363478

**Fig. 24: Transmission Housing**  
Courtesy of AMERICAN HONDA MOTOR CO., INC.




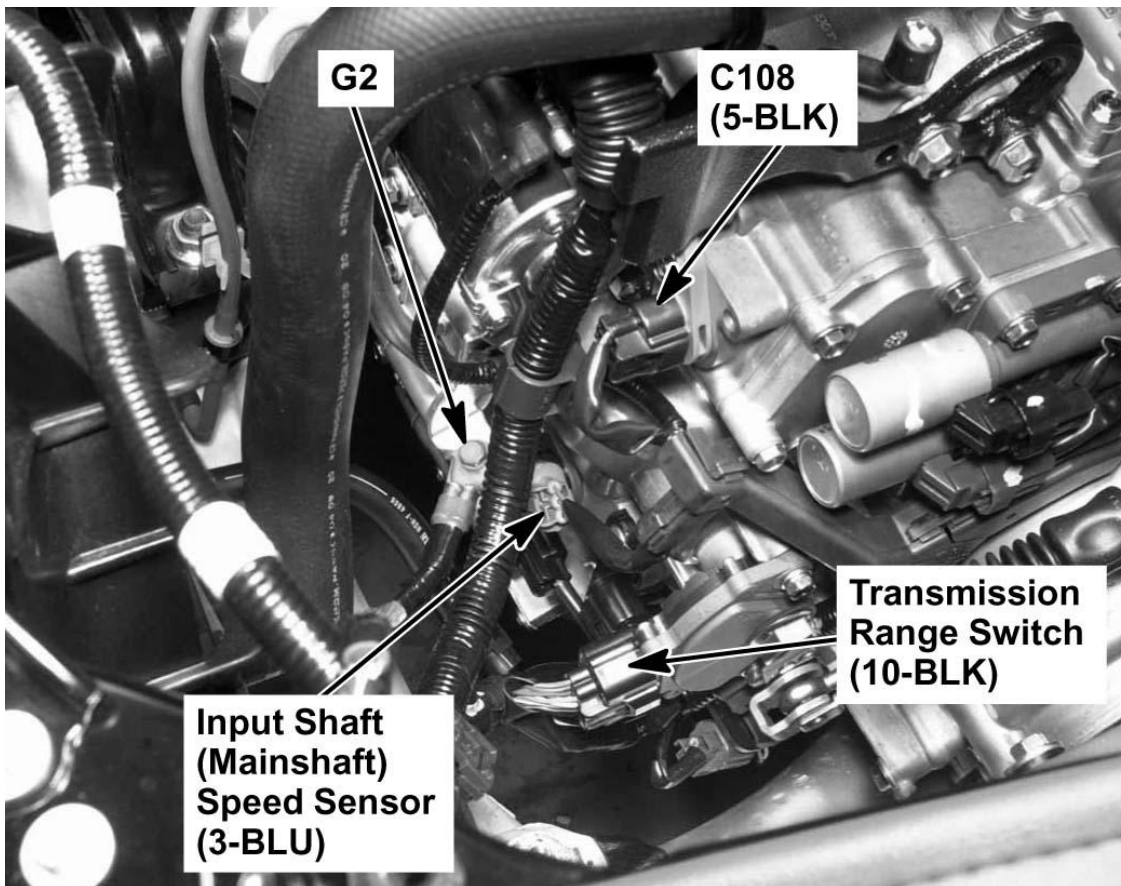

G00363479


**Fig. 25: Transmission Housing**  
Courtesy of AMERICAN HONDA MOTOR CO., INC.



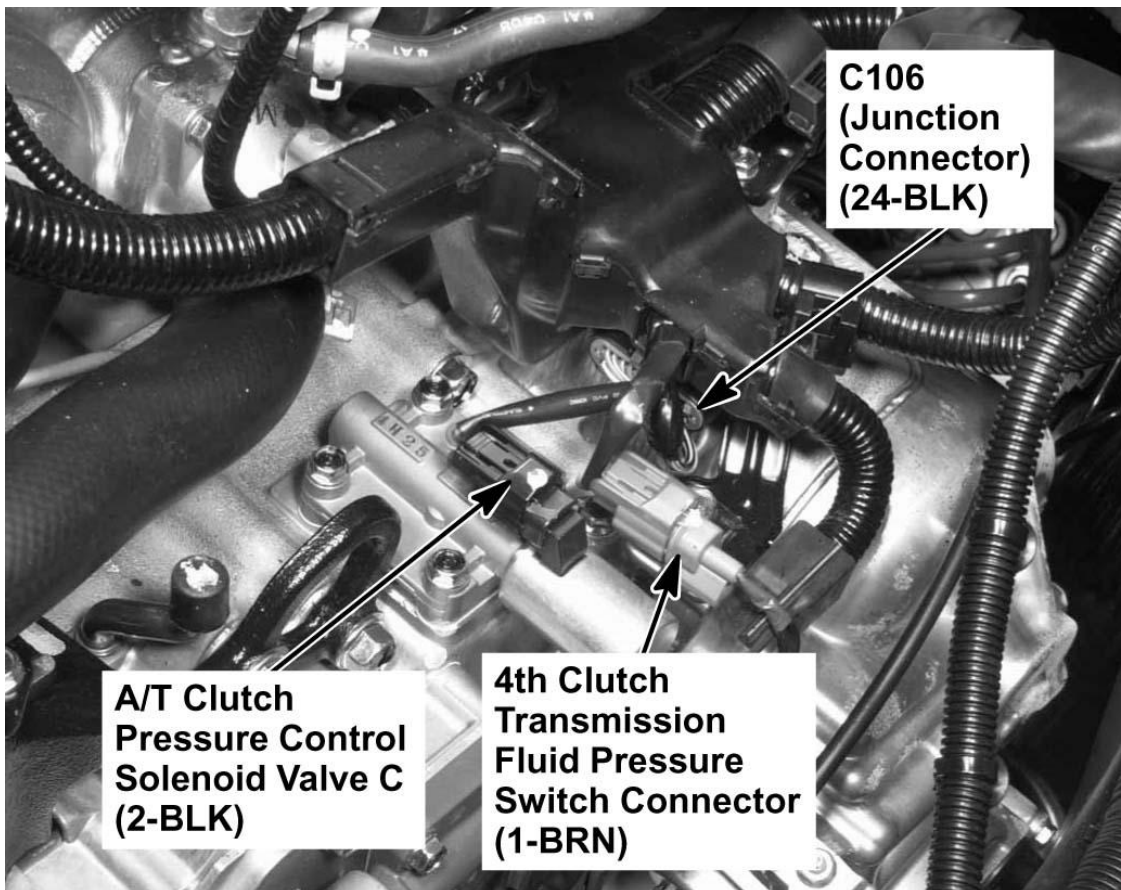


G00363480

**Fig. 26: Transmission Housing**  
Courtesy of AMERICAN HONDA MOTOR CO., INC.

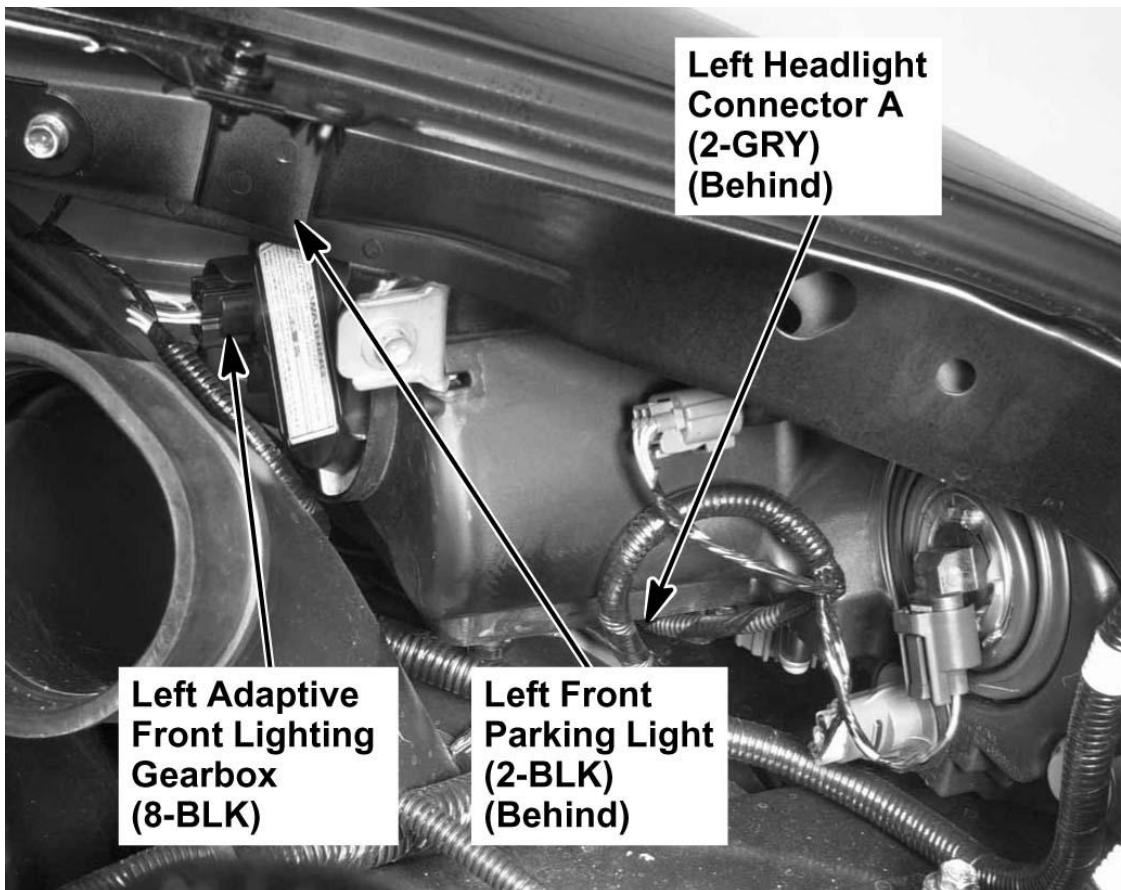


G00363481

**Fig. 27: Behind Left Headlight Assembly (Right Similar)**  
**Courtesy of AMERICAN HONDA MOTOR CO., INC.**

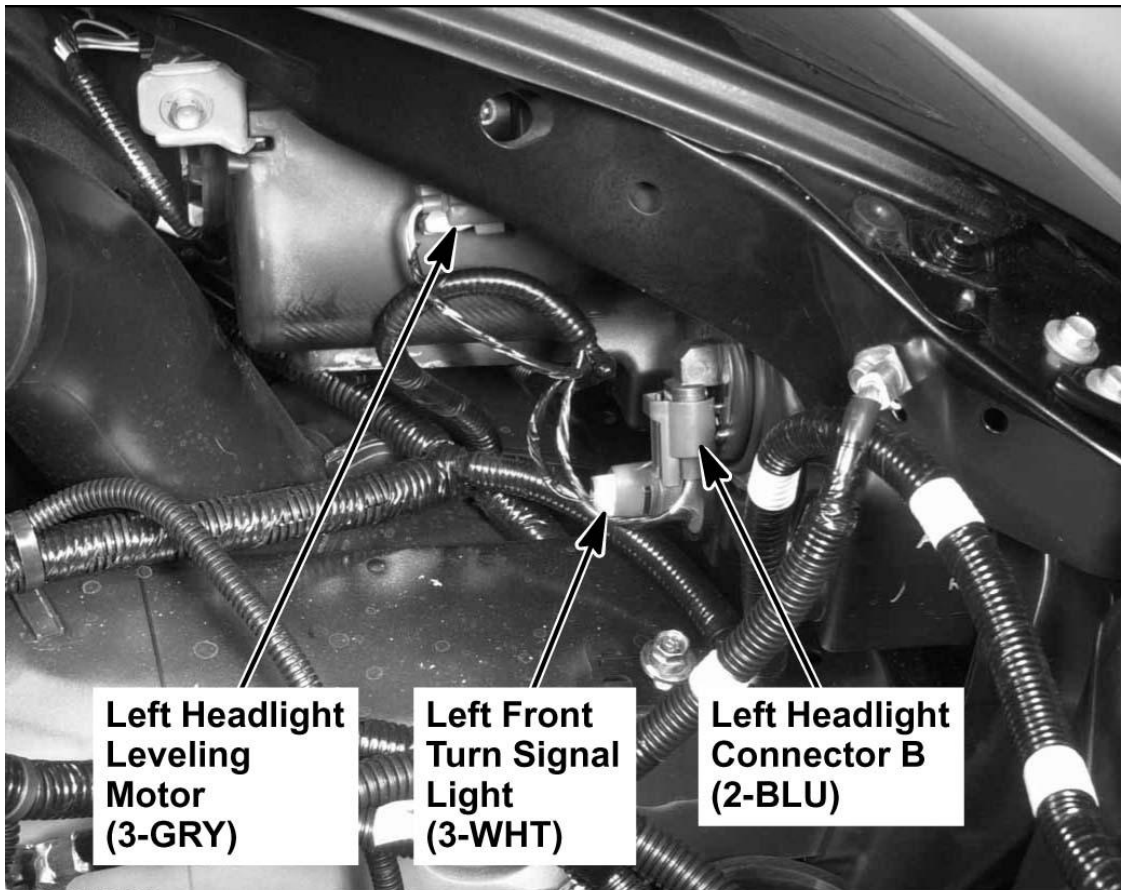

G00363482


**Fig. 28: Behind Left Headlight Assembly (Right Similar)**  
Courtesy of AMERICAN HONDA MOTOR CO., INC.

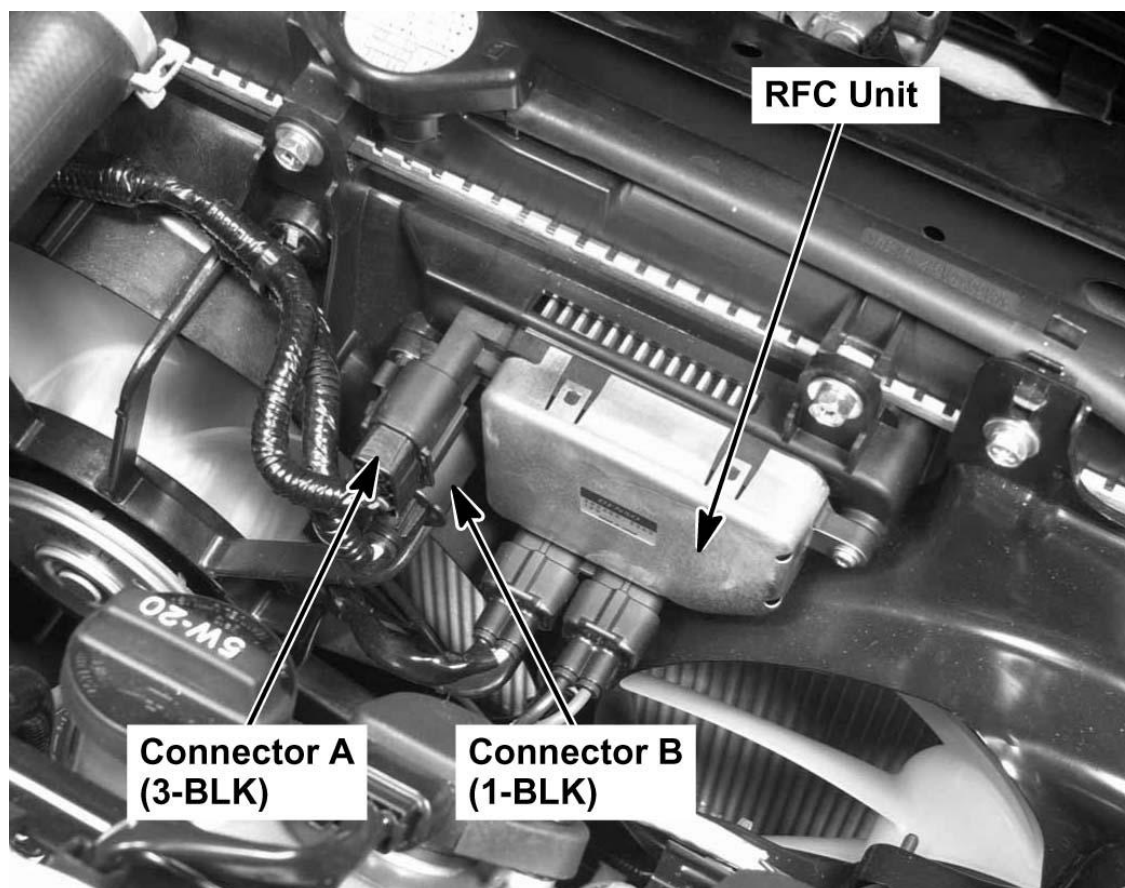

G00363483

**Fig. 29: Middle Of Engine Compartment**  
Courtesy of AMERICAN HONDA MOTOR CO., INC.




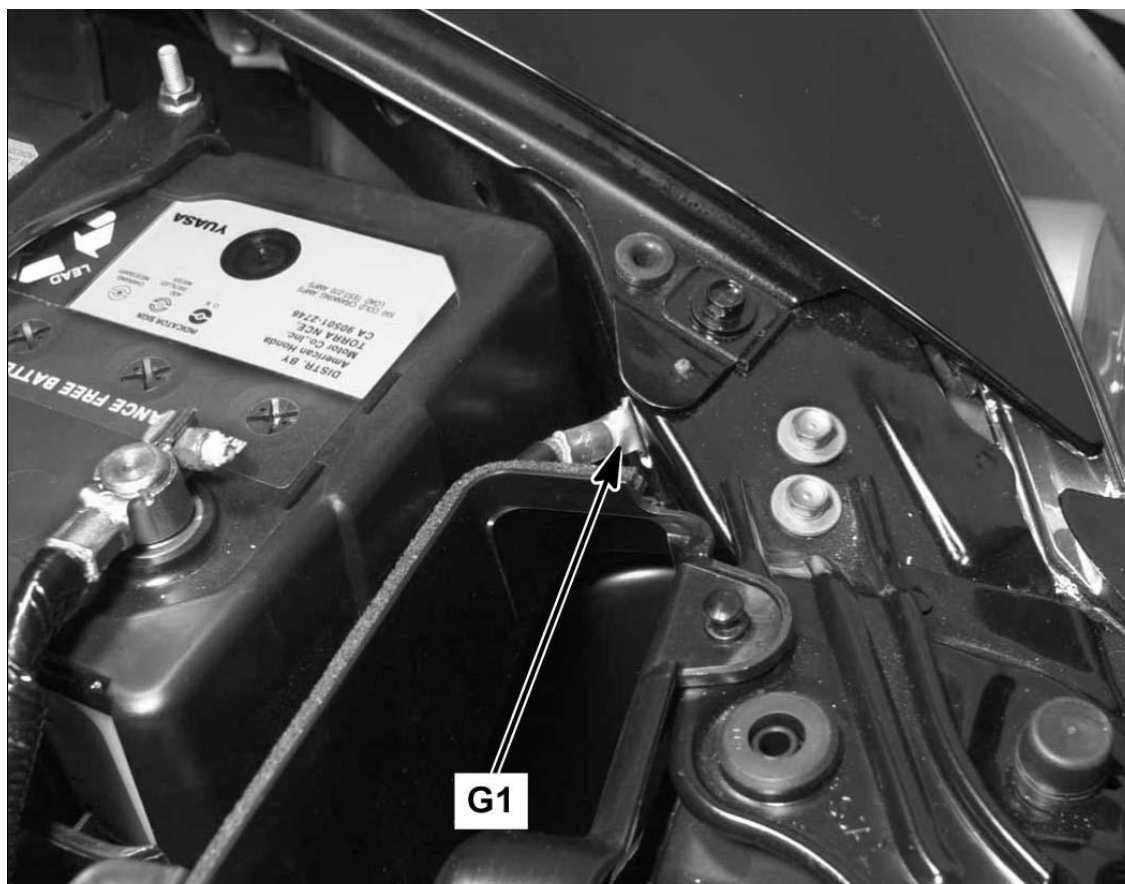

G00363484


**Fig. 30: Left Side Of Engine Compartment**  
Courtesy of AMERICAN HONDA MOTOR CO., INC.



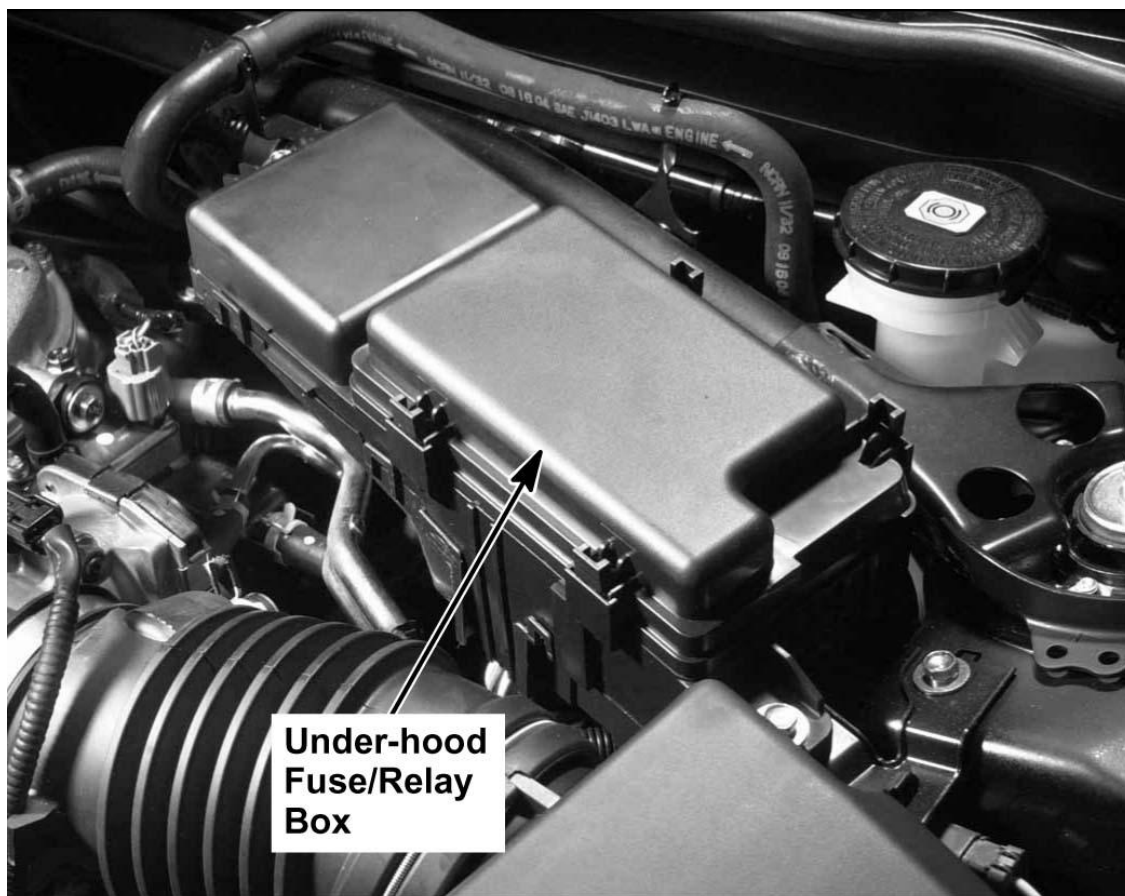

G00363485

**Fig. 31: Left Side Of Engine Compartment**  
Courtesy of AMERICAN HONDA MOTOR CO., INC.

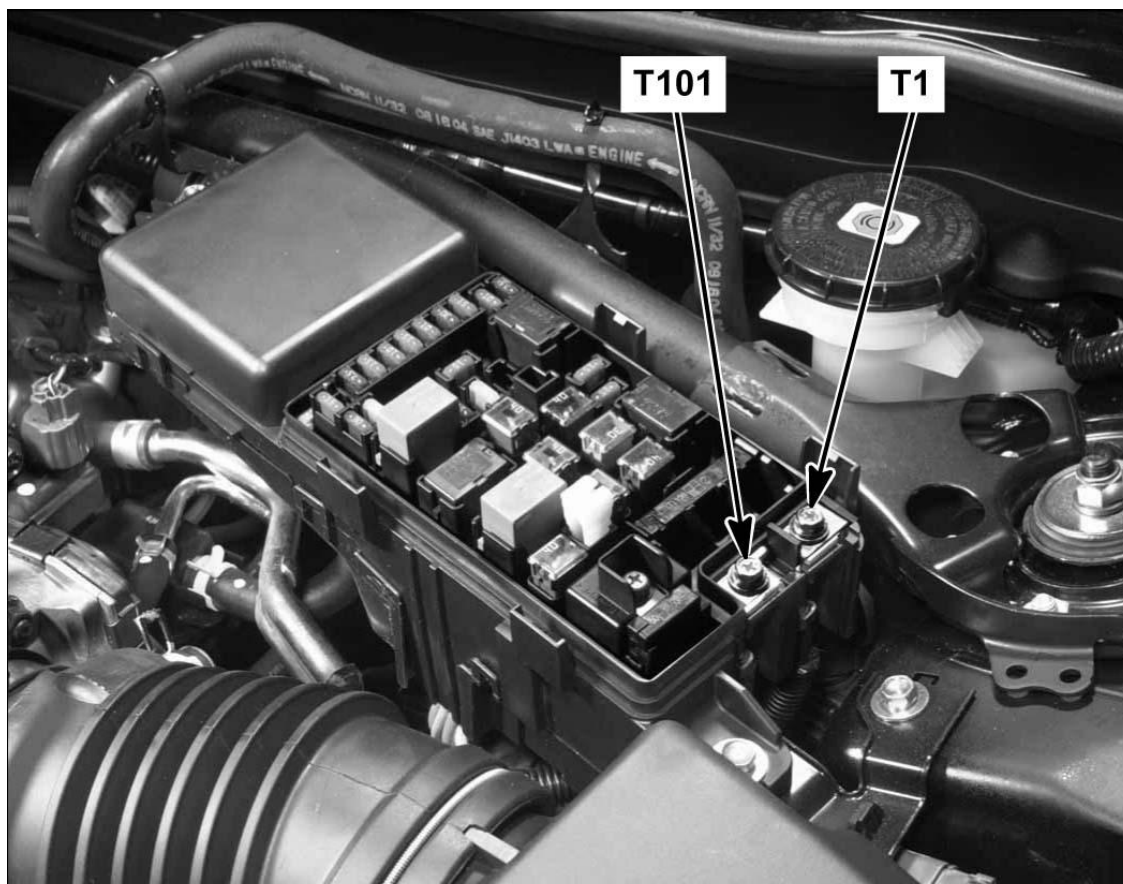


G00363486

**Fig. 32: Left Side Of Engine Compartment**  
Courtesy of AMERICAN HONDA MOTOR CO., INC.



G00363487


**Fig. 33: Left Side Of Engine Compartment**  
Courtesy of AMERICAN HONDA MOTOR CO., INC.

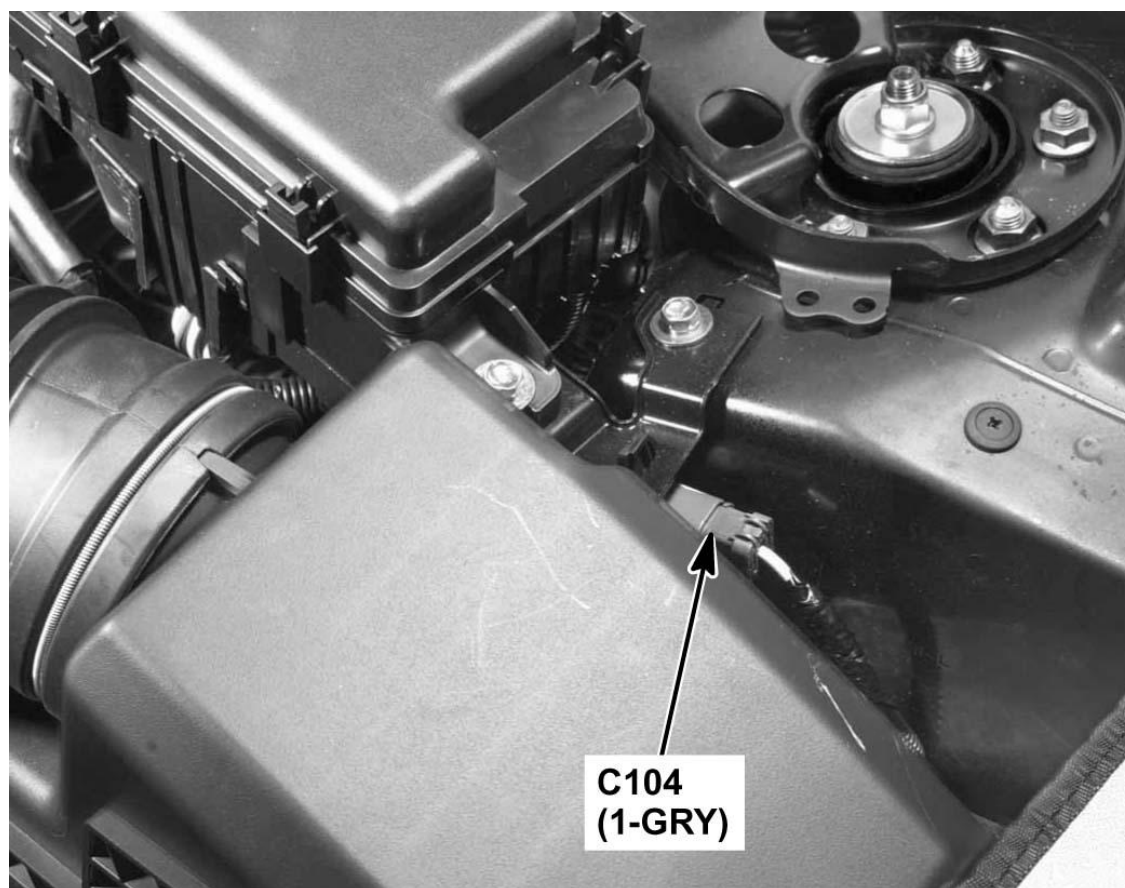

G00363488

**Fig. 34: Left Side Of Engine Compartment**  
Courtesy of AMERICAN HONDA MOTOR CO., INC.




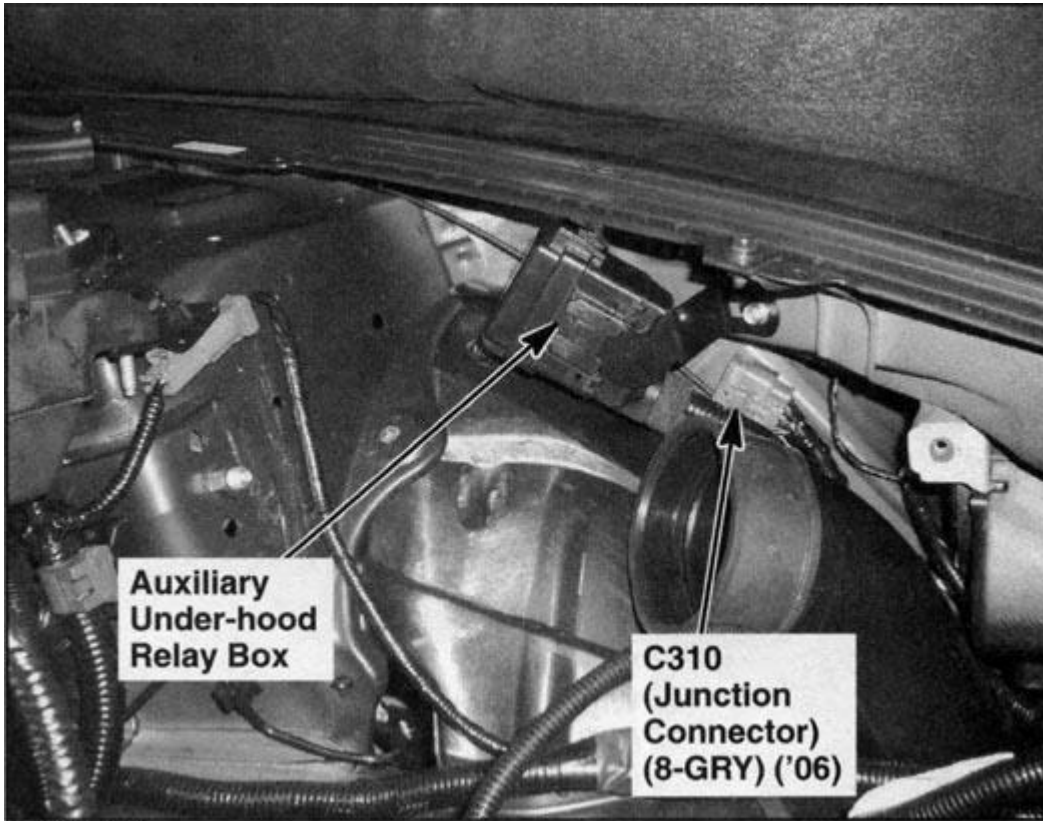

G00430622


**Fig. 35: Left Side Of Engine Compartment**  
Courtesy of AMERICAN HONDA MOTOR CO., INC.



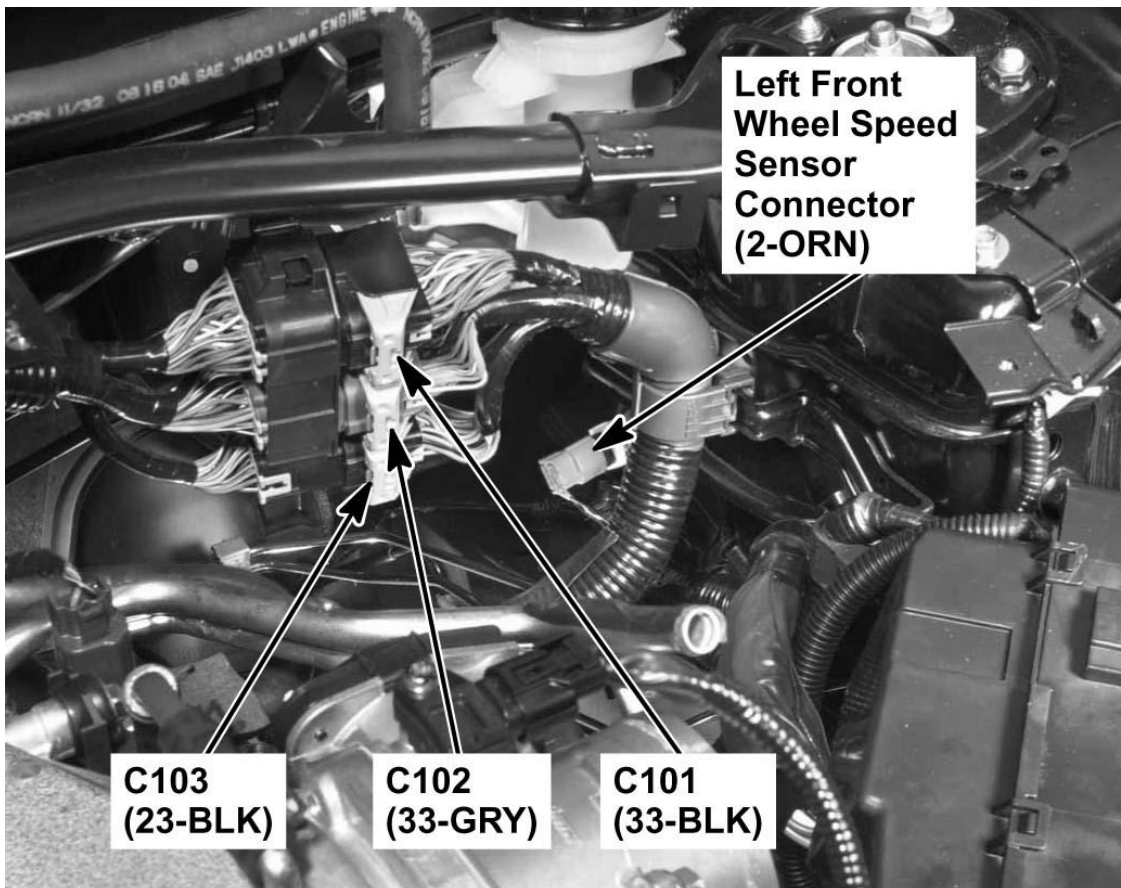


G00363490

**Fig. 36: Left Side Of Engine Compartment**  
Courtesy of AMERICAN HONDA MOTOR CO., INC.

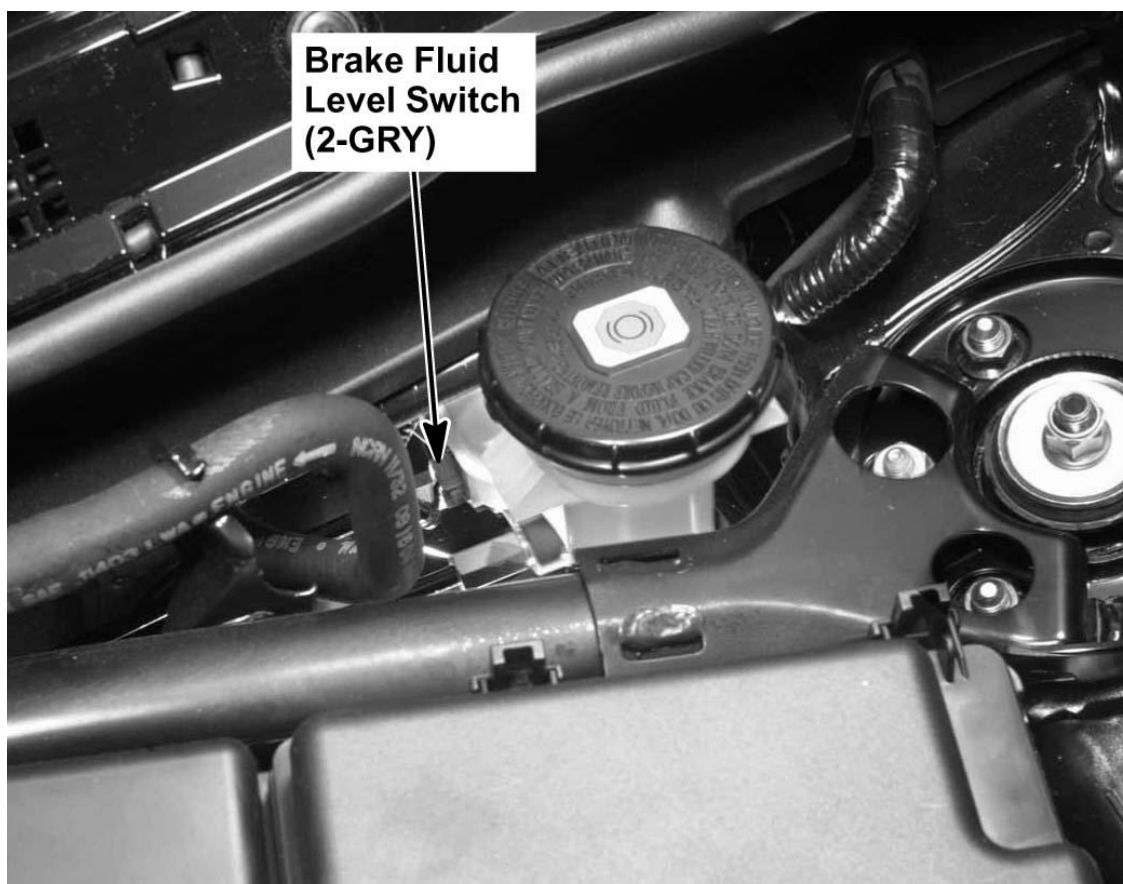

G00363491

**Fig. 37: Left Side Of Engine Compartment**  
Courtesy of AMERICAN HONDA MOTOR CO., INC.

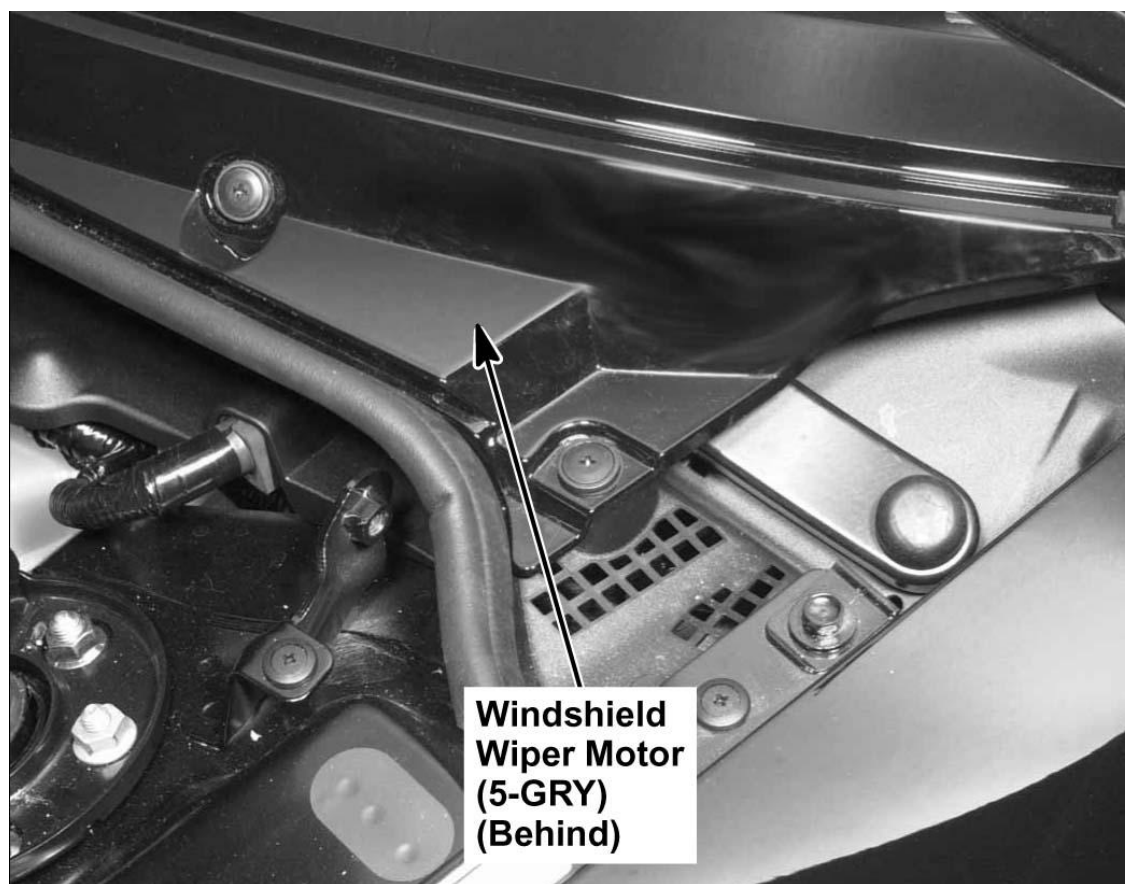

G00363492


**Fig. 38: Under Left Side Of Cowl Cover**  
Courtesy of AMERICAN HONDA MOTOR CO., INC.



G00363493

**Fig. 39: Left Side Of Dash**

Courtesy of AMERICAN HONDA MOTOR CO., INC.

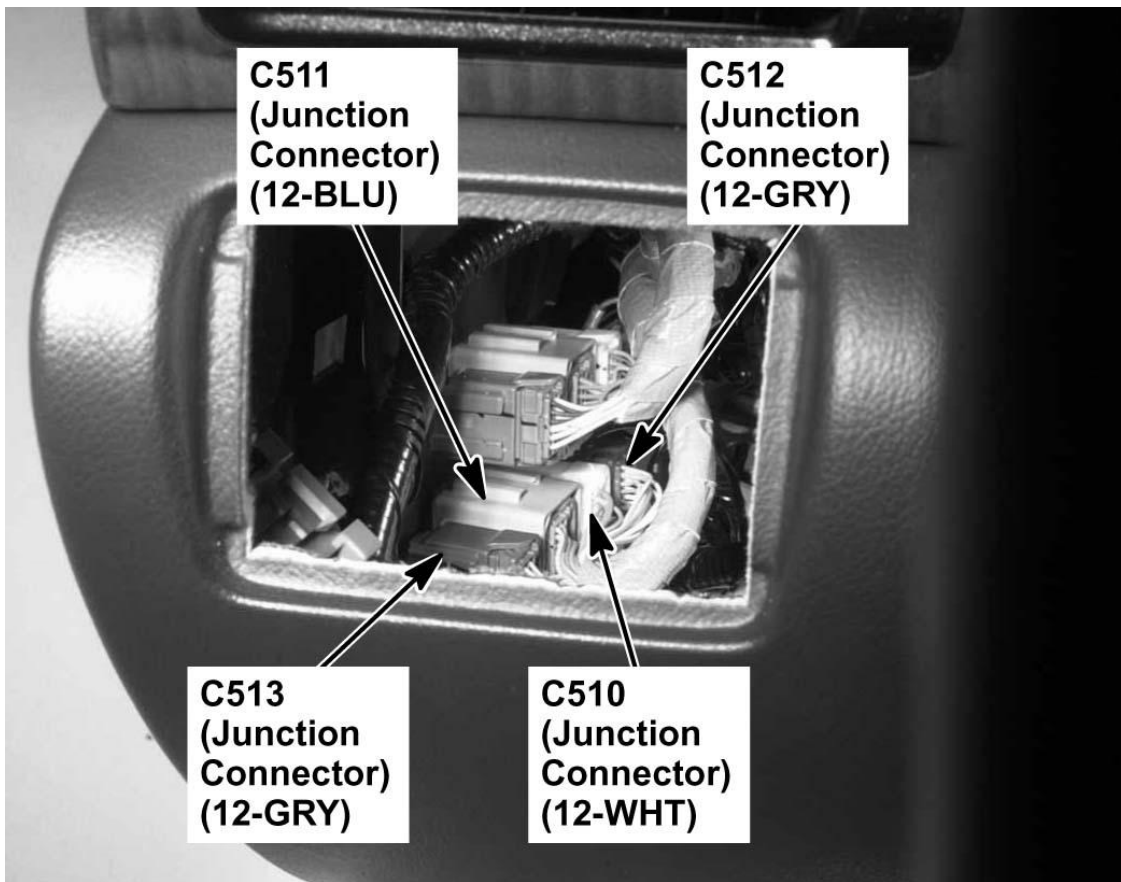


G00363494

**Fig. 40: Left Side Of Dash**

Courtesy of AMERICAN HONDA MOTOR CO., INC.




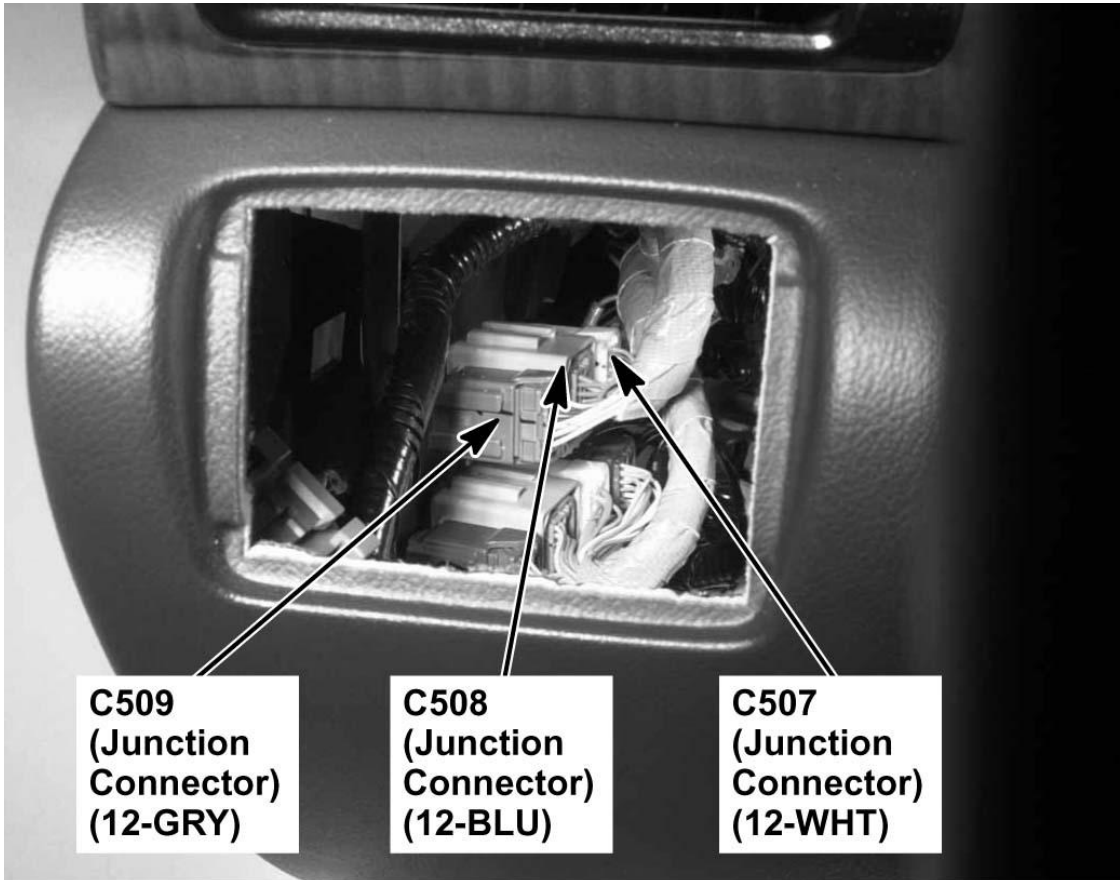

G00363495

**Fig. 41: Left Side Of Dash**

Courtesy of AMERICAN HONDA MOTOR CO., INC.

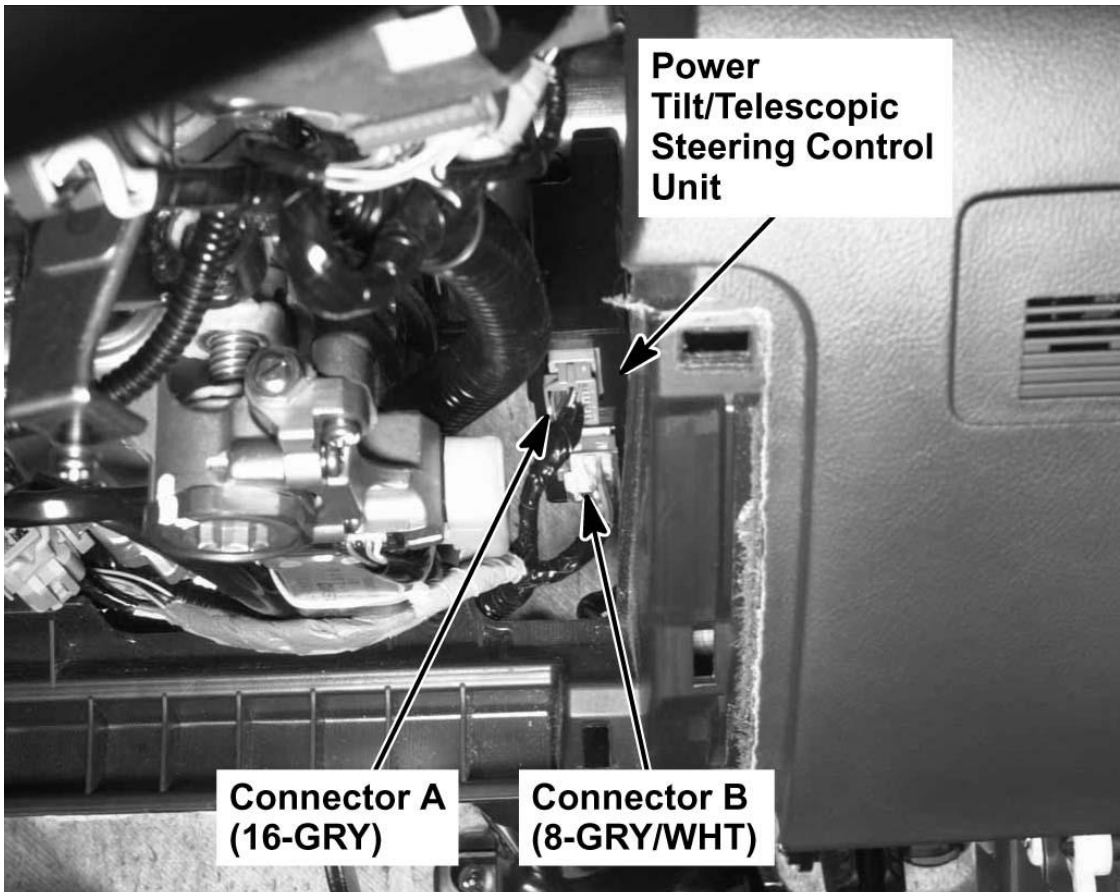

G00363496

**Fig. 42: Under Left Side Of Dash**


Courtesy of AMERICAN HONDA MOTOR CO., INC.



G00363497

**Fig. 43: Under Left Side Of Dash**


Courtesy of AMERICAN HONDA MOTOR CO., INC.

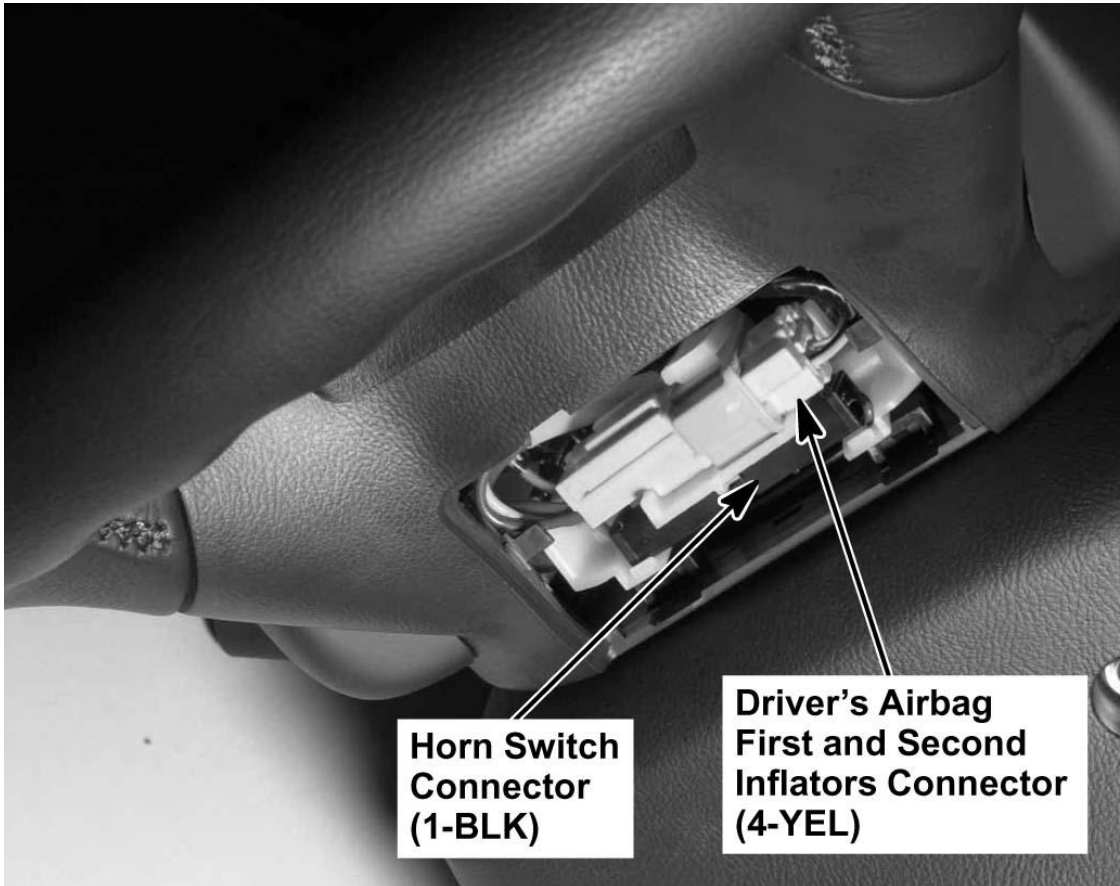

G00363498

**Fig. 44: Base Of Steering Wheel**

Courtesy of AMERICAN HONDA MOTOR CO., INC.

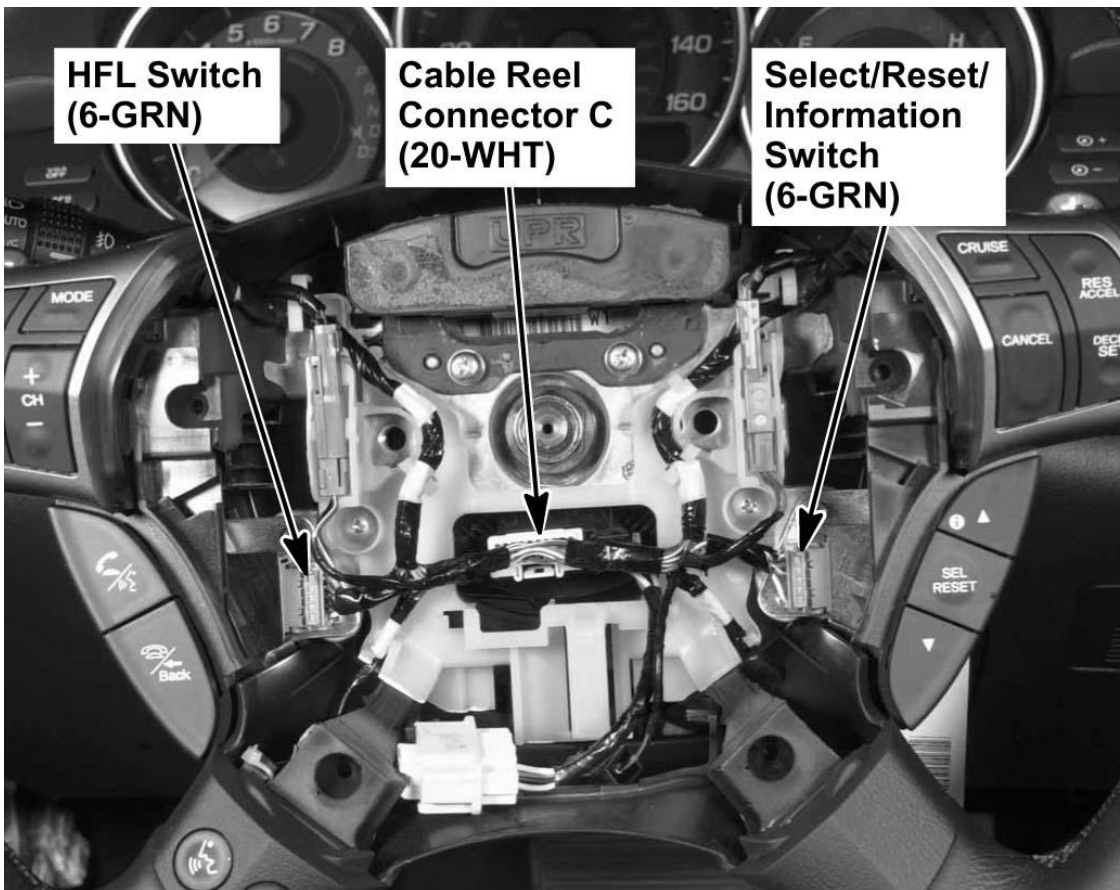


G00363499

**Fig. 45: Inside Steering Wheel**

Courtesy of AMERICAN HONDA MOTOR CO., INC.




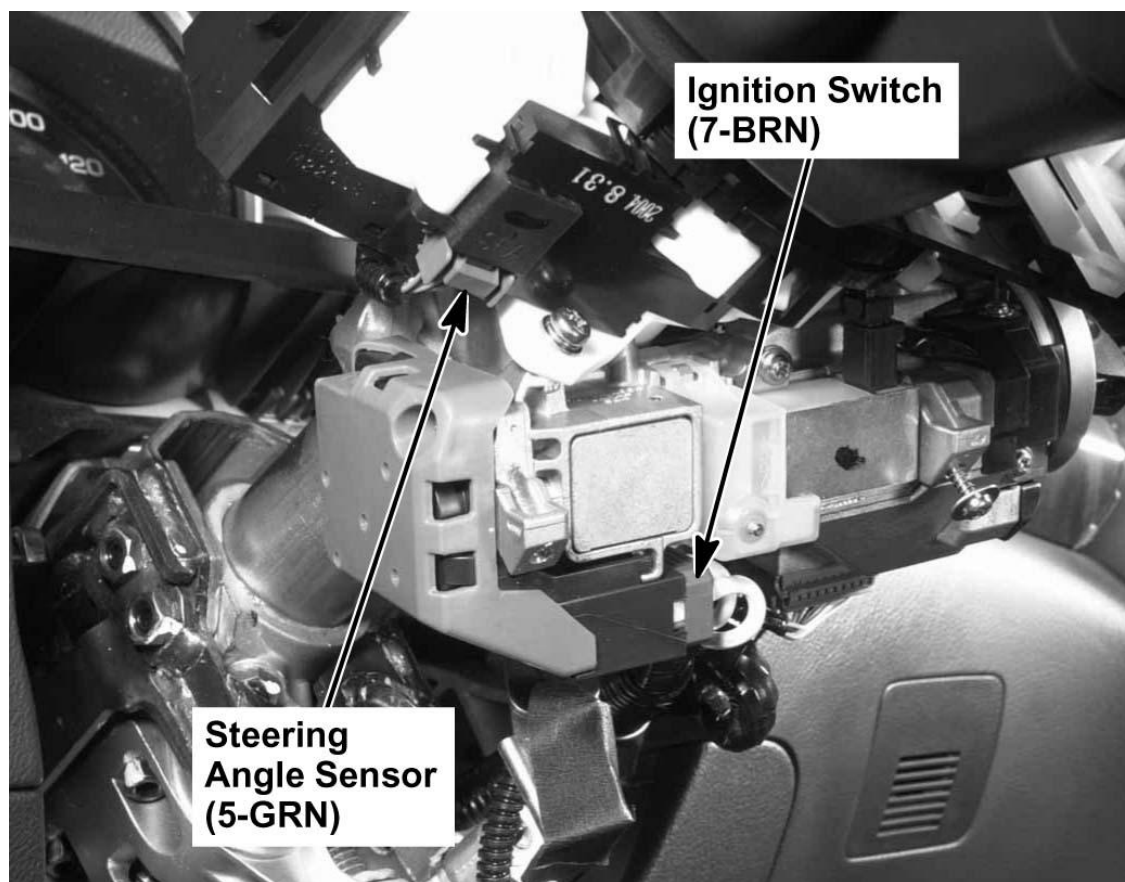

G00363500


**Fig. 46: In Steering Wheel Cover**

Courtesy of AMERICAN HONDA MOTOR CO., INC.

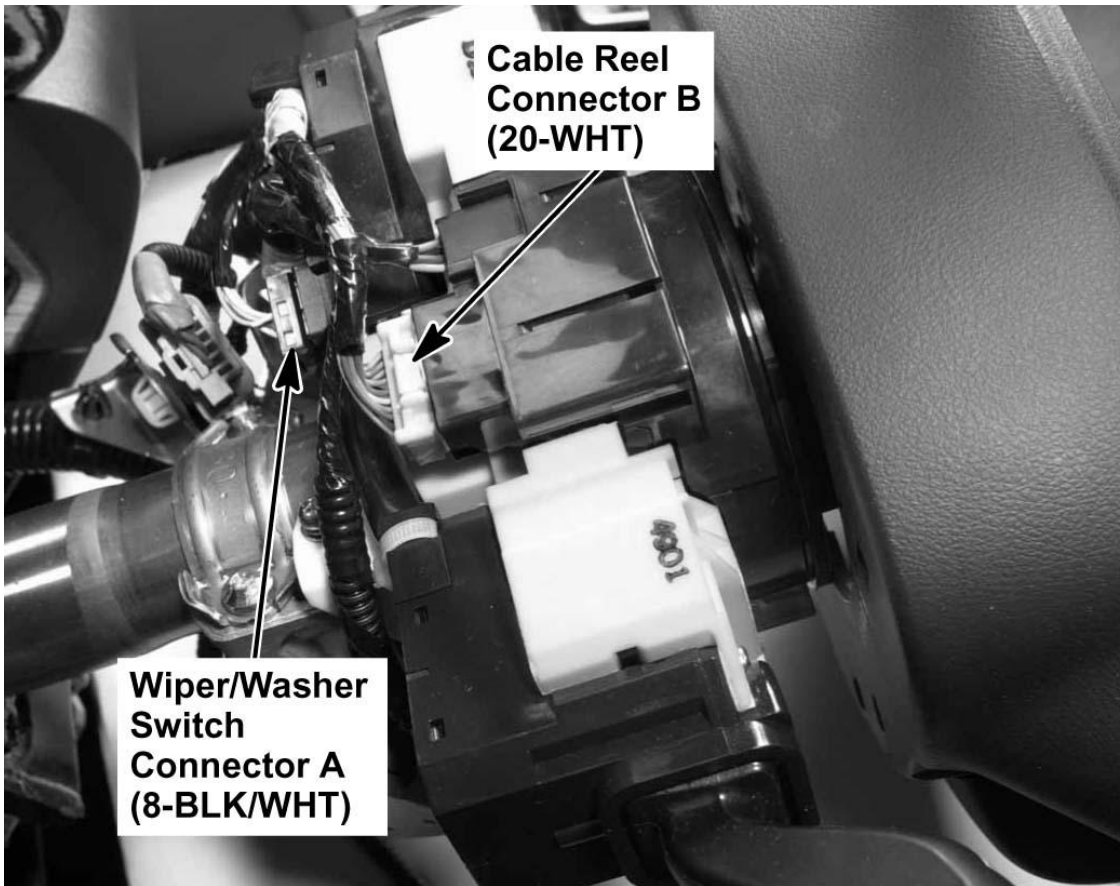


G00363501

**Fig. 47: In Steering Wheel Cover**  
Courtesy of AMERICAN HONDA MOTOR CO., INC.

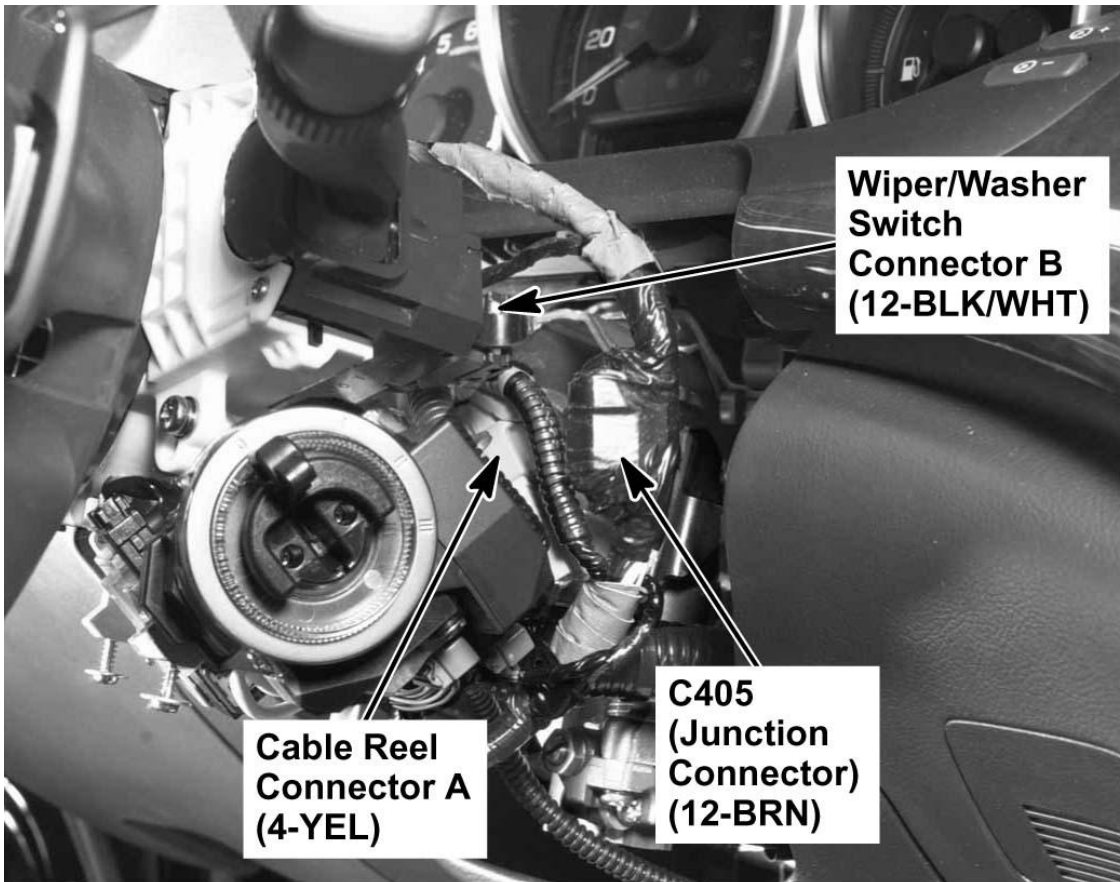

G00363502


**Fig. 48: In Steering Wheel Cover**  
Courtesy of AMERICAN HONDA MOTOR CO., INC.

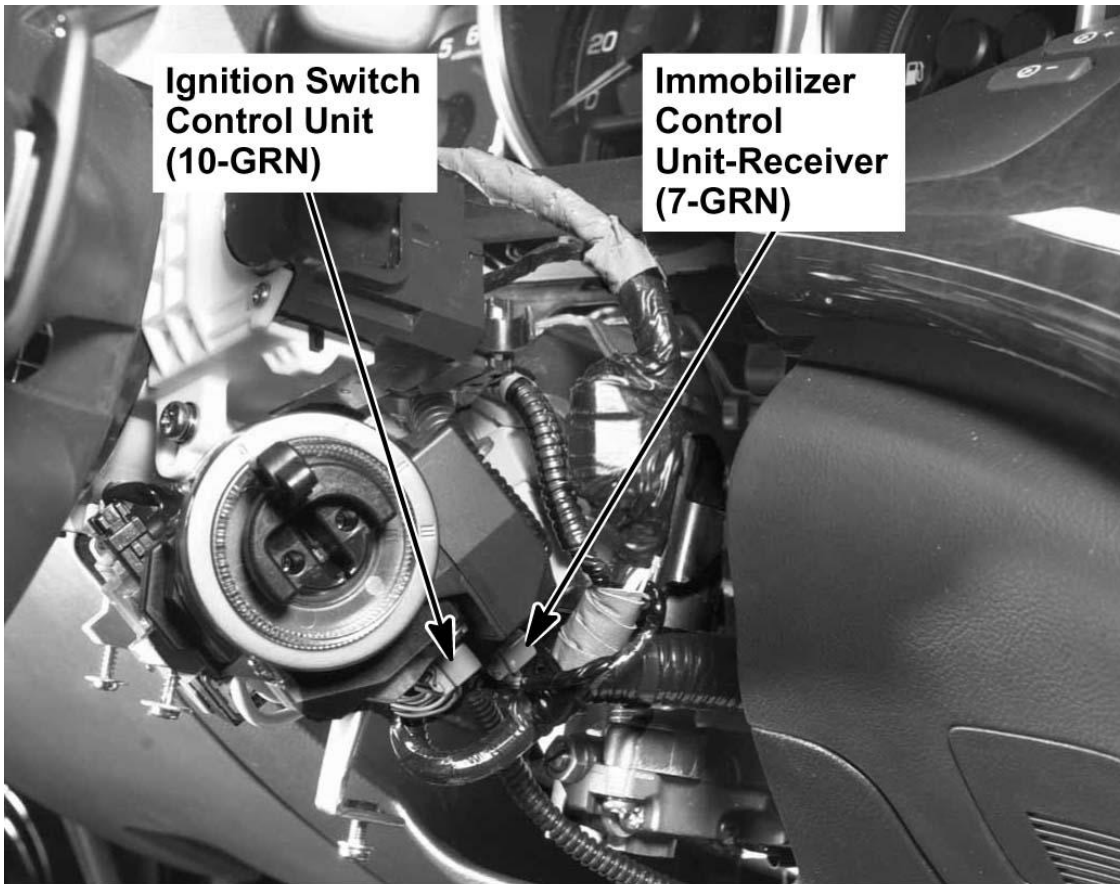

G00363503

**Fig. 49: In Steering Wheel Cover**  
Courtesy of AMERICAN HONDA MOTOR CO., INC.




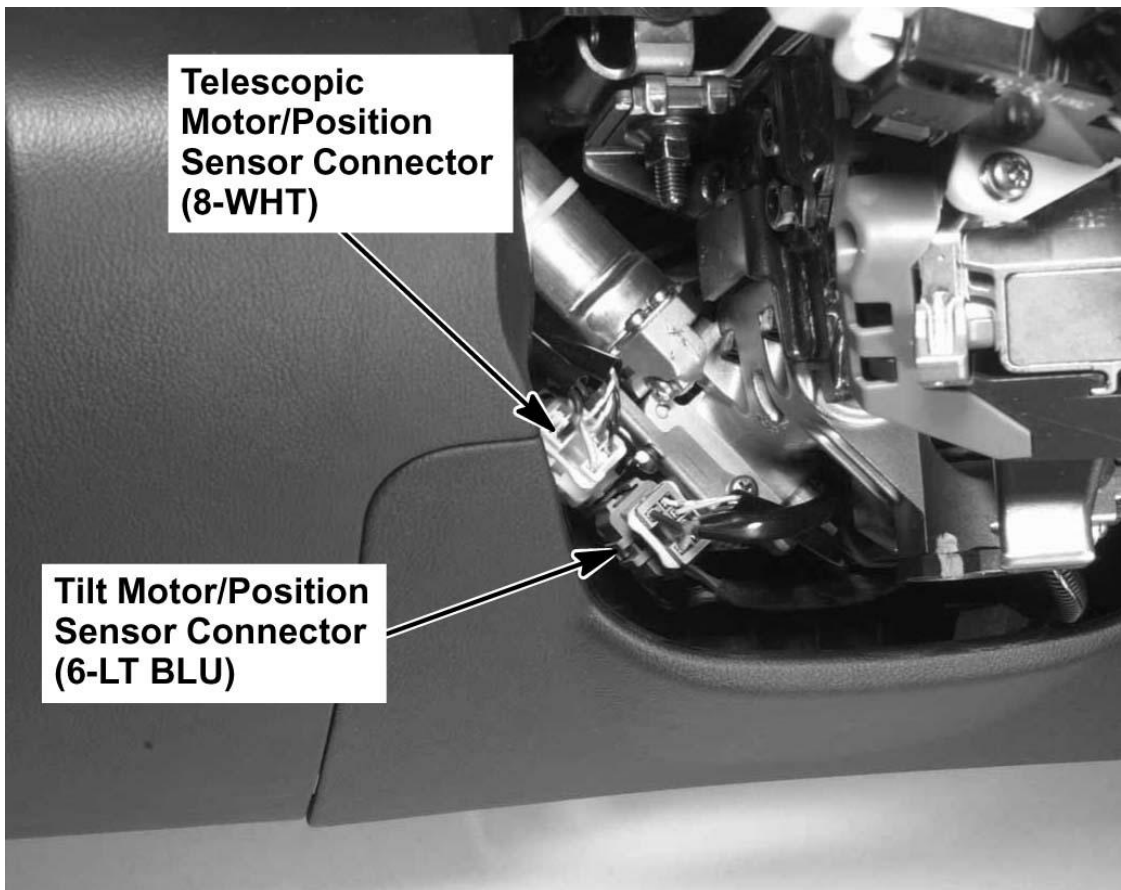

G00363504


**Fig. 50: In Steering Wheel Cover**  
Courtesy of AMERICAN HONDA MOTOR CO., INC.



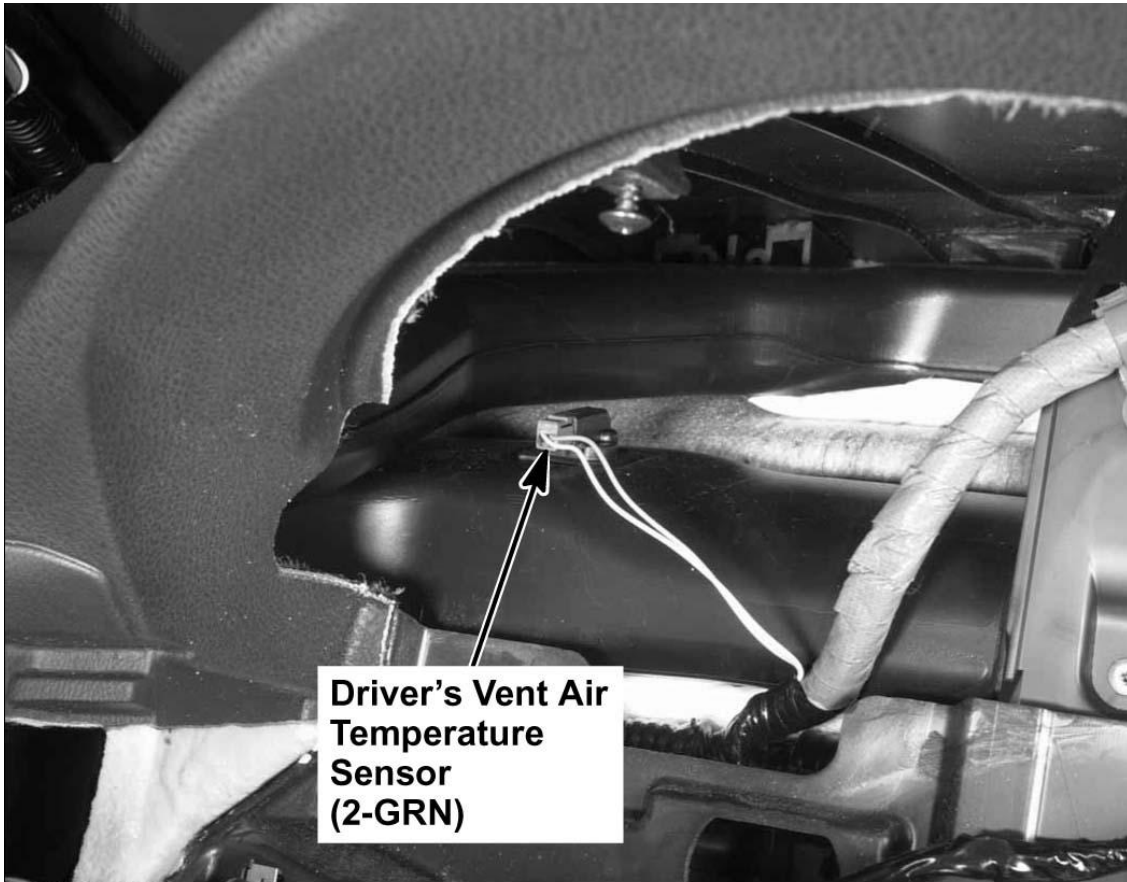

G00363505


**Fig. 51: Behind Gauge Control Module**  
Courtesy of AMERICAN HONDA MOTOR CO., INC.

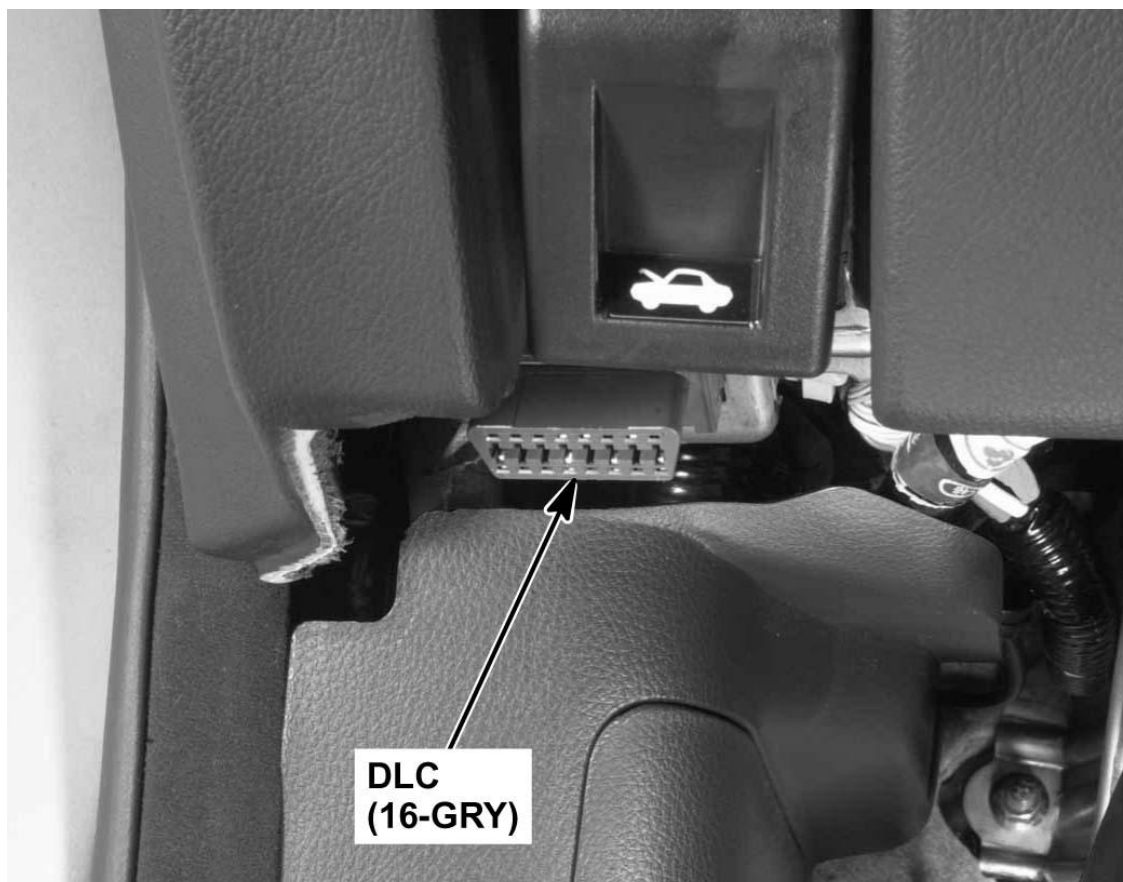

G00363506

**Fig. 52: Under Left Side Of Dash**


Courtesy of AMERICAN HONDA MOTOR CO., INC.

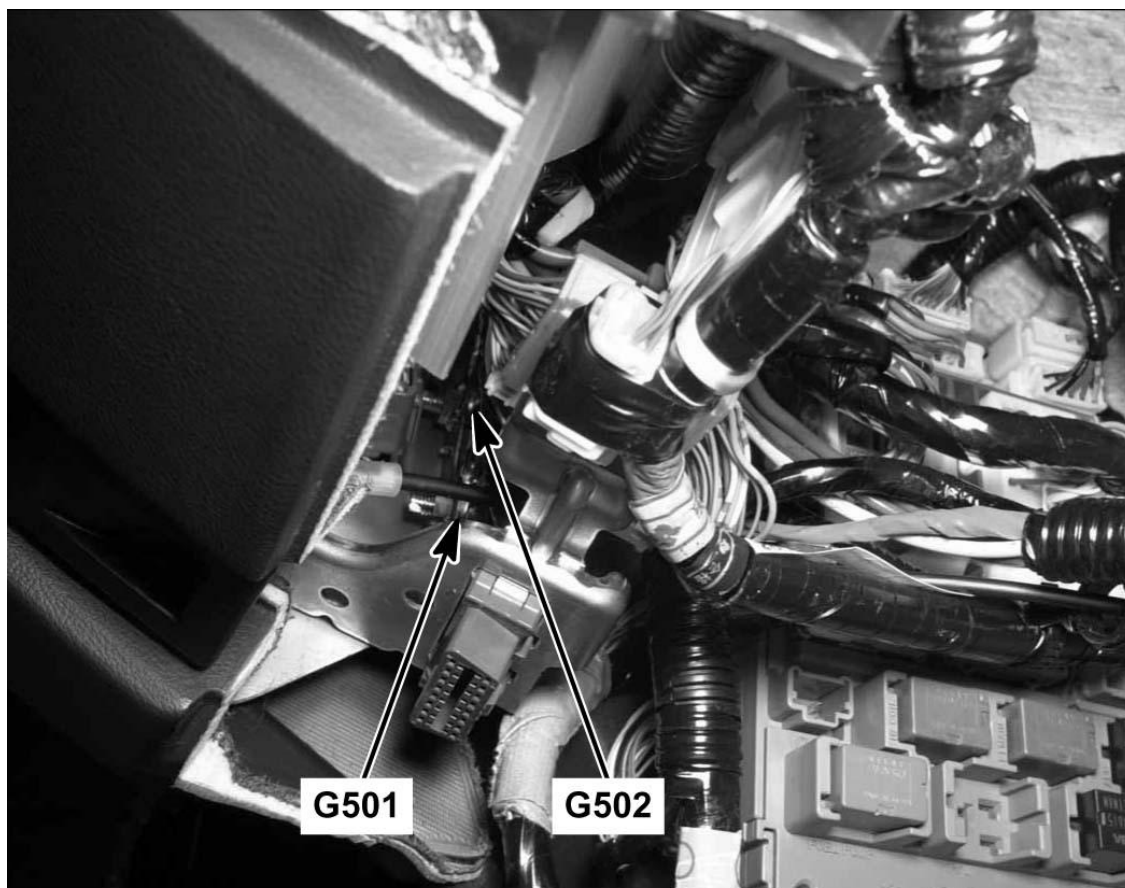

G00363507

**Fig. 53: Under Left Side Of Dash**

Courtesy of AMERICAN HONDA MOTOR CO., INC.

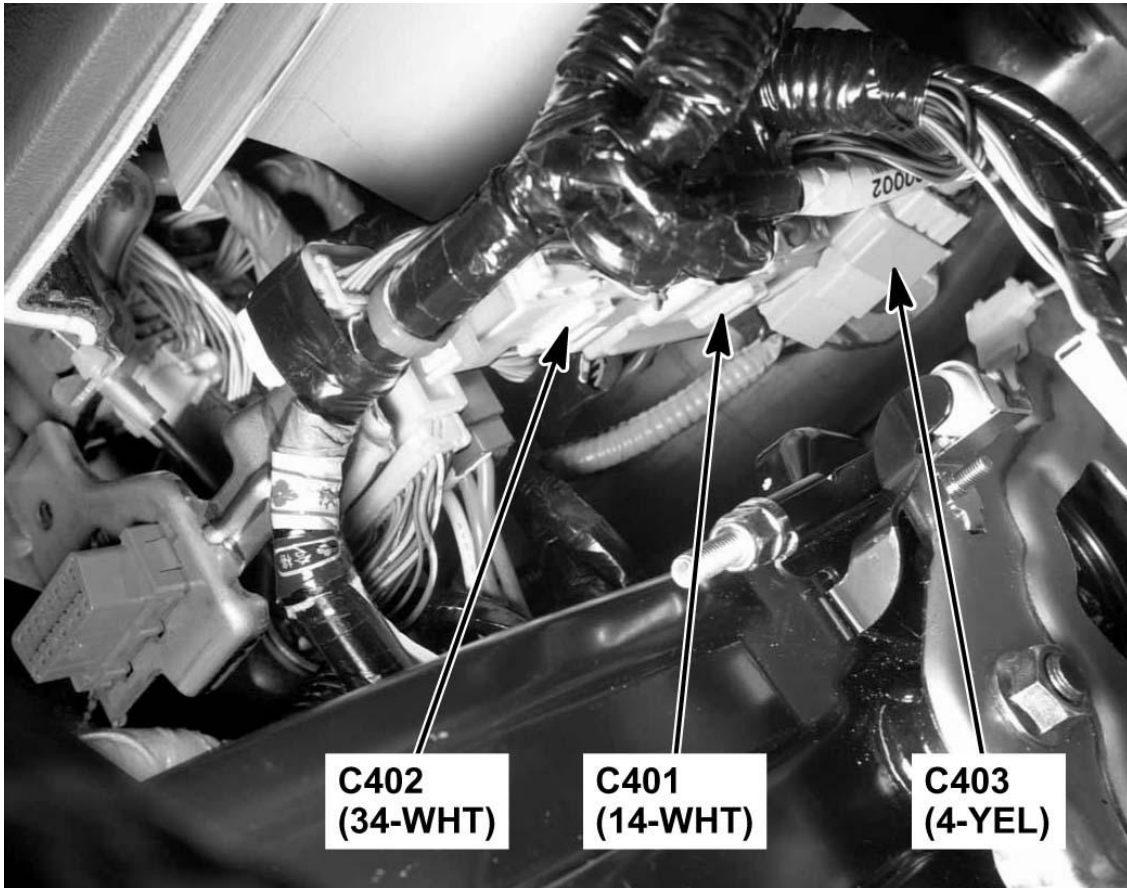


G00363508

**Fig. 54: Under Left Side Of Dash**

Courtesy of AMERICAN HONDA MOTOR CO., INC.




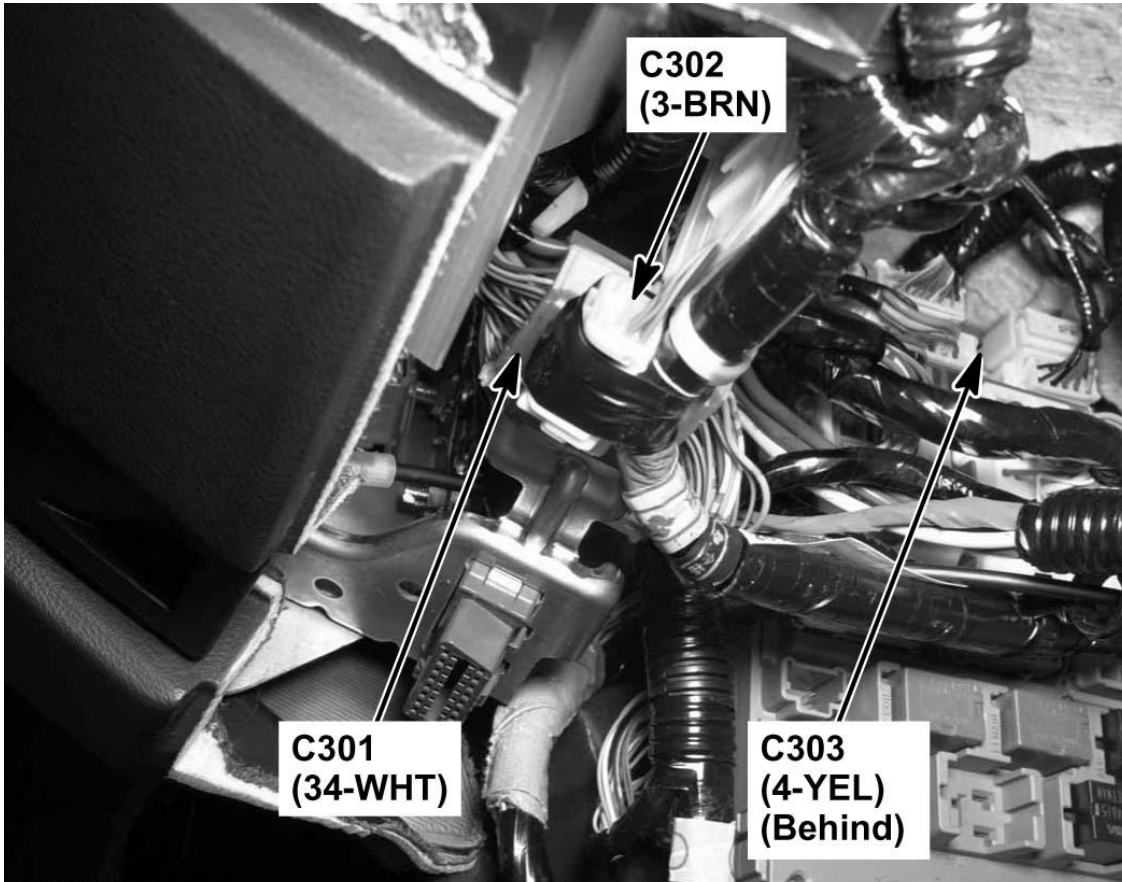

G00363509

**Fig. 55: Under Left Side Of Dash**


Courtesy of AMERICAN HONDA MOTOR CO., INC.

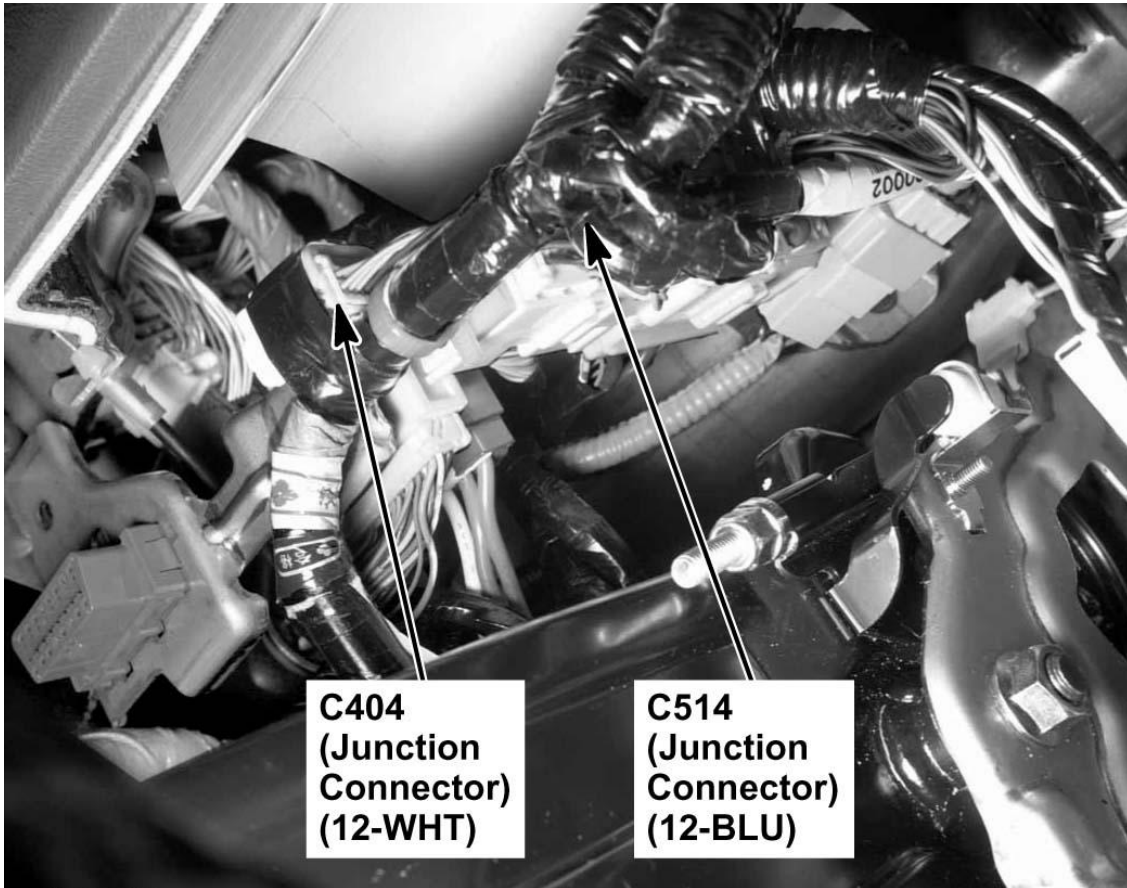

G00363510

**Fig. 56: Under Left Side Of Dash**


Courtesy of AMERICAN HONDA MOTOR CO., INC.

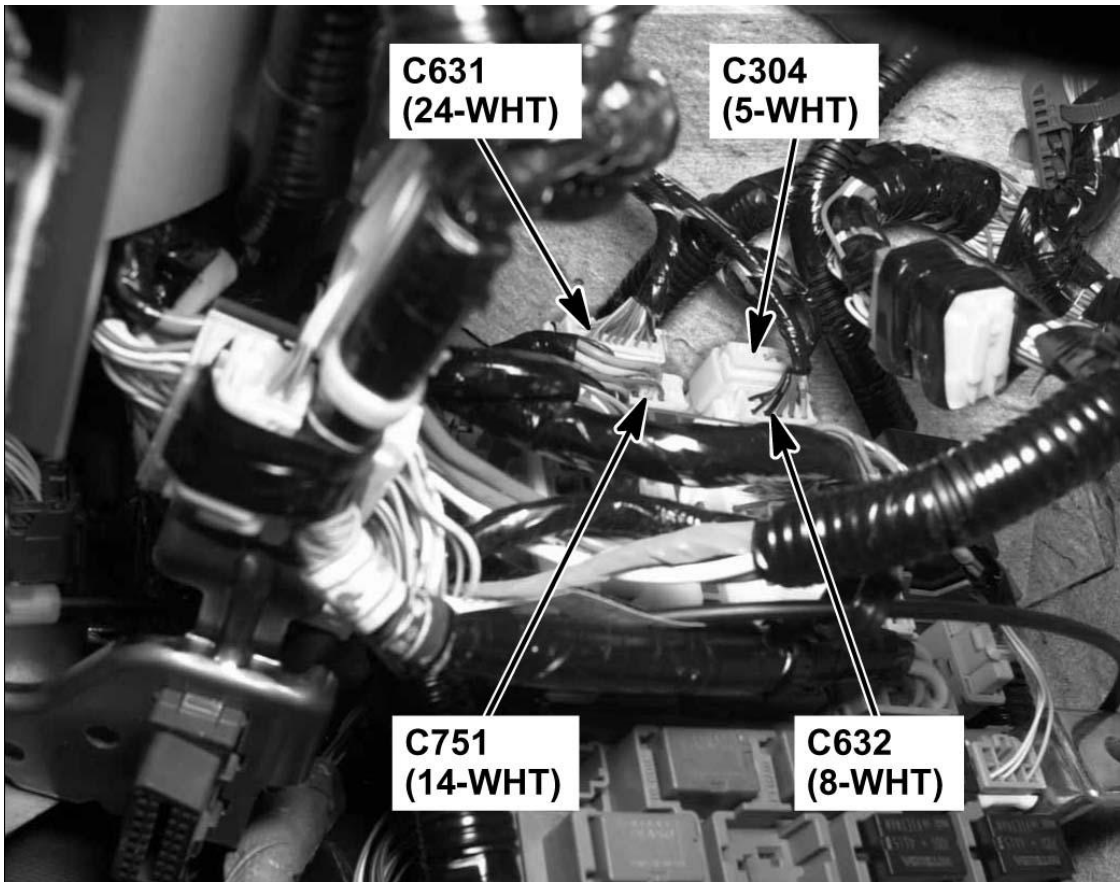

G00363511

**Fig. 57: Under Left Side Of Dash**

Courtesy of AMERICAN HONDA MOTOR CO., INC.

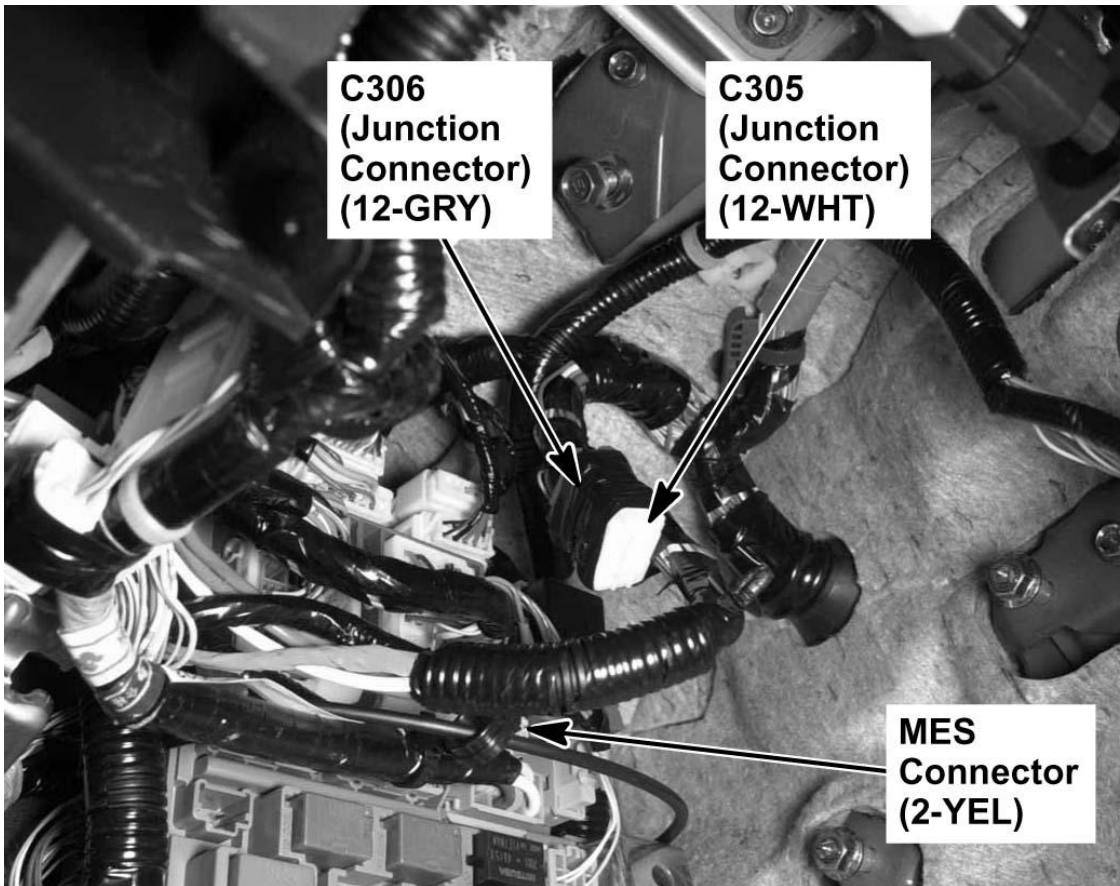


G00363512

**Fig. 58: Under Left Side Of Dash**

Courtesy of AMERICAN HONDA MOTOR CO., INC.



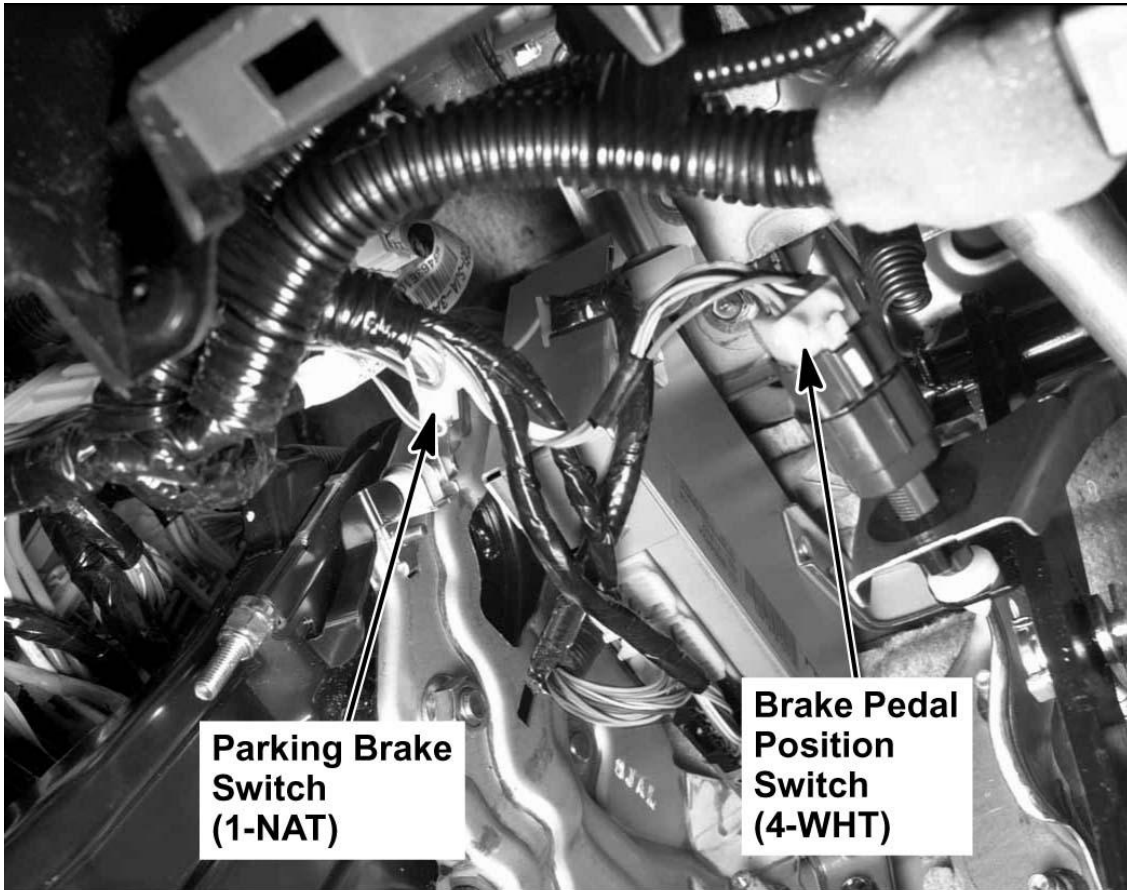


G00363513

**Fig. 59: Under Left Side Of Dash**

Courtesy of AMERICAN HONDA MOTOR CO., INC.




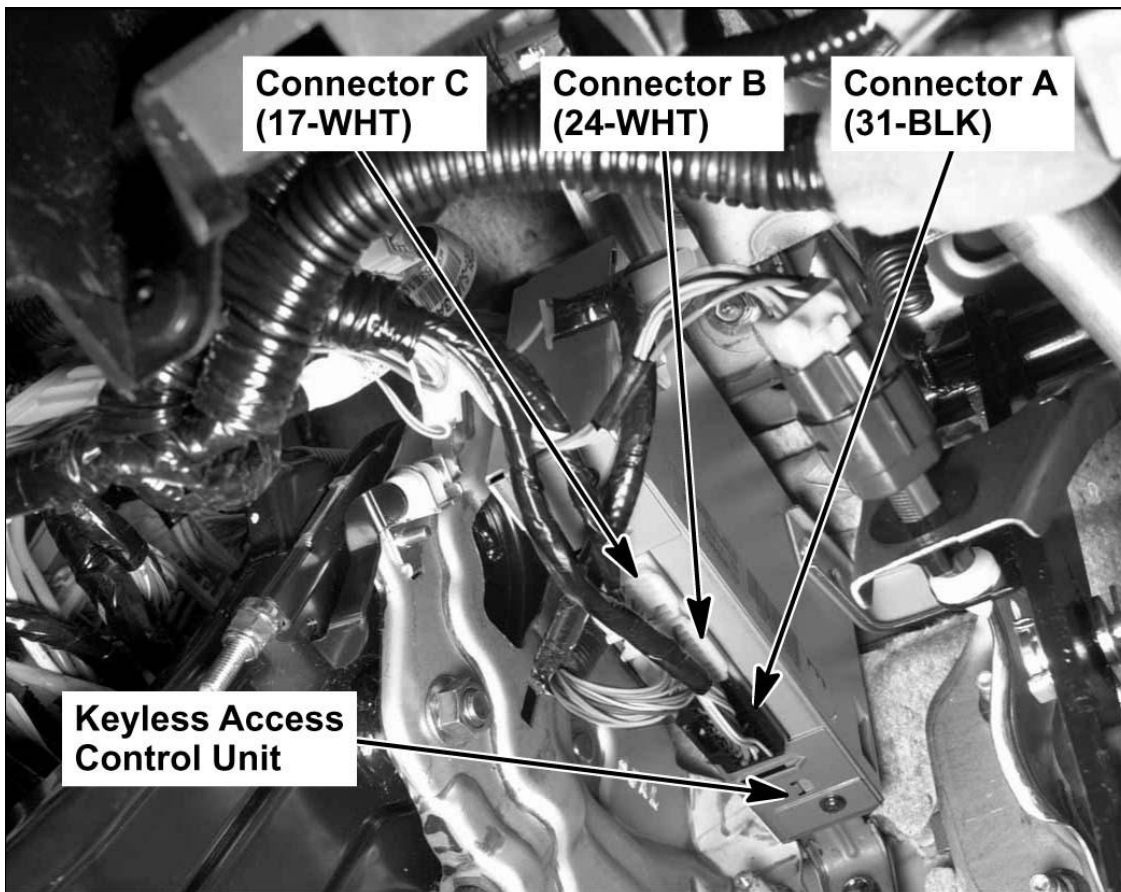

G00363514

**Fig. 60: Under Left Side Of Dash**


Courtesy of AMERICAN HONDA MOTOR CO., INC.

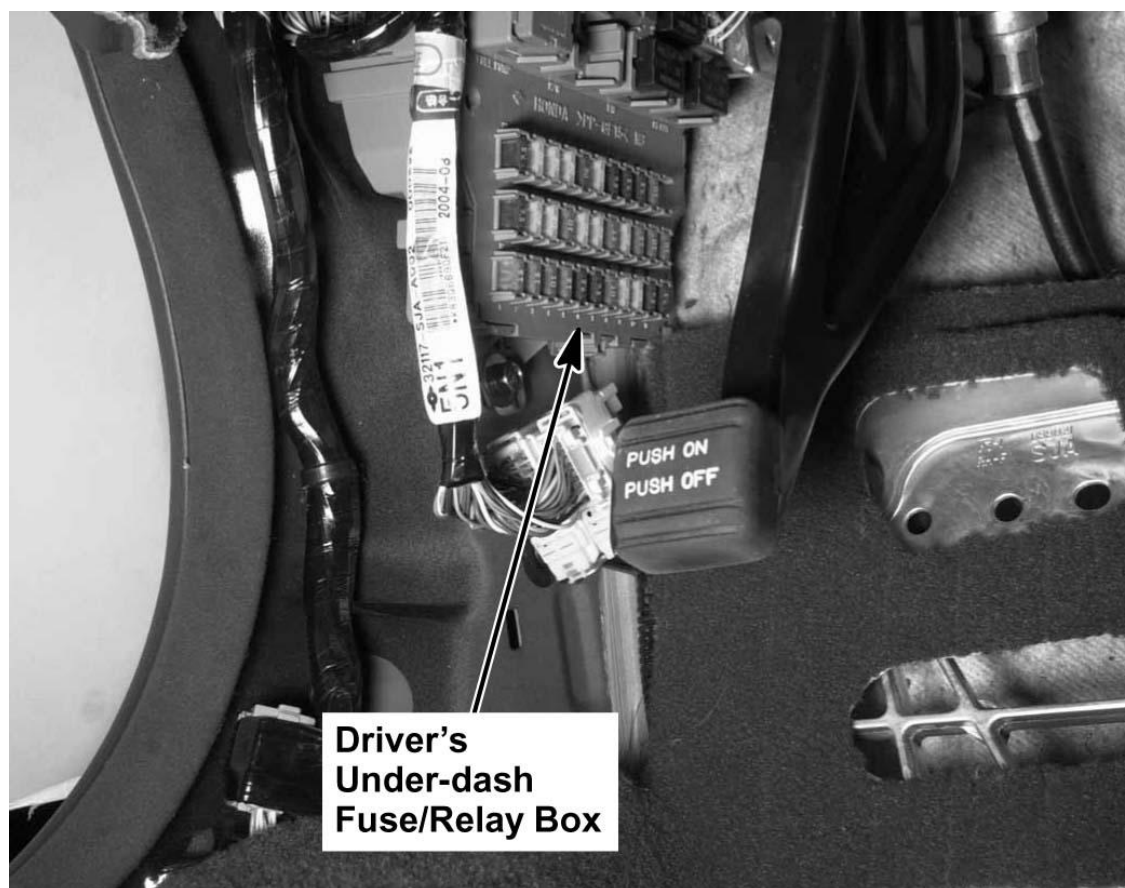

G00363515

**Fig. 61: Behind Left Kick Panel**


Courtesy of AMERICAN HONDA MOTOR CO., INC.

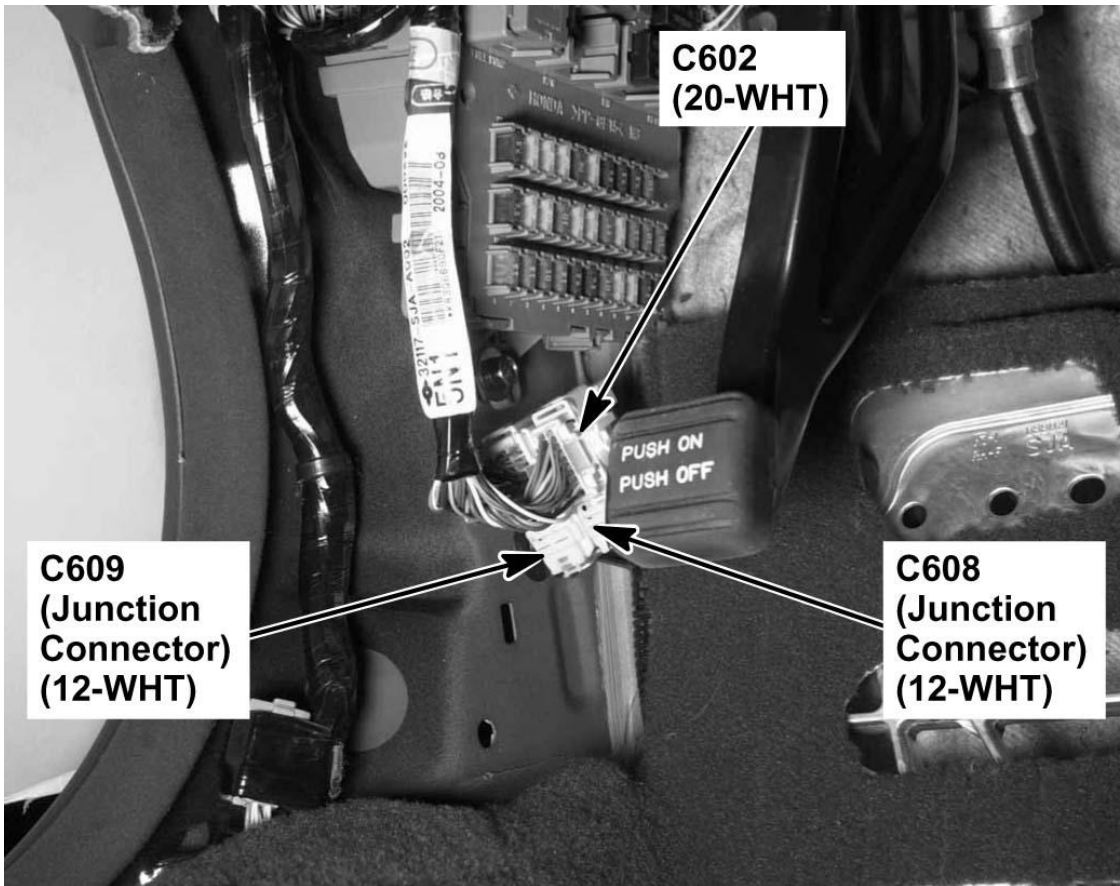

G00363516

**Fig. 62: Behind Left Kick Panel**

Courtesy of AMERICAN HONDA MOTOR CO., INC.

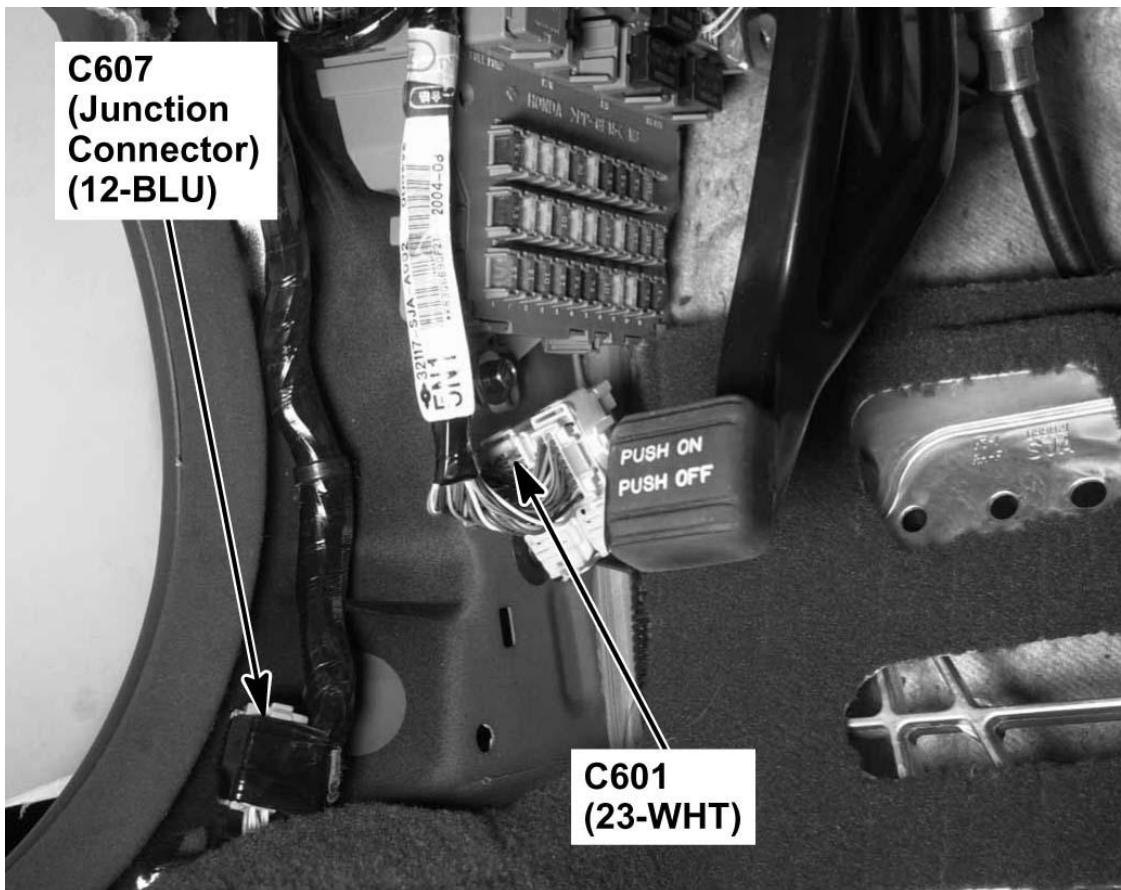

G00363517

**Fig. 63: Behind Left Kick Panel**

Courtesy of AMERICAN HONDA MOTOR CO., INC.






G00363518

**Fig. 64: Under Left Side Of Dash**

Courtesy of AMERICAN HONDA MOTOR CO., INC.




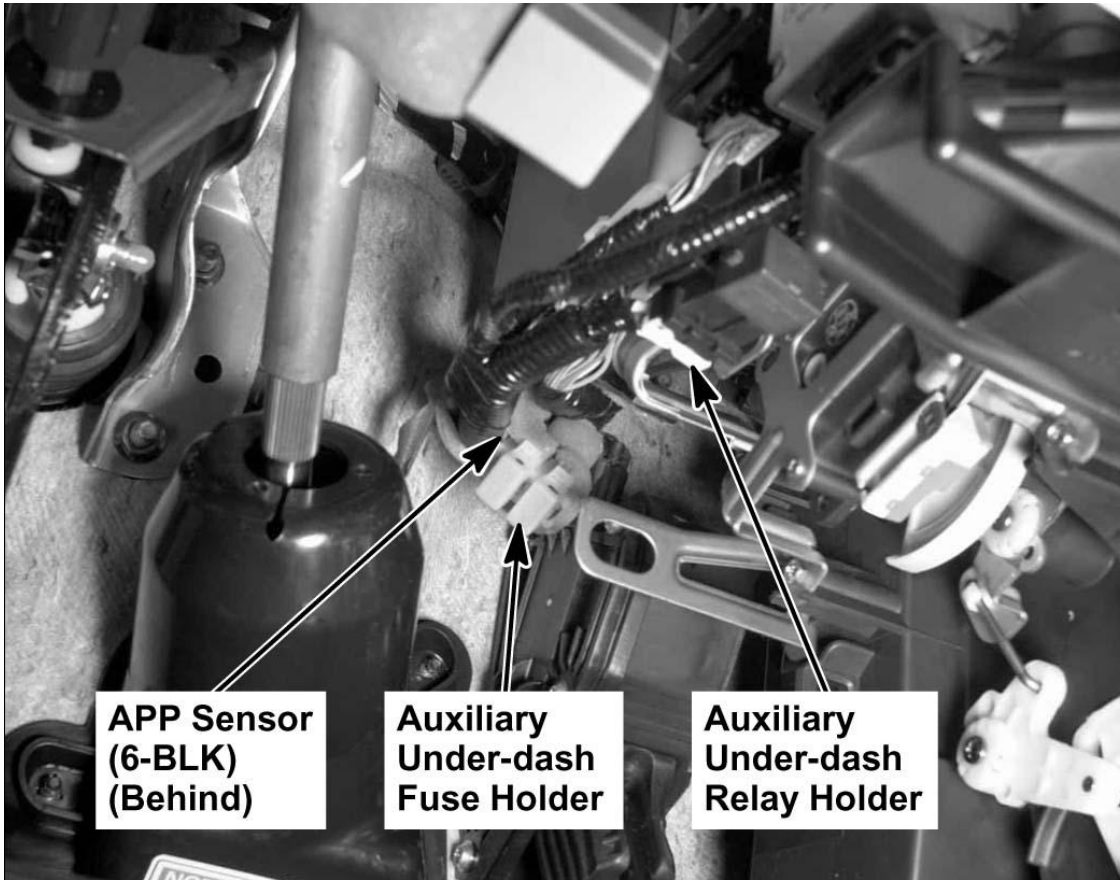

G00363519

**Fig. 65: Under Left Side Of Dash**


Courtesy of AMERICAN HONDA MOTOR CO., INC.

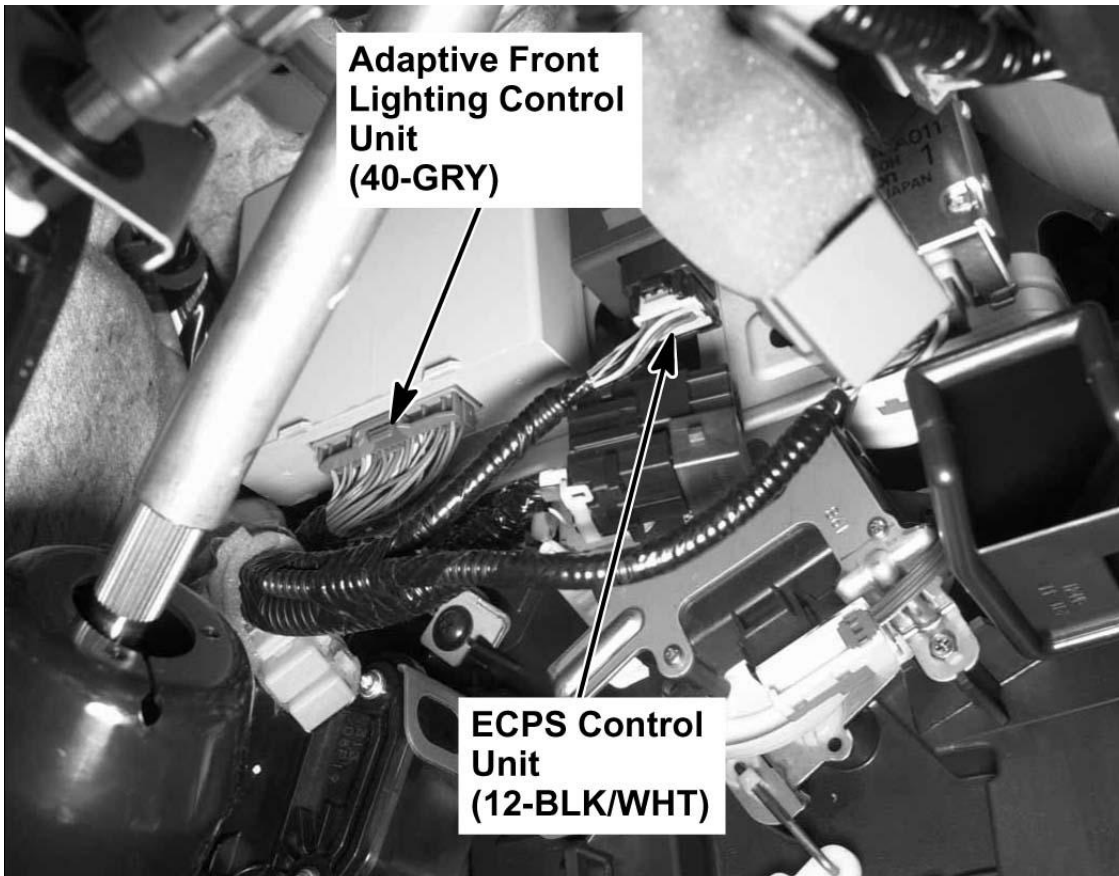

G00363520

**Fig. 66: Under Left Side Of Dash**


Courtesy of AMERICAN HONDA MOTOR CO., INC.

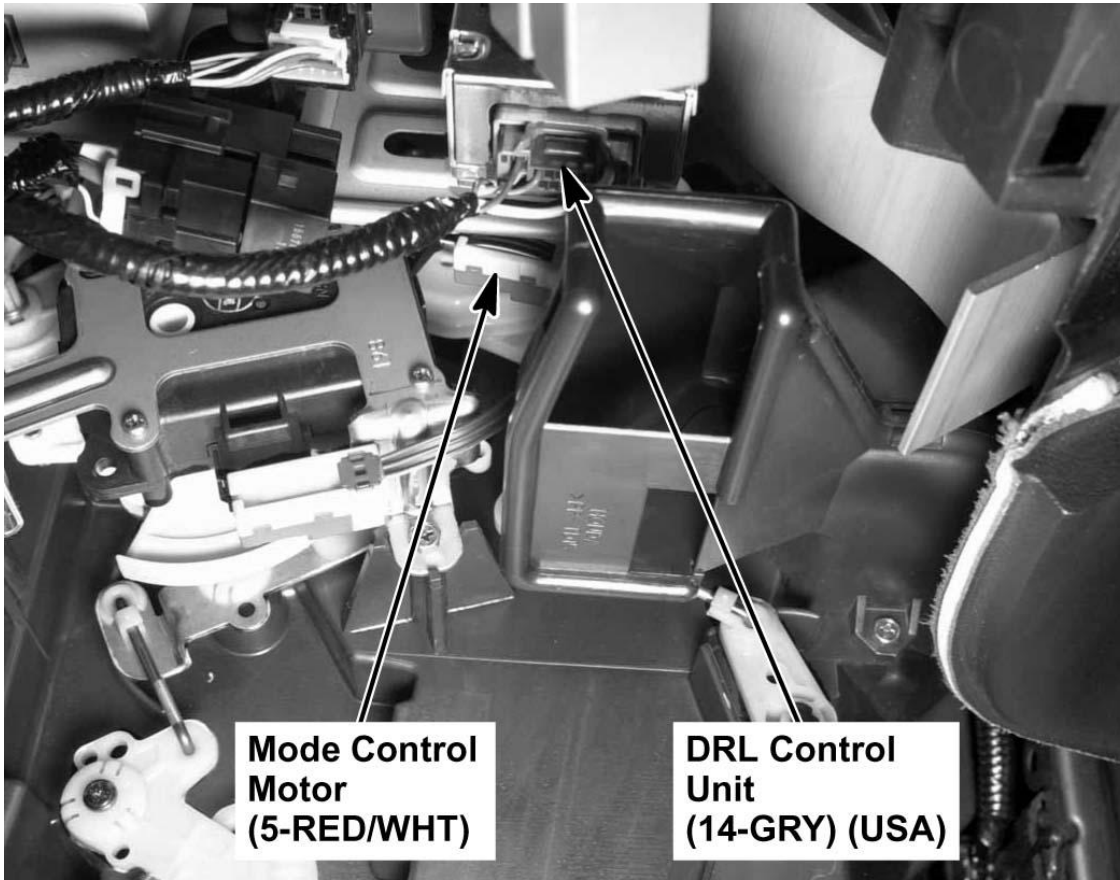

G00363521

**Fig. 67: Under Left Side Of Dash**

**Courtesy of AMERICAN HONDA MOTOR CO., INC.**

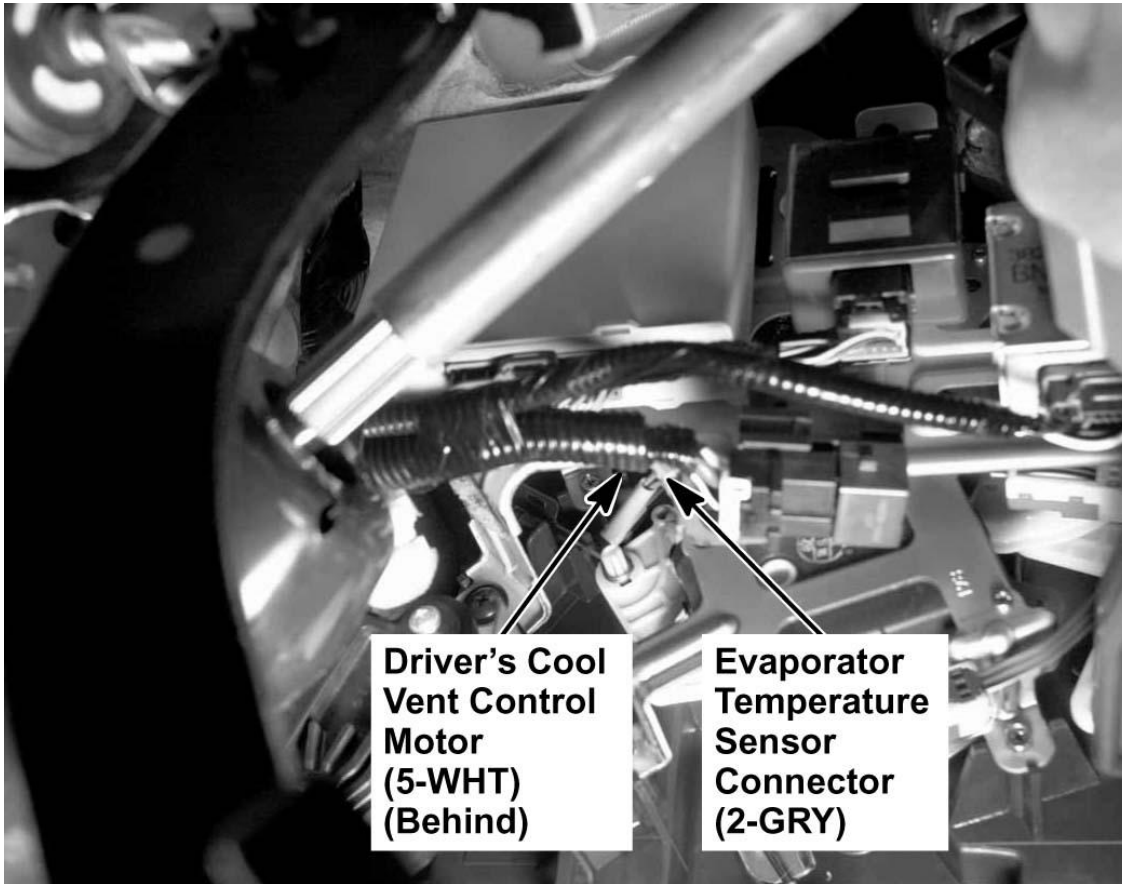

G00363522

**Fig. 68: Under Left Side Of Dash**

Courtesy of AMERICAN HONDA MOTOR CO., INC.




G00363523

**Fig. 69: Under Left Side Of Dash**

Courtesy of AMERICAN HONDA MOTOR CO., INC.




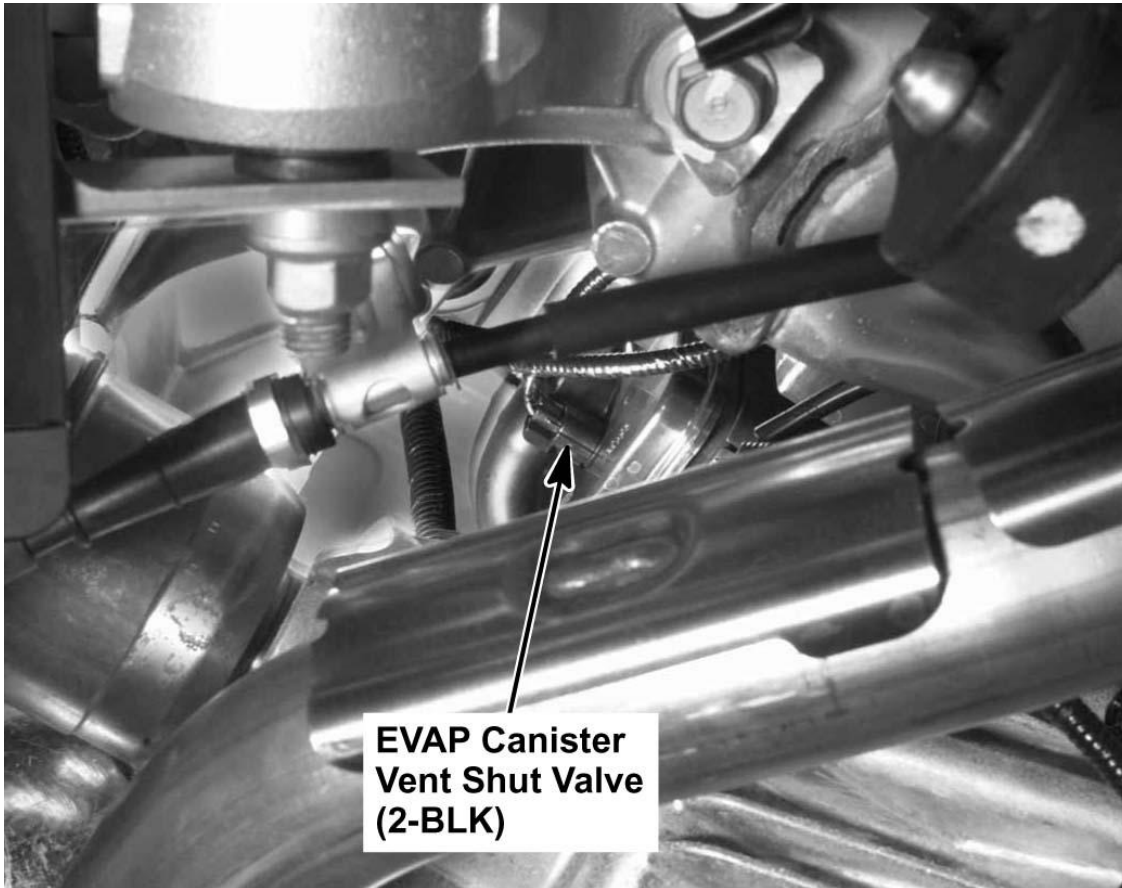

G00363524

**Fig. 70: Above Rear Differential**


Courtesy of AMERICAN HONDA MOTOR CO., INC.

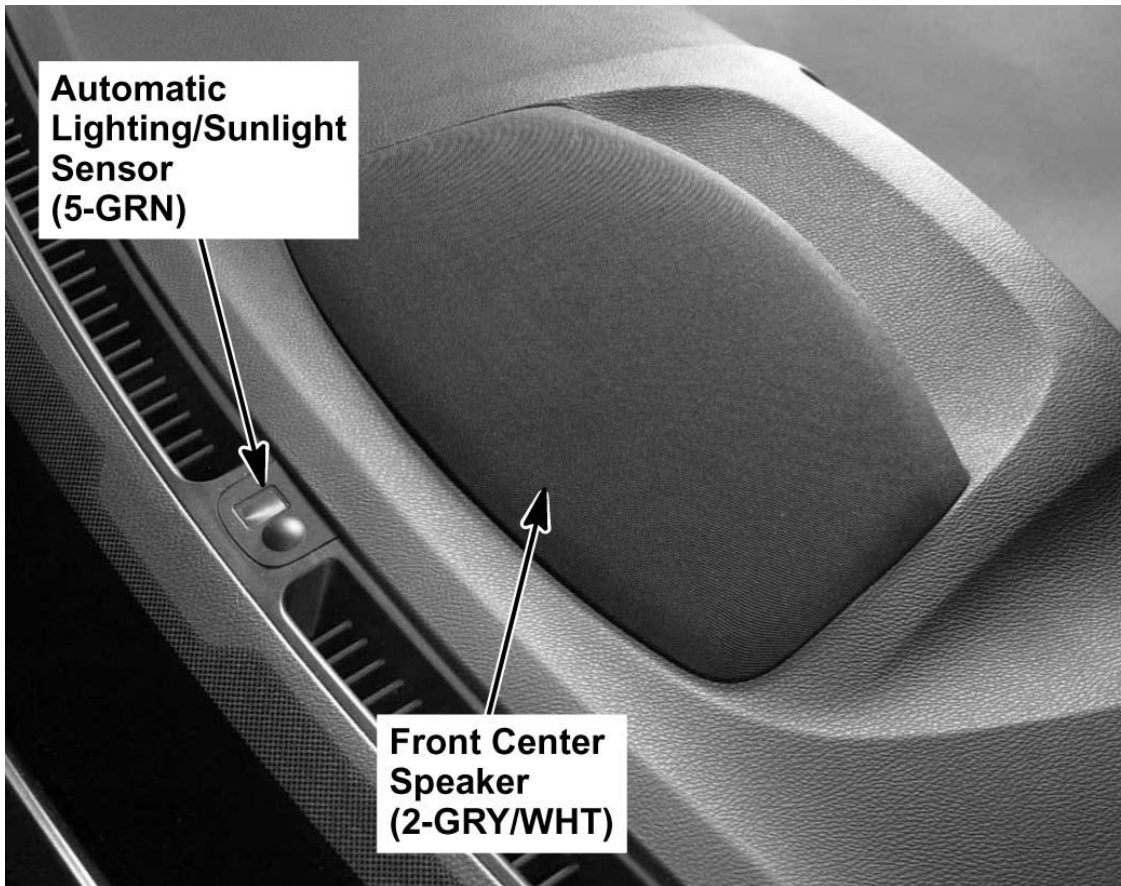

G00363525

**Fig. 71: Middle Of Dash**


Courtesy of AMERICAN HONDA MOTOR CO., INC.

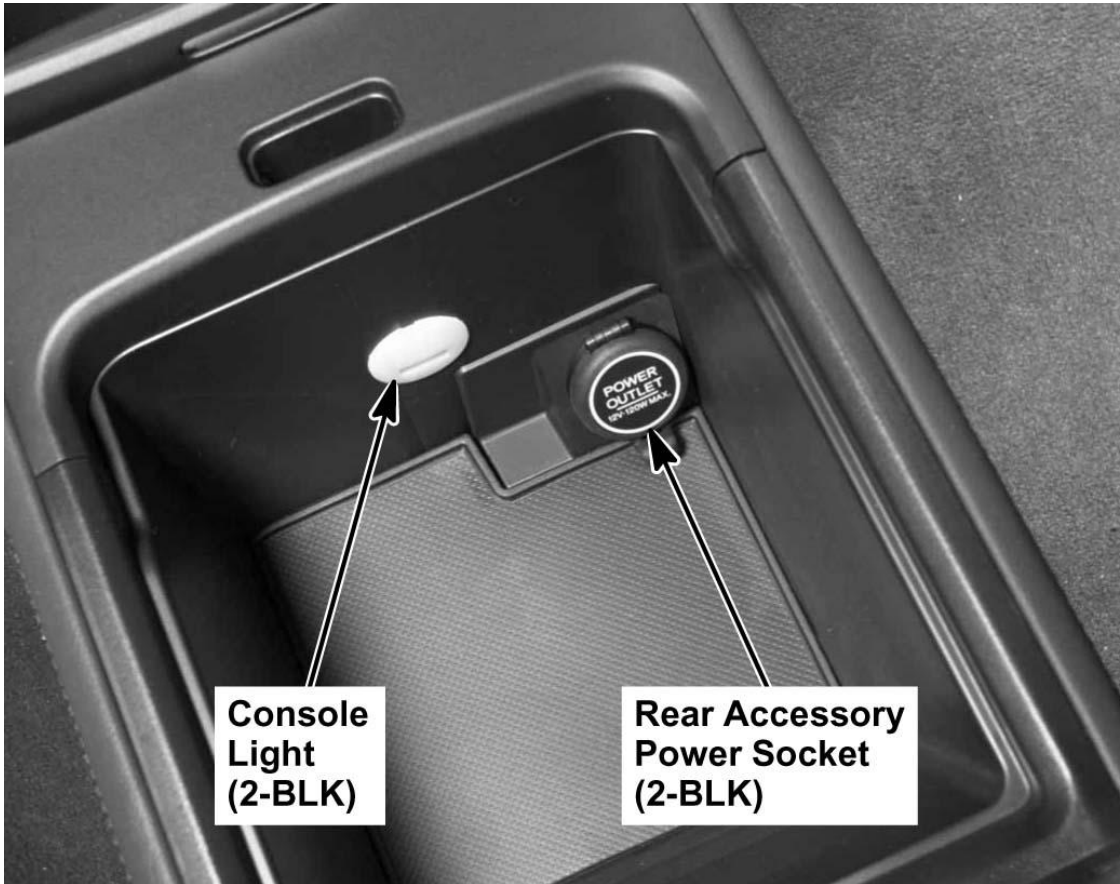

G00363526

**Fig. 72: Rear Of Center Console**

Courtesy of AMERICAN HONDA MOTOR CO., INC.

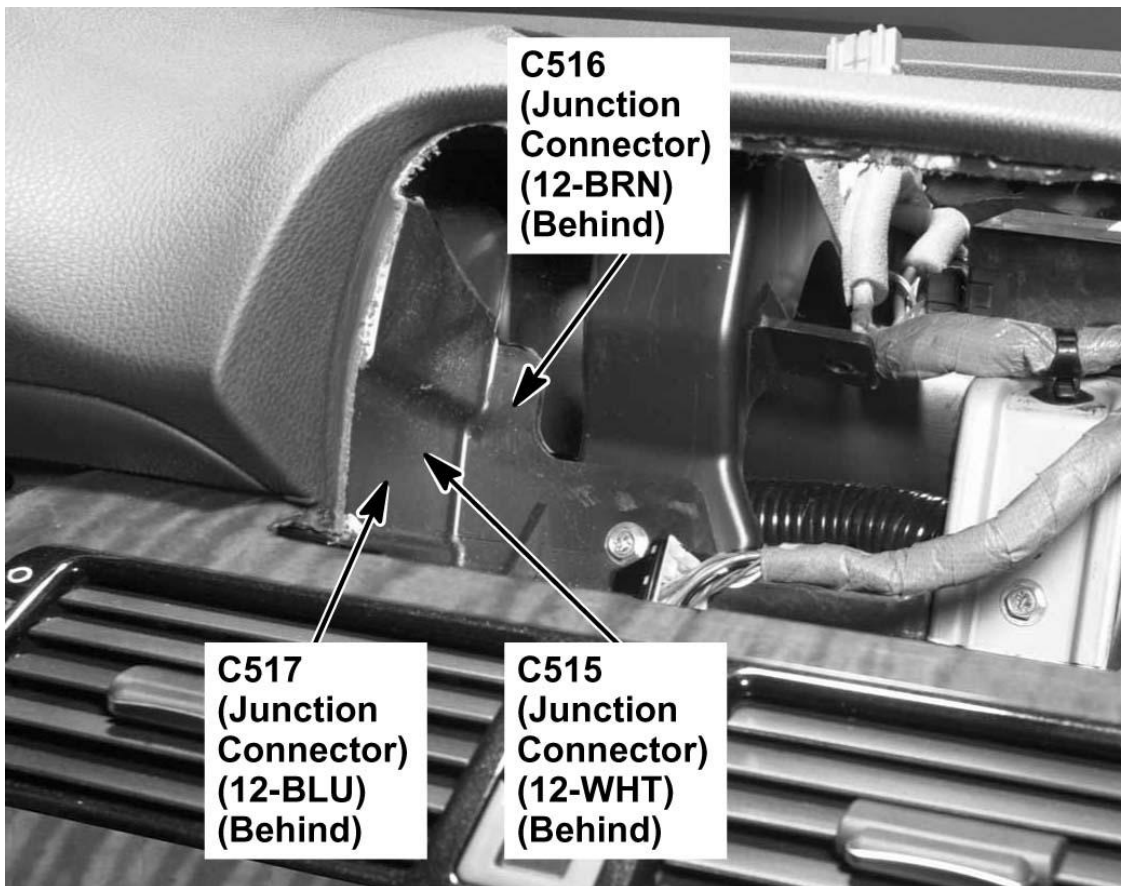


G00363527

**Fig. 73: Behind Middle Of Dash**

Courtesy of AMERICAN HONDA MOTOR CO., INC.




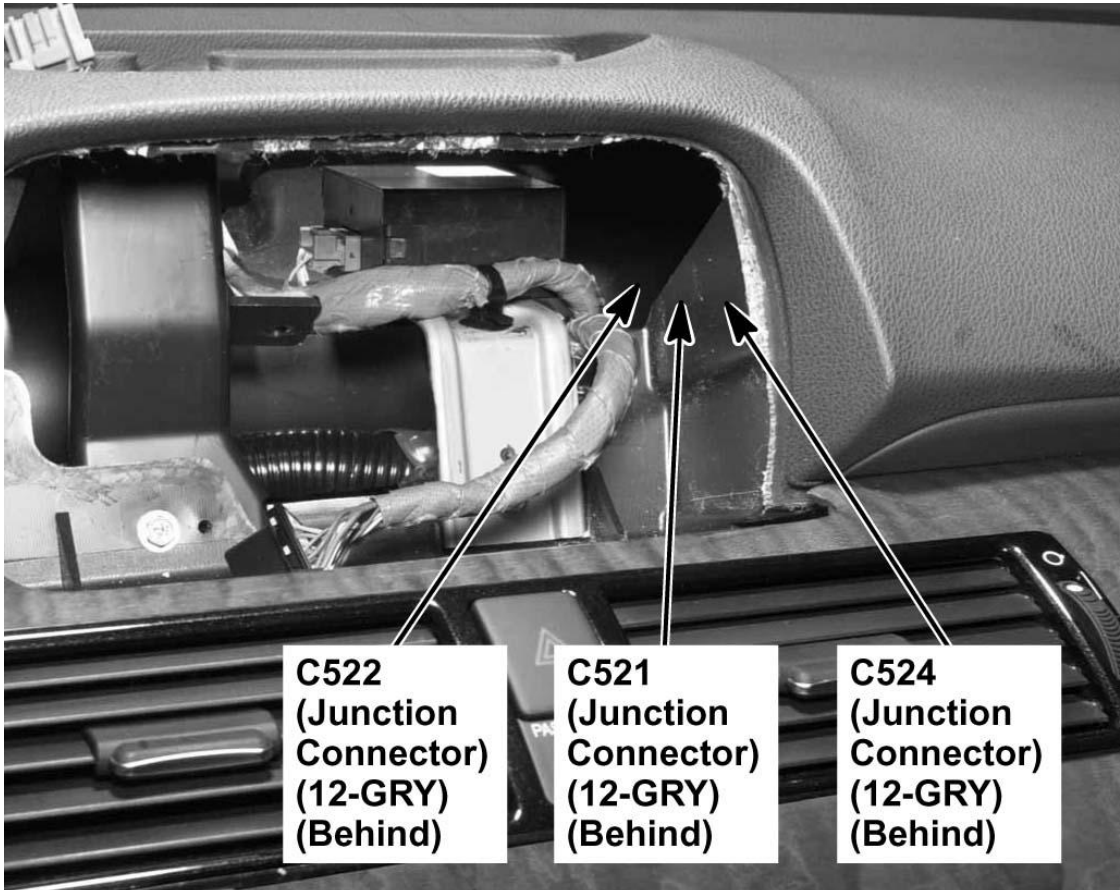

G00363528

**Fig. 74: Behind Middle Of Dash**


Courtesy of AMERICAN HONDA MOTOR CO., INC.

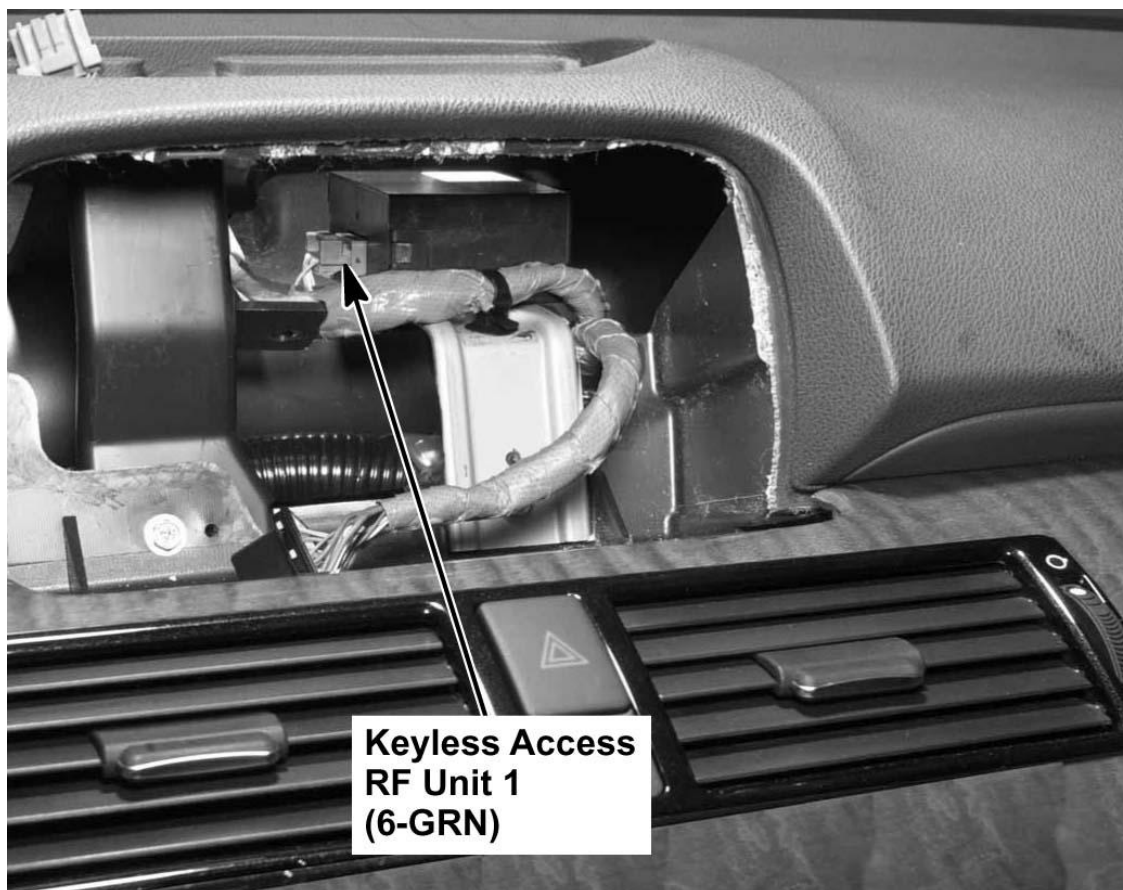

G00363529

**Fig. 75: Behind Middle Of Dash**


Courtesy of AMERICAN HONDA MOTOR CO., INC.

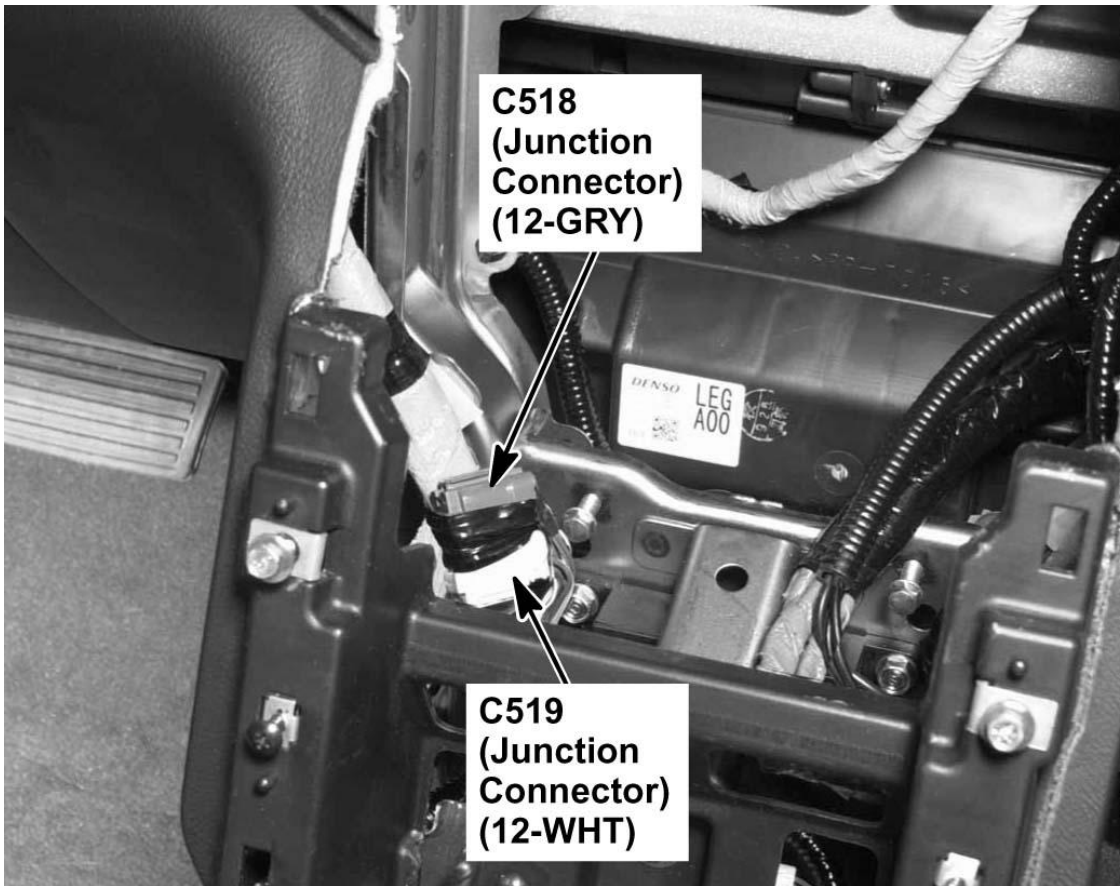

G00363530

**Fig. 76: Behind Middle Of Dash**

Courtesy of AMERICAN HONDA MOTOR CO., INC.

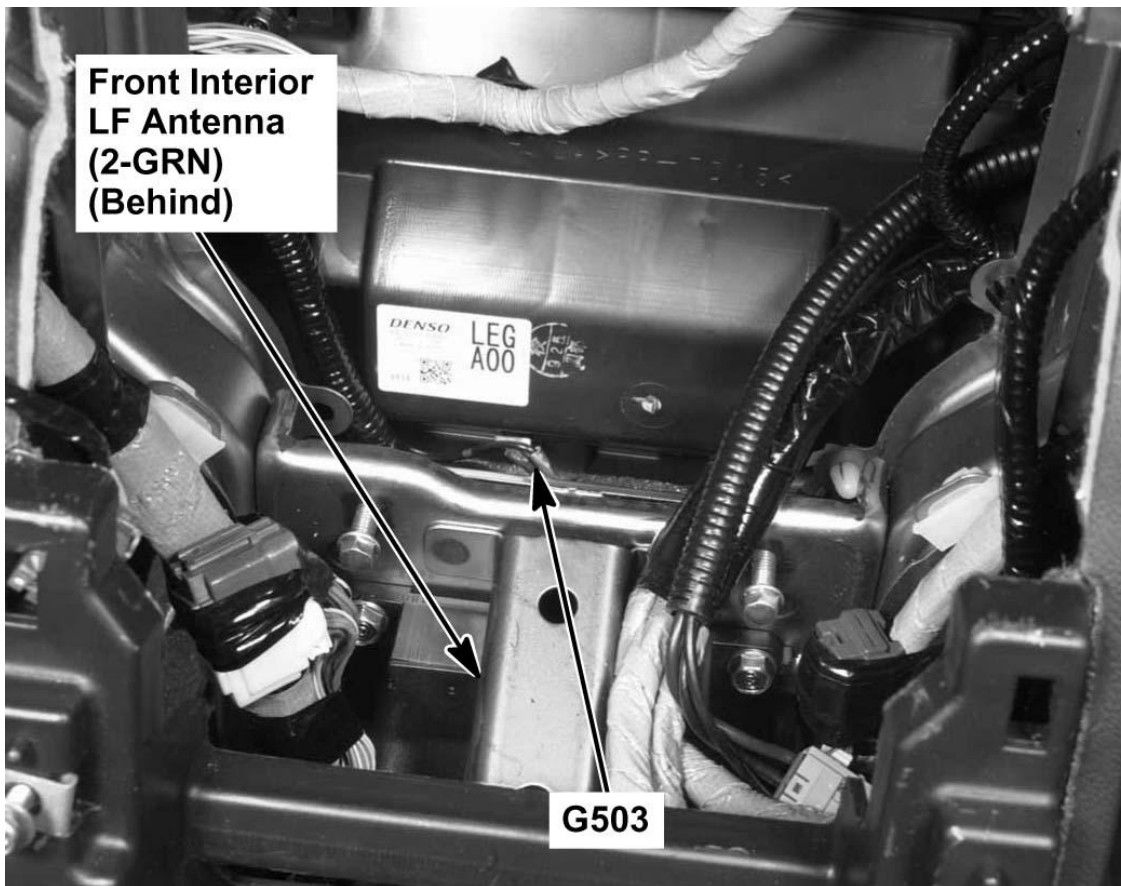


G00363531

**Fig. 77: Behind Middle Of Dash**

Courtesy of AMERICAN HONDA MOTOR CO., INC.




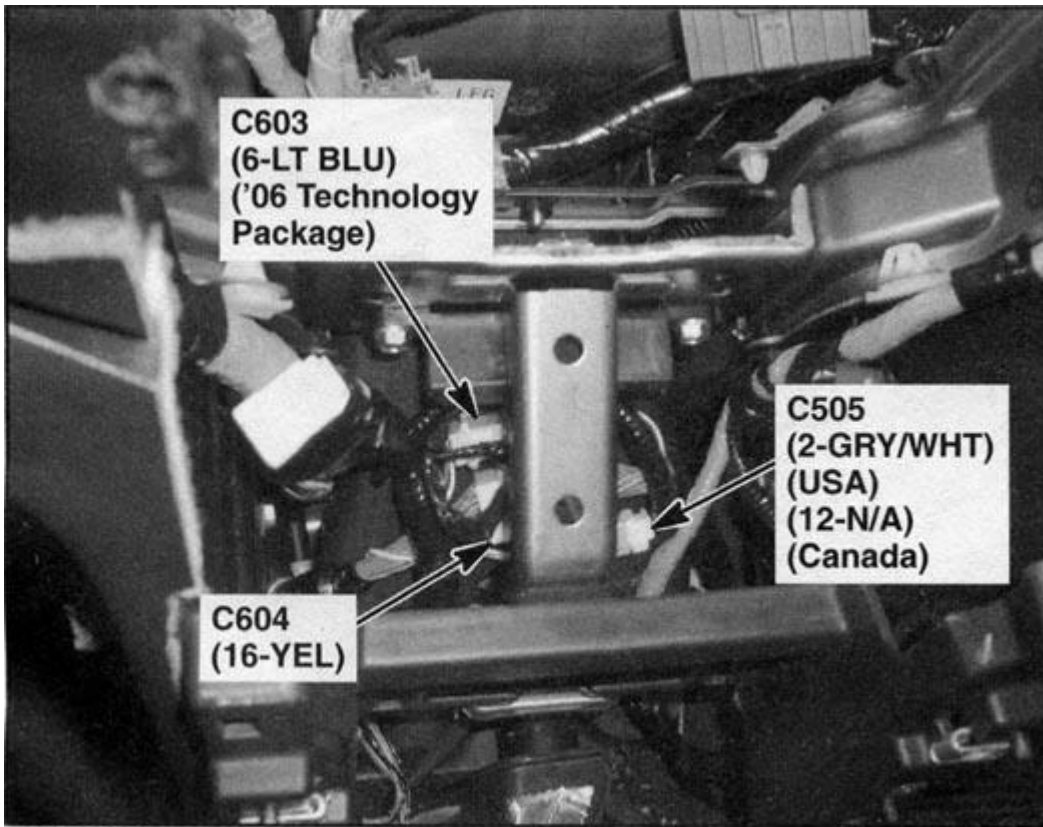

G00430625

**Fig. 78: Behind Middle Of Dash**


Courtesy of AMERICAN HONDA MOTOR CO., INC.

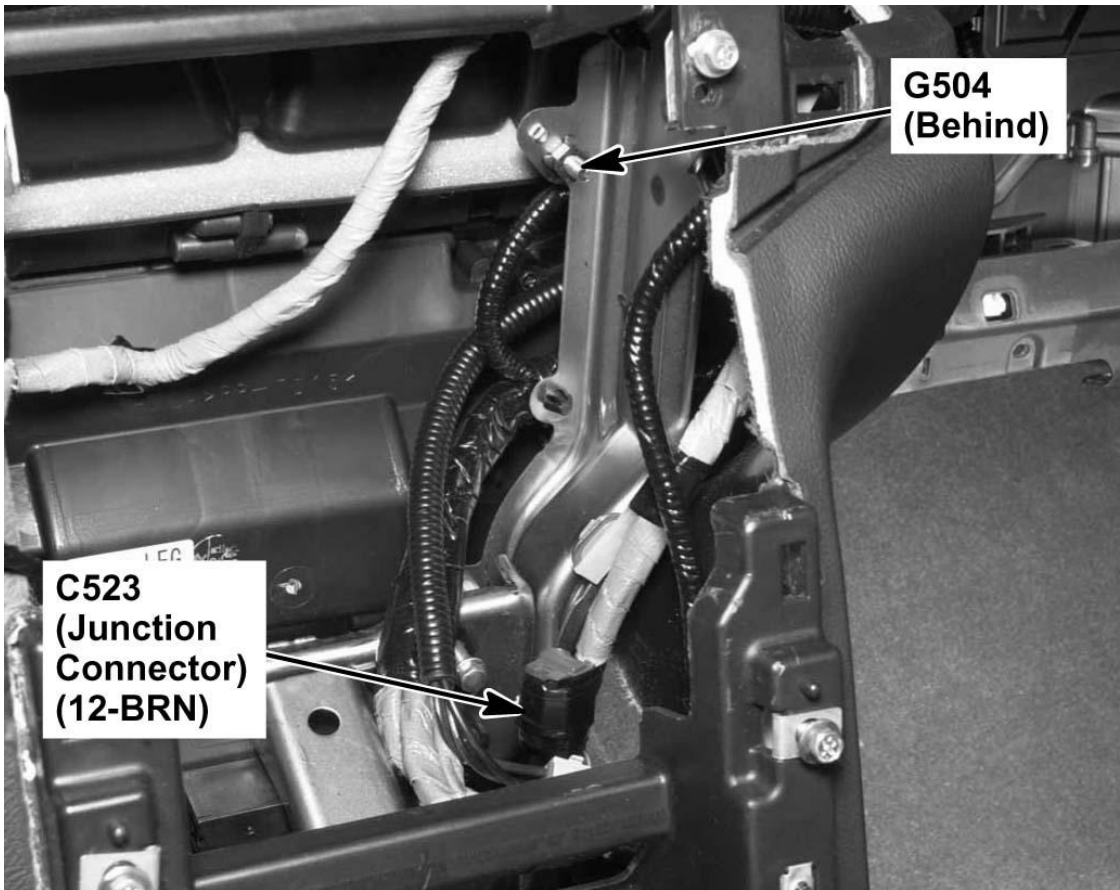

G00363533

**Fig. 79: Behind Middle Of Dash**


Courtesy of AMERICAN HONDA MOTOR CO., INC.

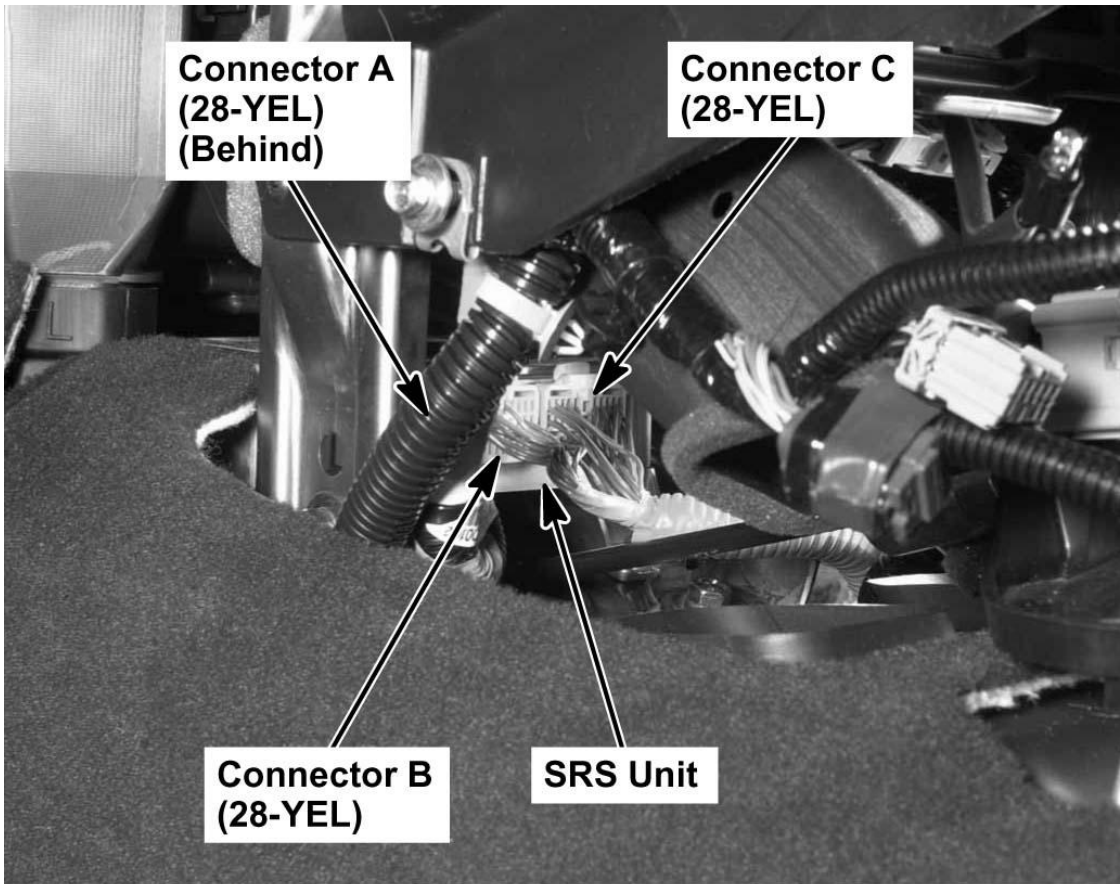

G00363534

**Fig. 80: Behind Middle Of Dash**

Courtesy of AMERICAN HONDA MOTOR CO., INC.

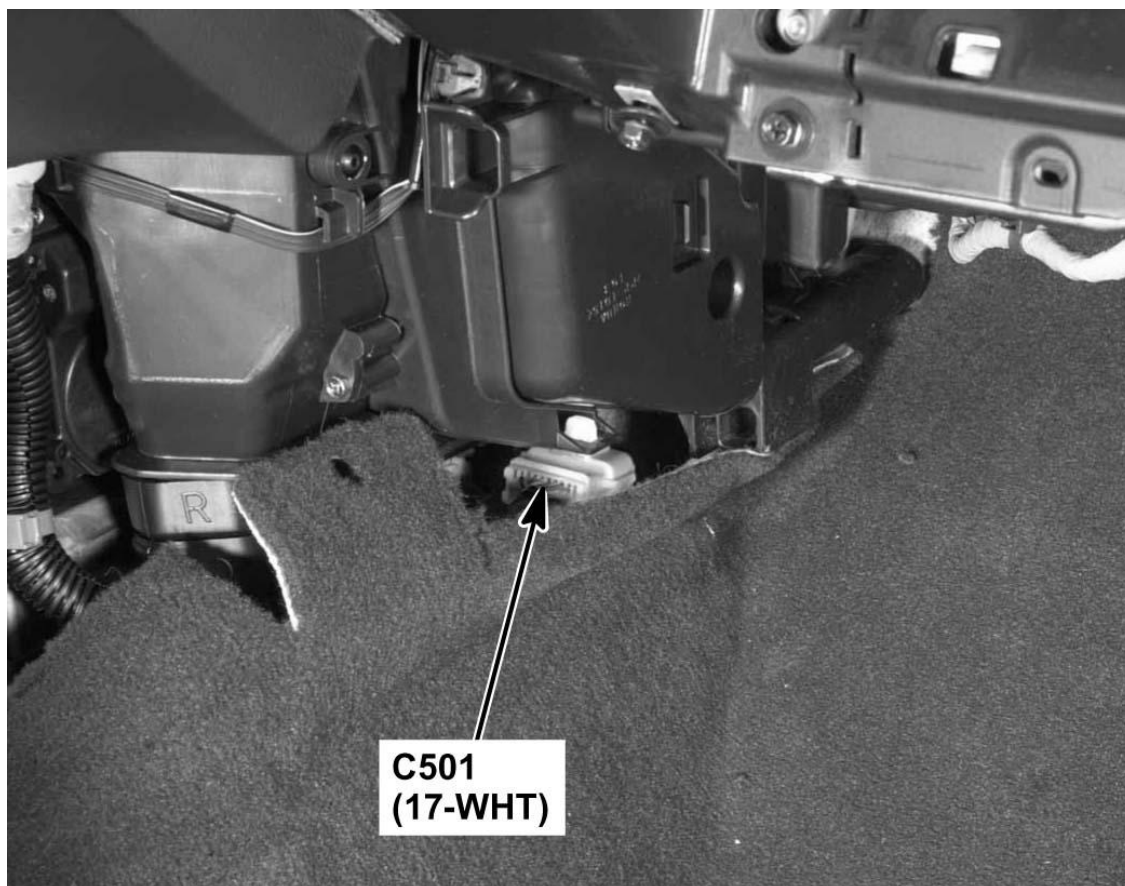


G00363535

**Fig. 81: Under Middle Of Dash**

Courtesy of AMERICAN HONDA MOTOR CO., INC.



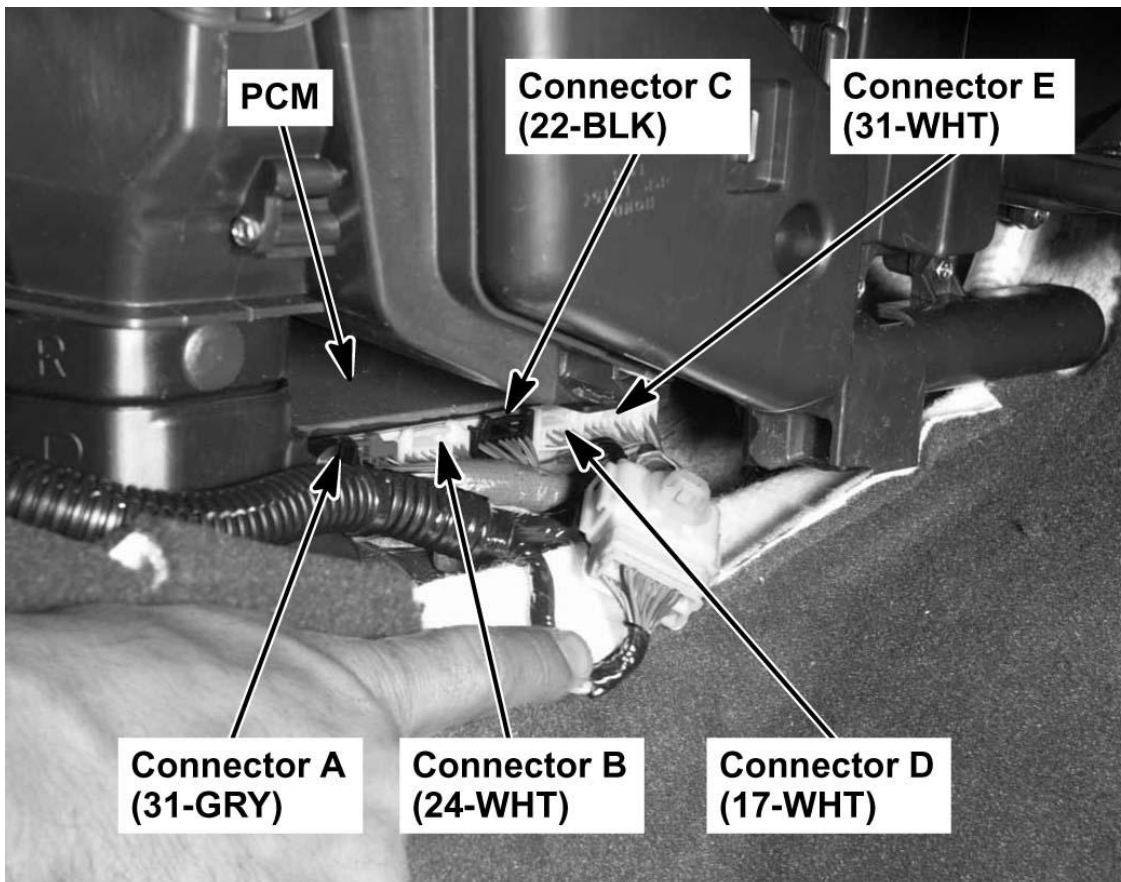

G00363536

**Fig. 82: Under Middle Of Dash**


Courtesy of AMERICAN HONDA MOTOR CO., INC.



G00363537


**Fig. 83: Under Middle Of Dash**

Courtesy of AMERICAN HONDA MOTOR CO., INC.

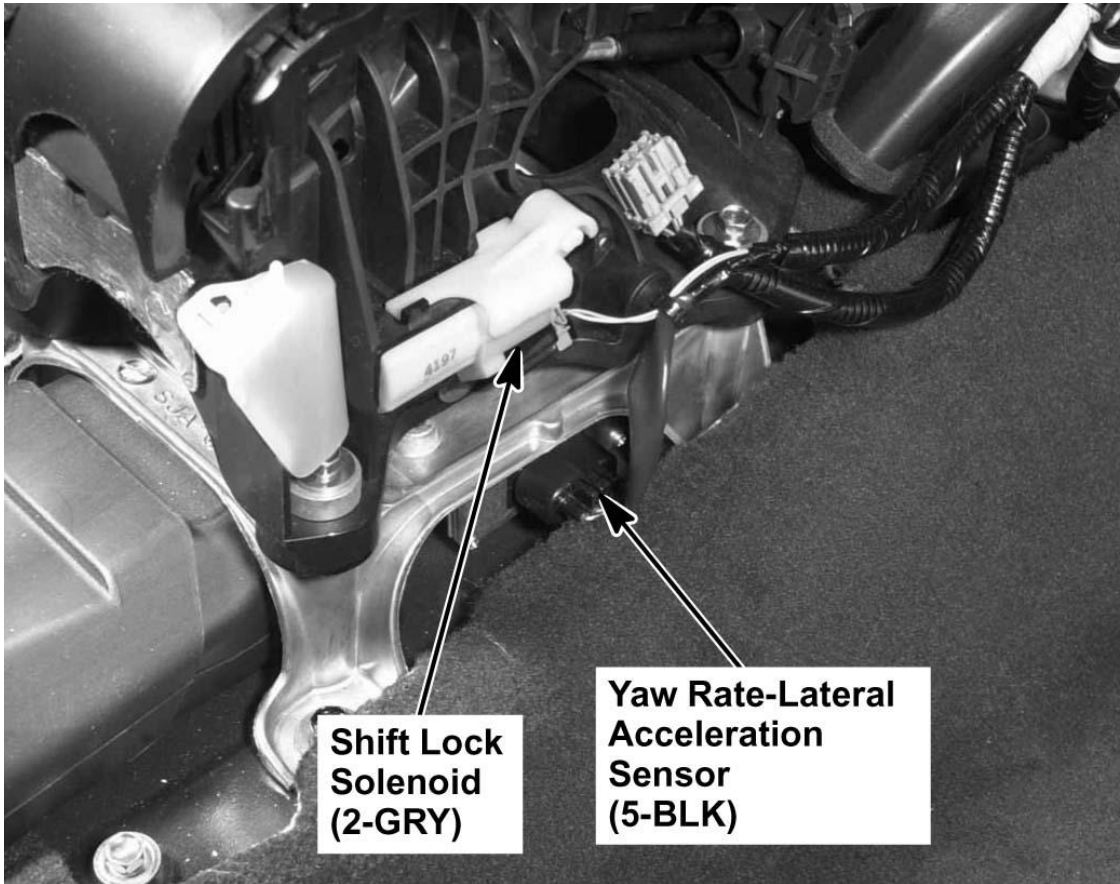

G00363538

**Fig. 84: Under Center Console**  
Courtesy of AMERICAN HONDA MOTOR CO., INC.

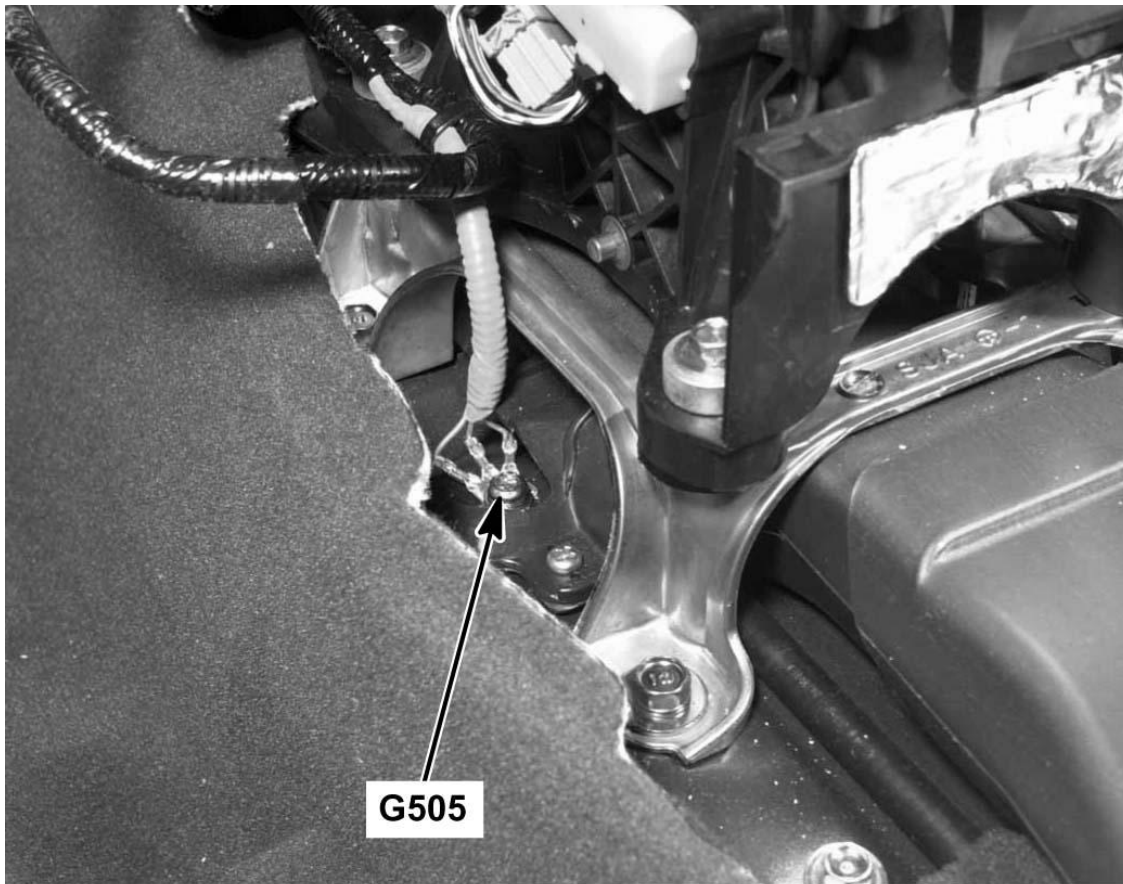


G00363539

**Fig. 85: Under Center Console**


Courtesy of AMERICAN HONDA MOTOR CO., INC.



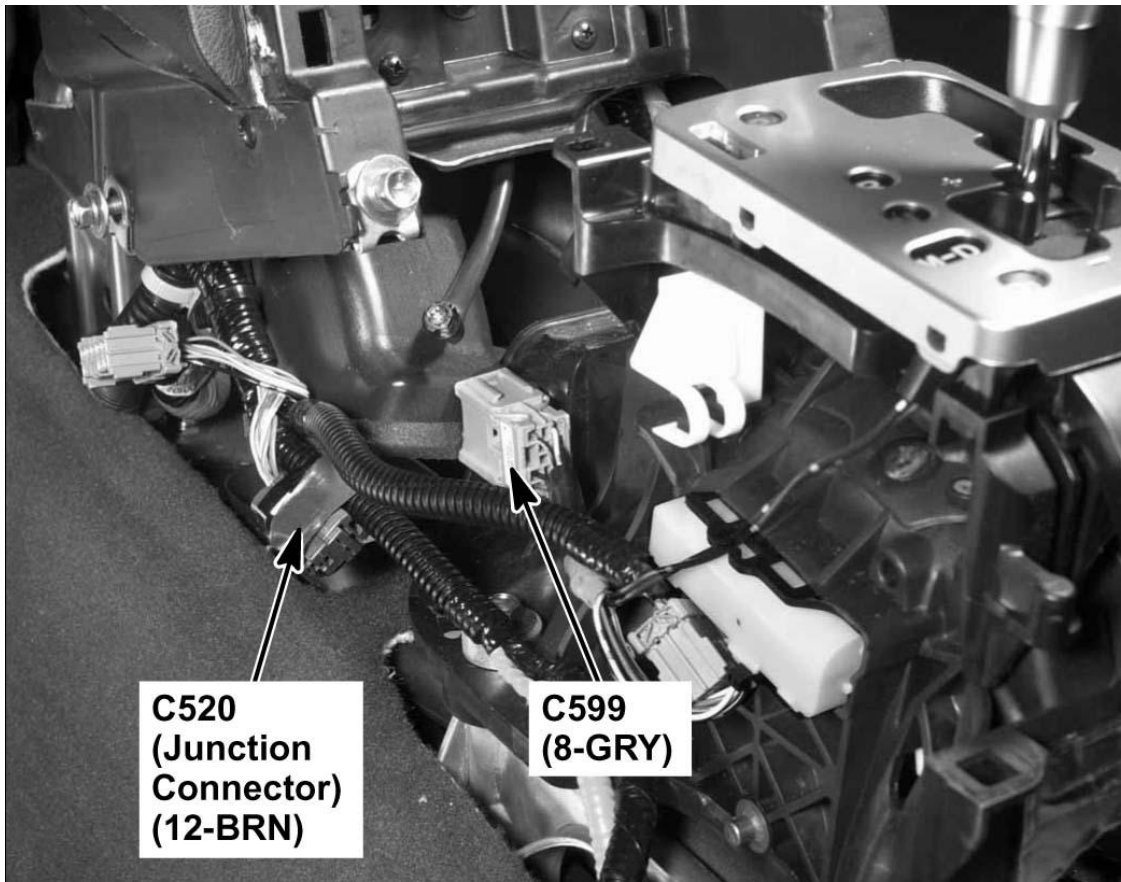

G00363540

**Fig. 86: Under Center Console**  
**Courtesy of AMERICAN HONDA MOTOR CO., INC.**

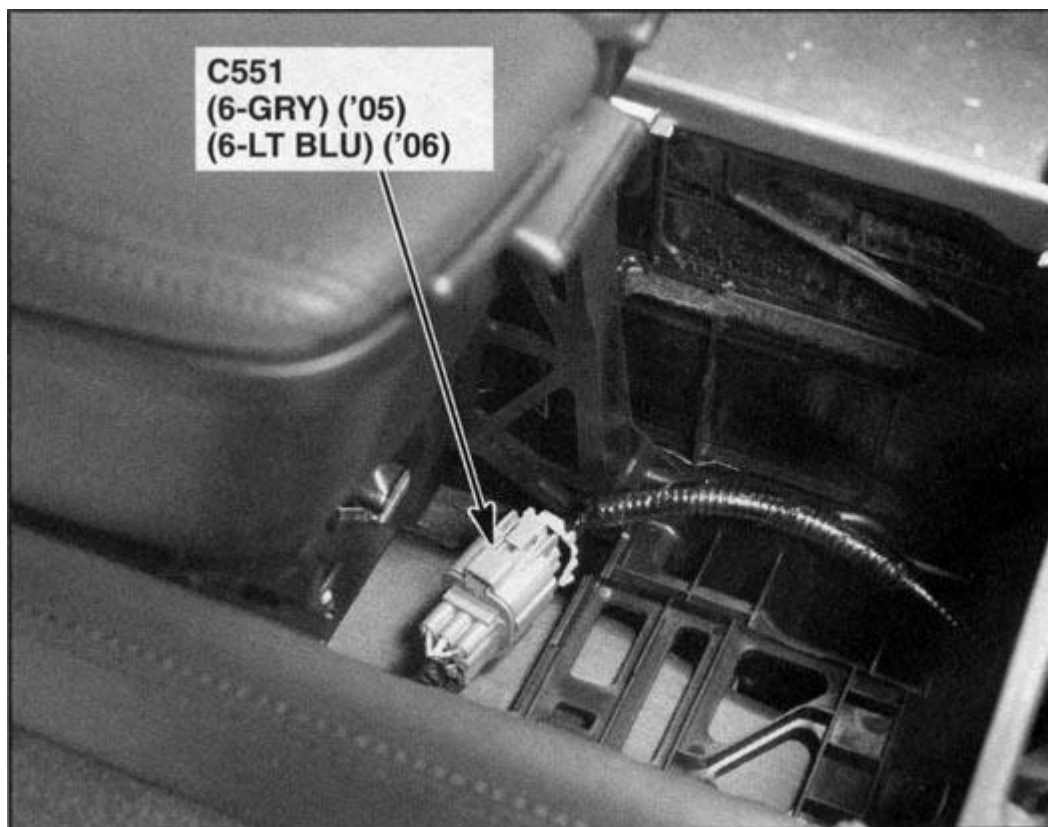

G00430626

**Fig. 87: Under Center Console**


Courtesy of AMERICAN HONDA MOTOR CO., INC.



G00363542

**Fig. 88: Under Center Console**

Courtesy of AMERICAN HONDA MOTOR CO., INC.

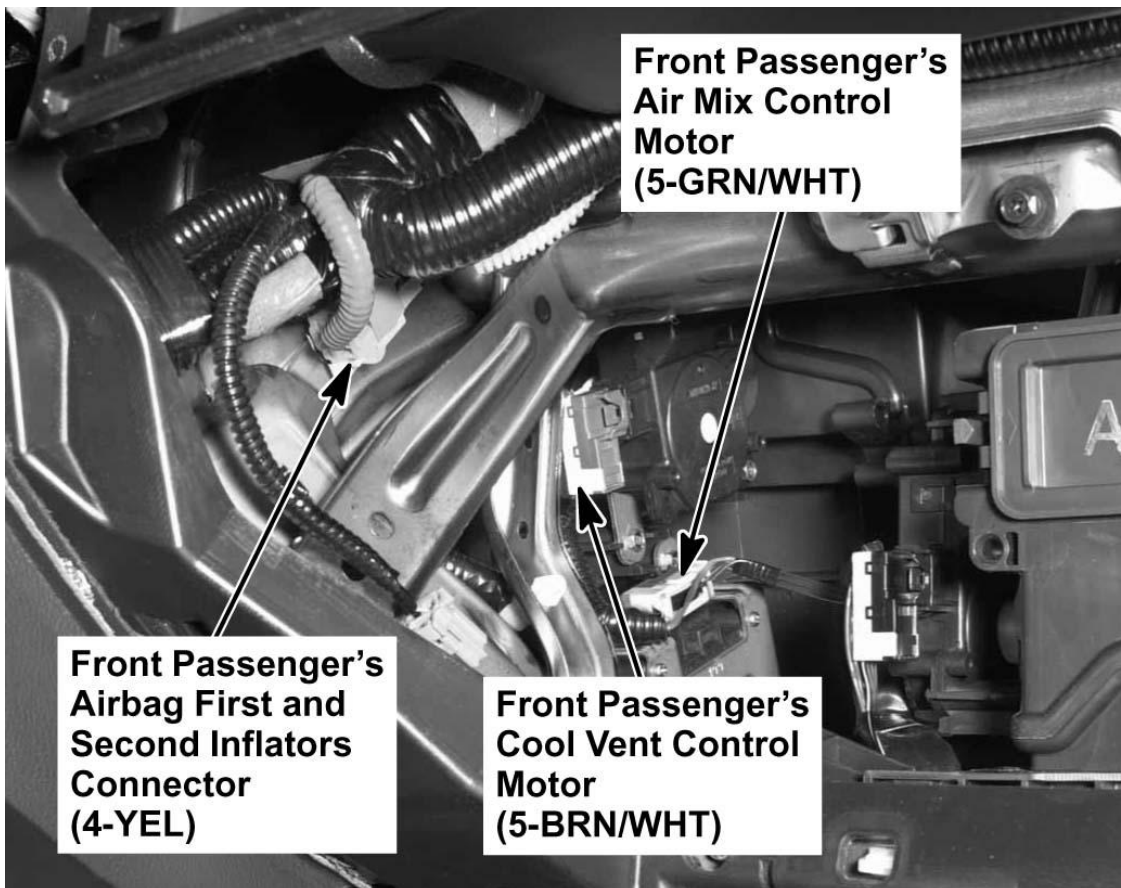


G00363543

**Fig. 89: Behind Glove Box**

Courtesy of AMERICAN HONDA MOTOR CO., INC.




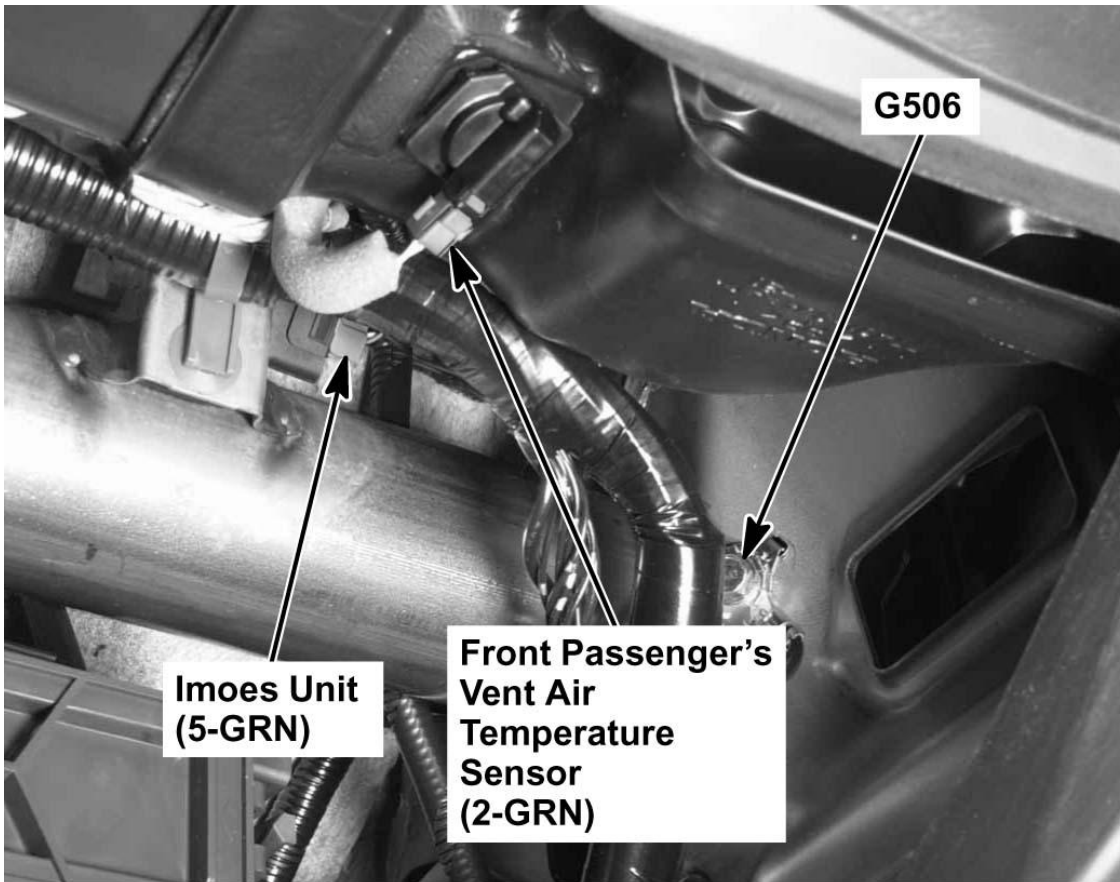

G00363544

**Fig. 90: Behind Glove Box**


Courtesy of AMERICAN HONDA MOTOR CO., INC.

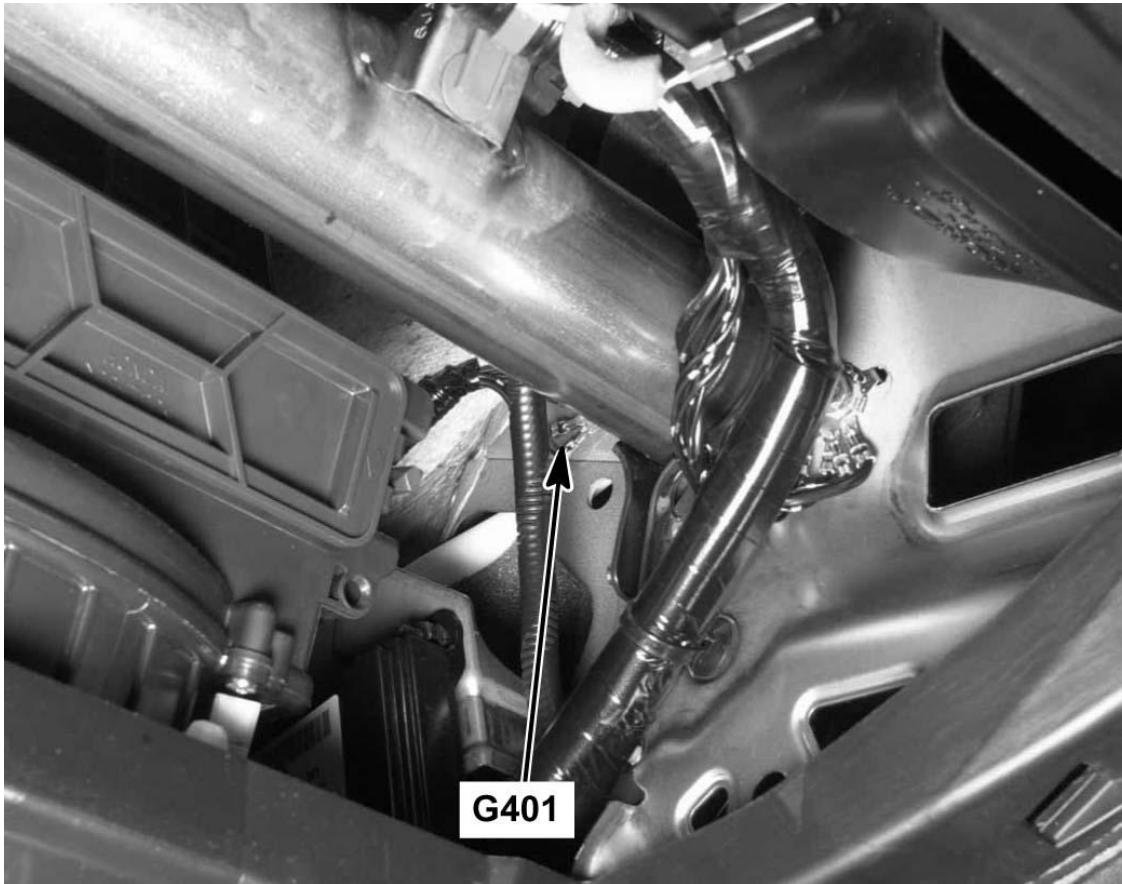

G00363545

**Fig. 91: Behind Glove Box**


Courtesy of AMERICAN HONDA MOTOR CO., INC.

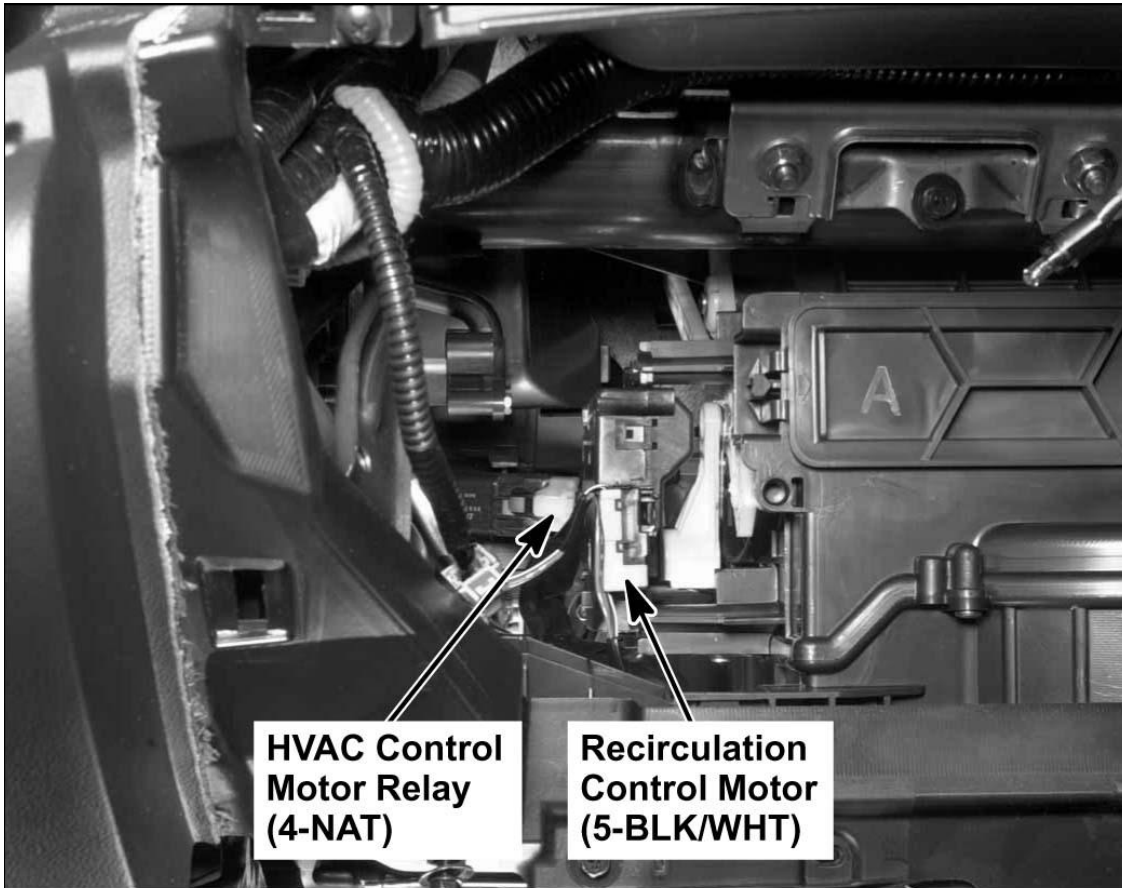

G00363546

**Fig. 92: Behind Glove Box**


Courtesy of AMERICAN HONDA MOTOR CO., INC.

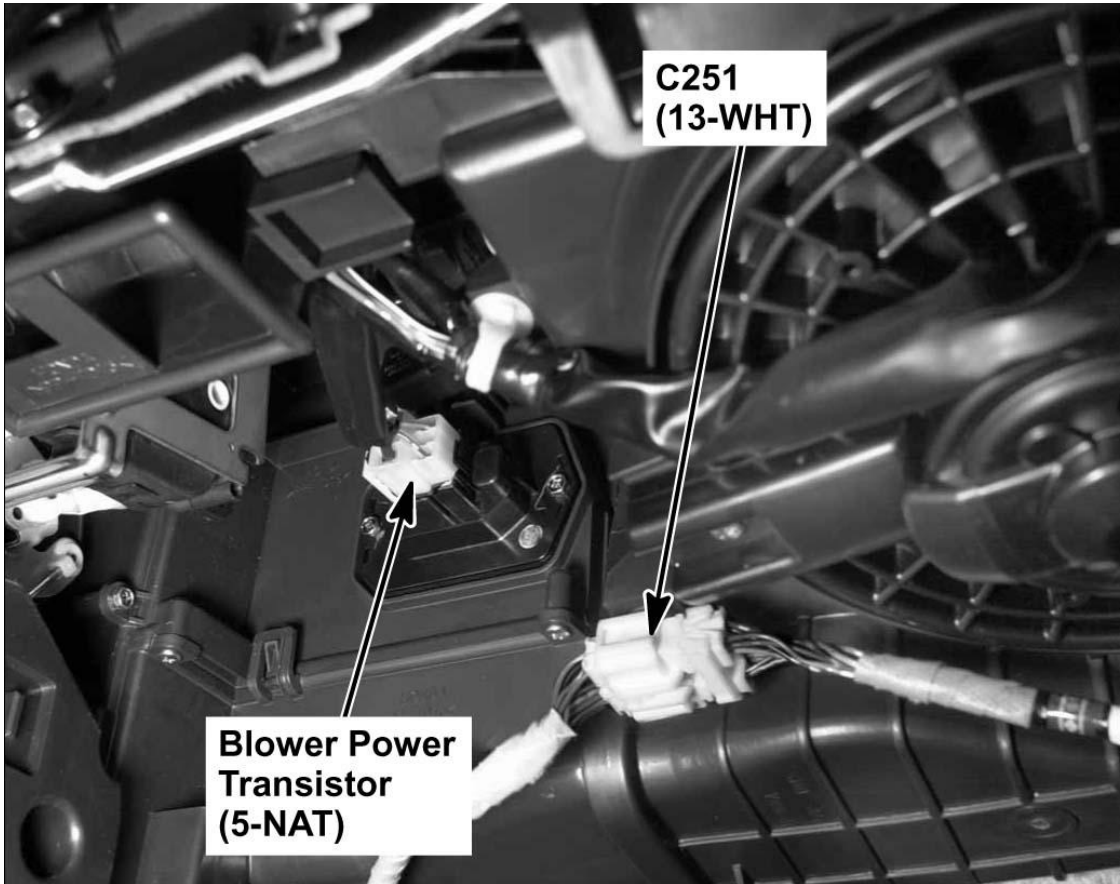

G00363547

**Fig. 93: Under Right Side Of Dash**  
Courtesy of AMERICAN HONDA MOTOR CO., INC.




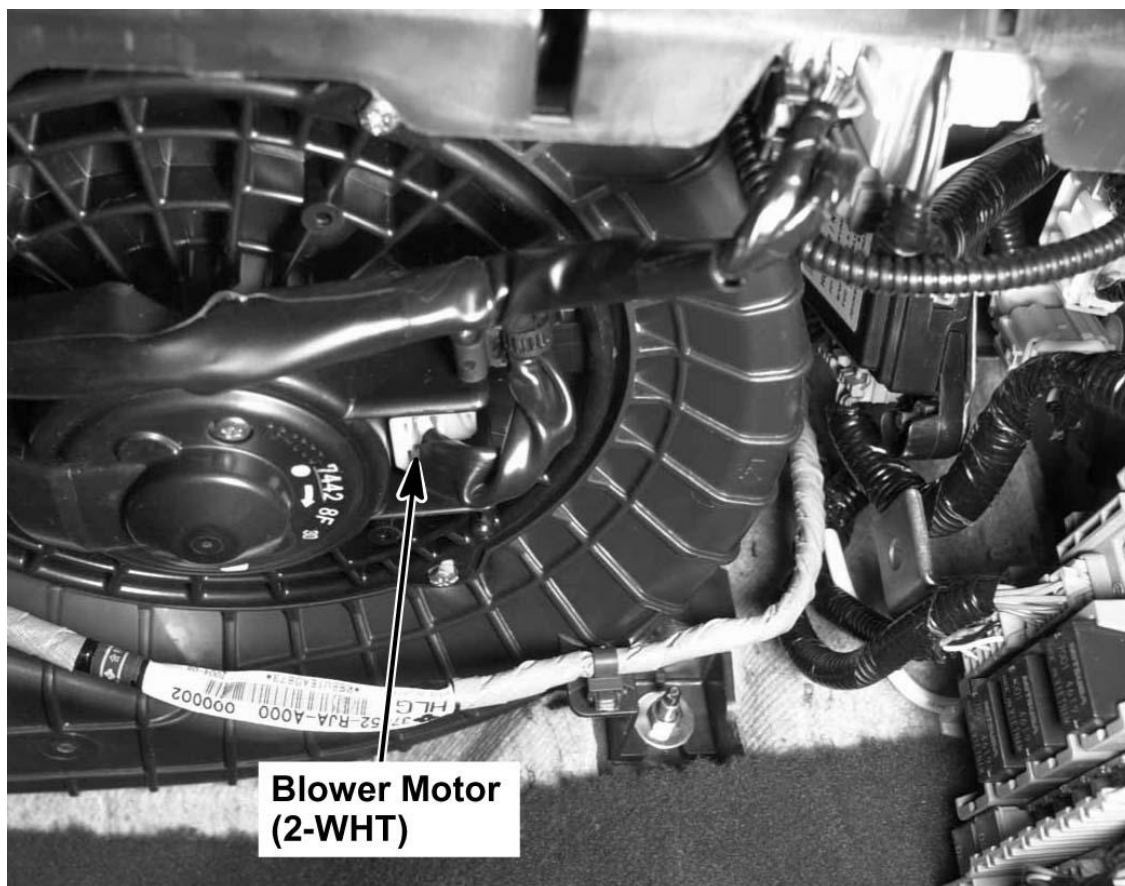

G00363548

**Fig. 94: Under Right Side Of Dash**


Courtesy of AMERICAN HONDA MOTOR CO., INC.

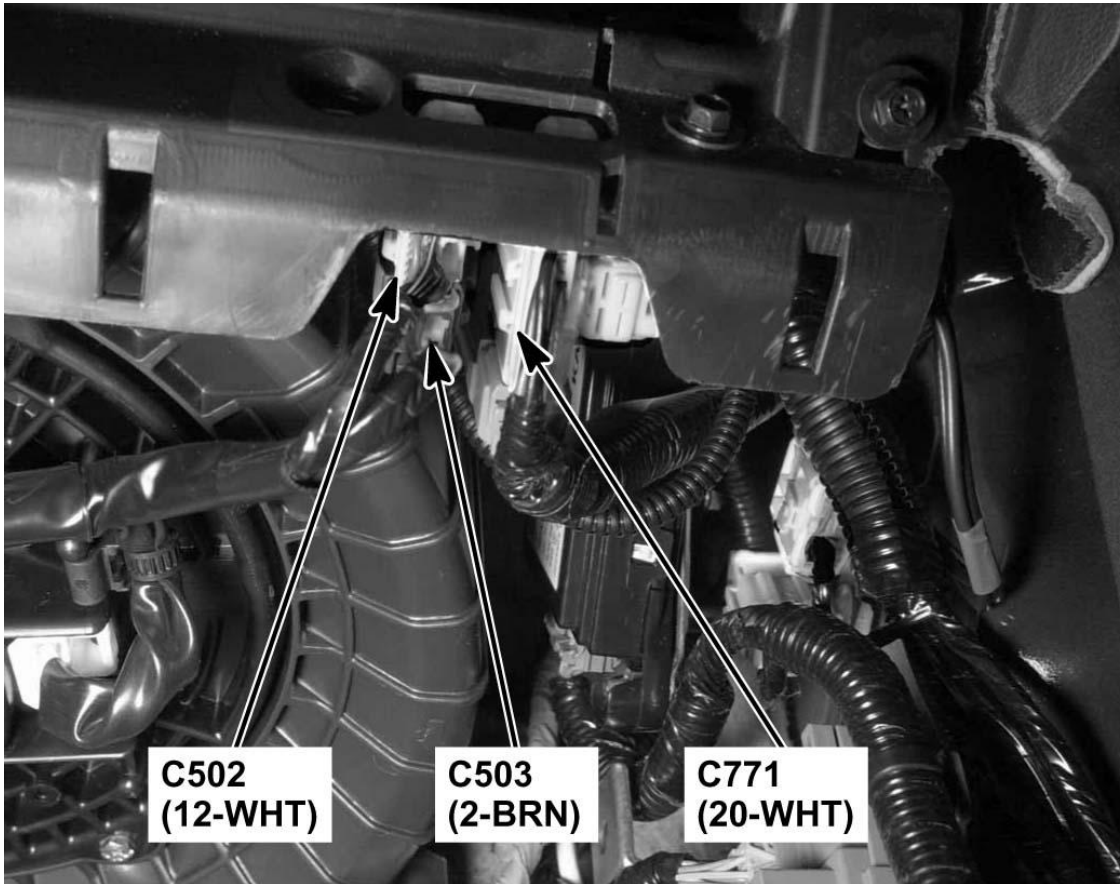

G00363549

**Fig. 95: Under Right Side Of Dash**


Courtesy of AMERICAN HONDA MOTOR CO., INC.

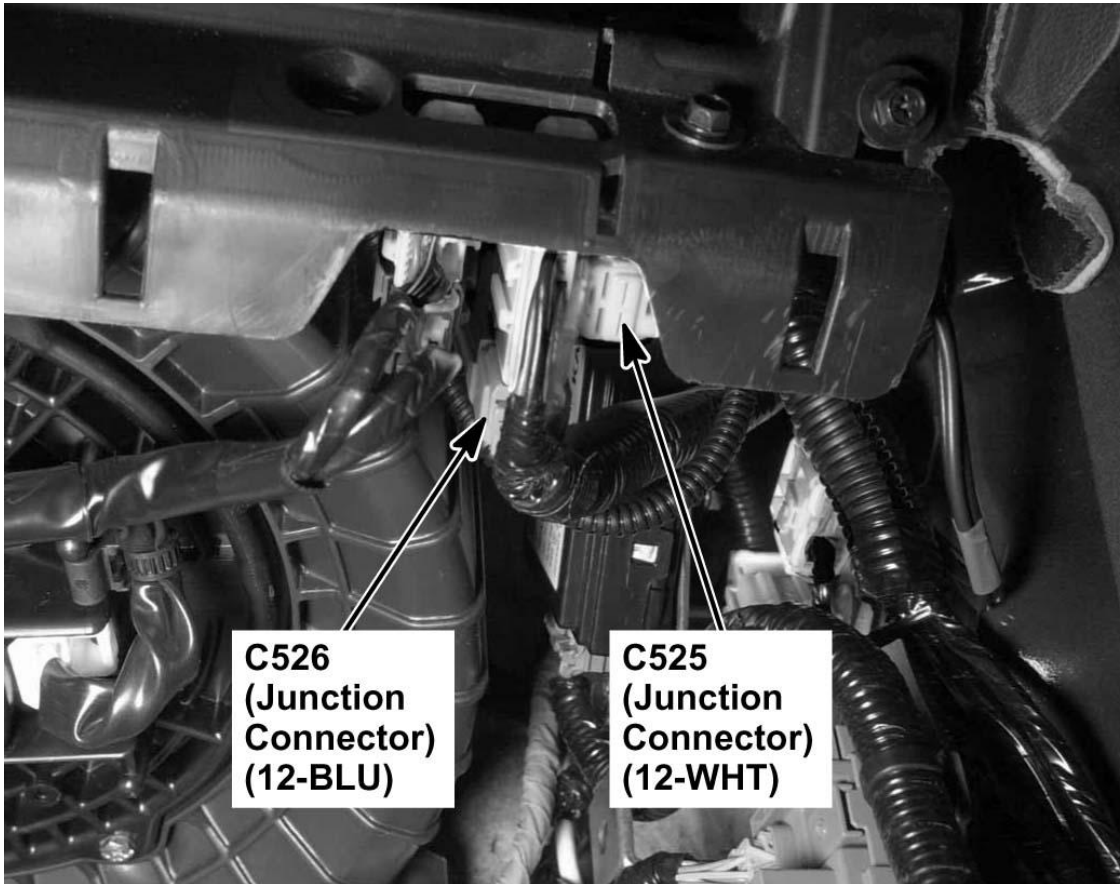

G00363550

**Fig. 96: Under Right Side Of Dash**

Courtesy of AMERICAN HONDA MOTOR CO., INC.

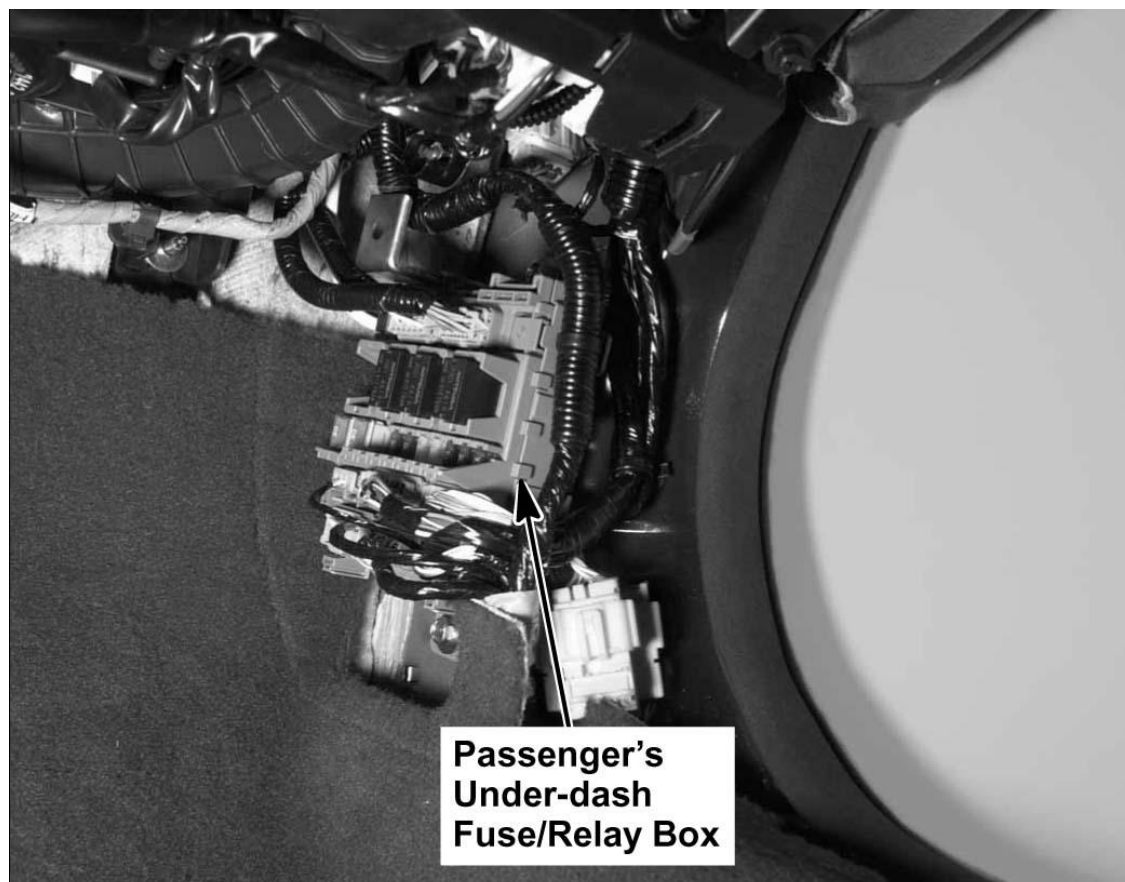


G00363551

**Fig. 97: Behind Right Kick Panel**

Courtesy of AMERICAN HONDA MOTOR CO., INC.




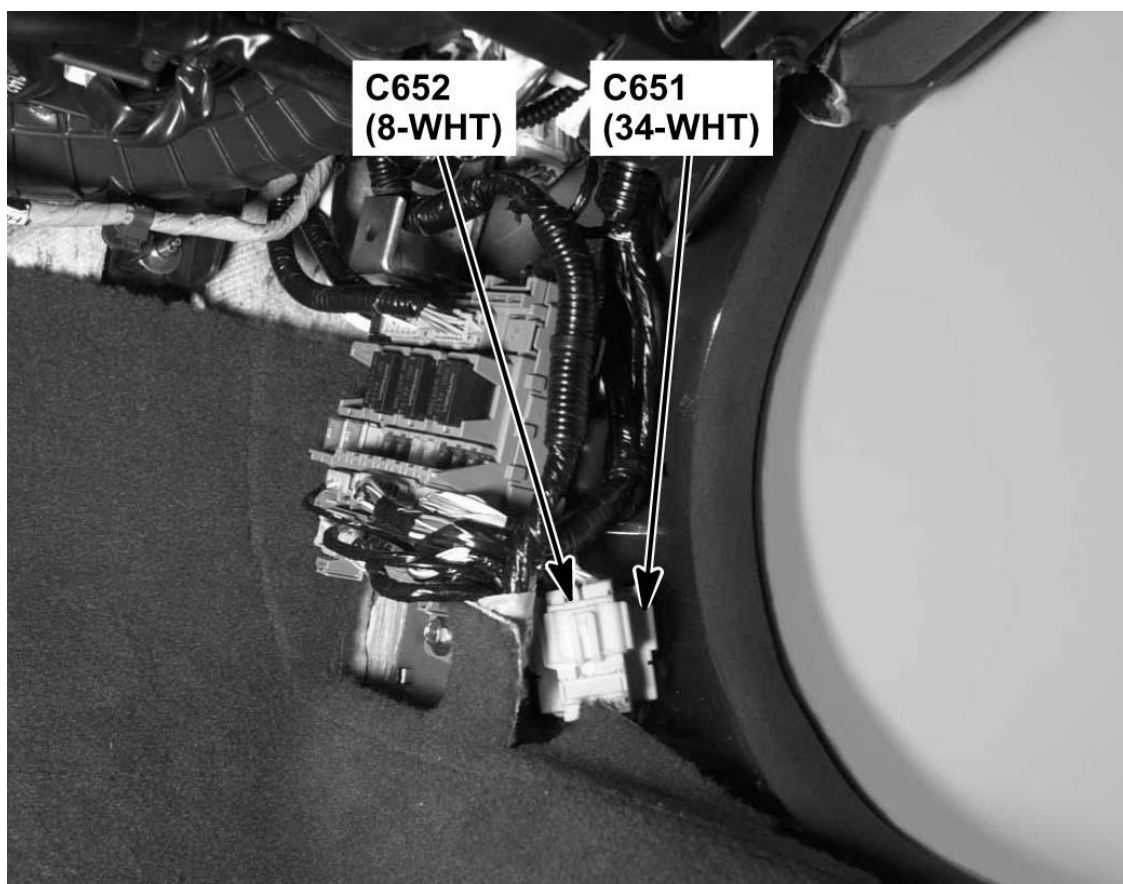

G00363552

**Fig. 98: Behind Right Kick Panel**


Courtesy of AMERICAN HONDA MOTOR CO., INC.

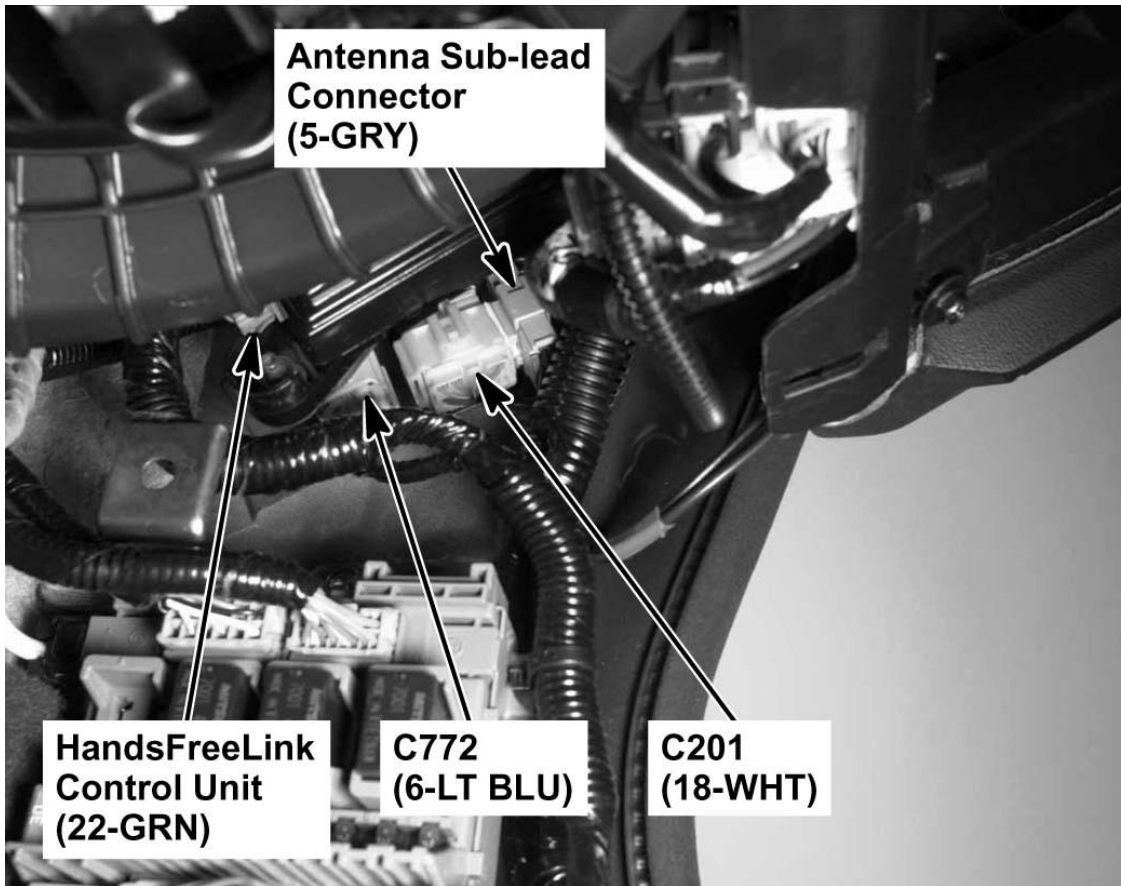

G00363553

**Fig. 99: Behind Right Kick Panel**


Courtesy of AMERICAN HONDA MOTOR CO., INC.

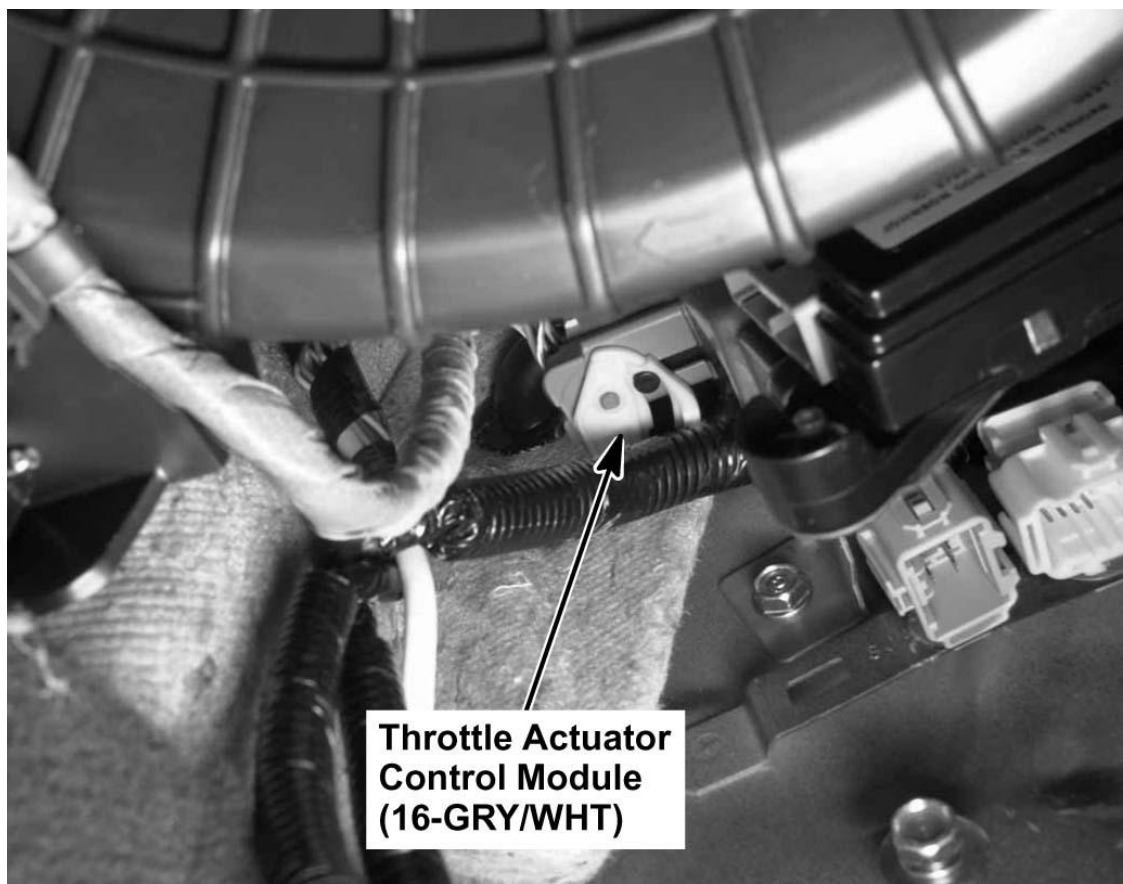

G00363554

**Fig. 100: Behind Right Kick Panel**


Courtesy of AMERICAN HONDA MOTOR CO., INC.

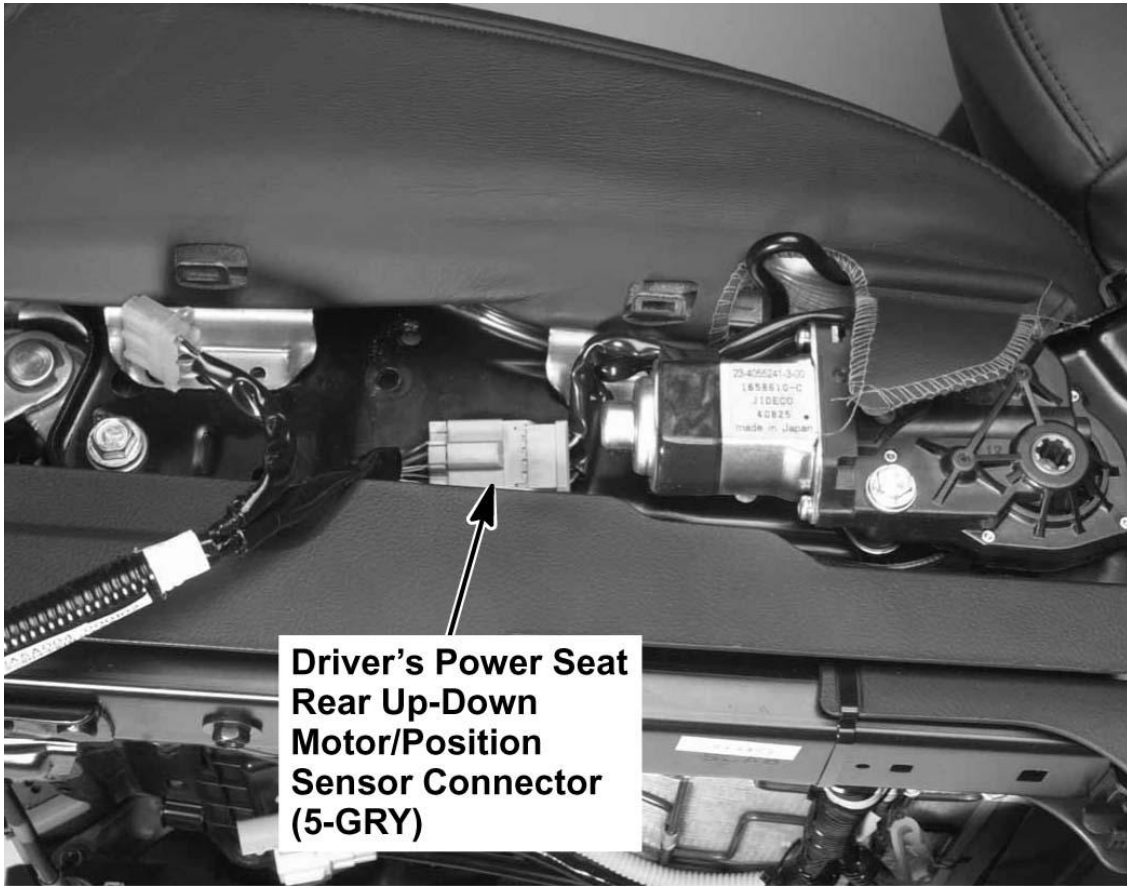

G00363555


**Fig. 101: Left Side Of Driver's Seat**  
Courtesy of AMERICAN HONDA MOTOR CO., INC.



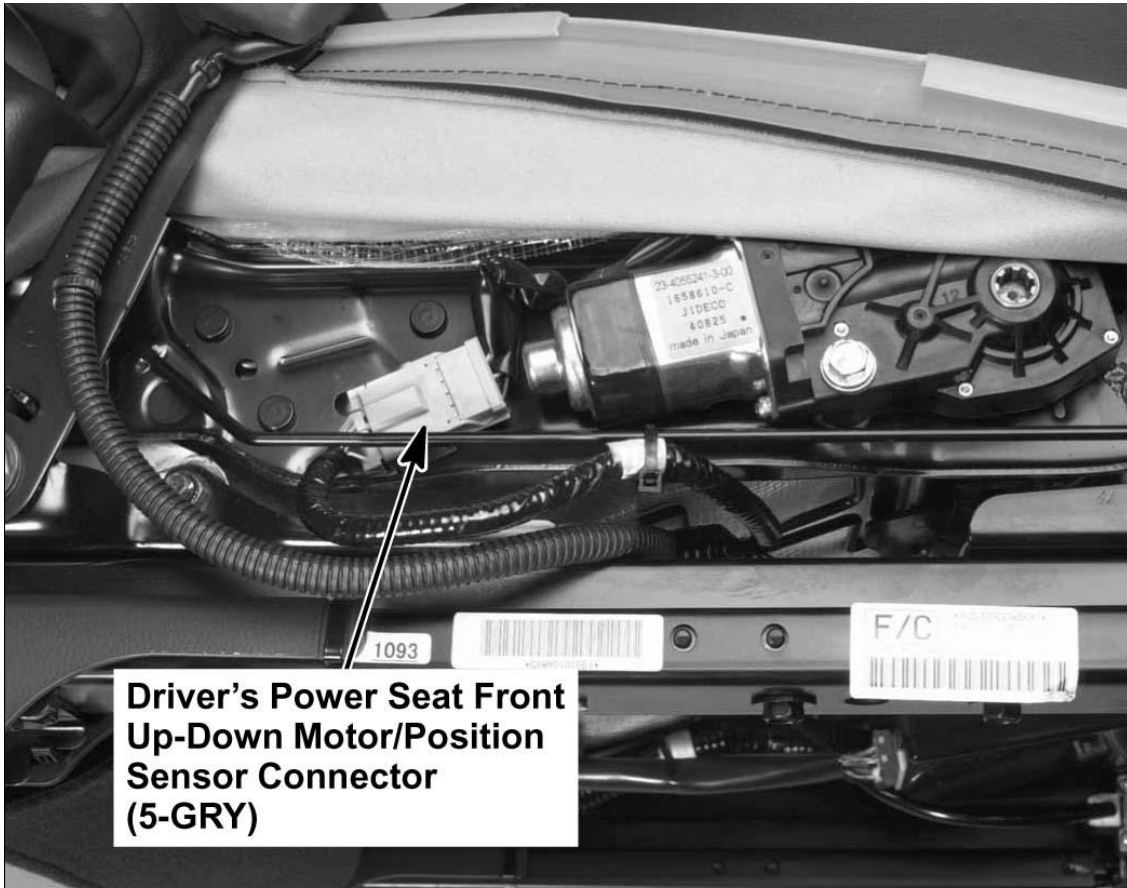

G00363556

**Fig. 102: Right Side Of Driver's Seat**  
Courtesy of AMERICAN HONDA MOTOR CO., INC.

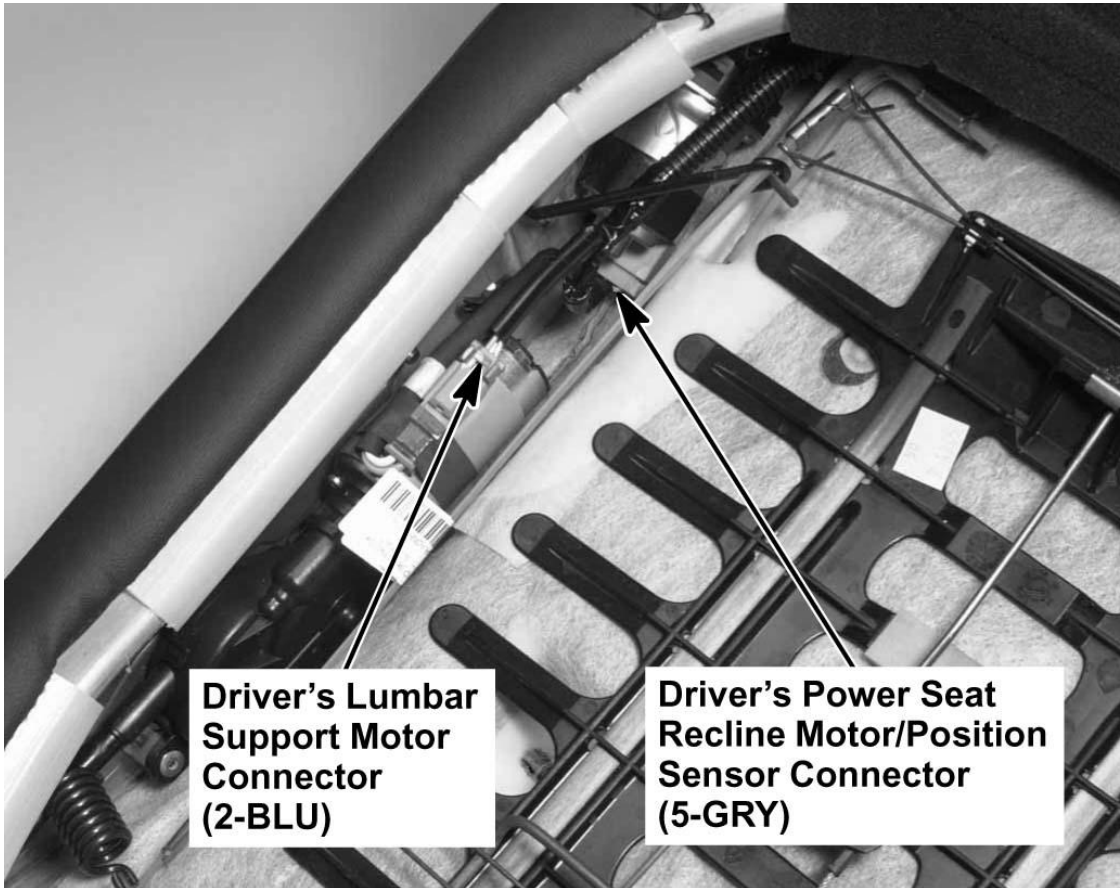

G00363557


**Fig. 103: Right Side Of Driver's Seat**

Courtesy of AMERICAN HONDA MOTOR CO., INC.



G00363558


**Fig. 104: Right Side Of Driver's Seat**  
Courtesy of AMERICAN HONDA MOTOR CO., INC.

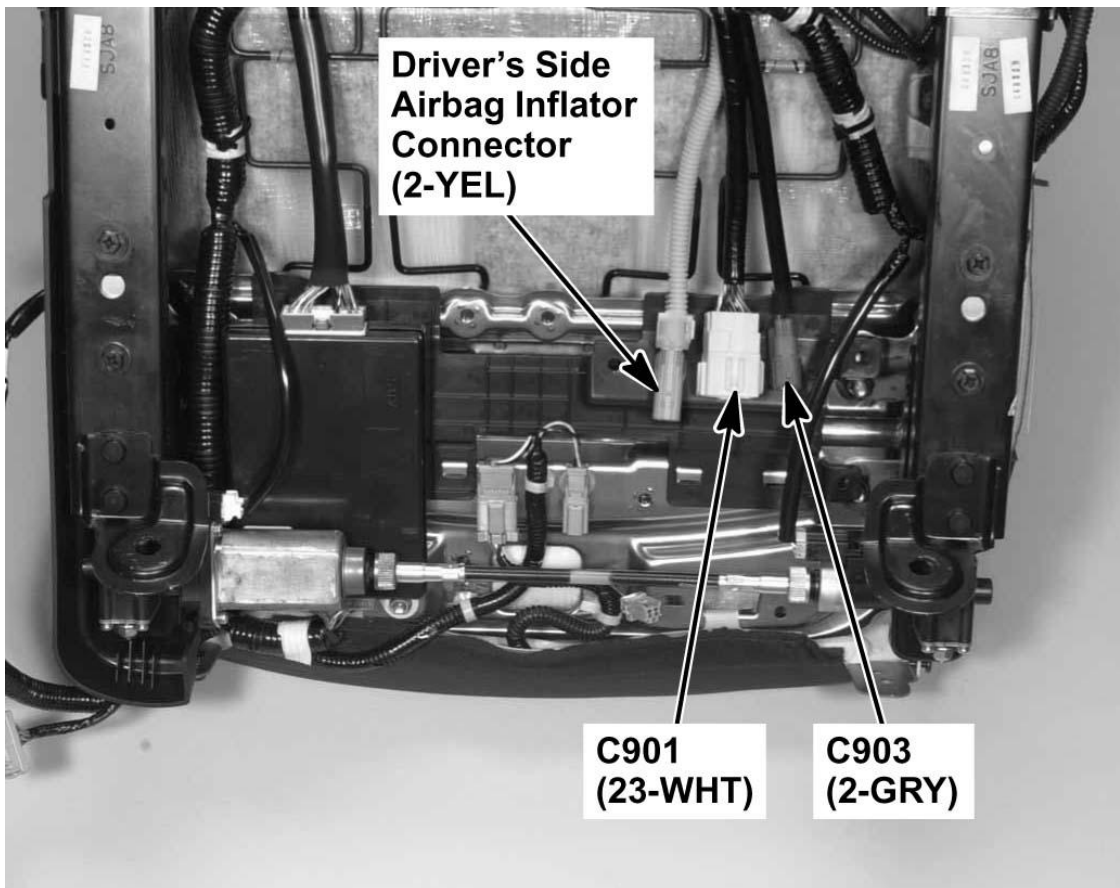

G00363559


**Fig. 105: Under Driver's Seat**  
Courtesy of AMERICAN HONDA MOTOR CO., INC.



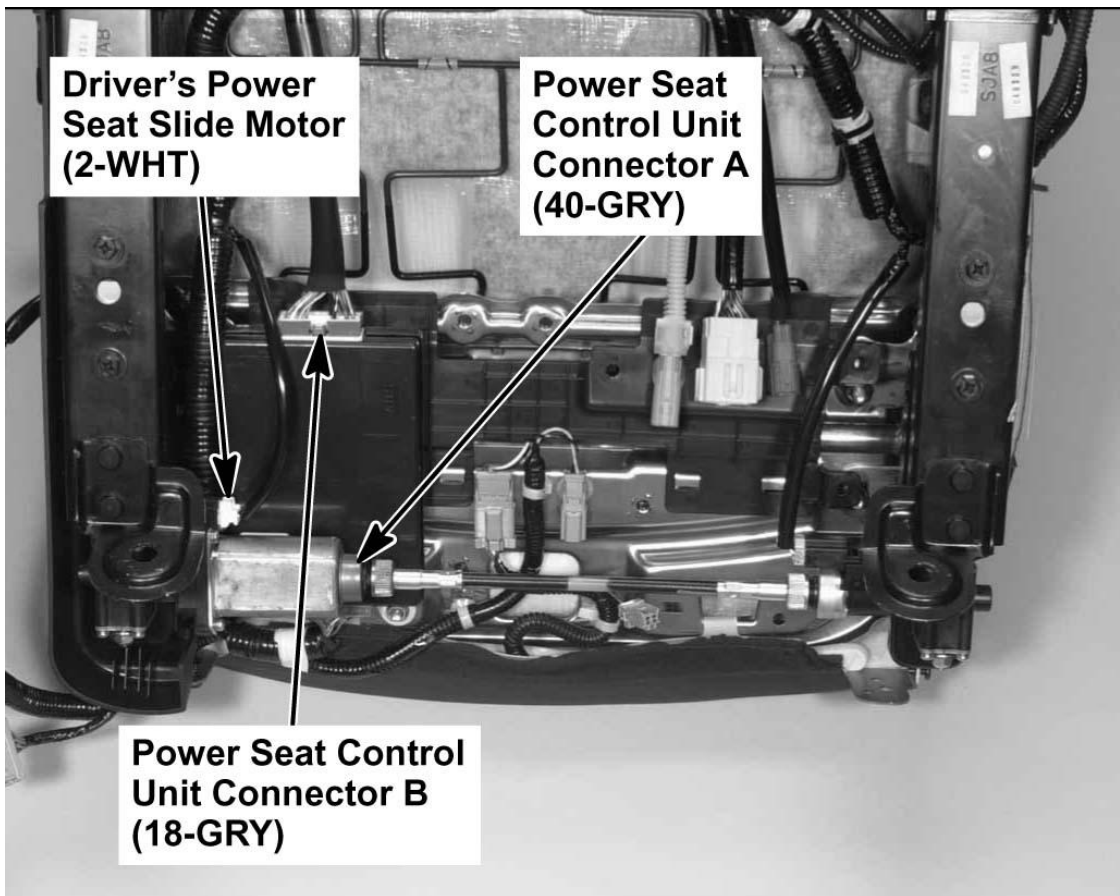

G00363560

**Fig. 106: Under Driver's Seat**  
Courtesy of AMERICAN HONDA MOTOR CO., INC.

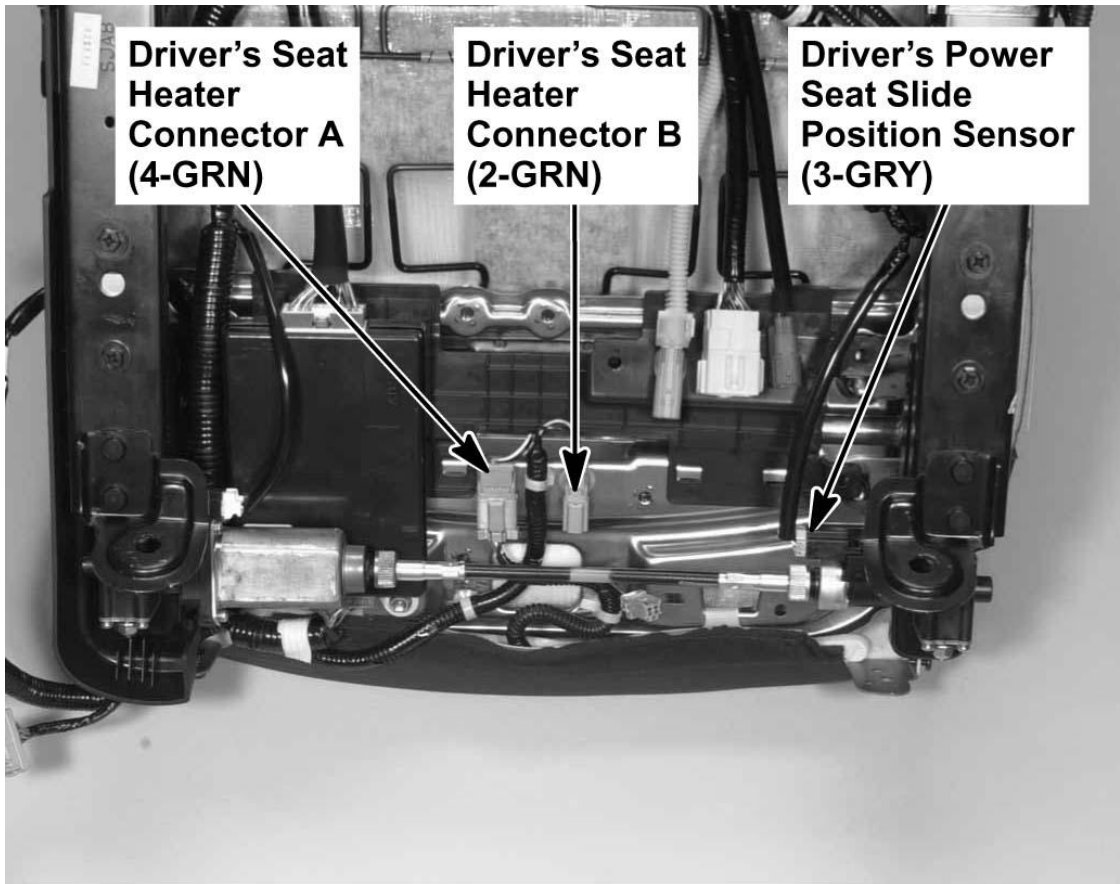


G00363561

**Fig. 107: Under Driver's Seat**  
Courtesy of AMERICAN HONDA MOTOR CO., INC.



G00363562


**Fig. 108: Under Driver's Seat**  
Courtesy of AMERICAN HONDA MOTOR CO., INC.

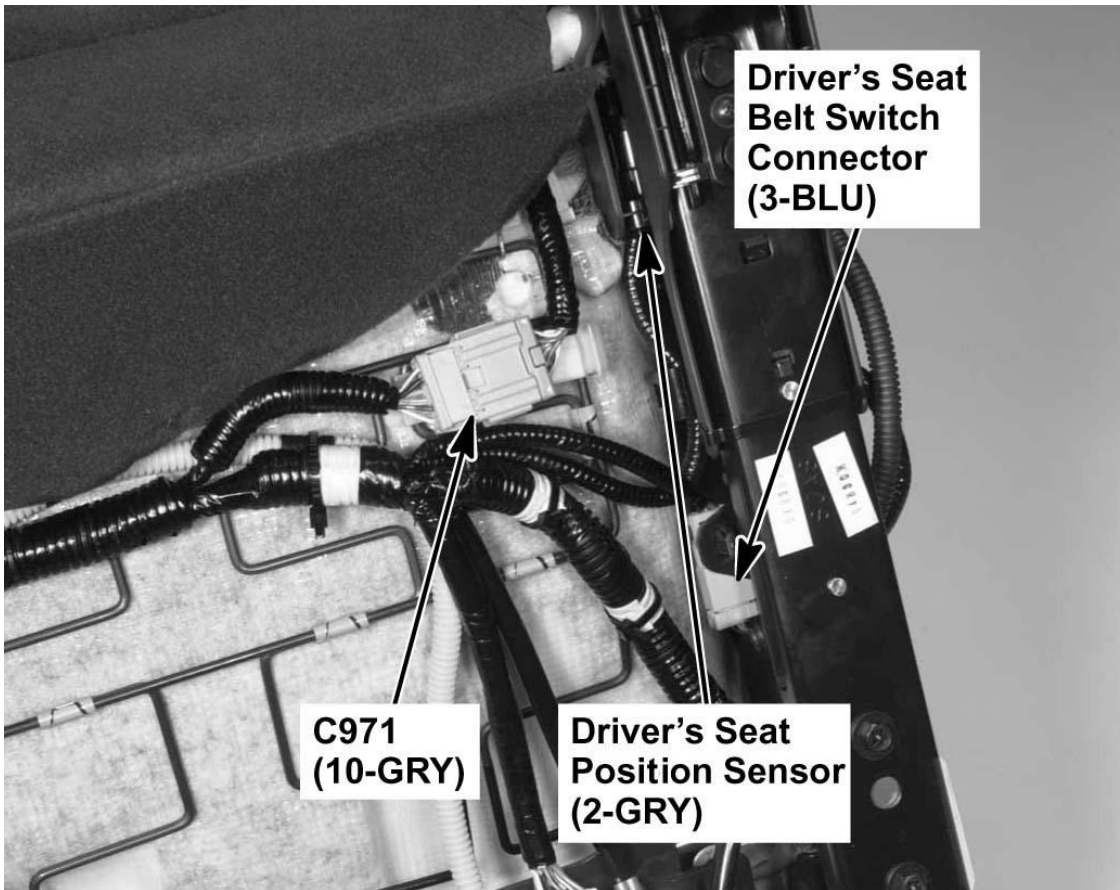

G00363563


**Fig. 109: Under Driver's Seat**  
Courtesy of AMERICAN HONDA MOTOR CO., INC.



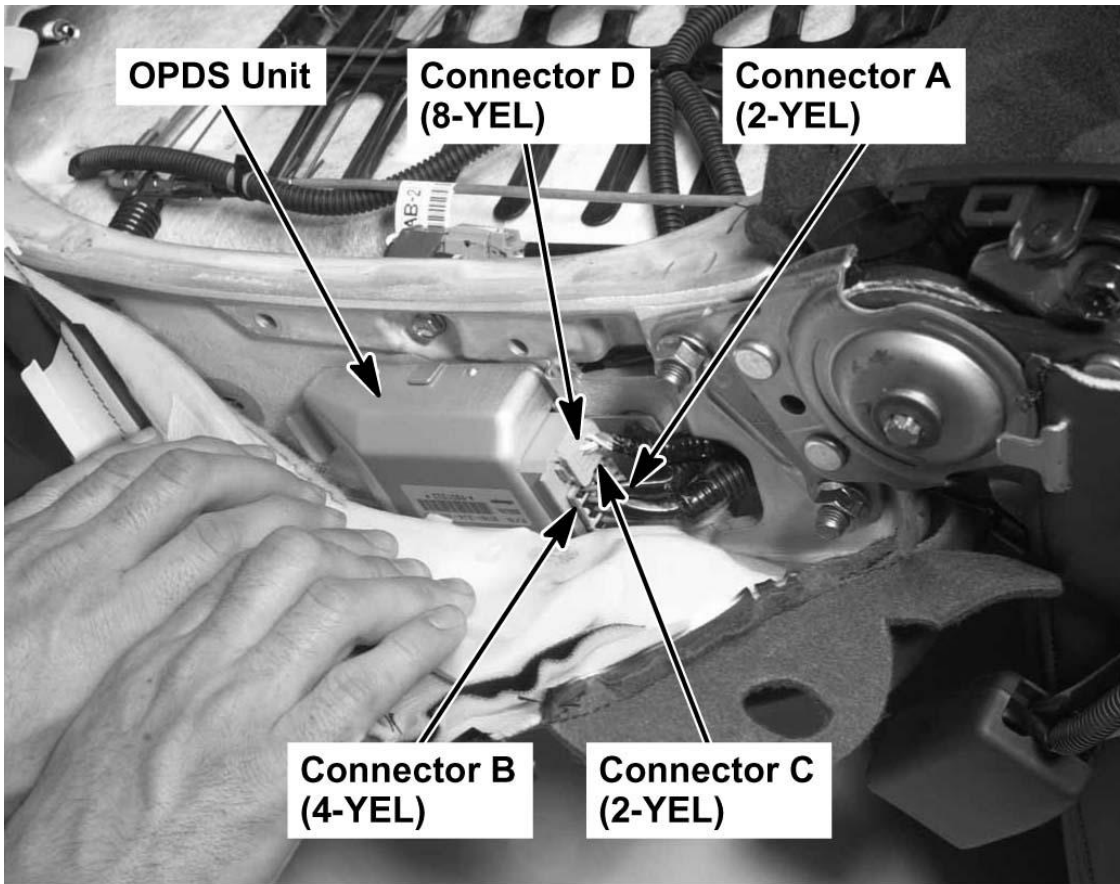


G00363564

**Fig. 110: In Front Passenger's Seat**  
Courtesy of AMERICAN HONDA MOTOR CO., INC.

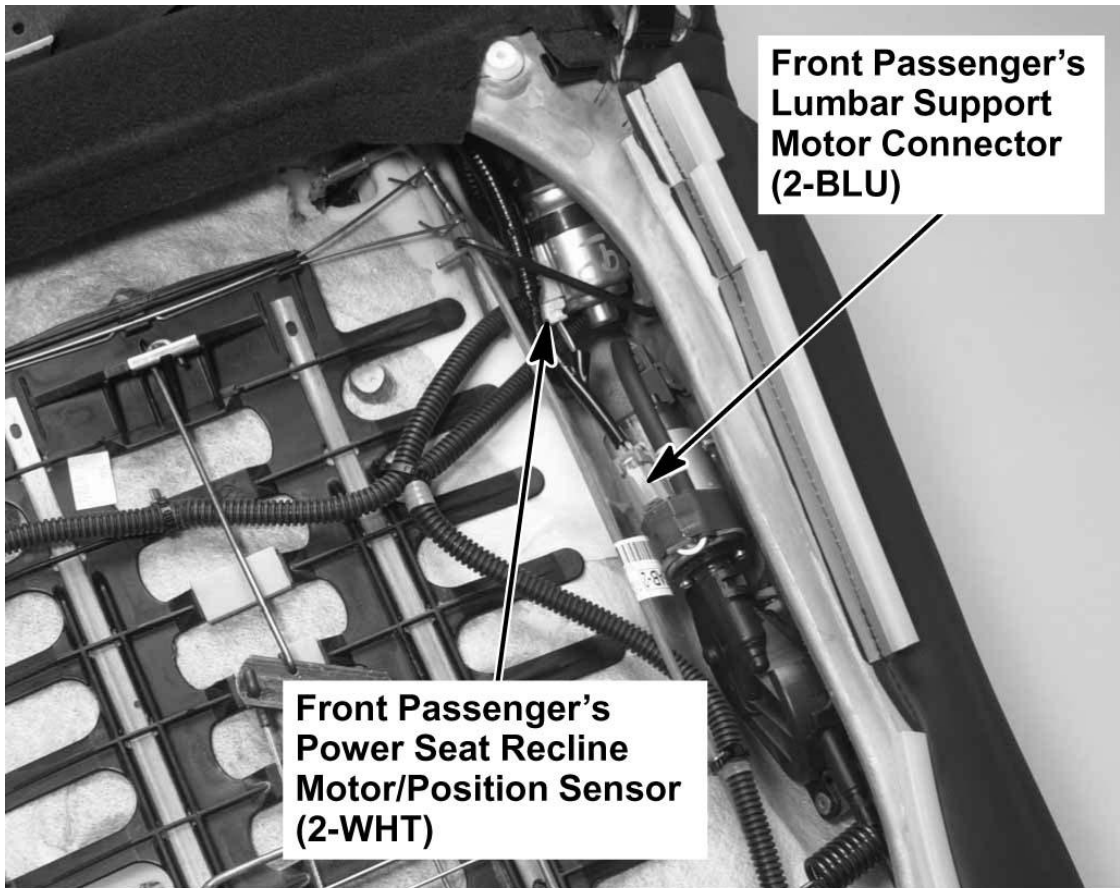


G00363565

**Fig. 111: Left Side Of Front Passenger's Seat**  
Courtesy of AMERICAN HONDA MOTOR CO., INC.

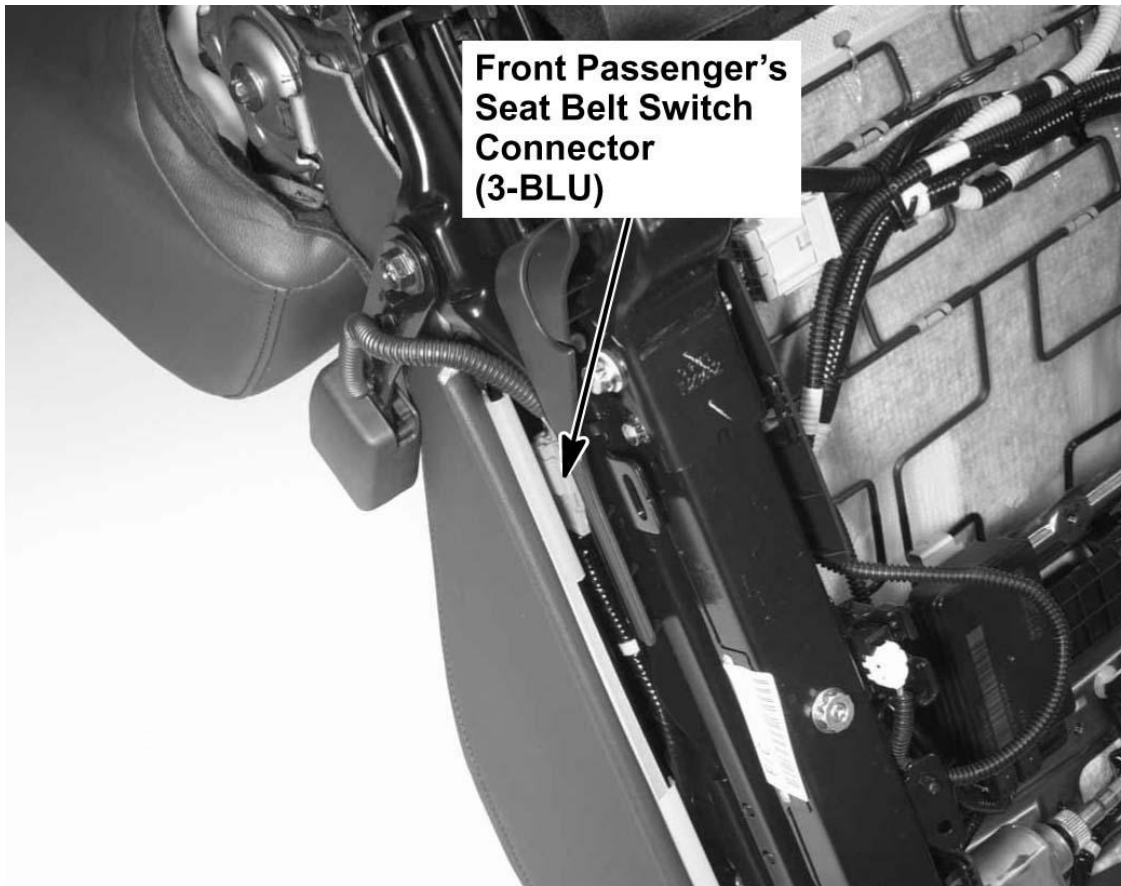

G00363566


**Fig. 112: Left Side Of Front Passenger's Seat**  
Courtesy of AMERICAN HONDA MOTOR CO., INC.

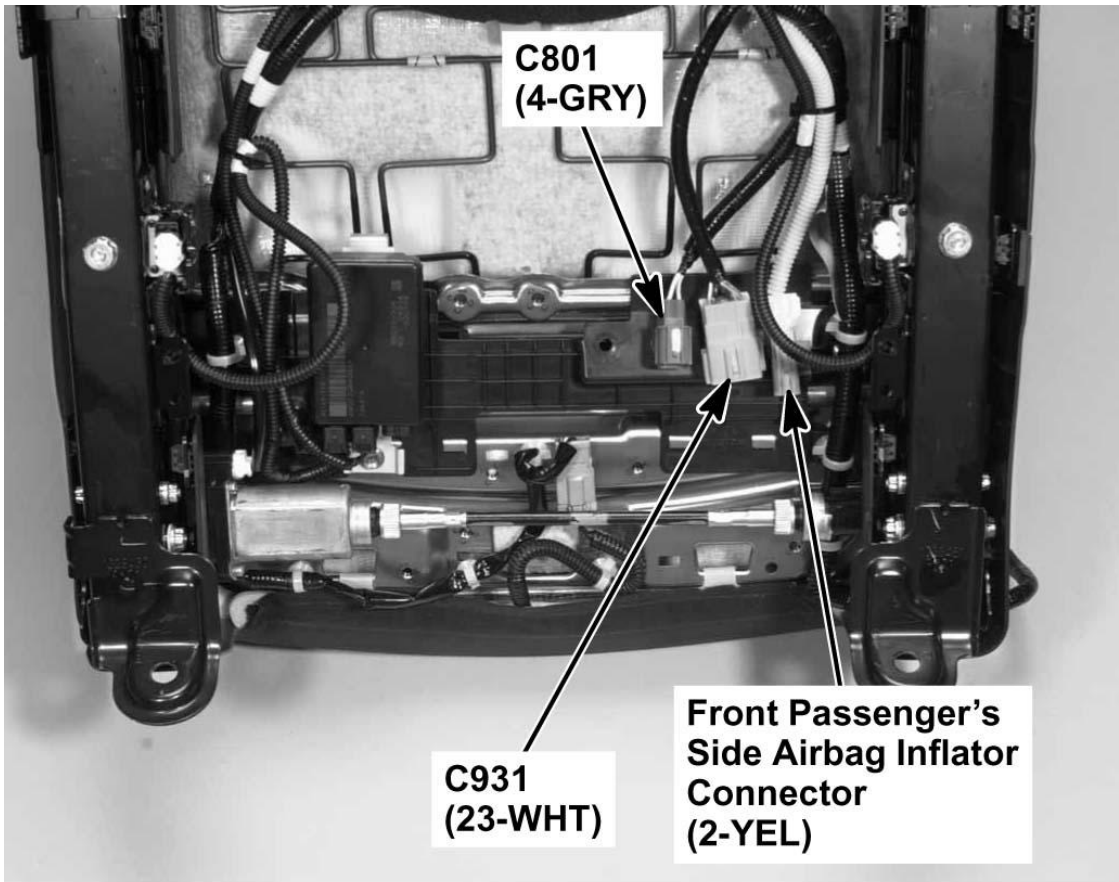

G00363567


**Fig. 113: Under Front Passenger's Seat**  
Courtesy of AMERICAN HONDA MOTOR CO., INC.



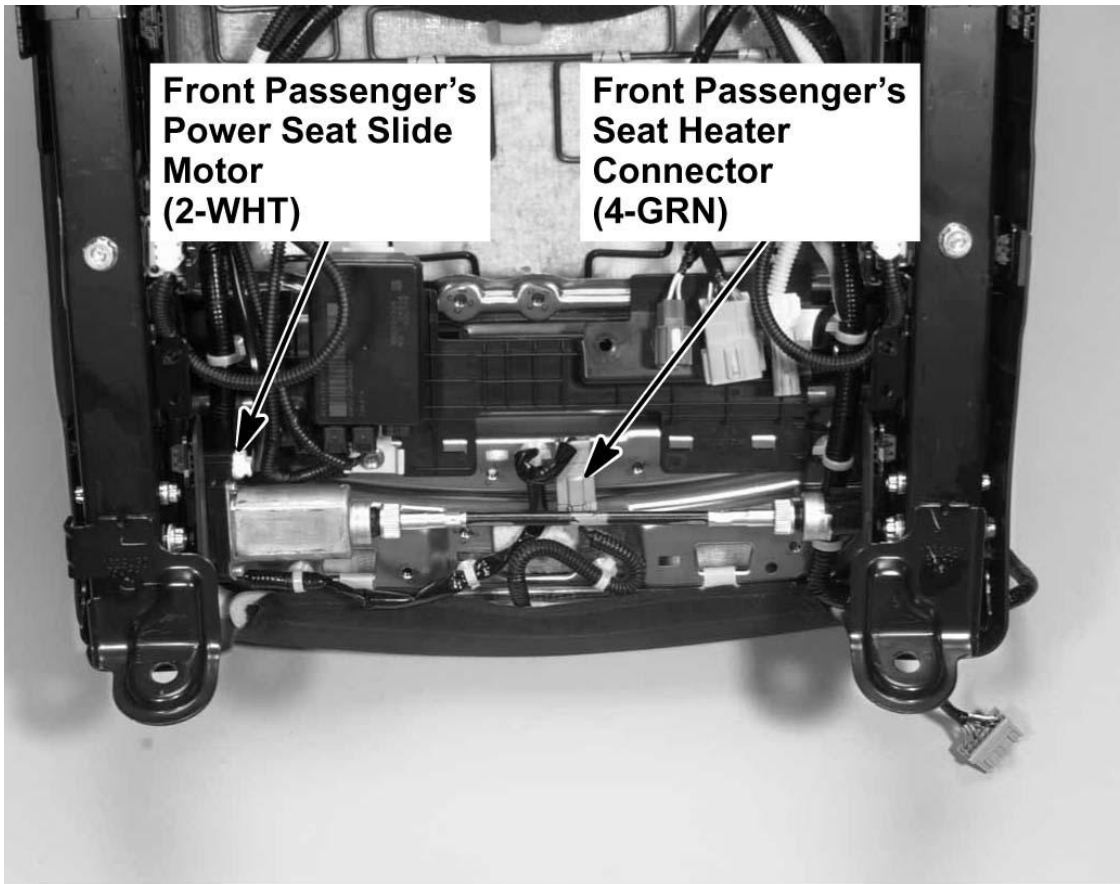


G00363568

**Fig. 114: Under Front Passenger's Seat**  
Courtesy of AMERICAN HONDA MOTOR CO., INC.

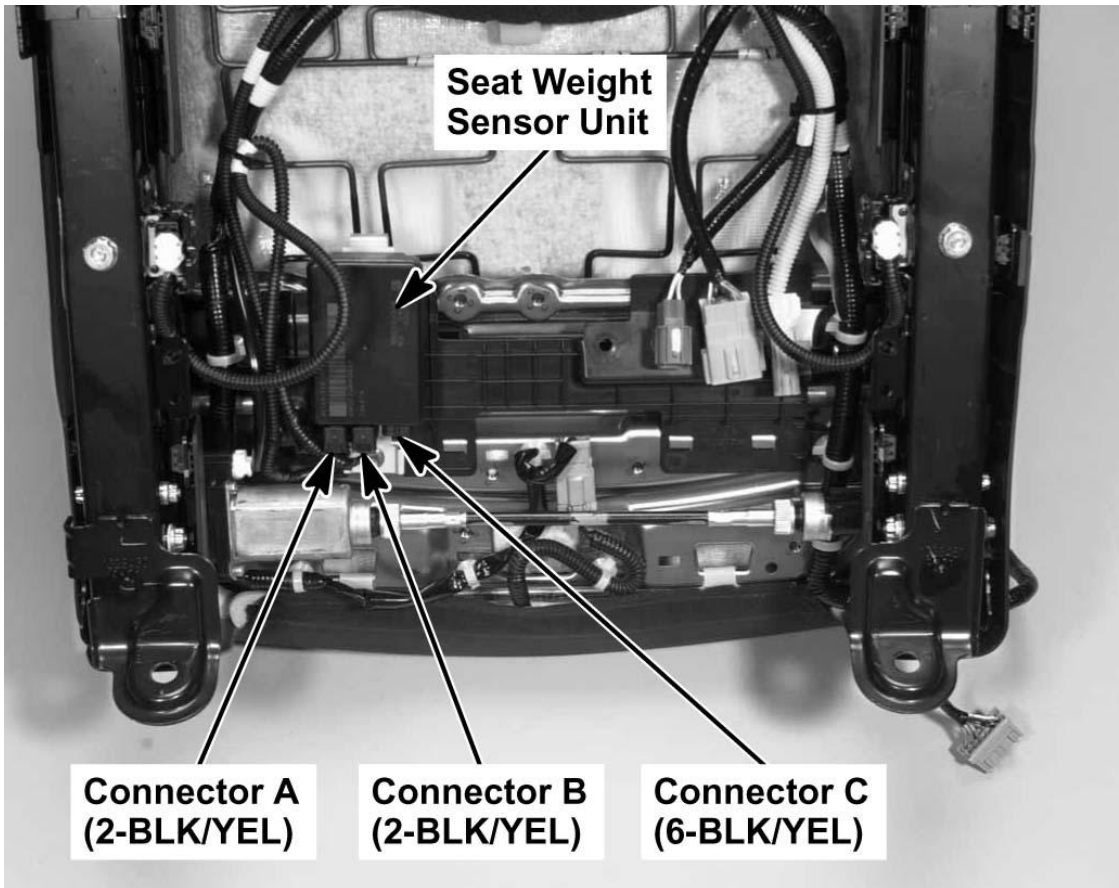


G00363569

**Fig. 115: Under Front Passenger's Seat**  
Courtesy of AMERICAN HONDA MOTOR CO., INC.

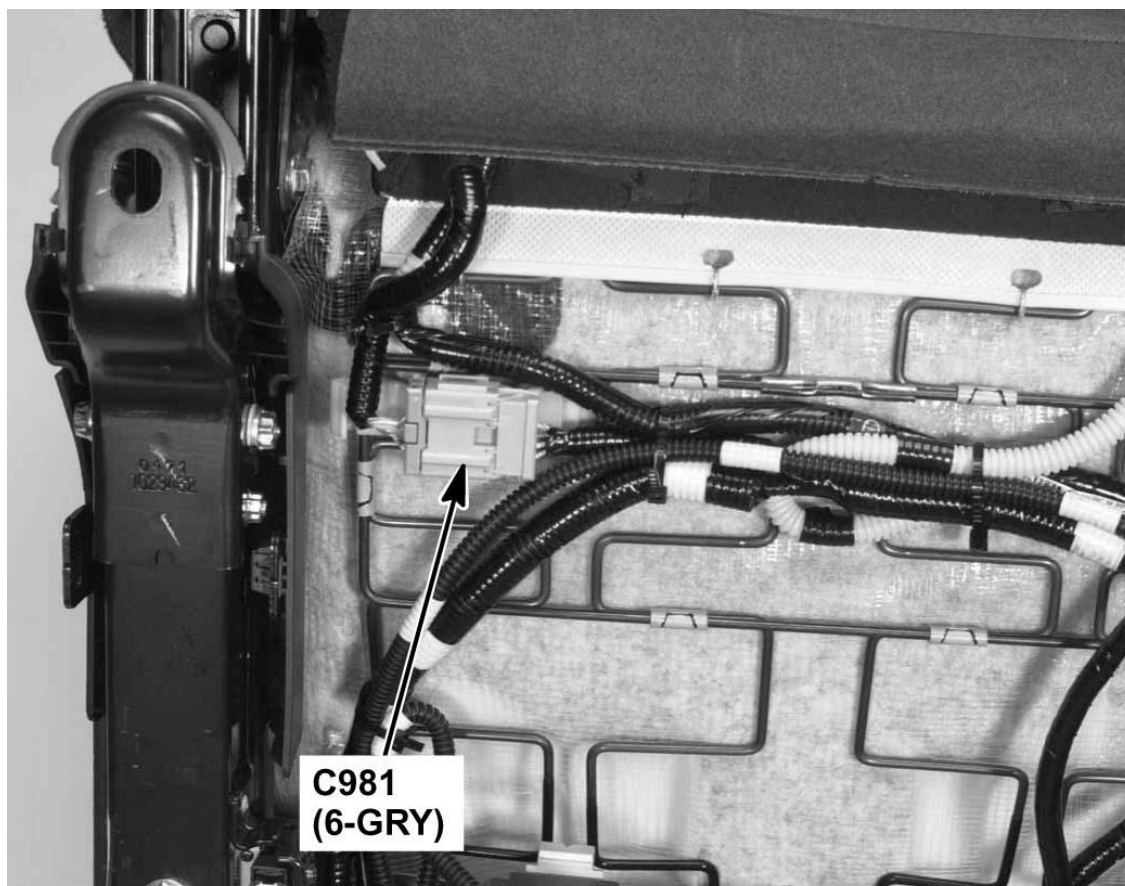

G00363570

**Fig. 116: Under Front Passenger's Seat**  
Courtesy of AMERICAN HONDA MOTOR CO., INC.

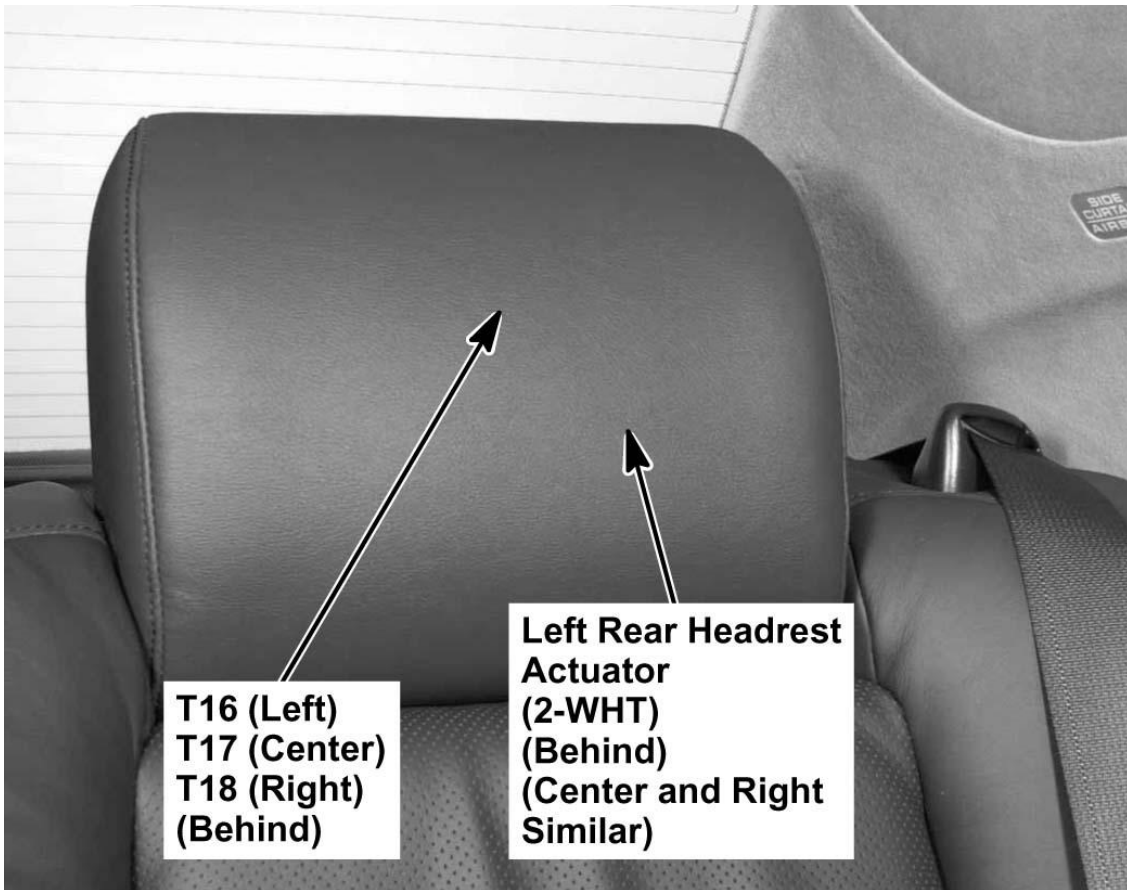

G00363571

**Fig. 117: Left Side Of Rear Seat**

Courtesy of AMERICAN HONDA MOTOR CO., INC.






G00363572

**Fig. 118: Right Side Of Rear Seat**


Courtesy of AMERICAN HONDA MOTOR CO., INC.

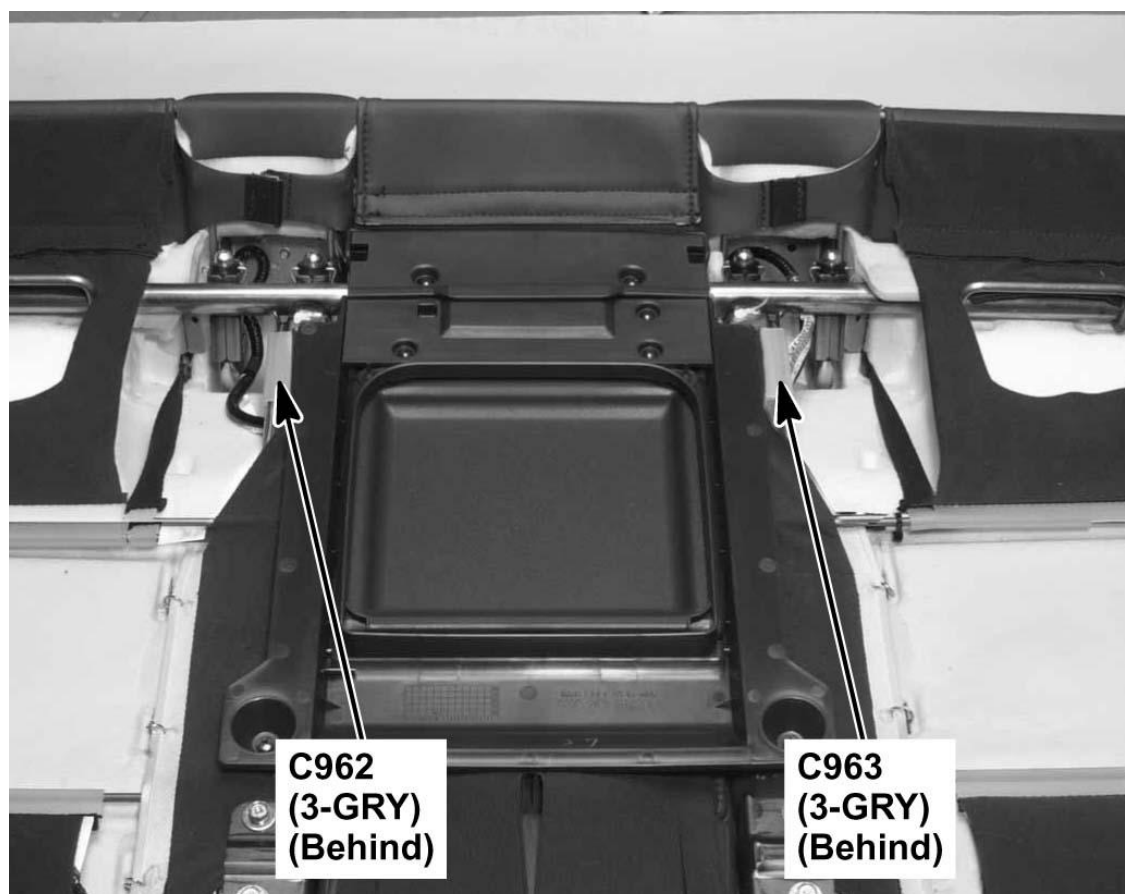

G00363573

**Fig. 119: Center Of Rear Seat**


Courtesy of AMERICAN HONDA MOTOR CO., INC.

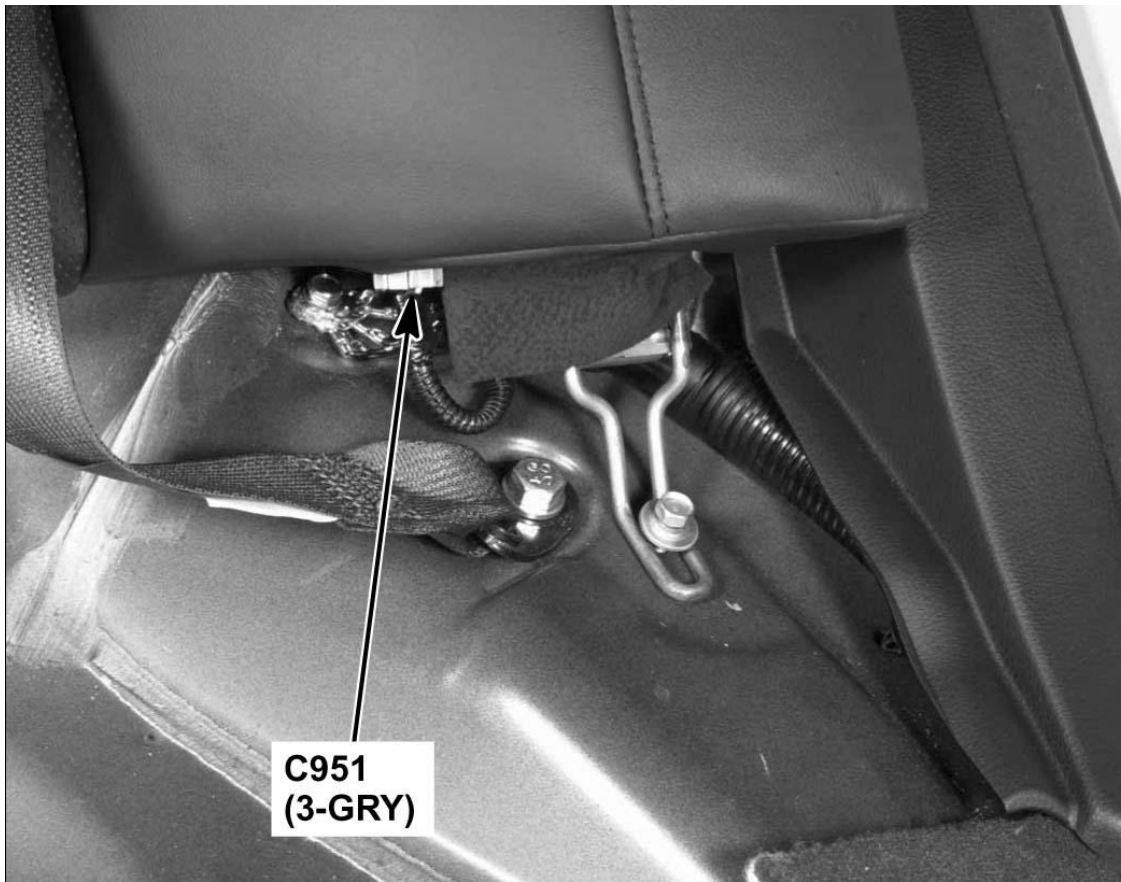

G00363574

**Fig. 120: Under Rear Seat**

Courtesy of AMERICAN HONDA MOTOR CO., INC.

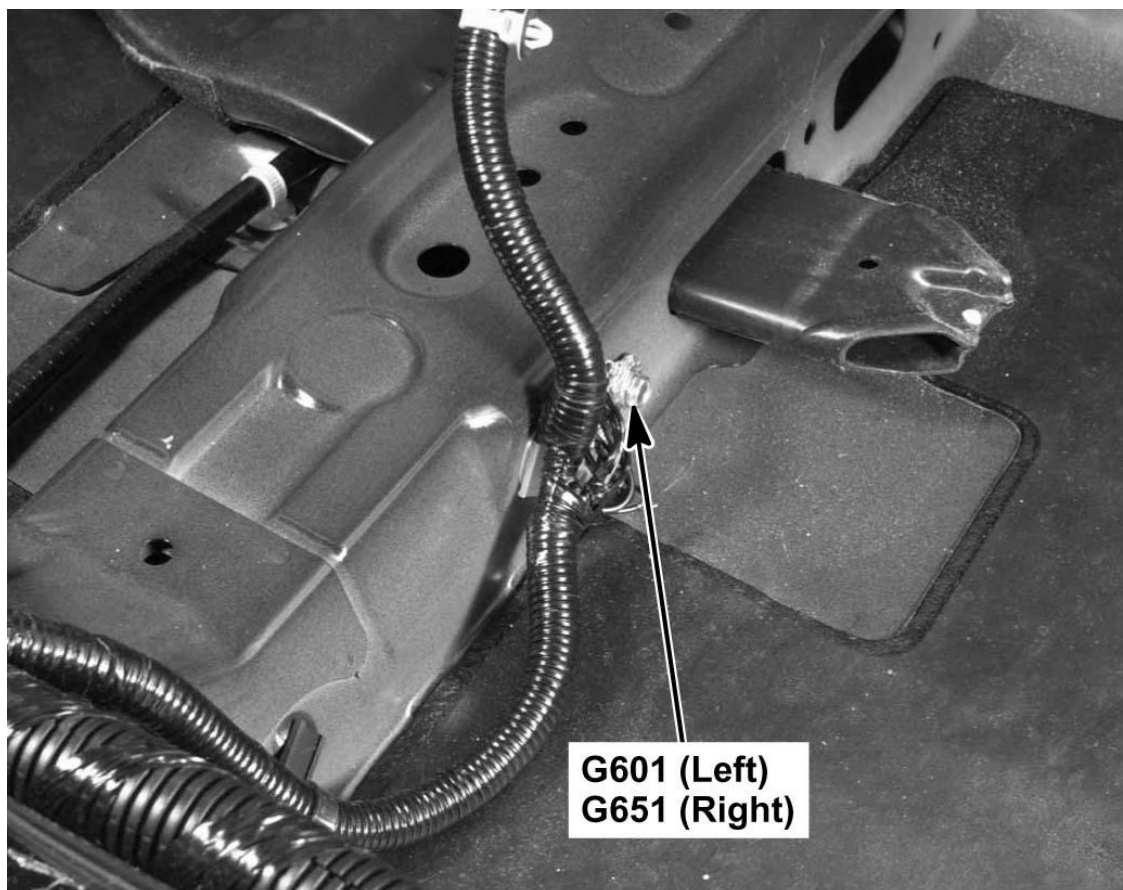


G00363575

**Fig. 121: Left Side Of Floor (Right Similar)**

Courtesy of AMERICAN HONDA MOTOR CO., INC.




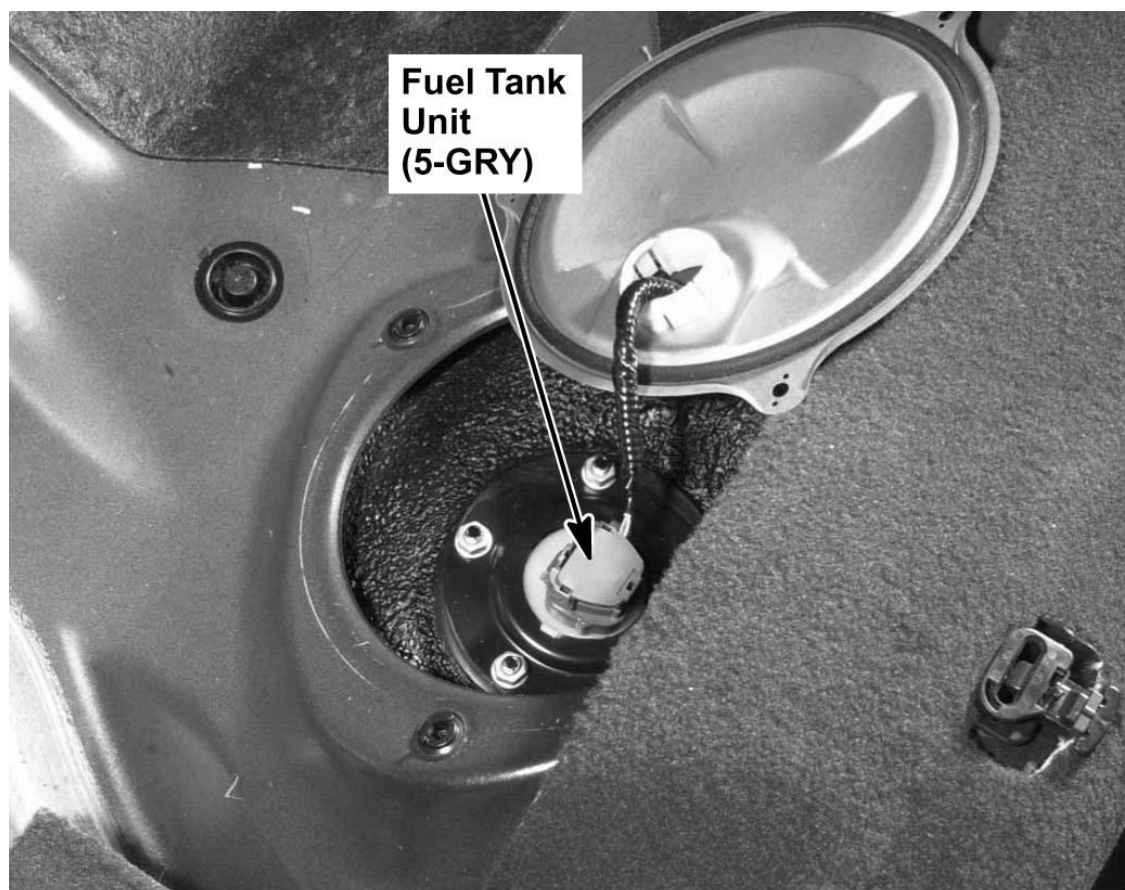

G00363576

**Fig. 122: Under Rear Seat**


Courtesy of AMERICAN HONDA MOTOR CO., INC.

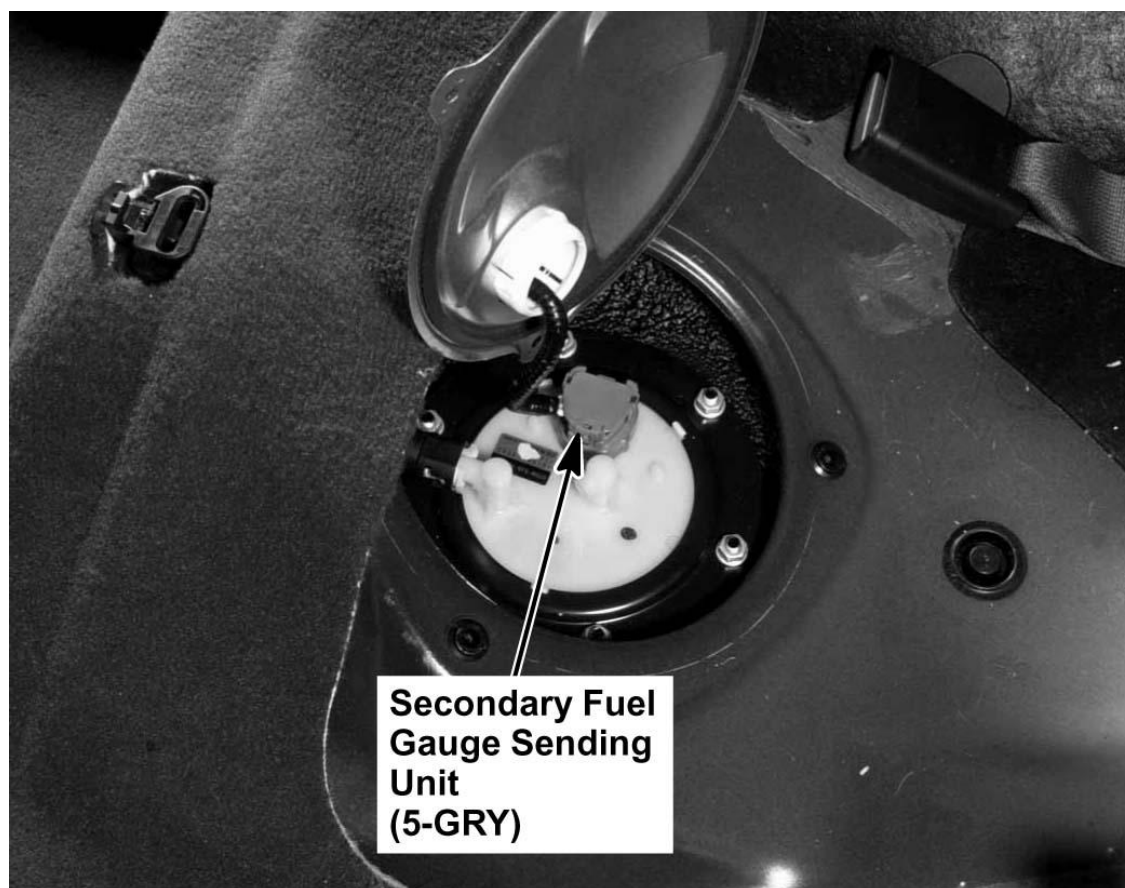

G00363577

**Fig. 123: Under Rear Seat**


Courtesy of AMERICAN HONDA MOTOR CO., INC.

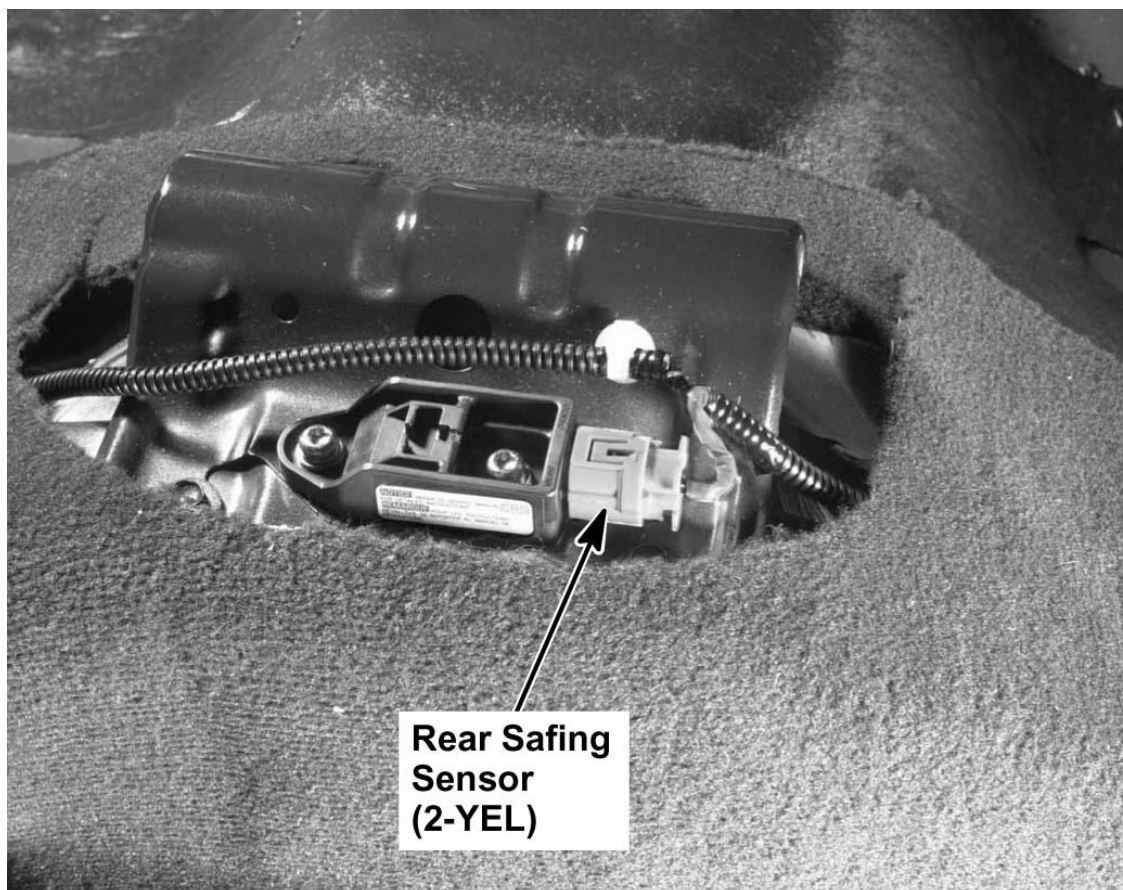

G00363578

**Fig. 124: Under Rear Seat**


Courtesy of AMERICAN HONDA MOTOR CO., INC.

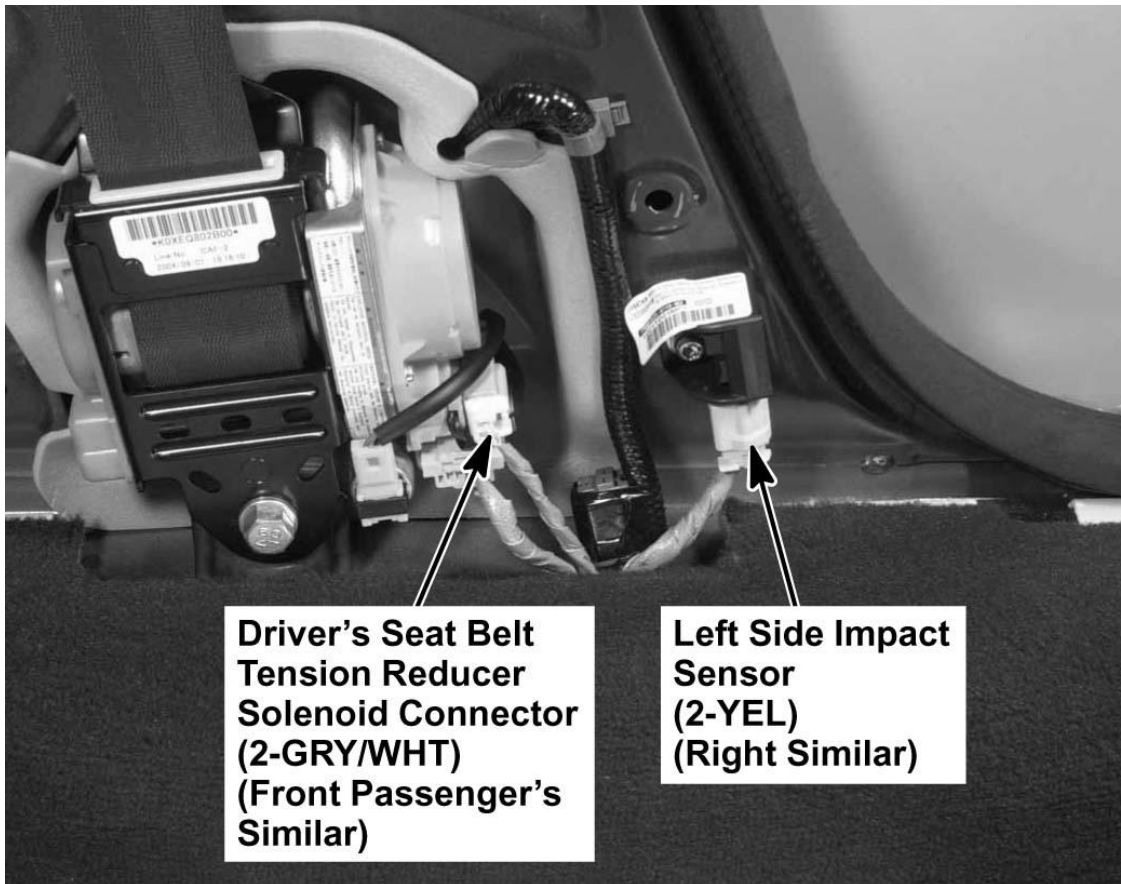

G00363579

**Fig. 125: Left "B" Pillar (Right Similar)**  
Courtesy of AMERICAN HONDA MOTOR CO., INC.



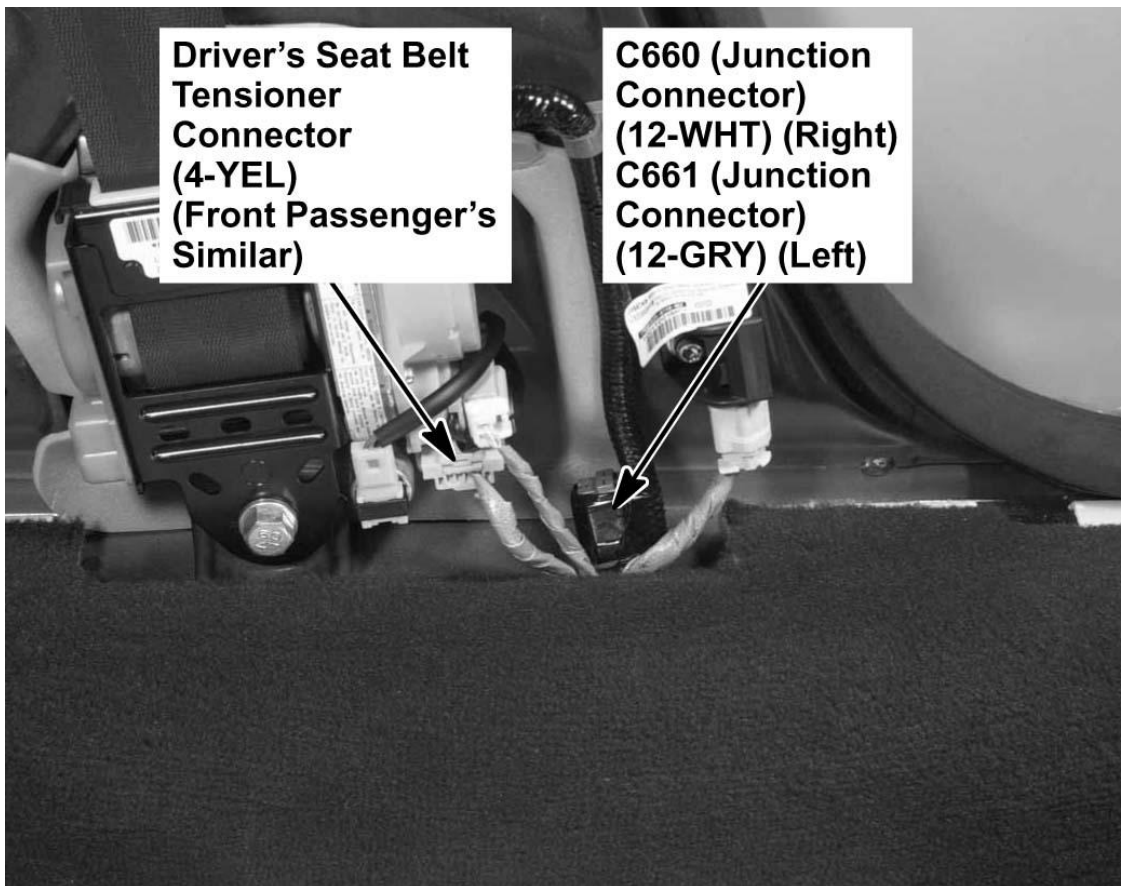


G00363580

**Fig. 126: Left "B" Pillar (Right Similar)**


Courtesy of AMERICAN HONDA MOTOR CO., INC.



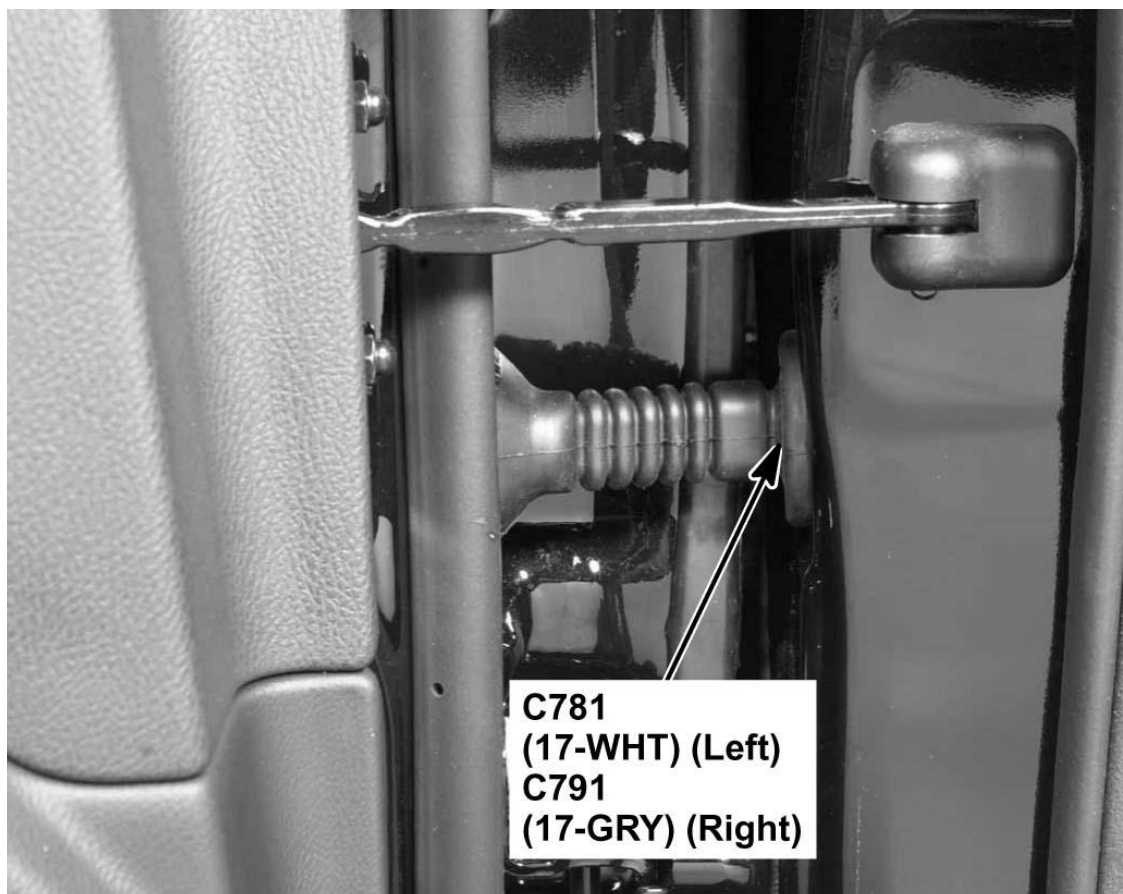

G00363581


**Fig. 127: Left "B" Pillar (Right Similar)**  
**Courtesy of AMERICAN HONDA MOTOR CO., INC.**

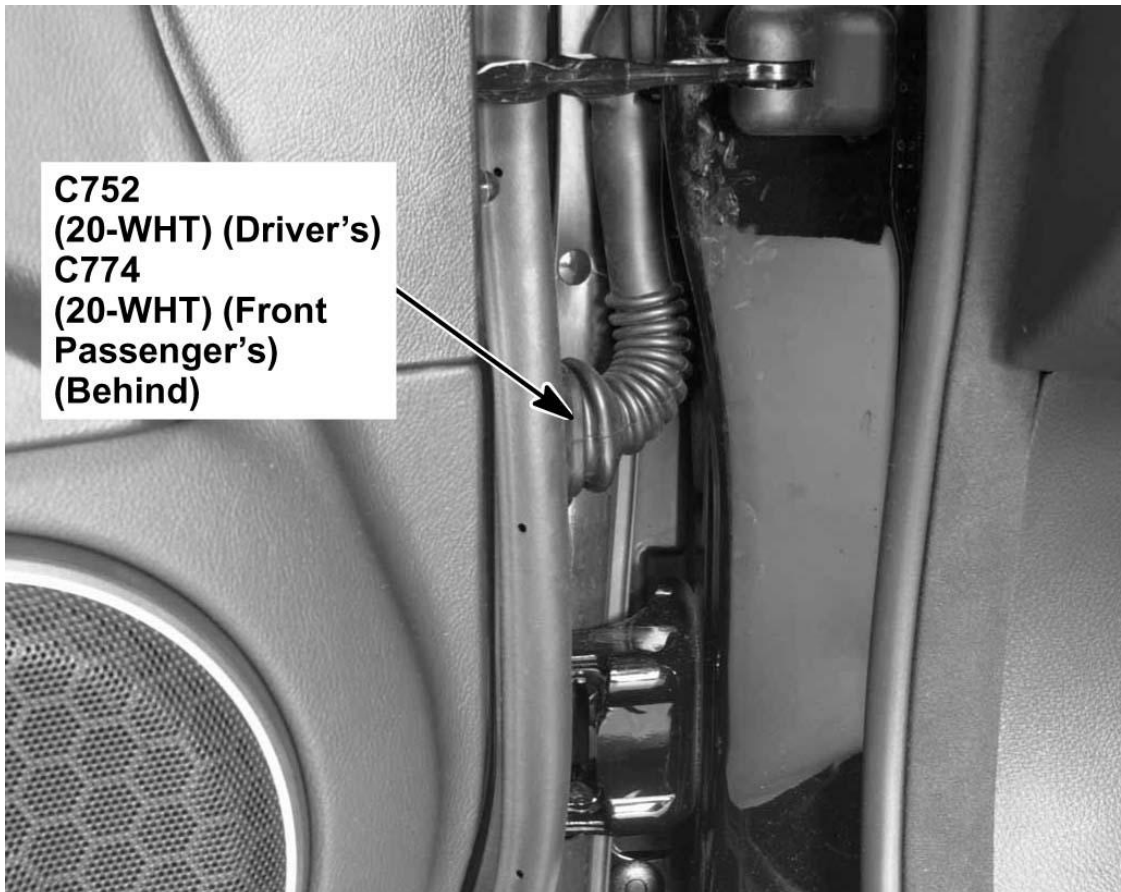

G00363582


**Fig. 128: Driver's Door (Front Passenger's Similar)**

**Courtesy of AMERICAN HONDA MOTOR CO., INC.**

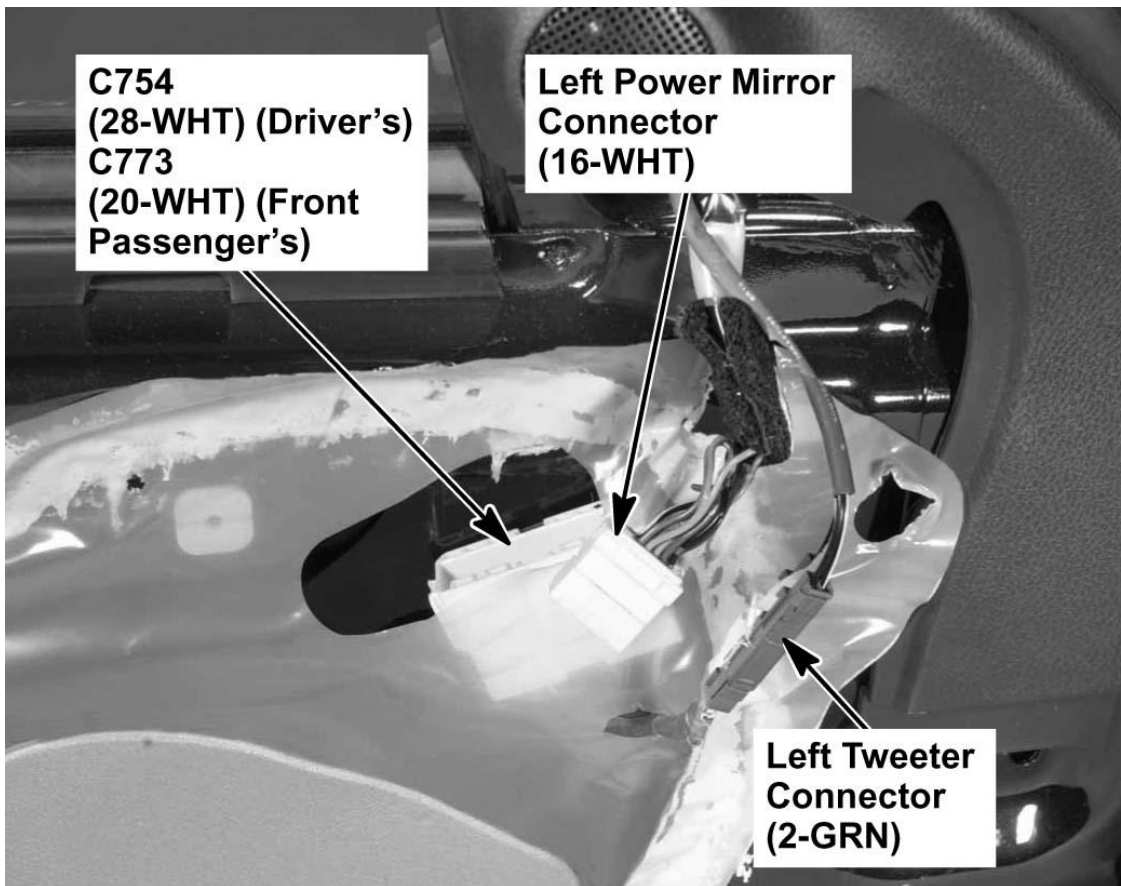

G00363583


**Fig. 129: Driver's Door (Front Passenger's Similar)**  
Courtesy of AMERICAN HONDA MOTOR CO., INC.

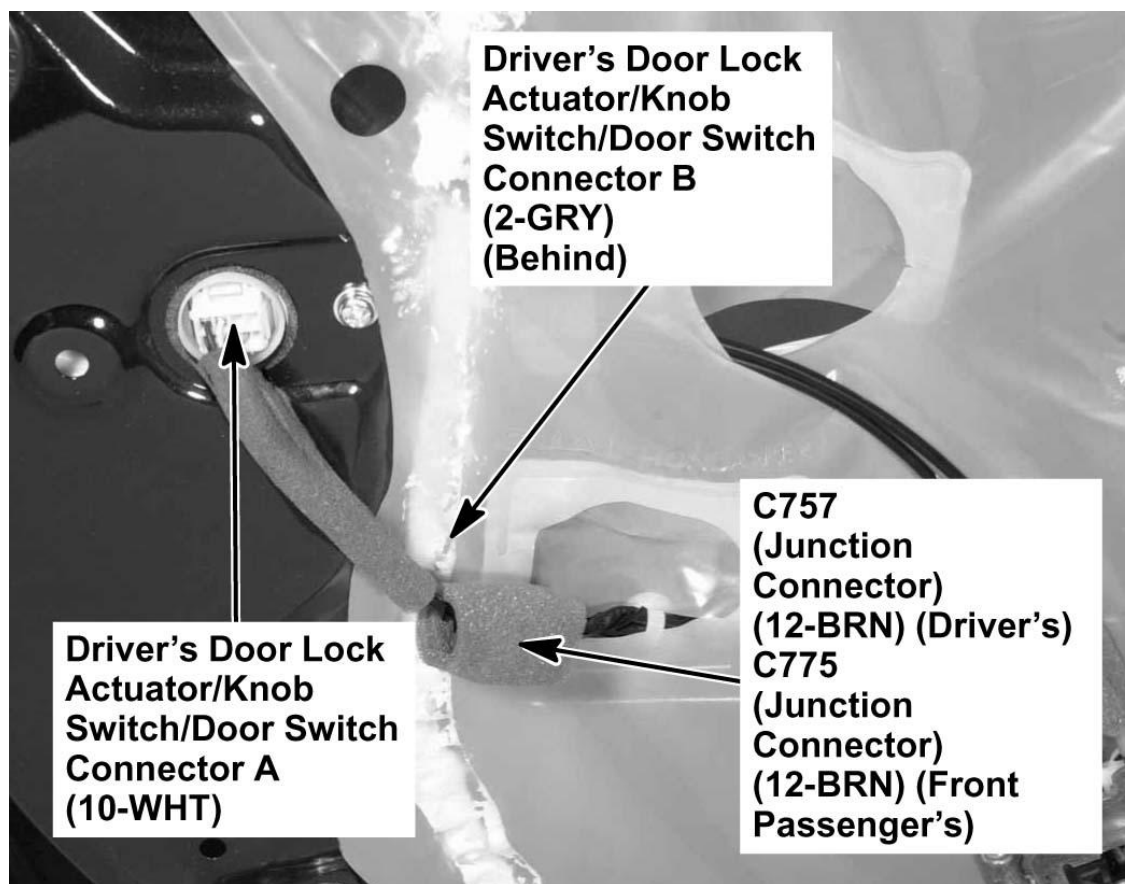

G00363584


**Fig. 130: Driver's Door (Front Passenger's Similar)**  
Courtesy of AMERICAN HONDA MOTOR CO., INC.



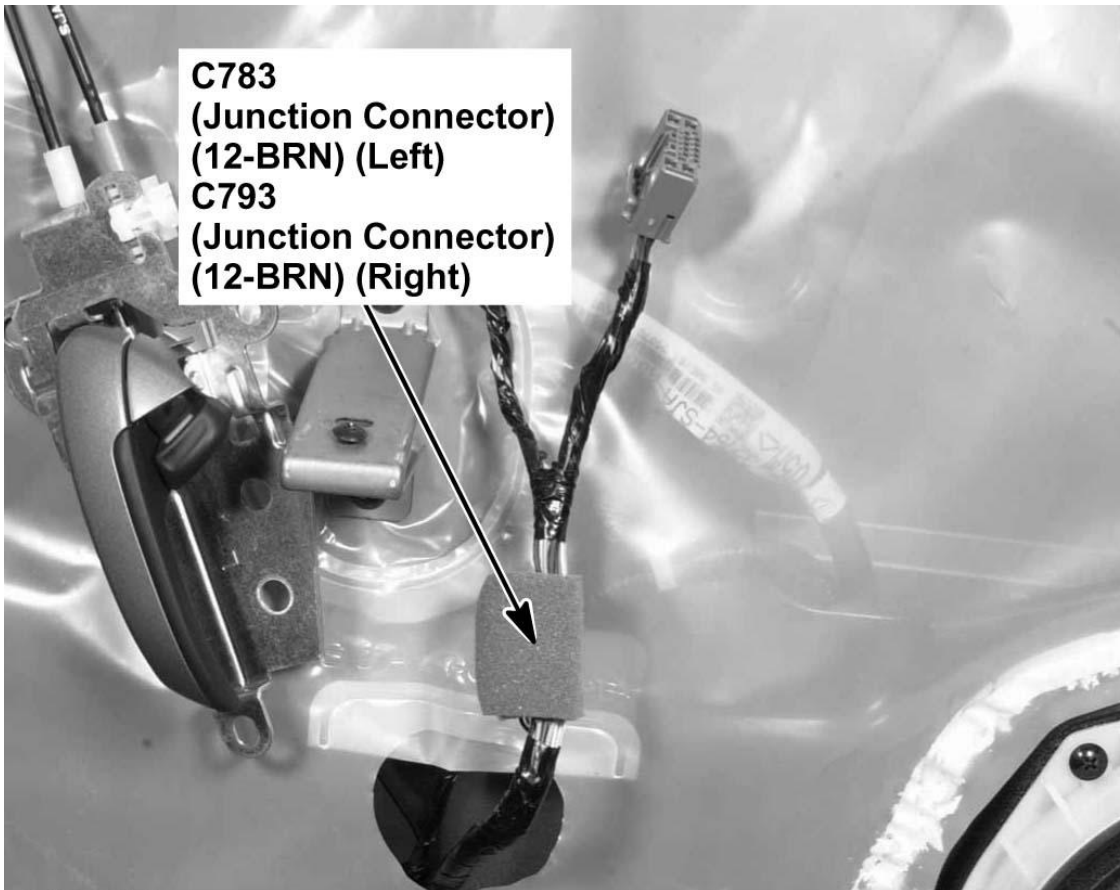

G00363585

**Fig. 131: Left Rear Door (Right Similar)**  
Courtesy of AMERICAN HONDA MOTOR CO., INC.

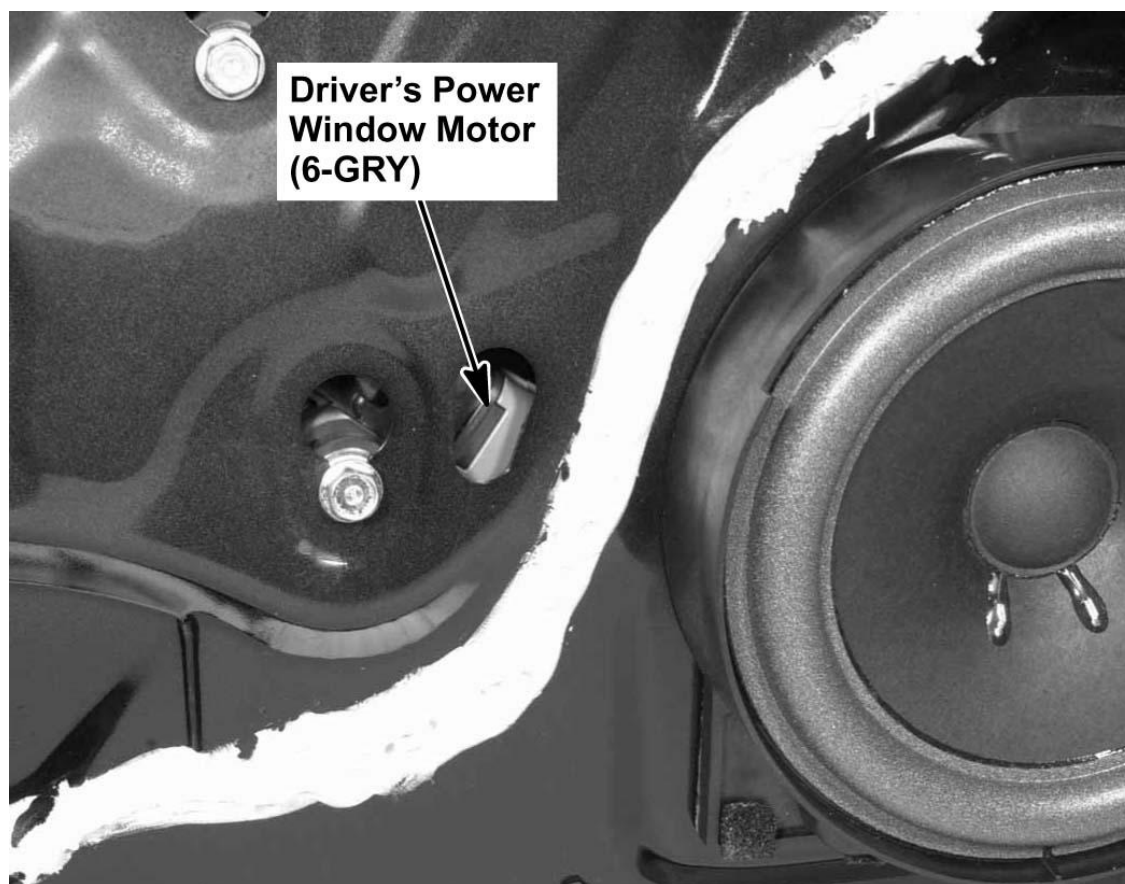


G00363586

**Fig. 132: Driver's Door (Front Passenger's Similar)**  
Courtesy of AMERICAN HONDA MOTOR CO., INC.



G00363587


**Fig. 133: Driver's Door (Front Passenger's Similar)**  
Courtesy of AMERICAN HONDA MOTOR CO., INC.

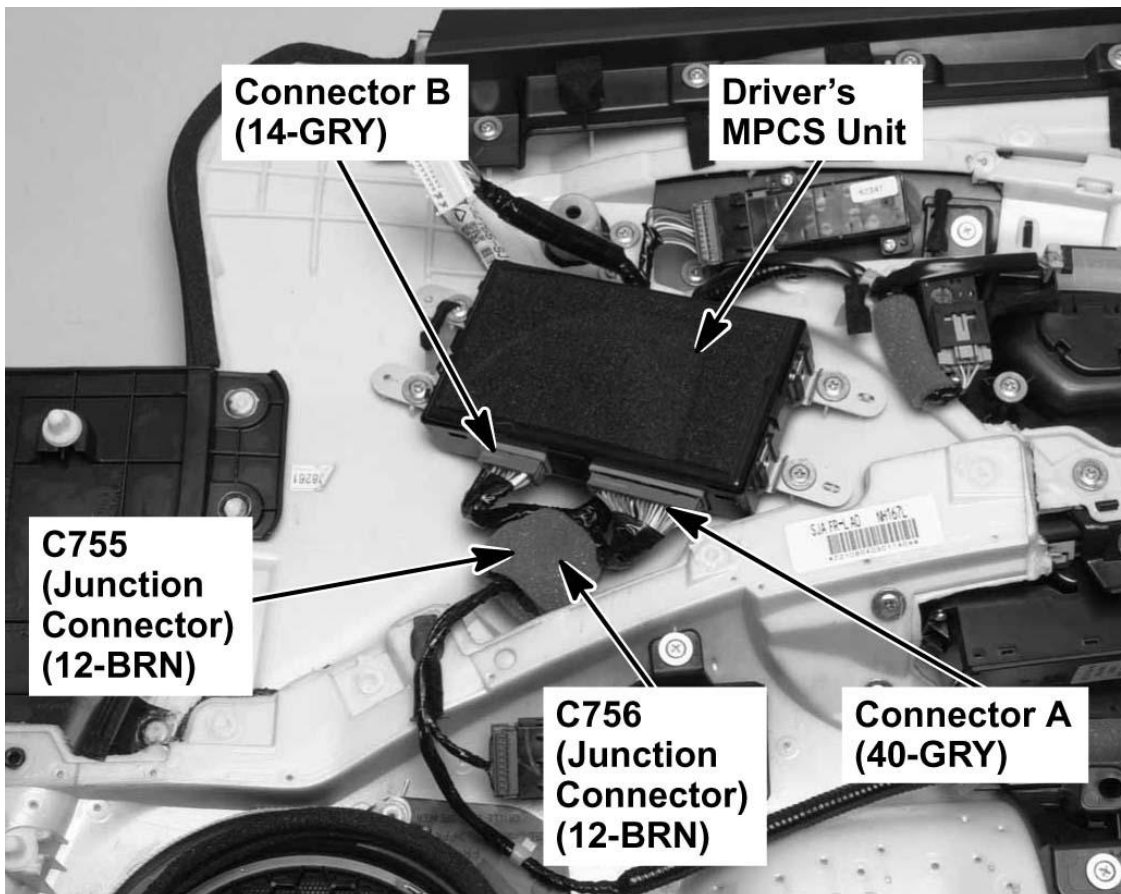

G00363588

**Fig. 134: Driver's Door**


Courtesy of AMERICAN HONDA MOTOR CO., INC.

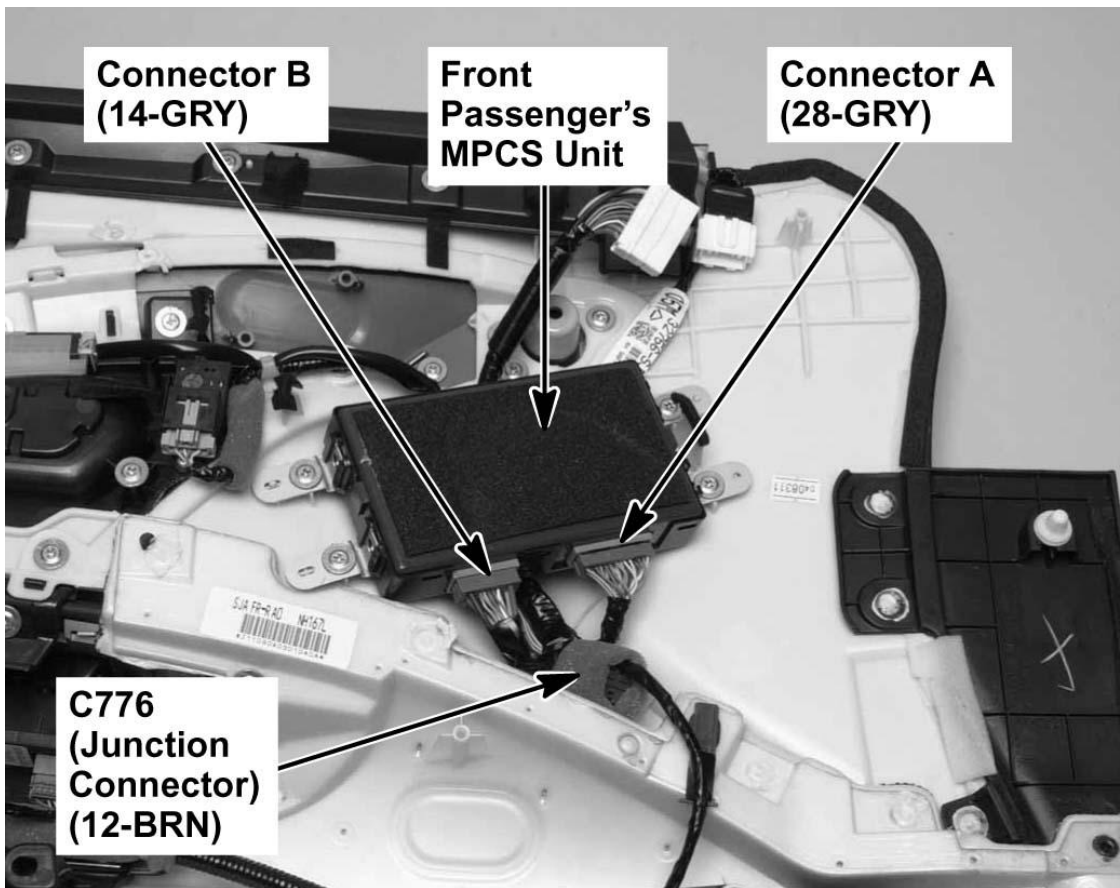

G00363589


**Fig. 135: Front Passenger's Door**  
Courtesy of AMERICAN HONDA MOTOR CO., INC.



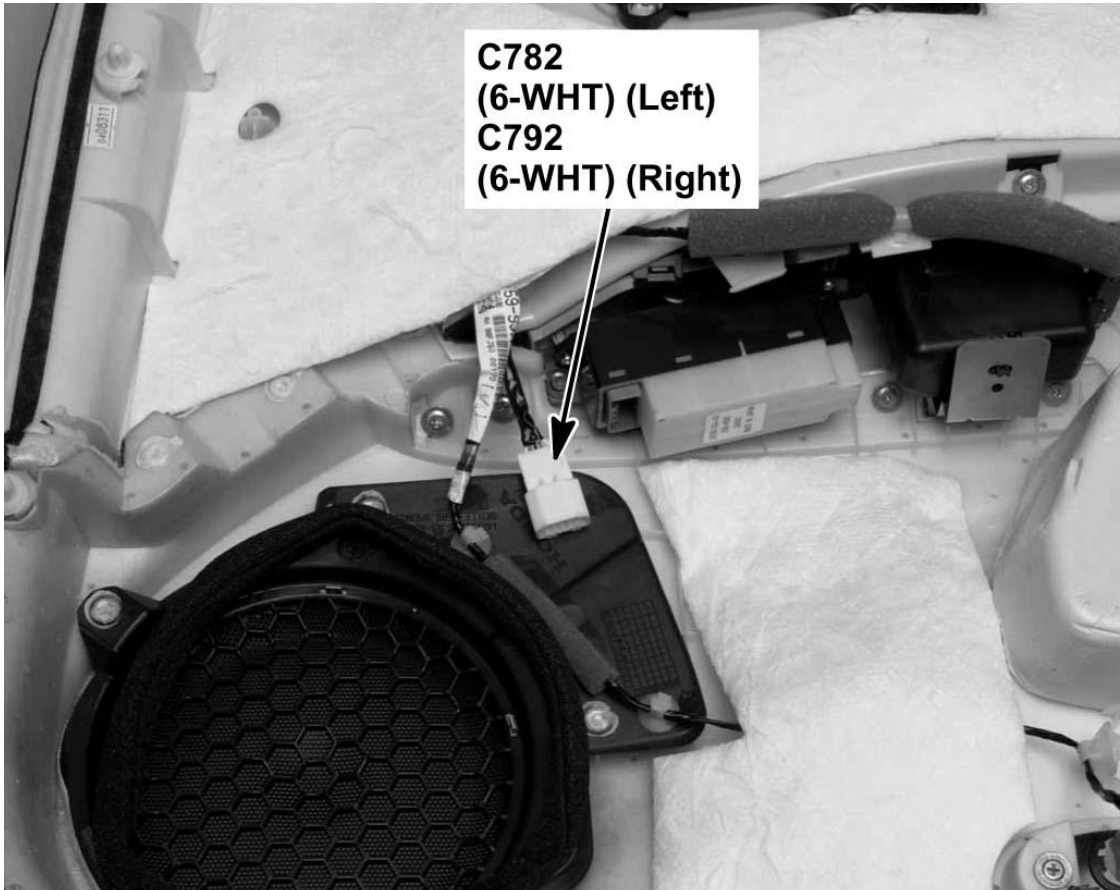

G00363590


**Fig. 136: Left Rear Door (Right Similar)**  
**Courtesy of AMERICAN HONDA MOTOR CO., INC.**

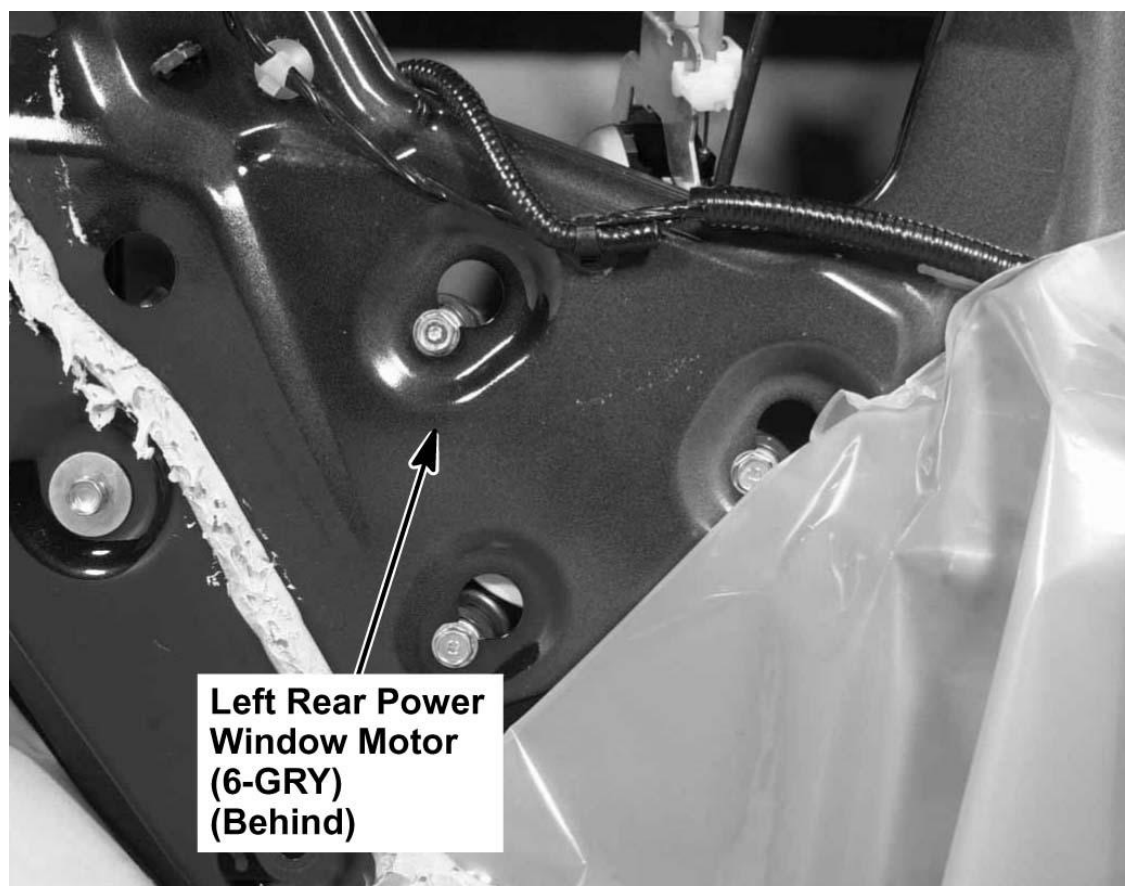

G00363591

**Fig. 137: Left Rear Door (Right Similar)**


Courtesy of AMERICAN HONDA MOTOR CO., INC.

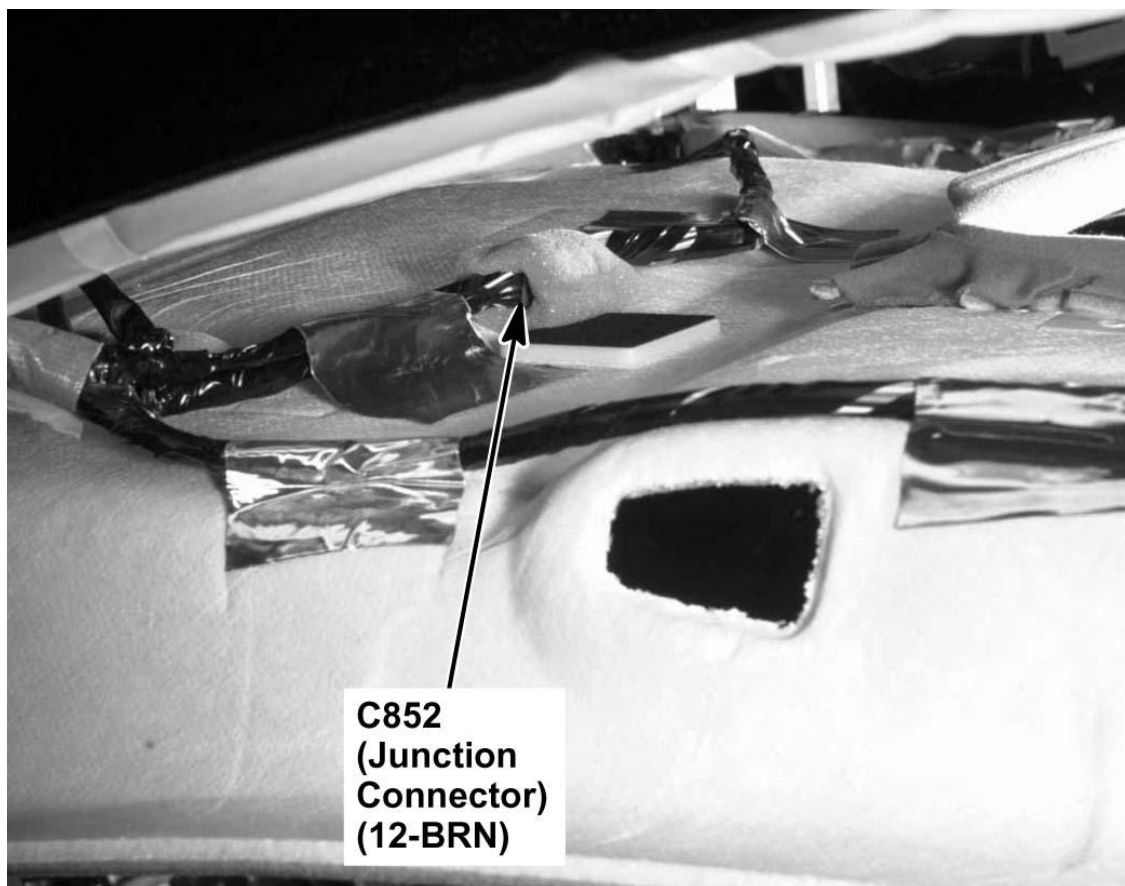

G00363593

**Fig. 138: Left Front Of Roof**


Courtesy of AMERICAN HONDA MOTOR CO., INC.

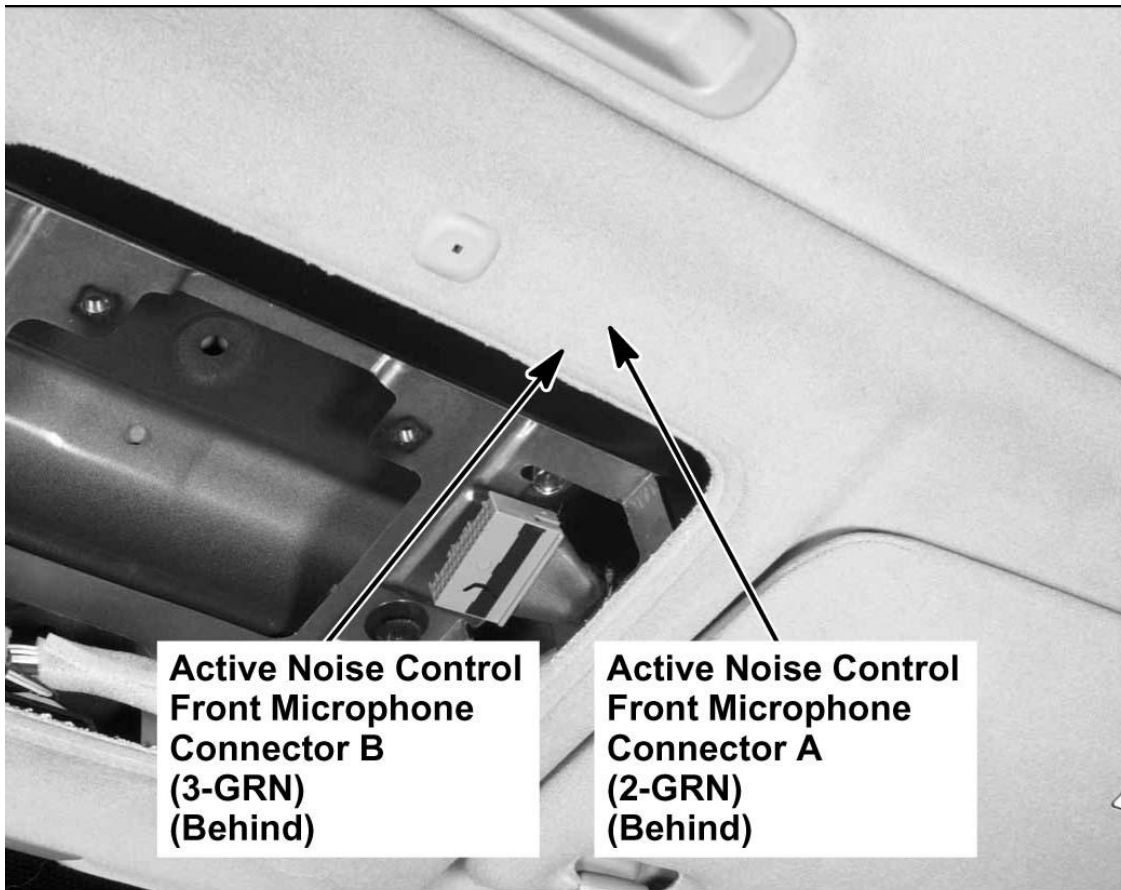

G00363594

**Fig. 139: Front Of Roof**

Courtesy of AMERICAN HONDA MOTOR CO., INC.

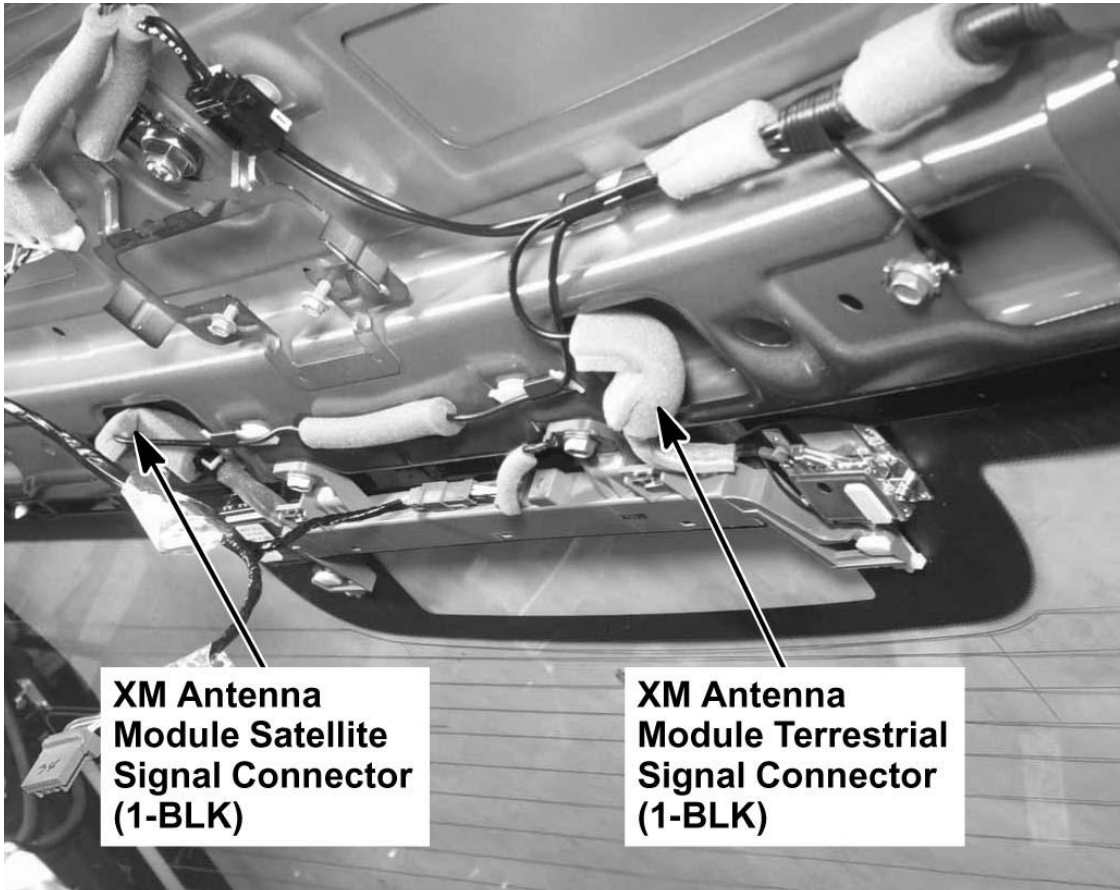


G00363595

**Fig. 140: Rear Of Roof (USA)**

Courtesy of AMERICAN HONDA MOTOR CO., INC.




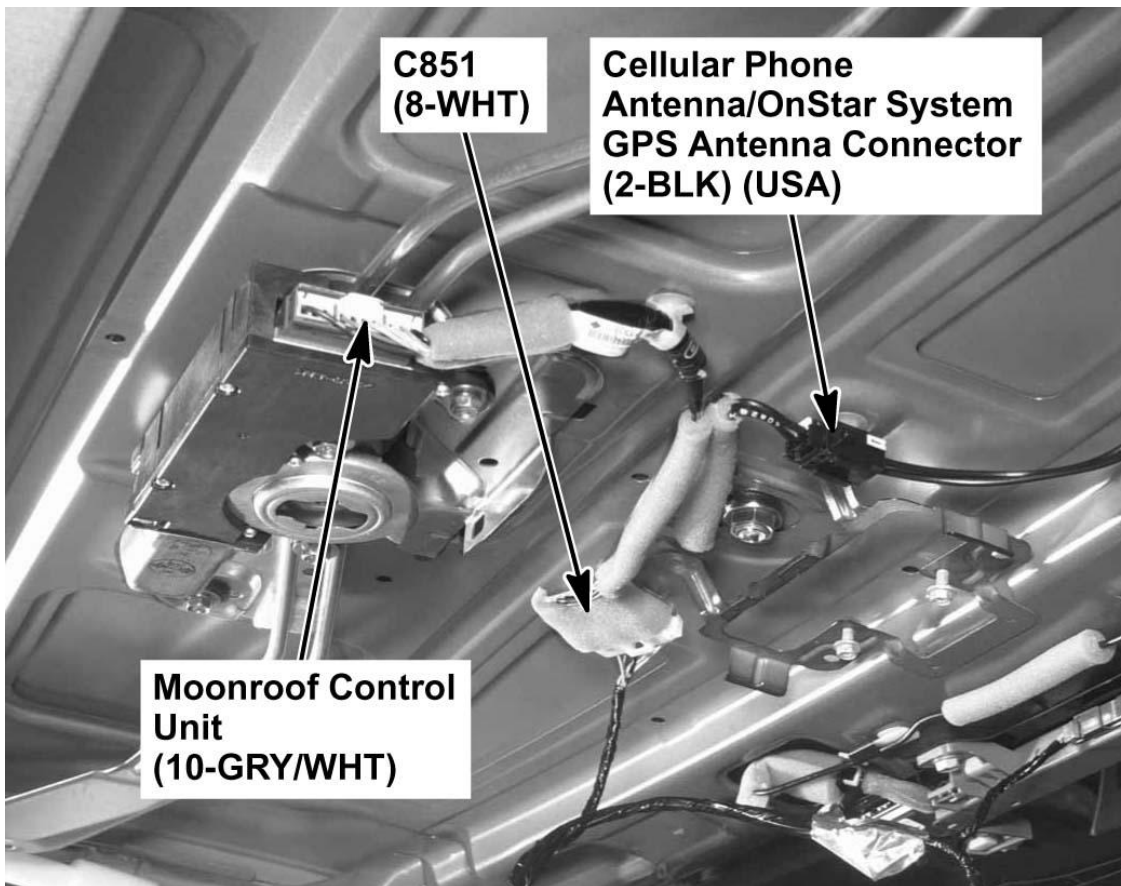

G00363596


**Fig. 141: Rear Of Roof**

Courtesy of AMERICAN HONDA MOTOR CO., INC.

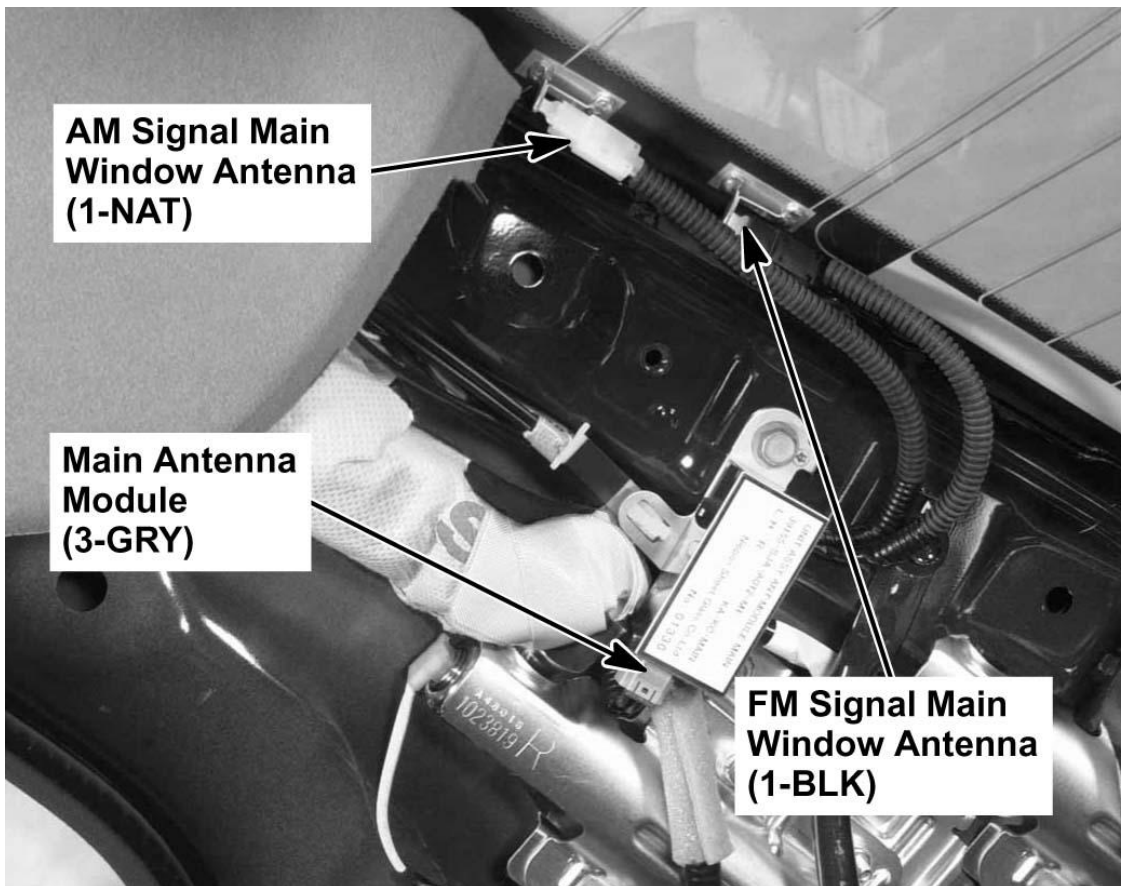

G00363597


**Fig. 142: Right "C" Pillar**  
Courtesy of AMERICAN HONDA MOTOR CO., INC.

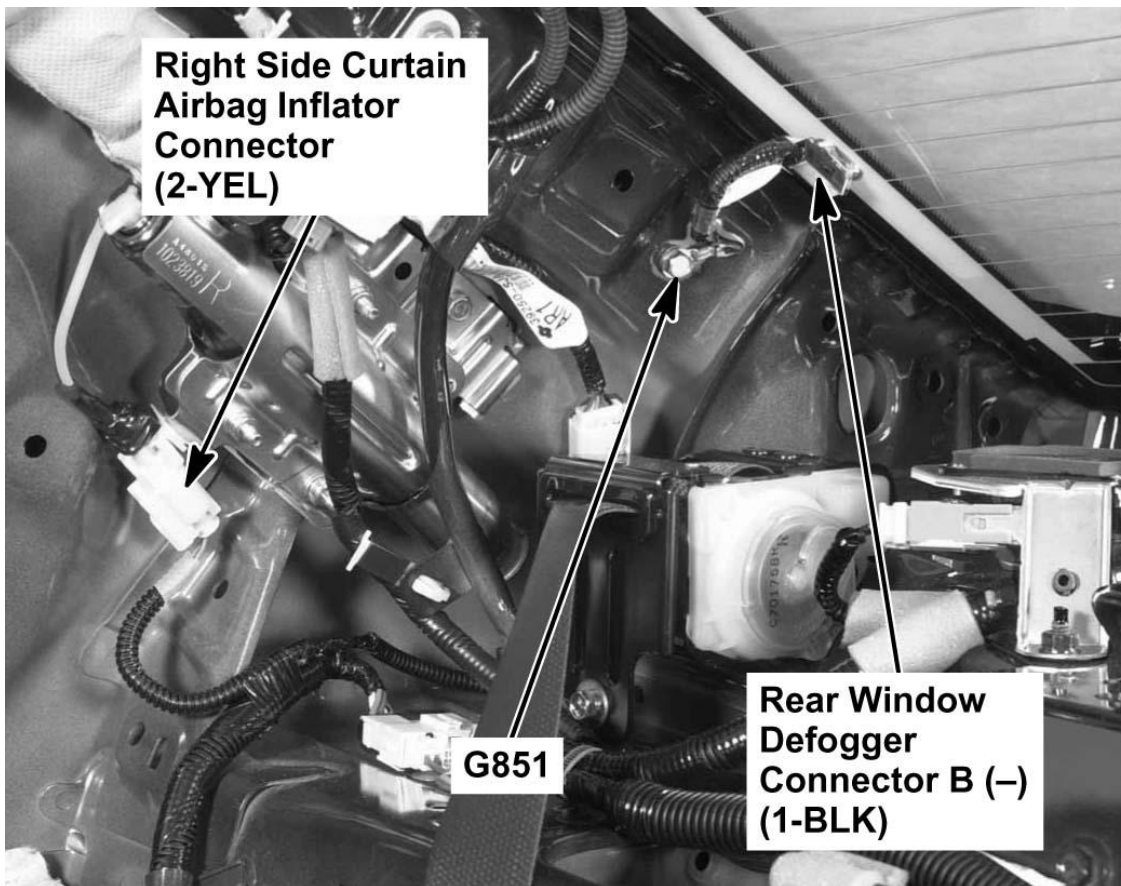

G00363598

**Fig. 143: Right "C" Pillar**

Courtesy of AMERICAN HONDA MOTOR CO., INC.

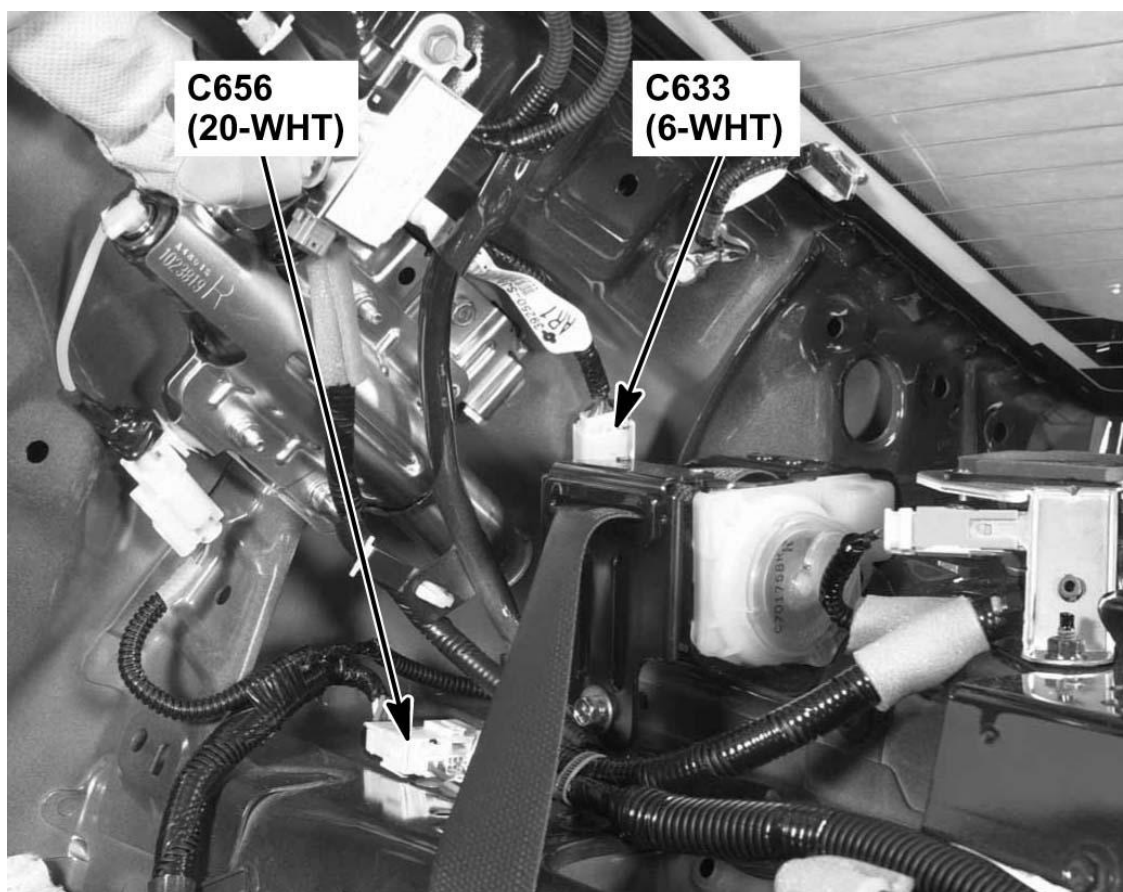


G00363599

**Fig. 144: Right "C" Pillar**

Courtesy of AMERICAN HONDA MOTOR CO., INC.



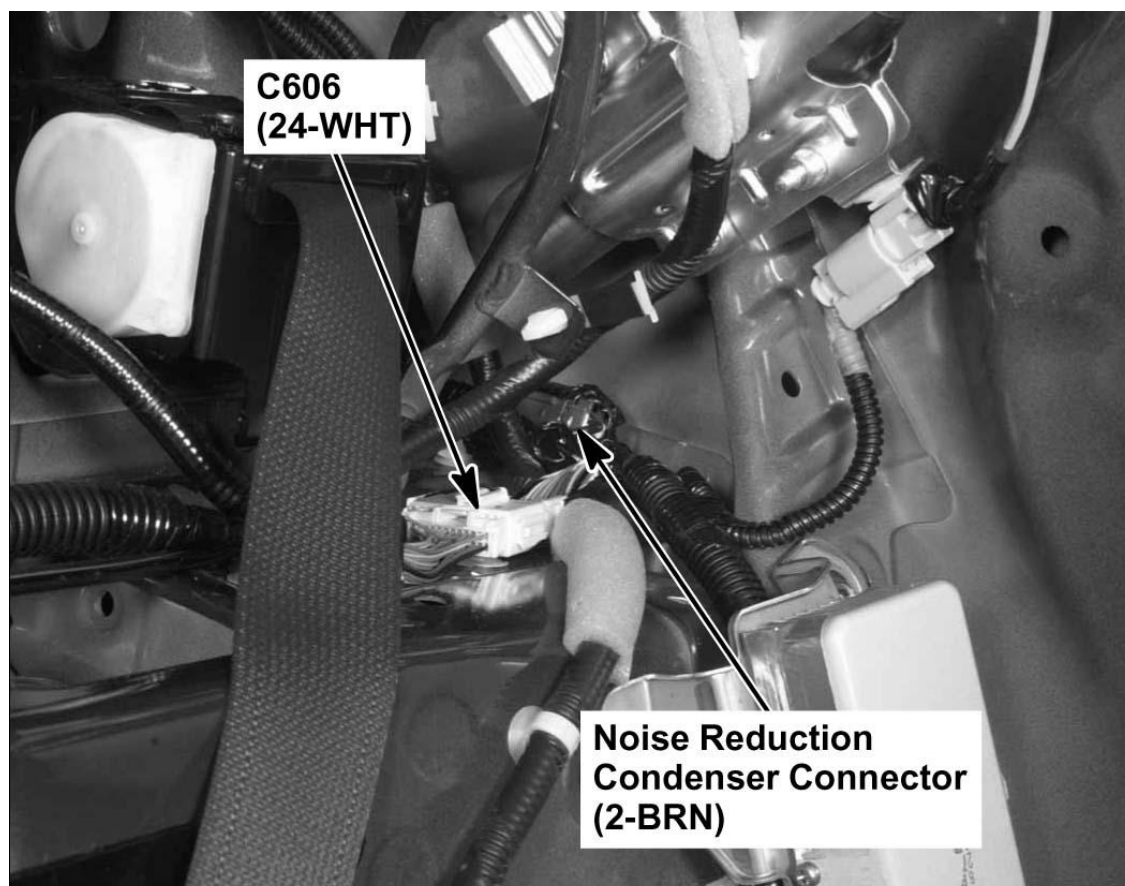


G00363600

**Fig. 145: Left "C" Pillar**


Courtesy of AMERICAN HONDA MOTOR CO., INC.



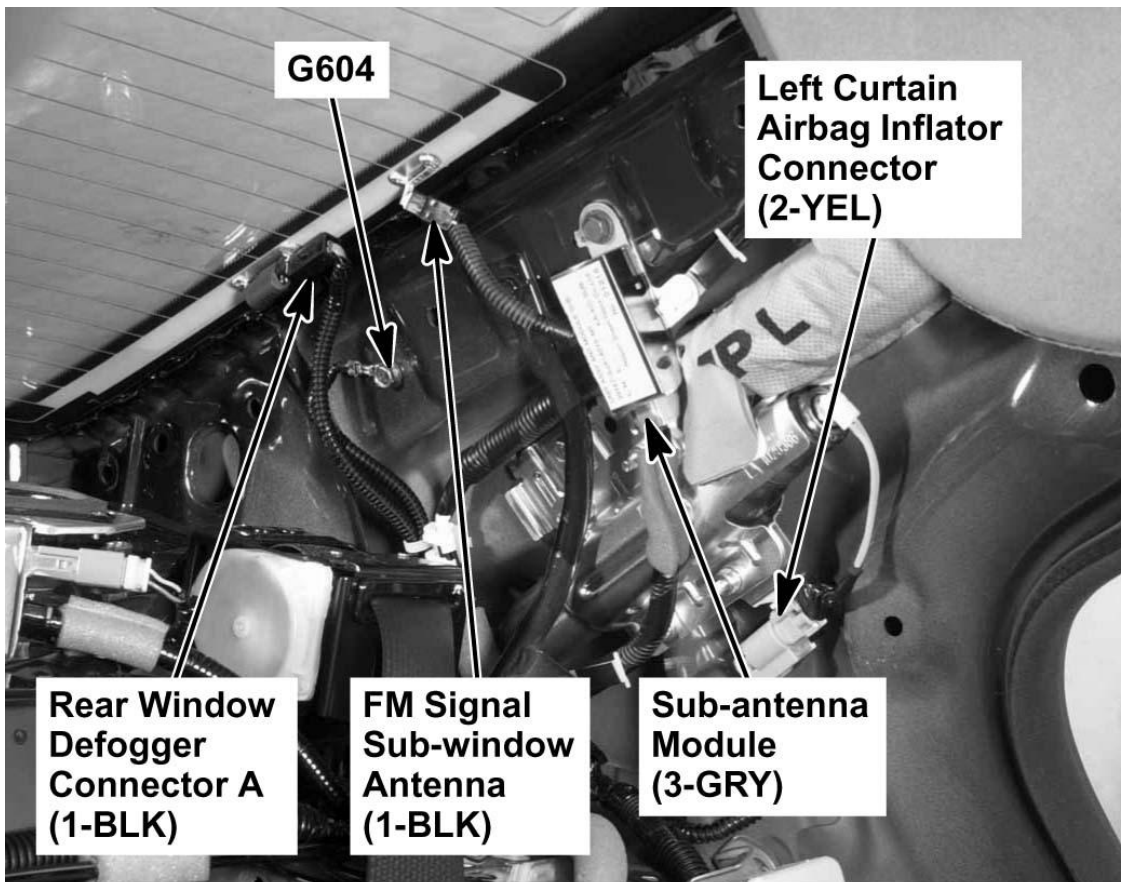


G00363601

**Fig. 146: Left "C" Pillar**  
Courtesy of AMERICAN HONDA MOTOR CO., INC.

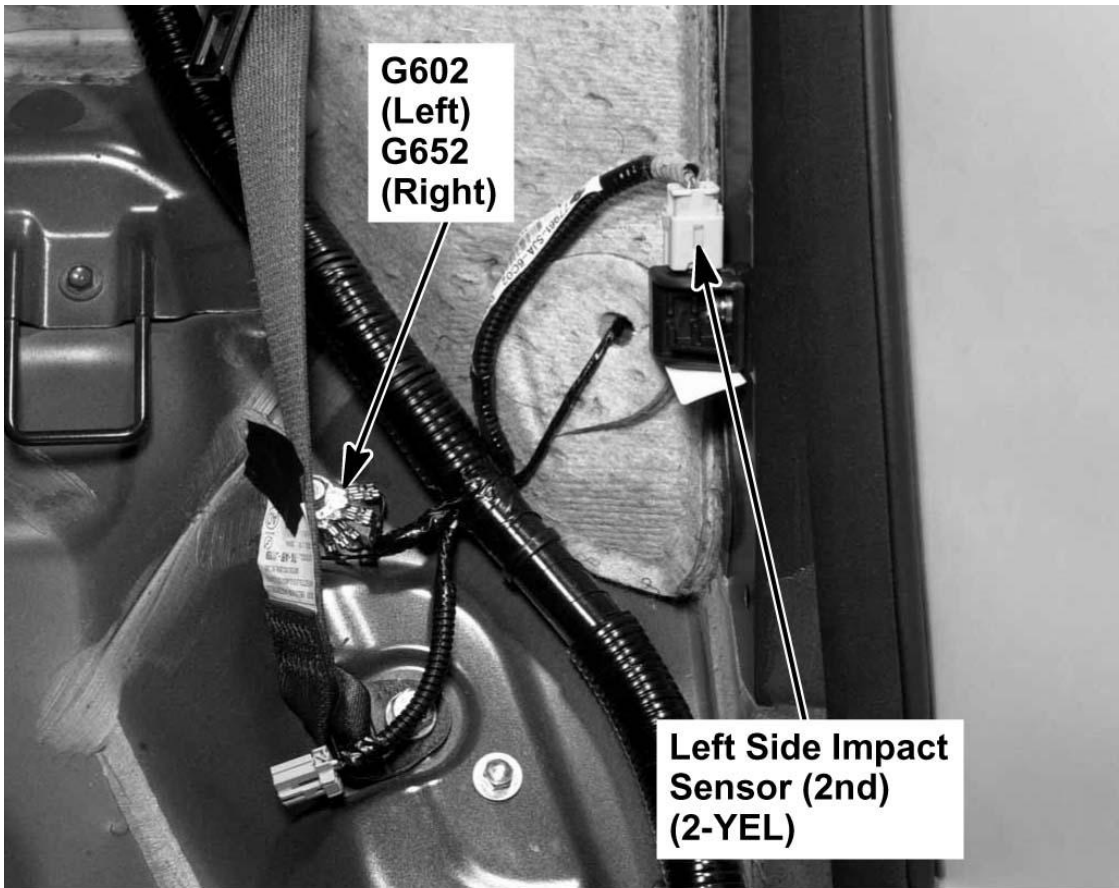

G00363602


**Fig. 147: Left "C" Pillar (Right Similar)**  
Courtesy of AMERICAN HONDA MOTOR CO., INC.

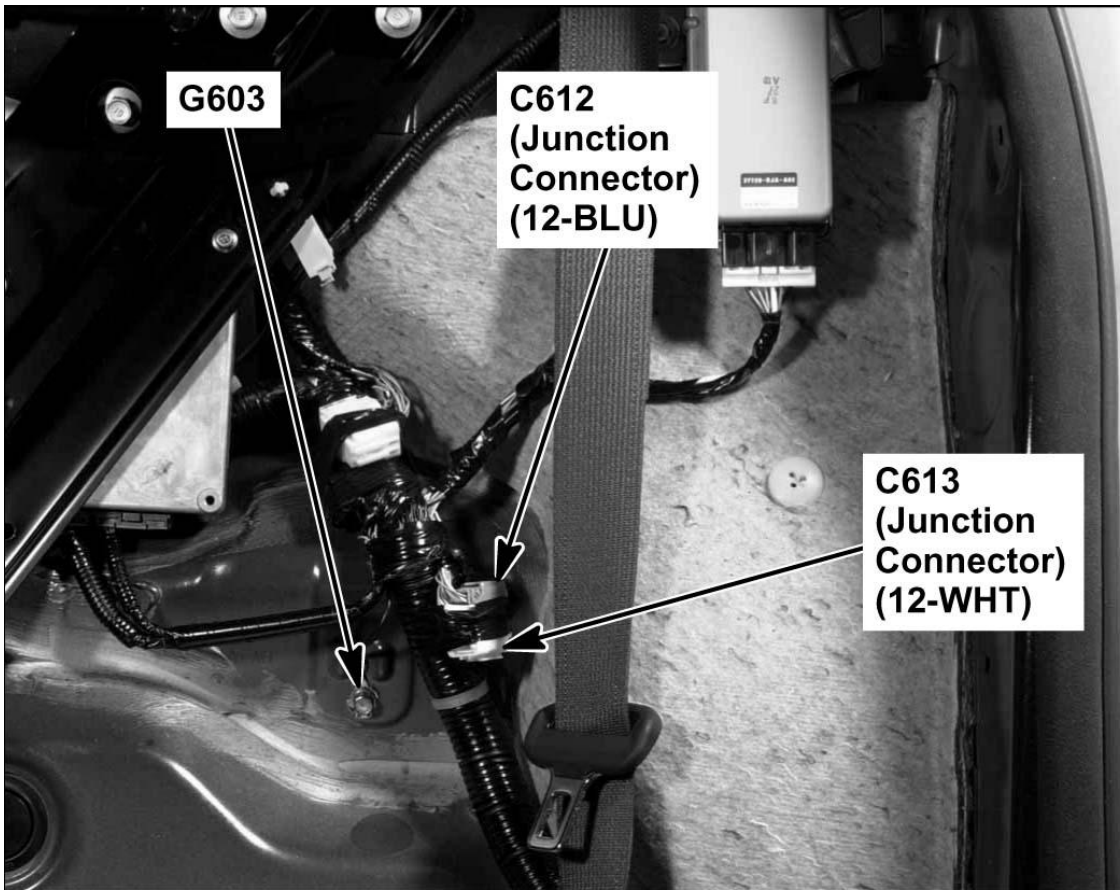

G00363603

**Fig. 148: Left "C" Pillar**

Courtesy of AMERICAN HONDA MOTOR CO., INC.

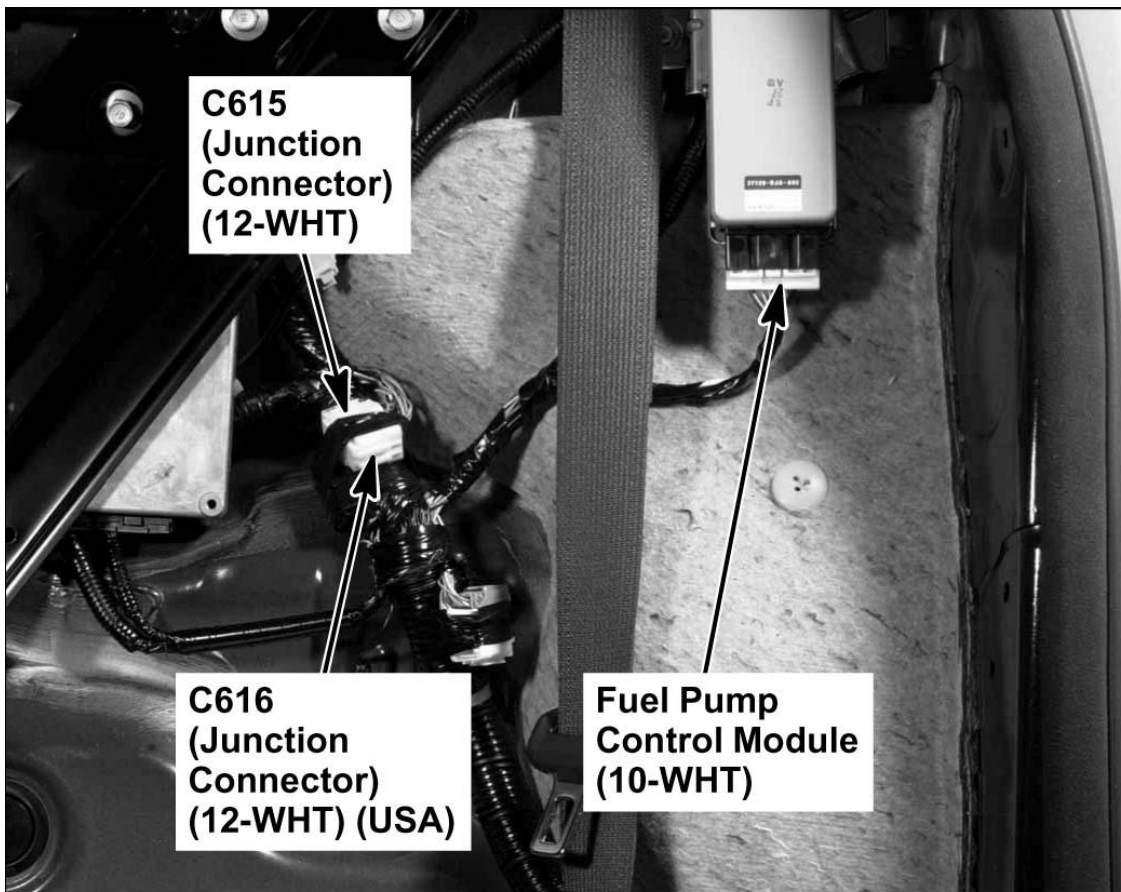

G00363604

**Fig. 149: Left "C" Pillar**

Courtesy of AMERICAN HONDA MOTOR CO., INC.






G00363605

**Fig. 150: Behind Rear Seat**  
Courtesy of AMERICAN HONDA MOTOR CO., INC.




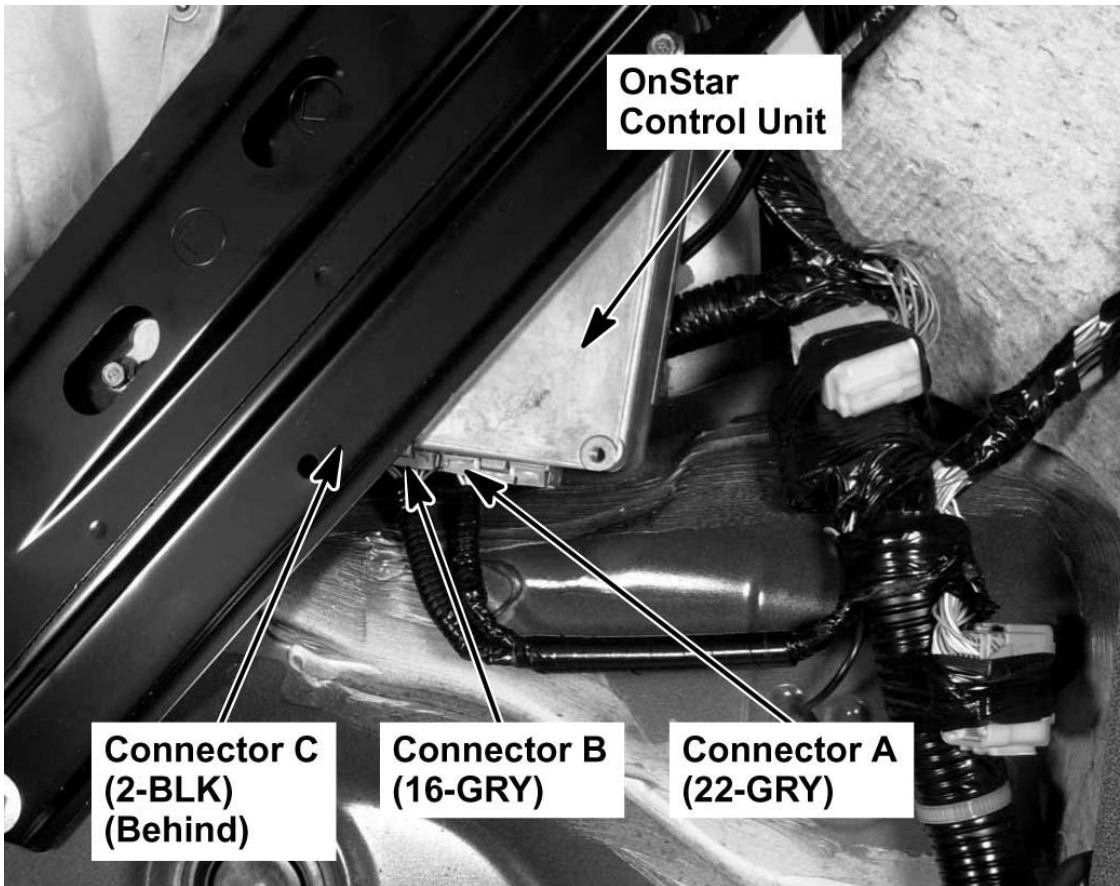

G00363606


**Fig. 151: Behind Rear Seat (USA)**

Courtesy of AMERICAN HONDA MOTOR CO., INC.

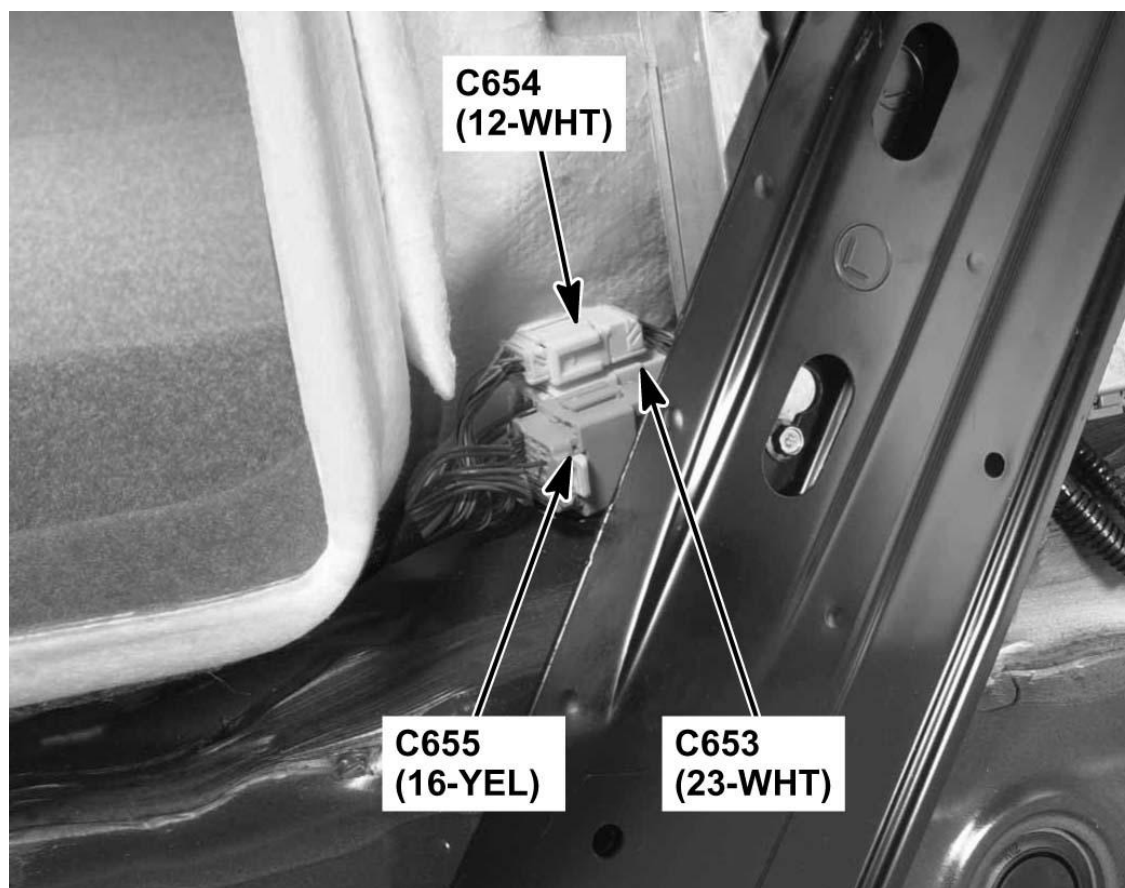

G00363607


**Fig. 152: Behind Rear Seat**  
Courtesy of AMERICAN HONDA MOTOR CO., INC.

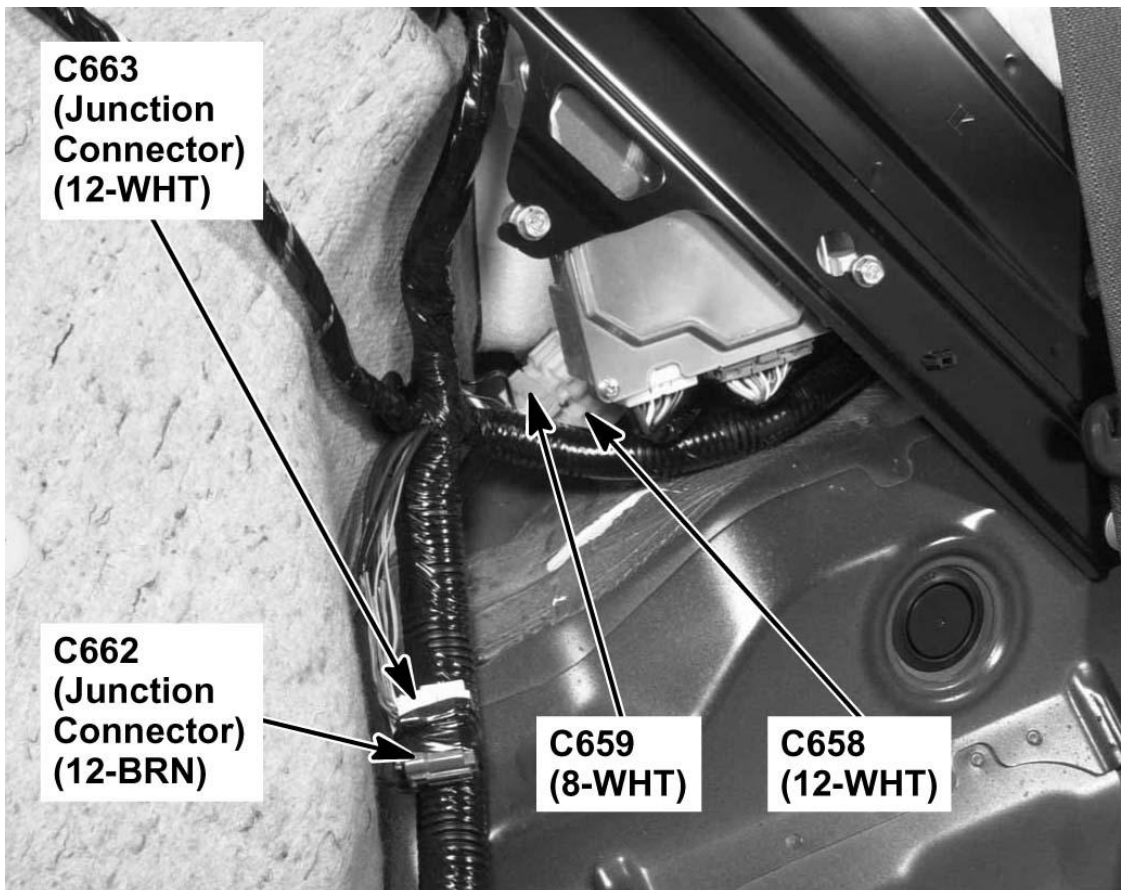

G00363608

**Fig. 153: Behind Rear Seat**


Courtesy of AMERICAN HONDA MOTOR CO., INC.

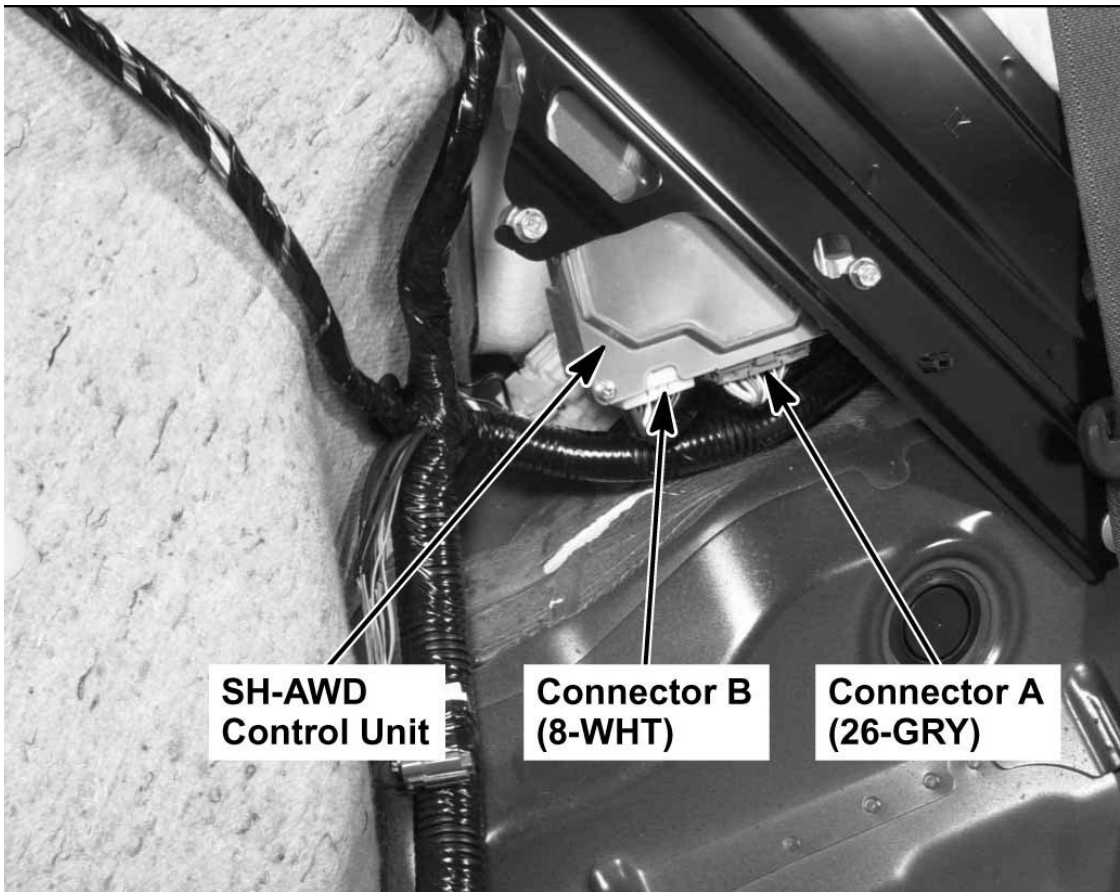

G00363609

**Fig. 154: Behind Rear Seat**  
Courtesy of AMERICAN HONDA MOTOR CO., INC.




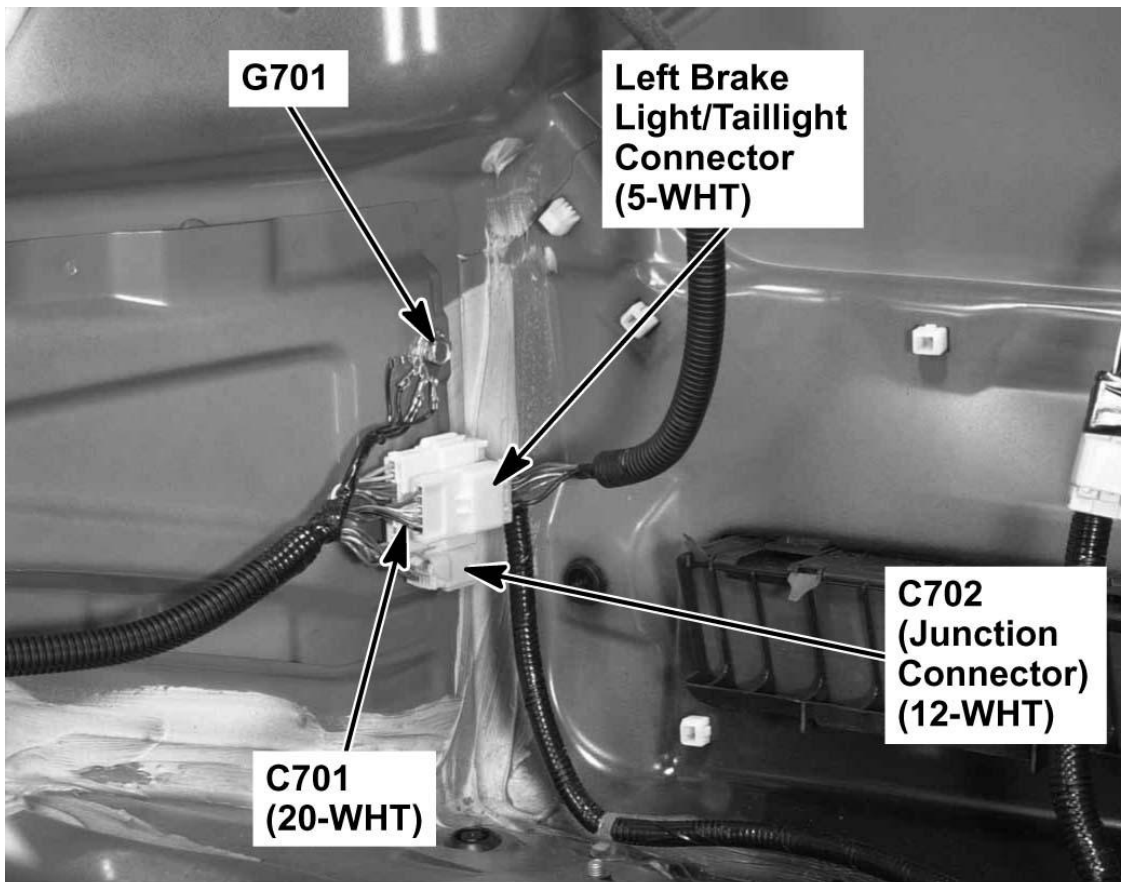

G00363610


**Fig. 155: Left Side Of Trunk**  
Courtesy of AMERICAN HONDA MOTOR CO., INC.



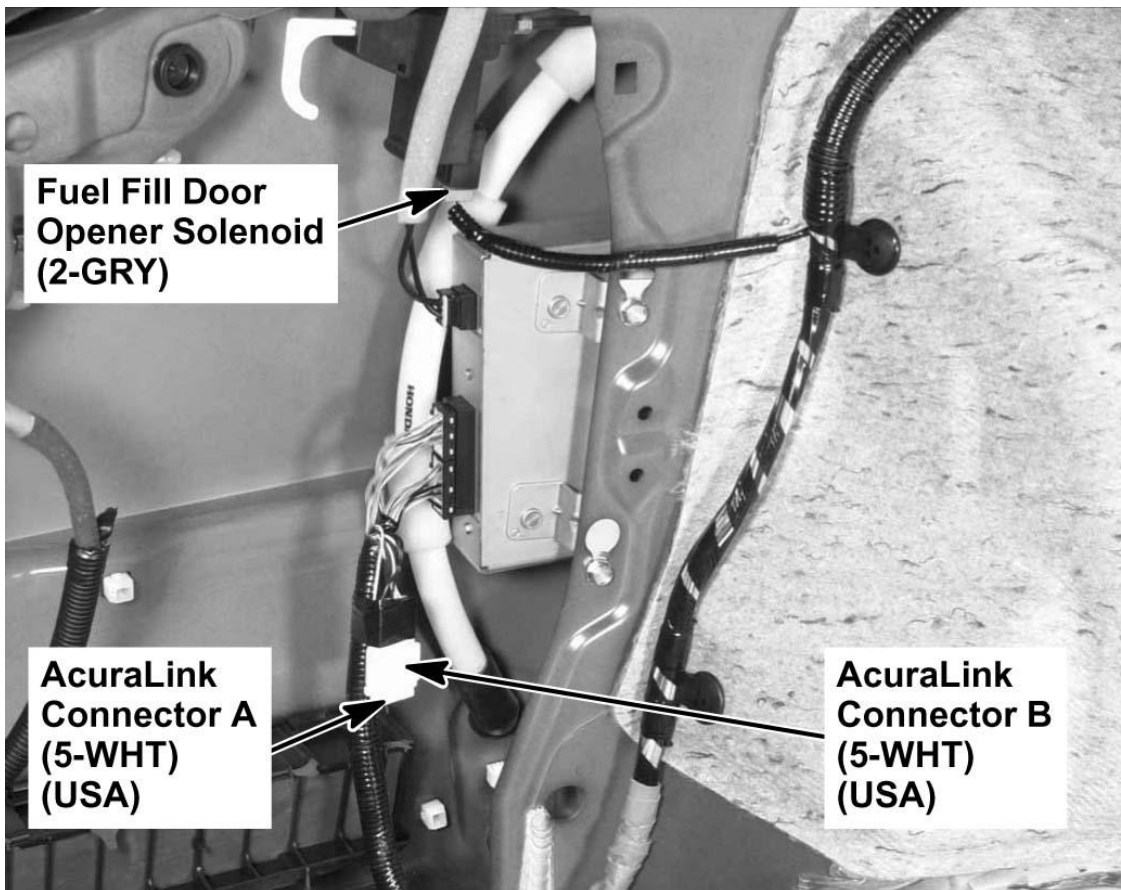


G00363611

**Fig. 156: Left Side Of Trunk**  
Courtesy of AMERICAN HONDA MOTOR CO., INC.

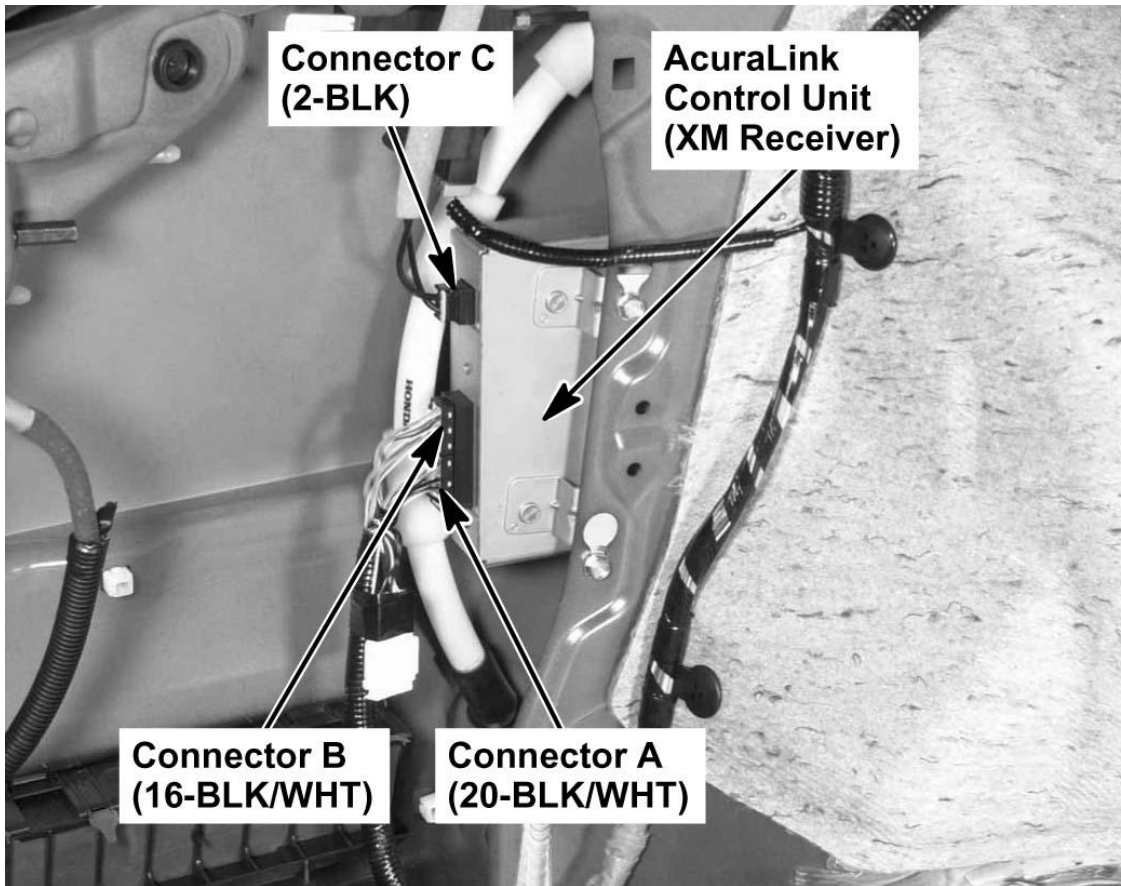

G00363612


**Fig. 157: Left Side Of Trunk (USA)**  
Courtesy of AMERICAN HONDA MOTOR CO., INC.

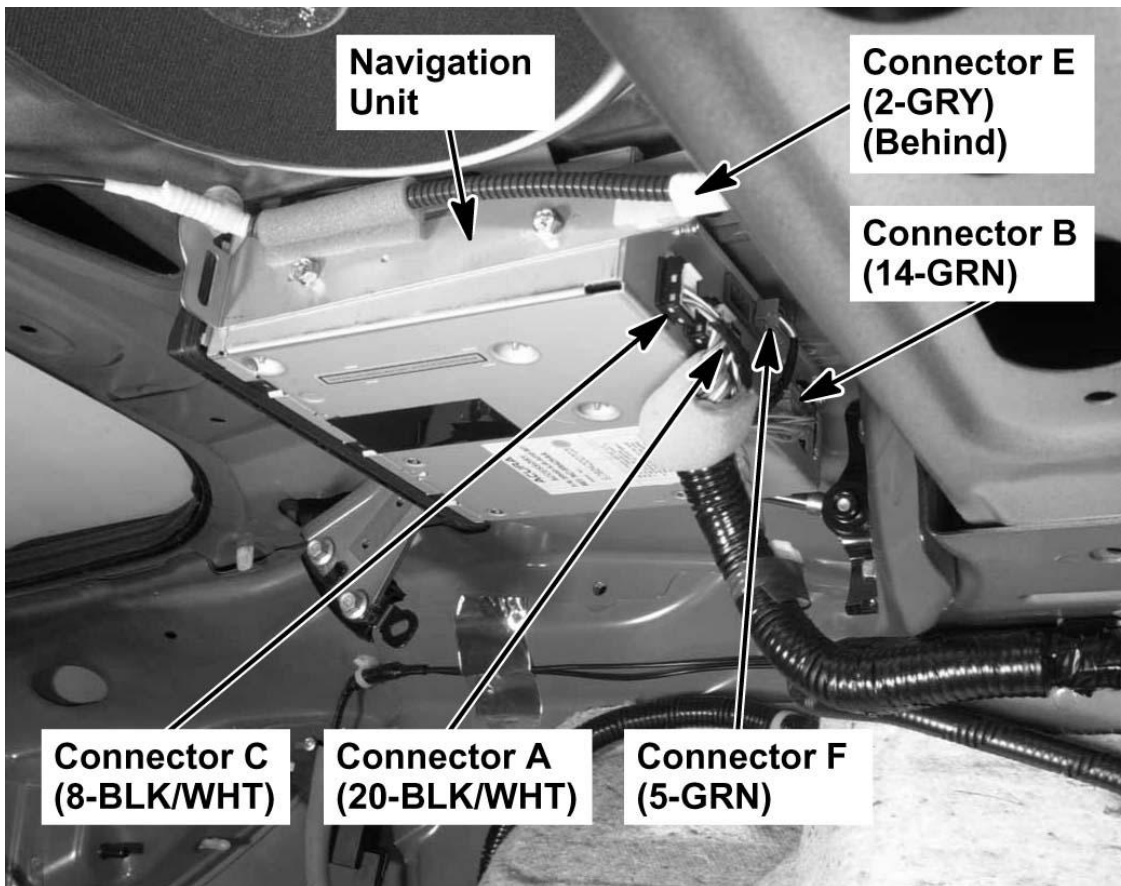

G00363613

**Fig. 158: Left Side Of Rear Shelf**

Courtesy of AMERICAN HONDA MOTOR CO., INC.

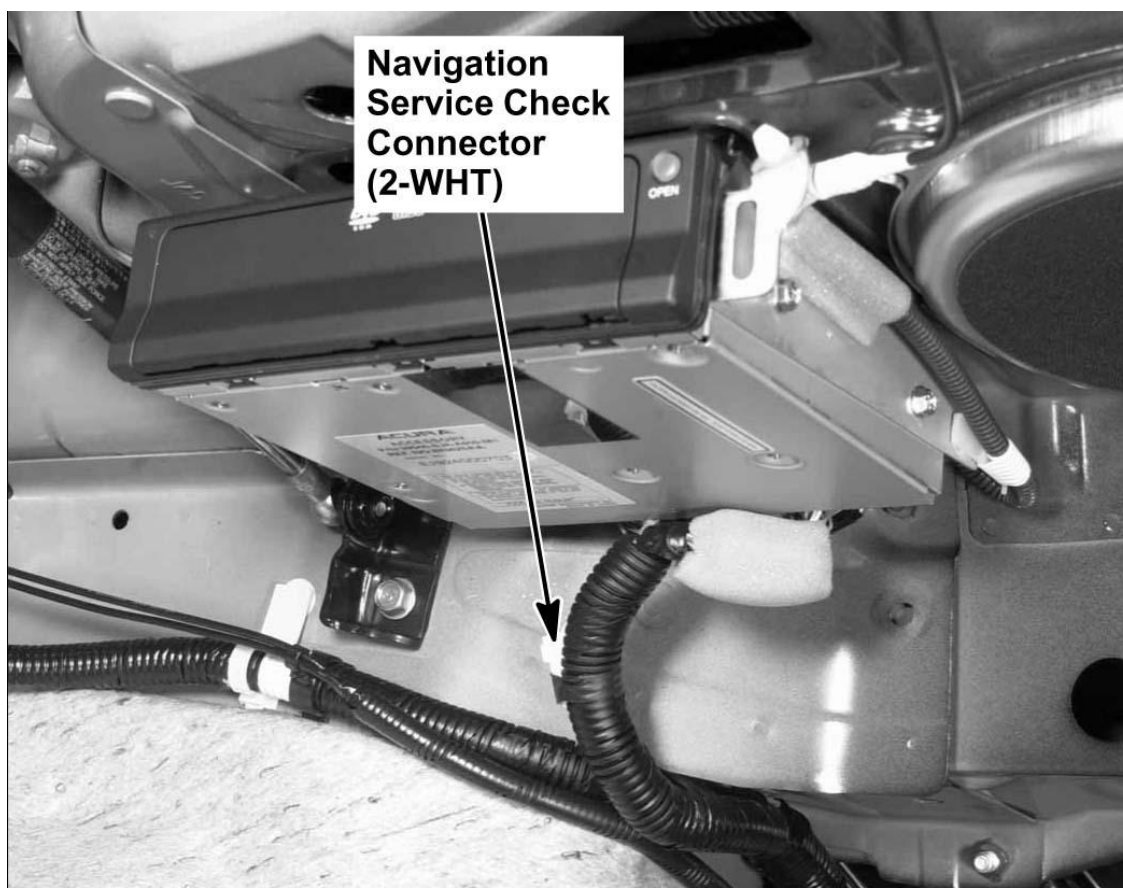


G00363614

**Fig. 159: Left Side Of Rear Shelf**

Courtesy of AMERICAN HONDA MOTOR CO., INC.



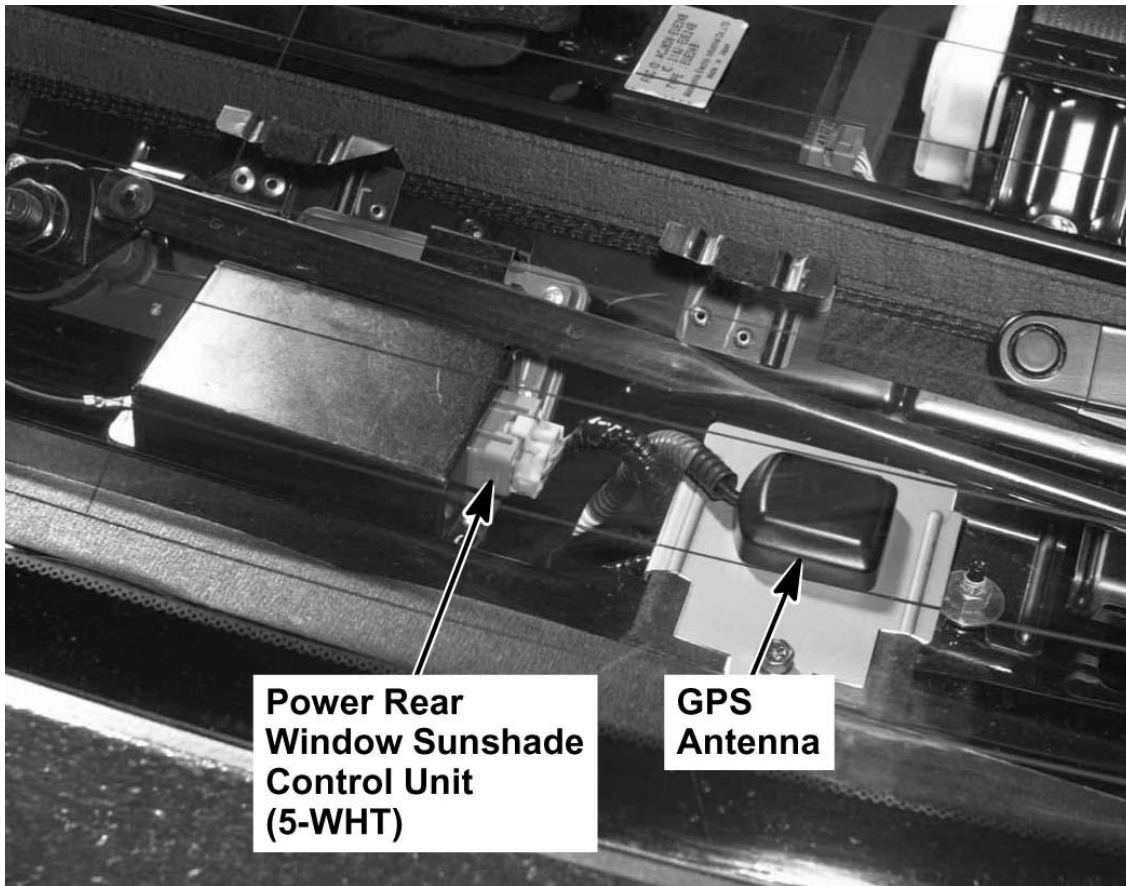

G00363615

**Fig. 160: Middle Of Rear Shelf**

Courtesy of AMERICAN HONDA MOTOR CO., INC.






G00363616

**Fig. 161: Middle Of Rear Shelf**


Courtesy of AMERICAN HONDA MOTOR CO., INC.

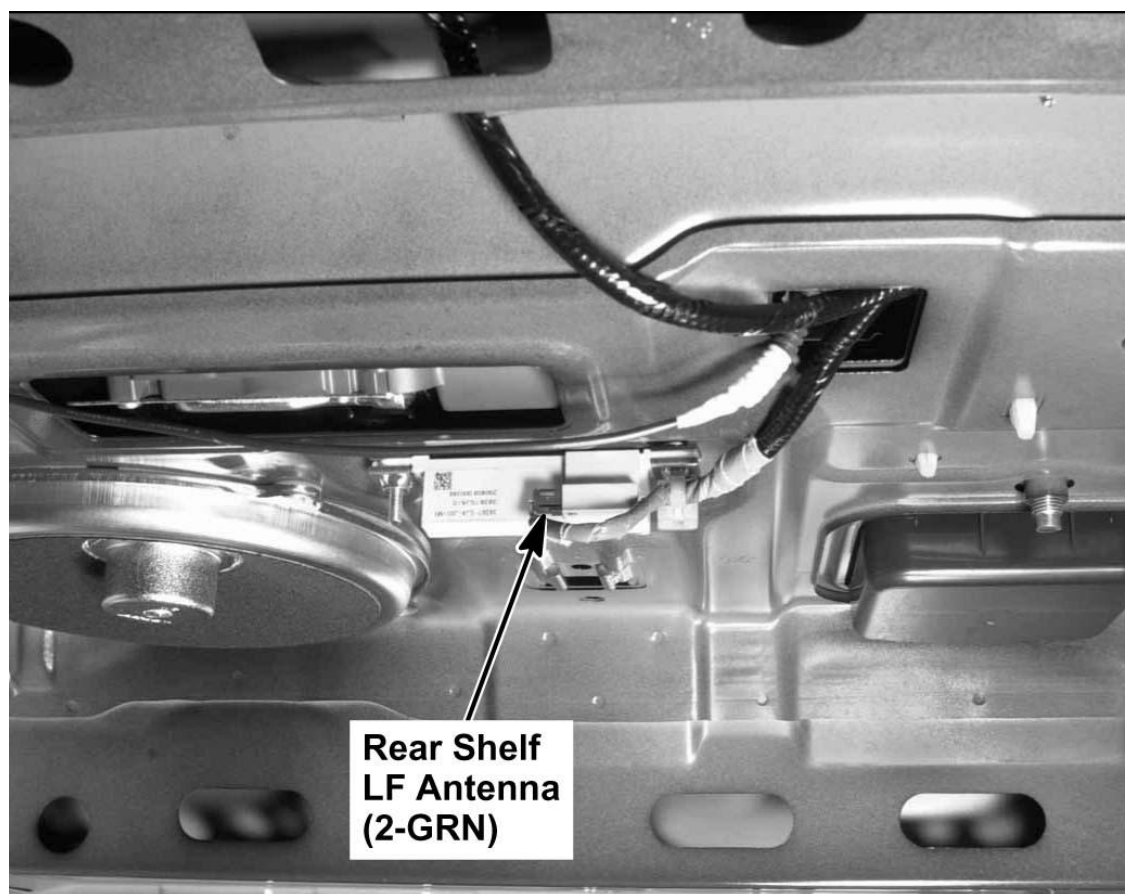

G00363617

**Fig. 162: Middle Of Rear Shelf**


Courtesy of AMERICAN HONDA MOTOR CO., INC.

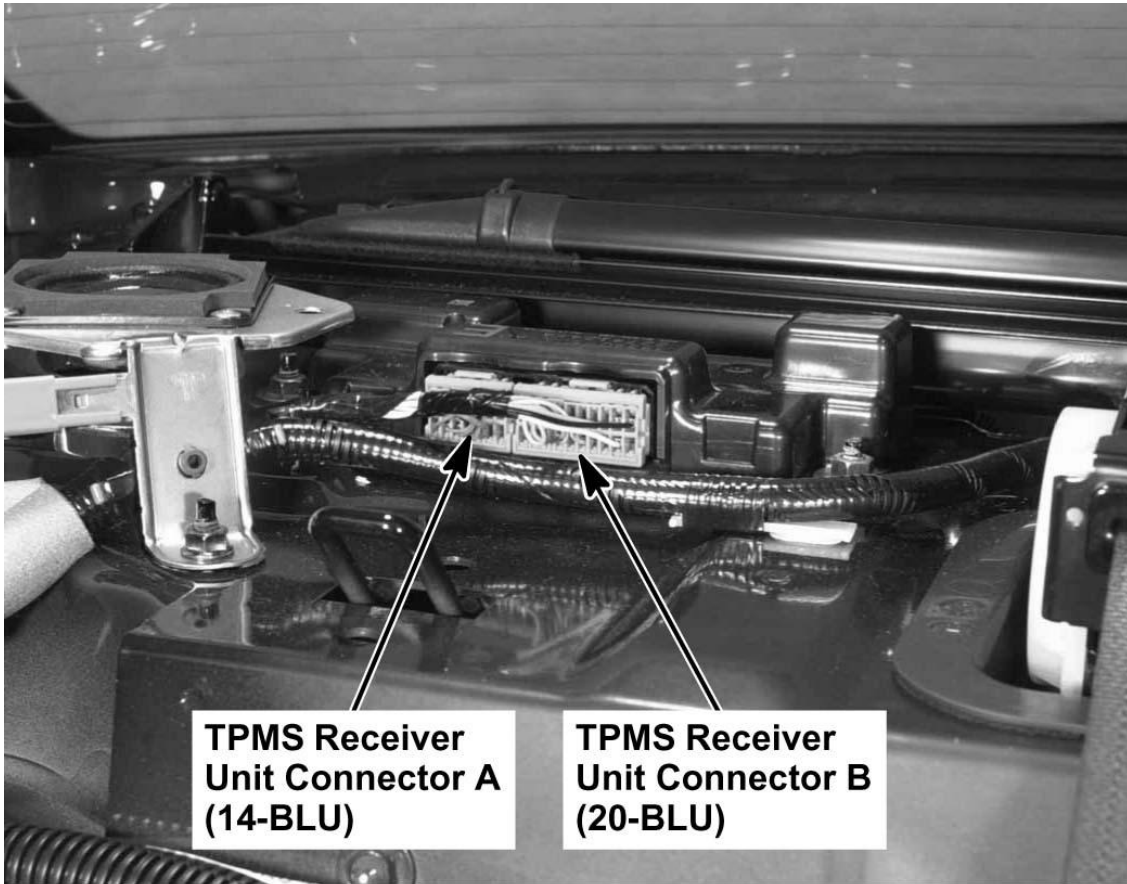

G00363618


**Fig. 163: Right Side Of Rear Shelf**

Courtesy of AMERICAN HONDA MOTOR CO., INC.

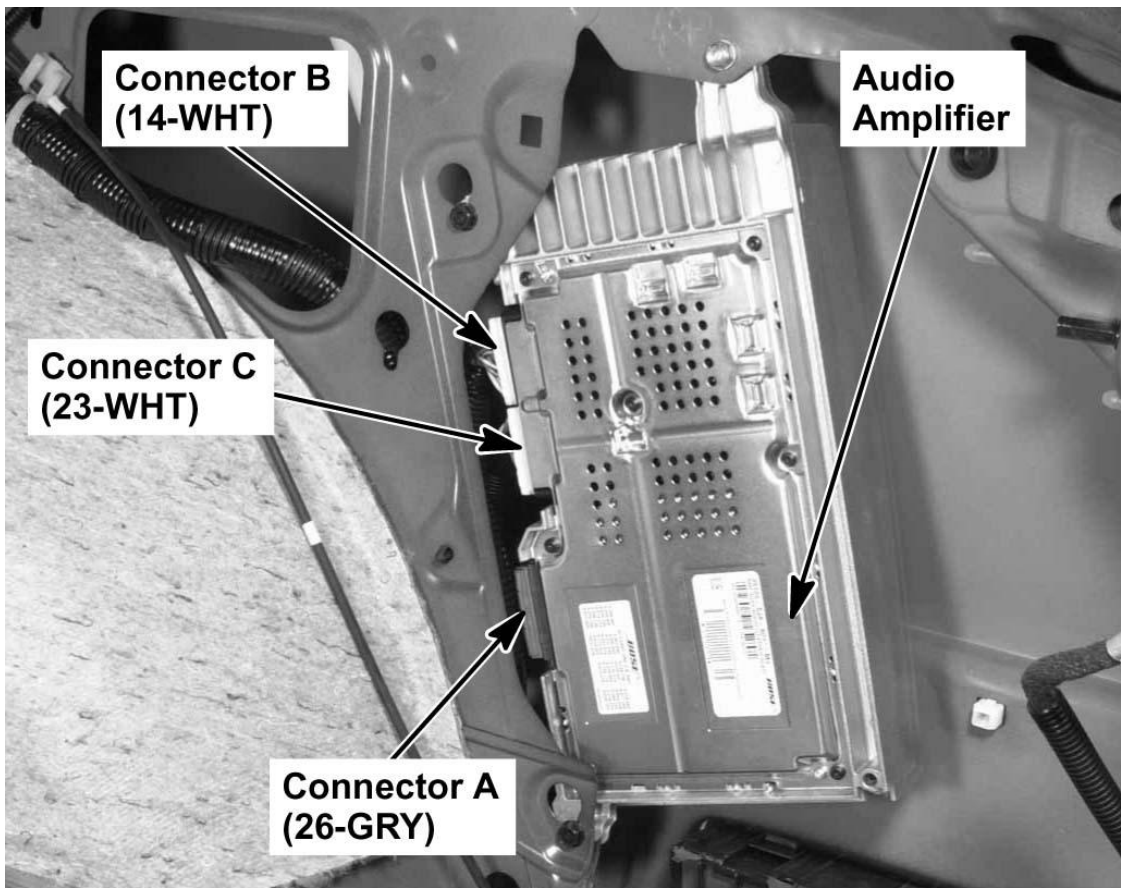

G00363620

**Fig. 164: Right Side Of Trunk**  
Courtesy of AMERICAN HONDA MOTOR CO., INC.

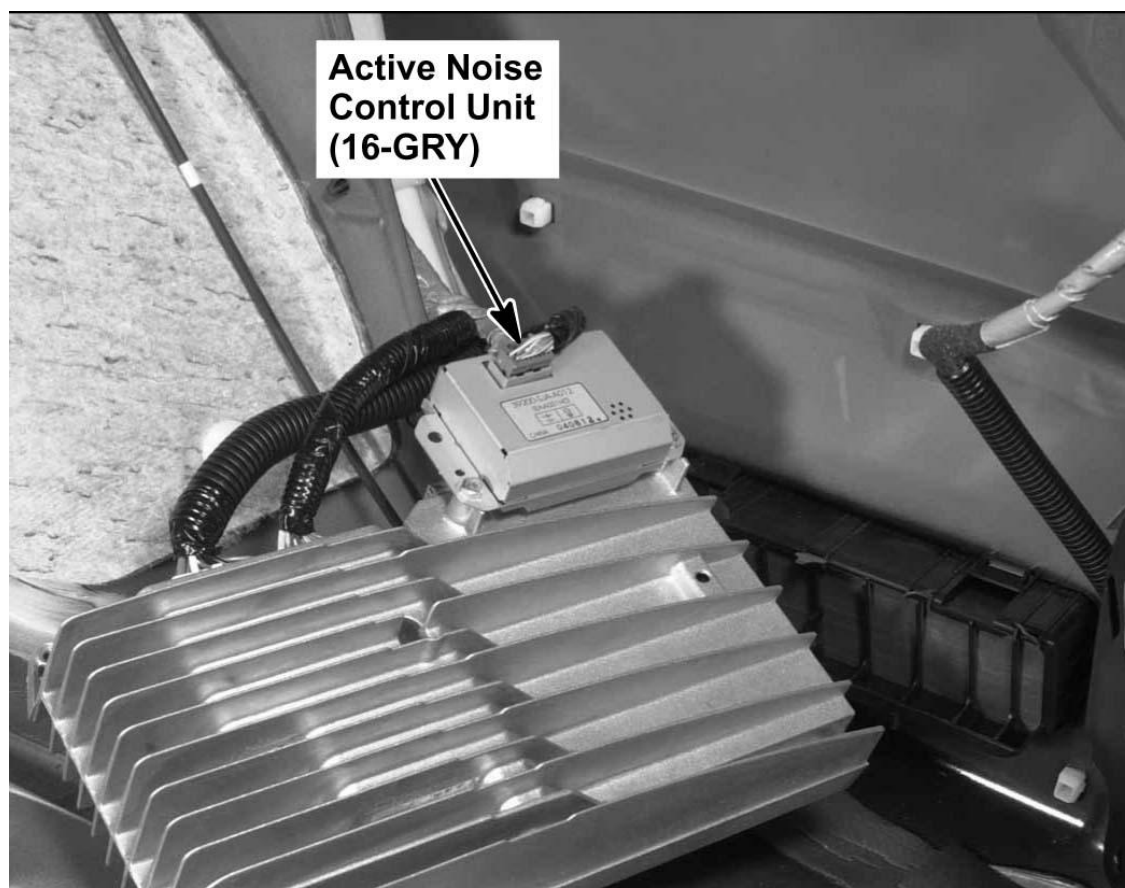


G00363621

**Fig. 165: Right Side Of Trunk**


Courtesy of AMERICAN HONDA MOTOR CO., INC.



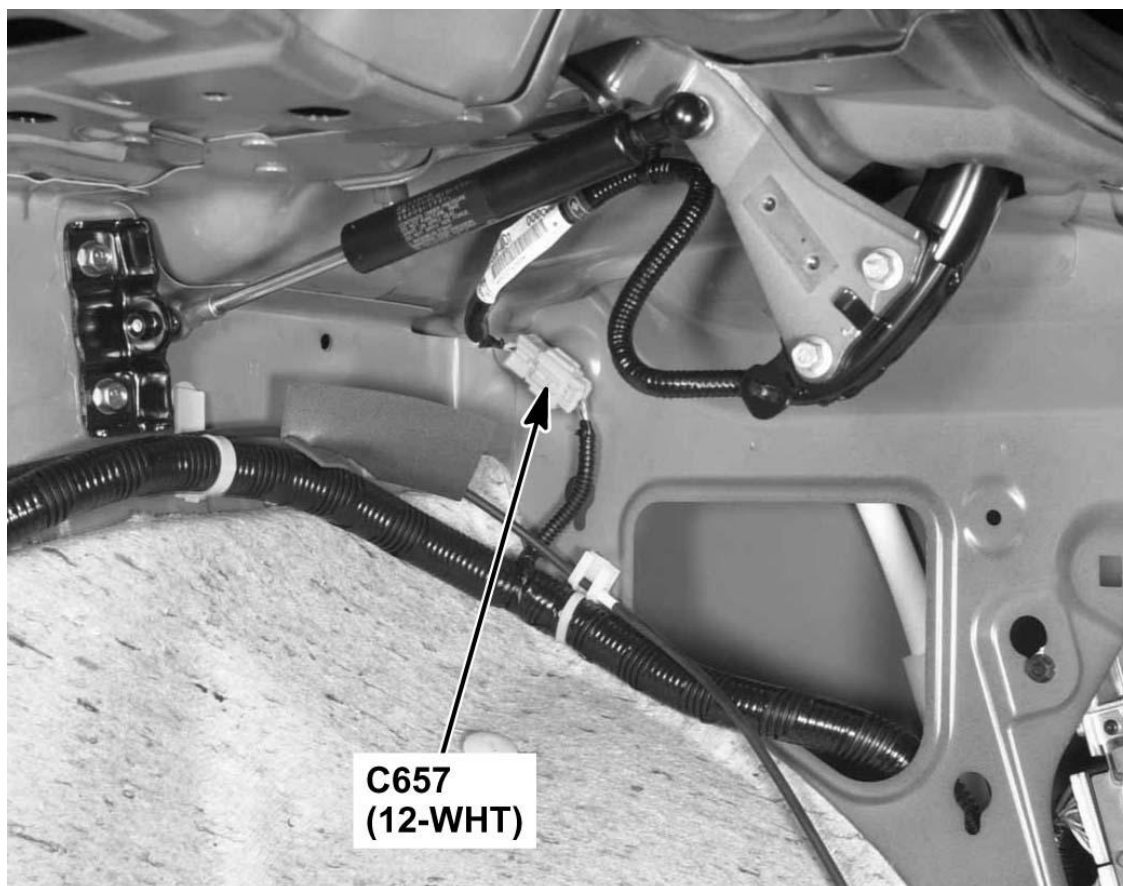

G00363622


**Fig. 166: Right Side Of Trunk**  
Courtesy of AMERICAN HONDA MOTOR CO., INC.

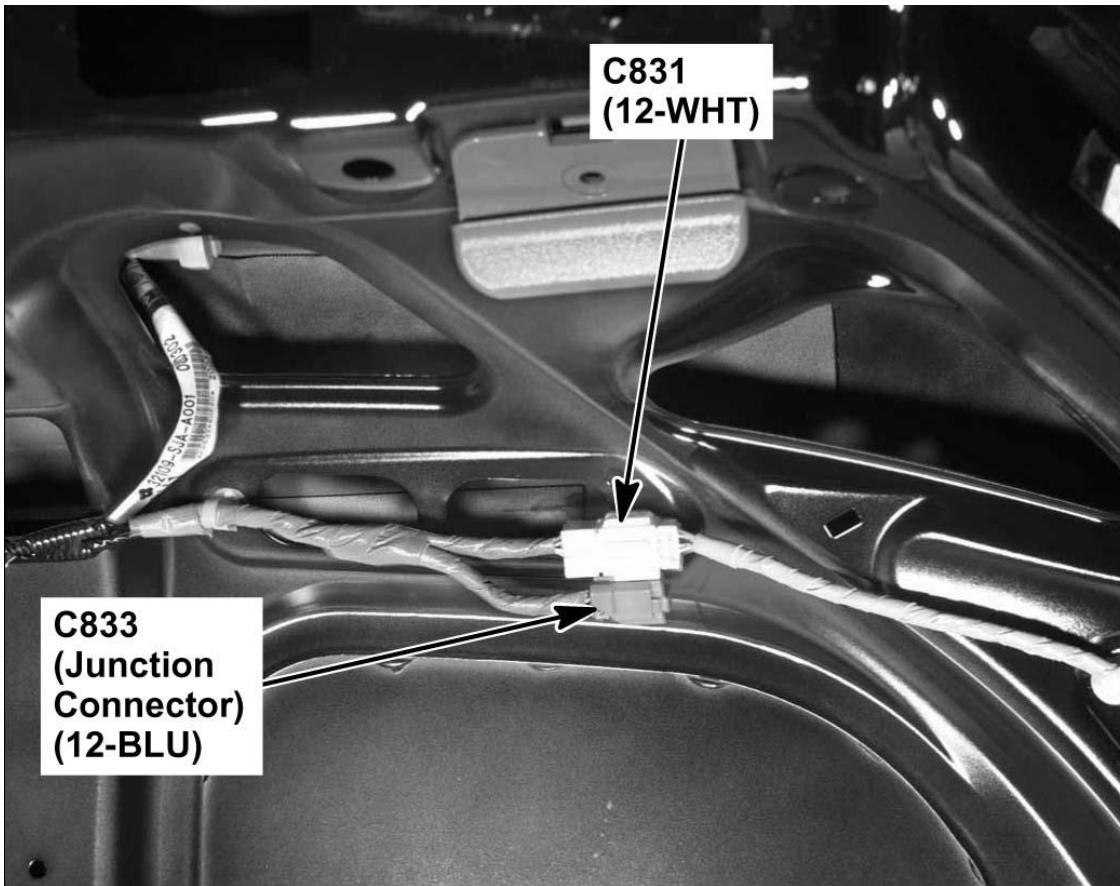

G00363623


**Fig. 167: Middle Of Trunk**

Courtesy of AMERICAN HONDA MOTOR CO., INC.

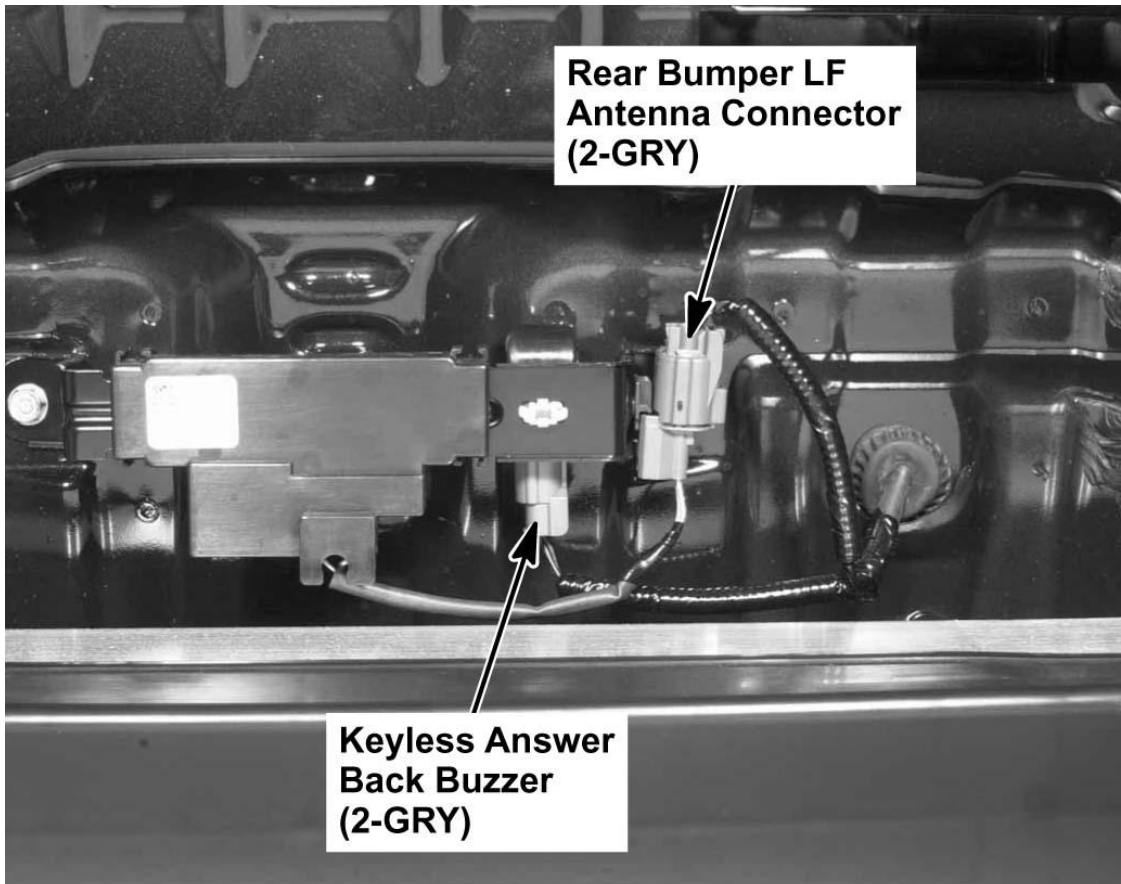


G00363624

**Fig. 168: Behind Middle Of Rear Bumper**  
Courtesy of AMERICAN HONDA MOTOR CO., INC.

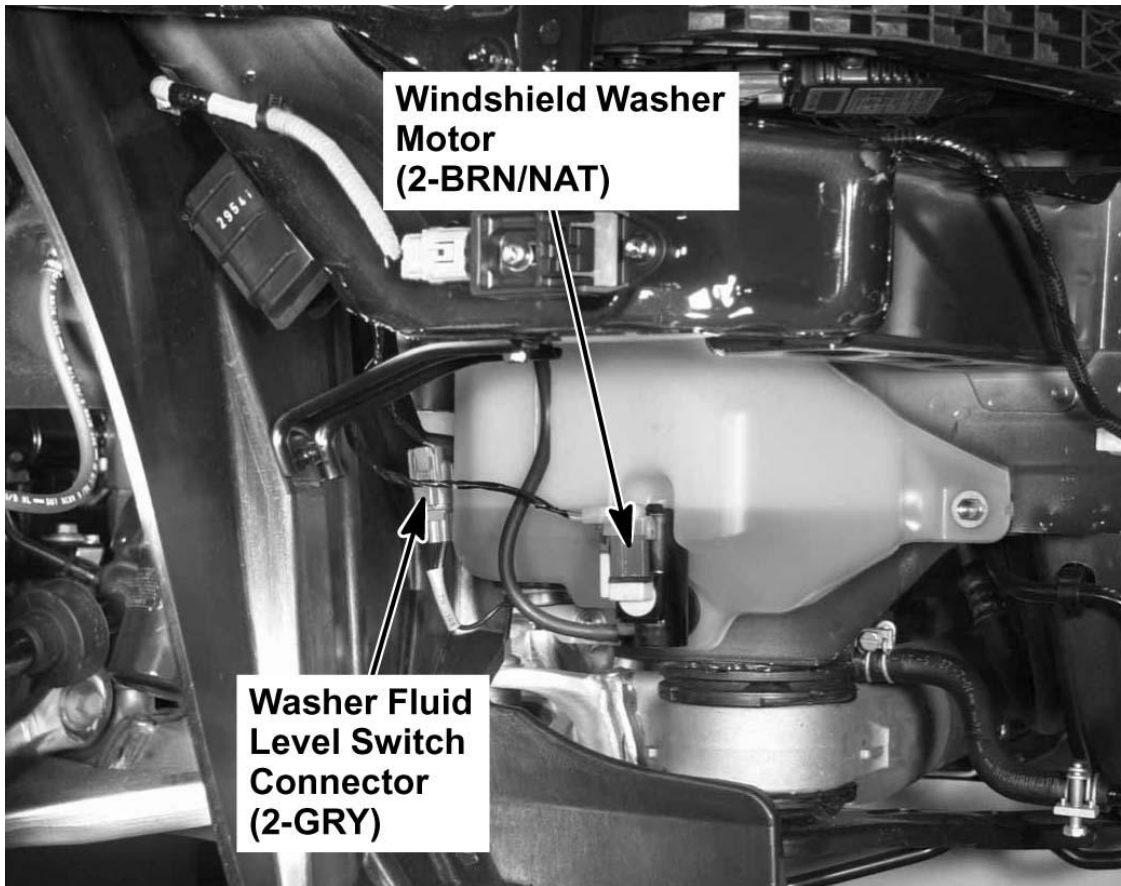

G00363625


**Fig. 169: Behind Right Side Of Front Bumper**  
Courtesy of AMERICAN HONDA MOTOR CO., INC.

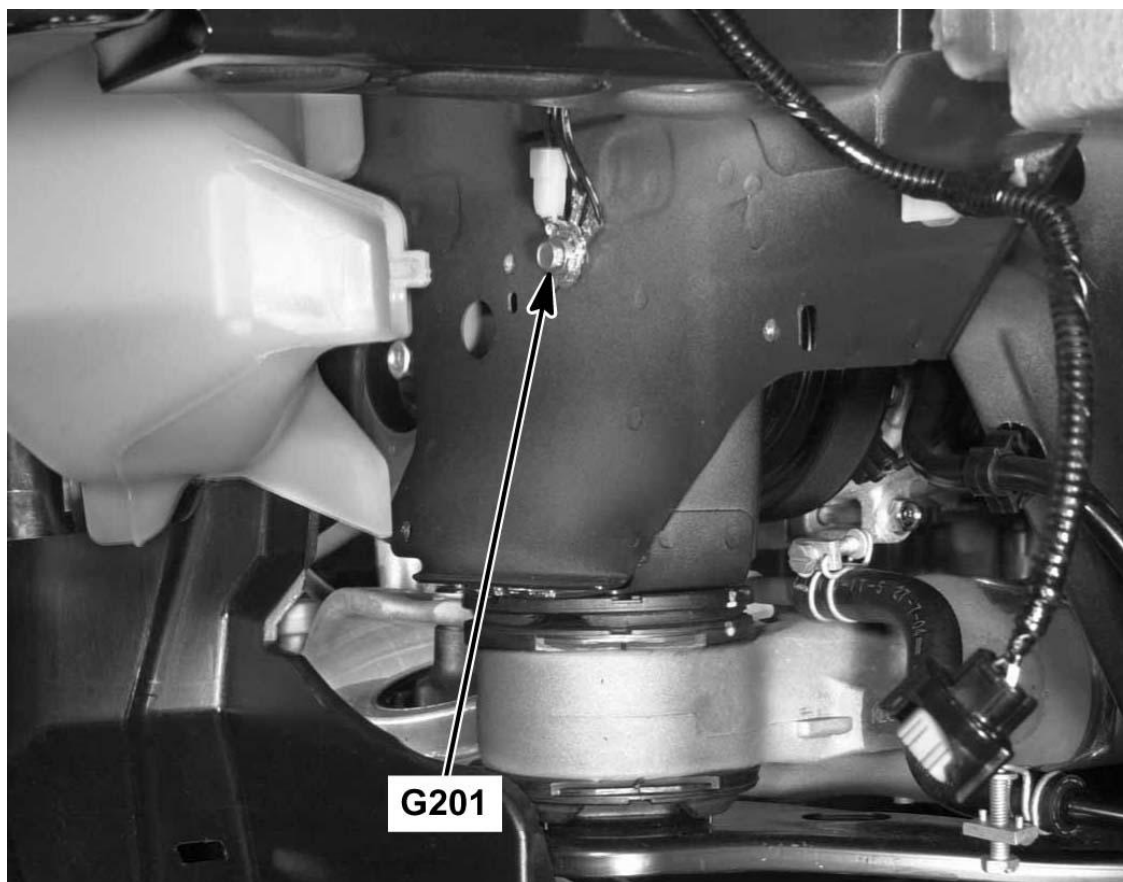

G00363626


**Fig. 170: Behind Right Side Of Front Bumper**  
Courtesy of AMERICAN HONDA MOTOR CO., INC.



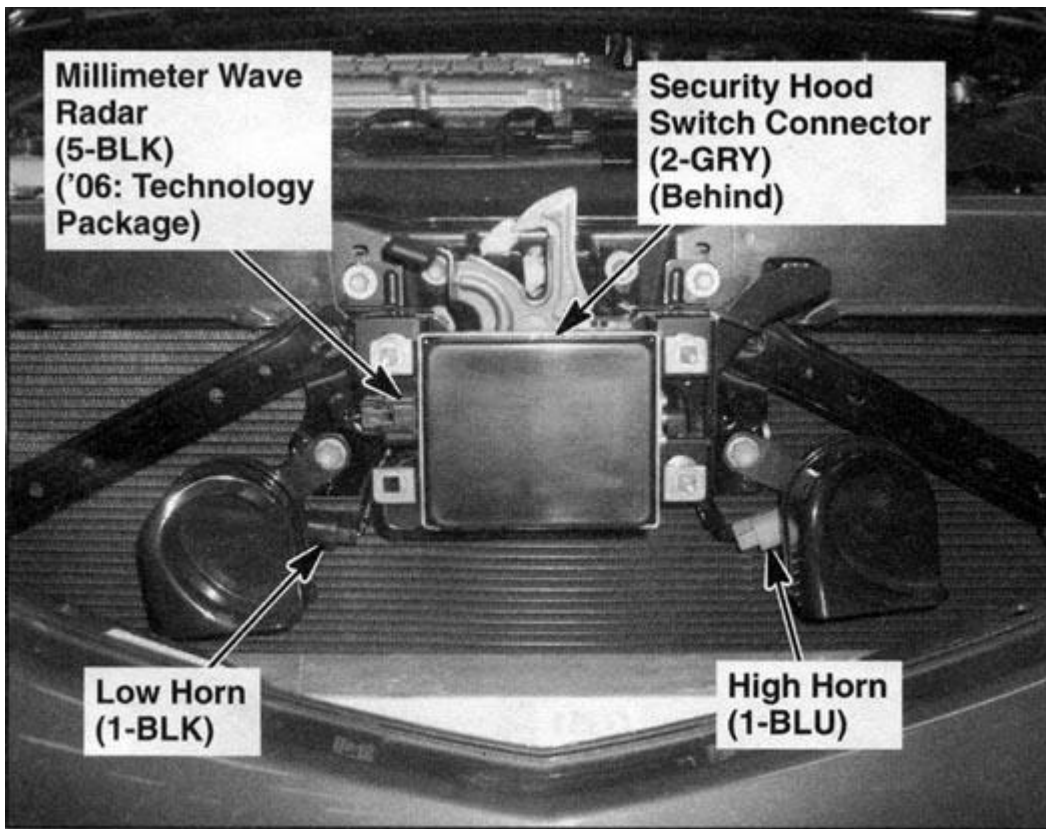


G00430627

**Fig. 171: Behind Middle Of Front Bumper**  
Courtesy of AMERICAN HONDA MOTOR CO., INC.

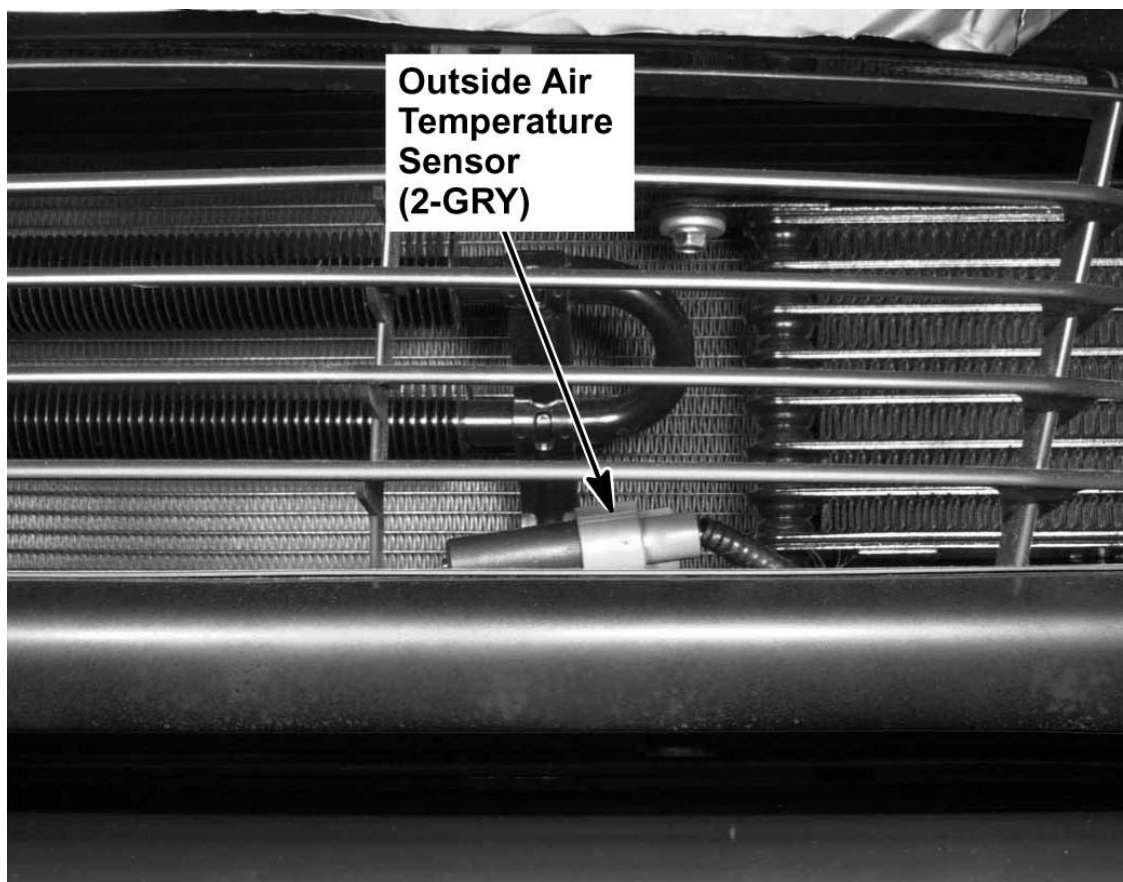


G00363628

**Fig. 172: Behind Middle Of Front Bumper**  
Courtesy of AMERICAN HONDA MOTOR CO., INC.

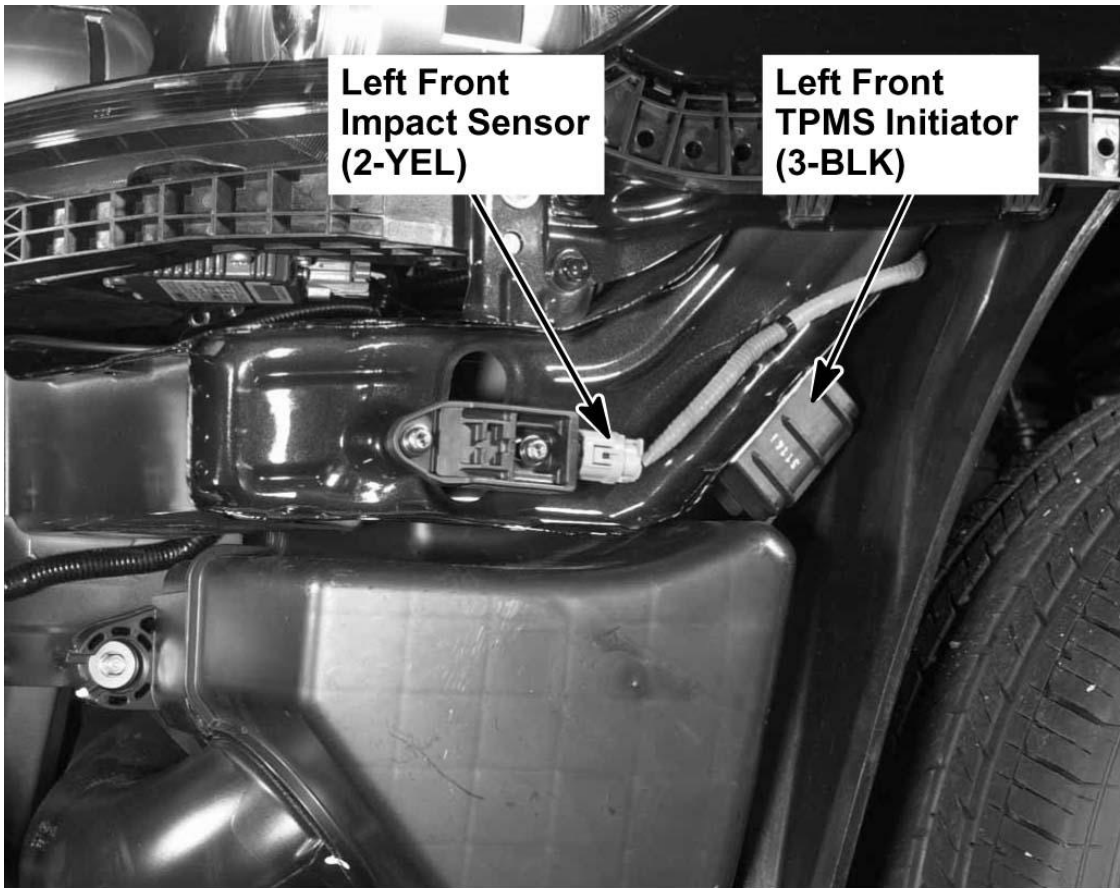


G00363629

**Fig. 173: Behind Left Side Of Front Bumper (Right Similar)**  
**Courtesy of AMERICAN HONDA MOTOR CO., INC.**

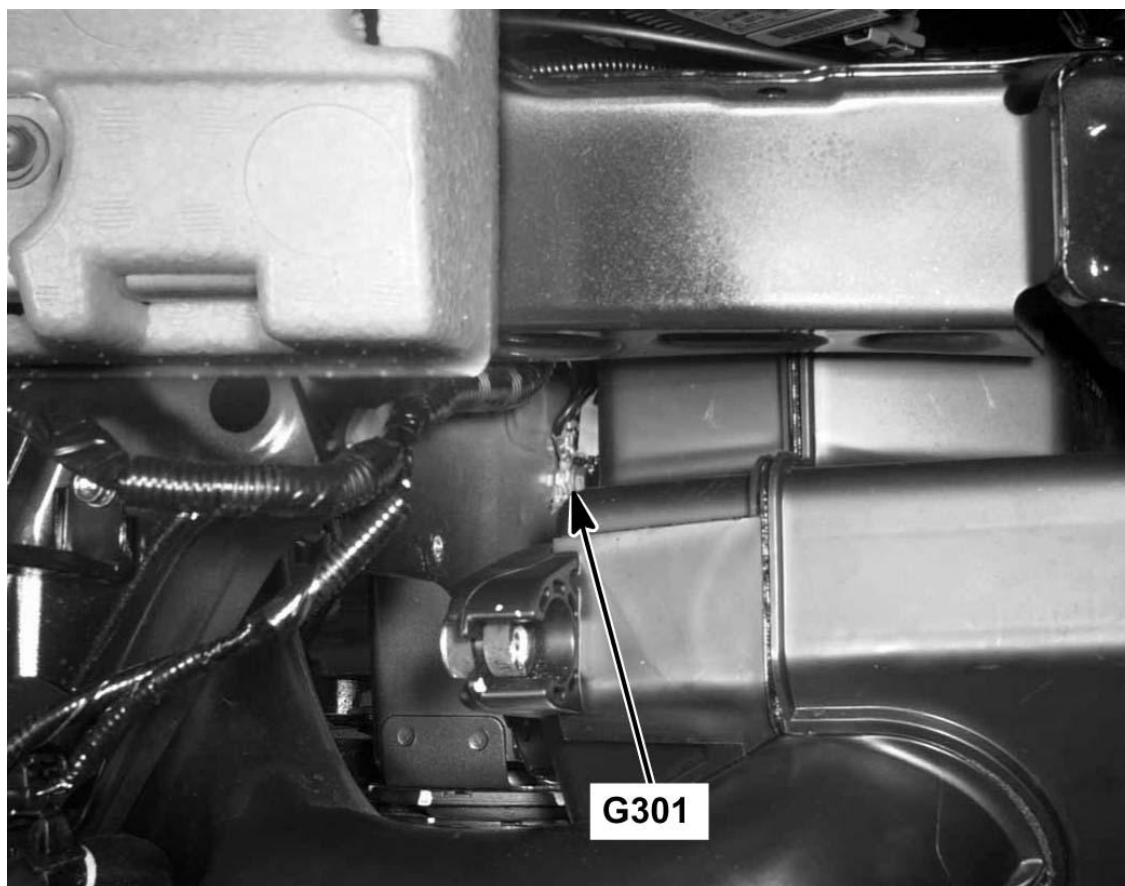

G00363630

**Fig. 174: Behind Left Side Of Front Bumper**  
Courtesy of AMERICAN HONDA MOTOR CO., INC.

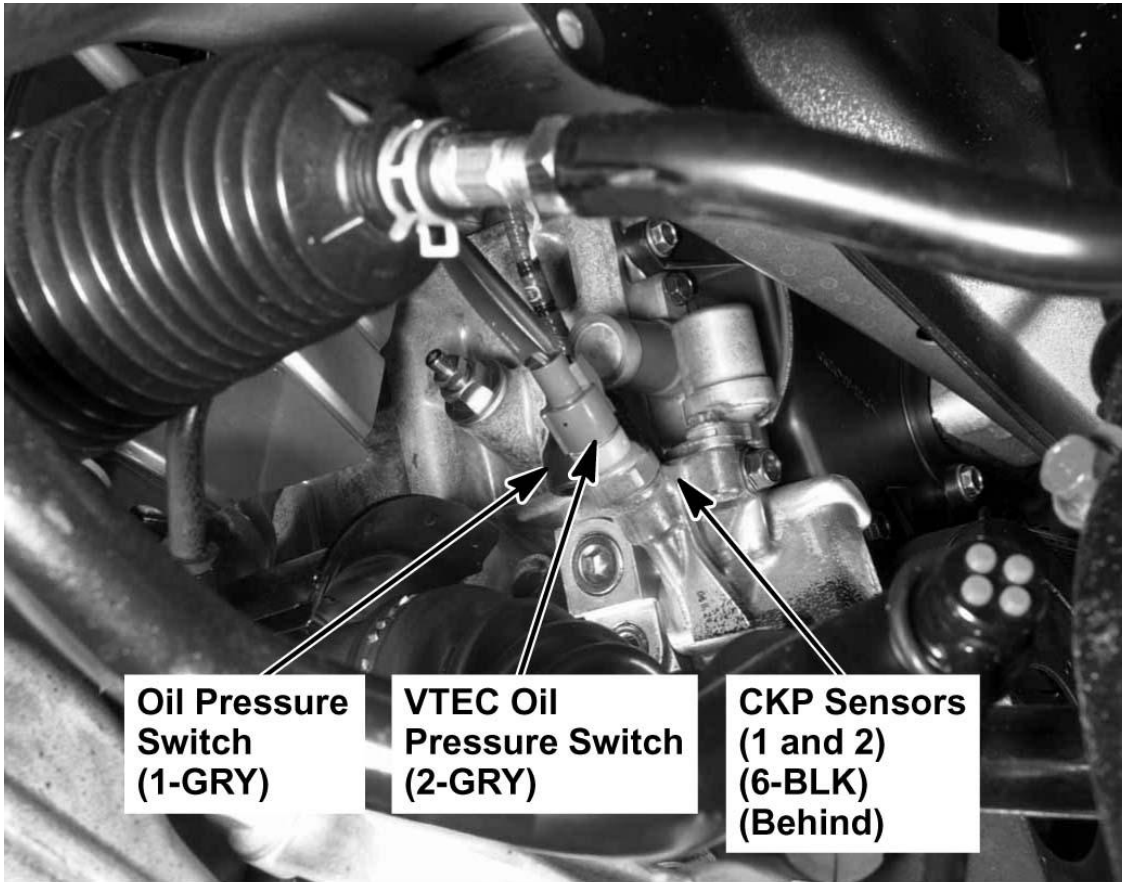


G00363631

**Fig. 175: Right Side Of Engine**

Courtesy of AMERICAN HONDA MOTOR CO., INC.




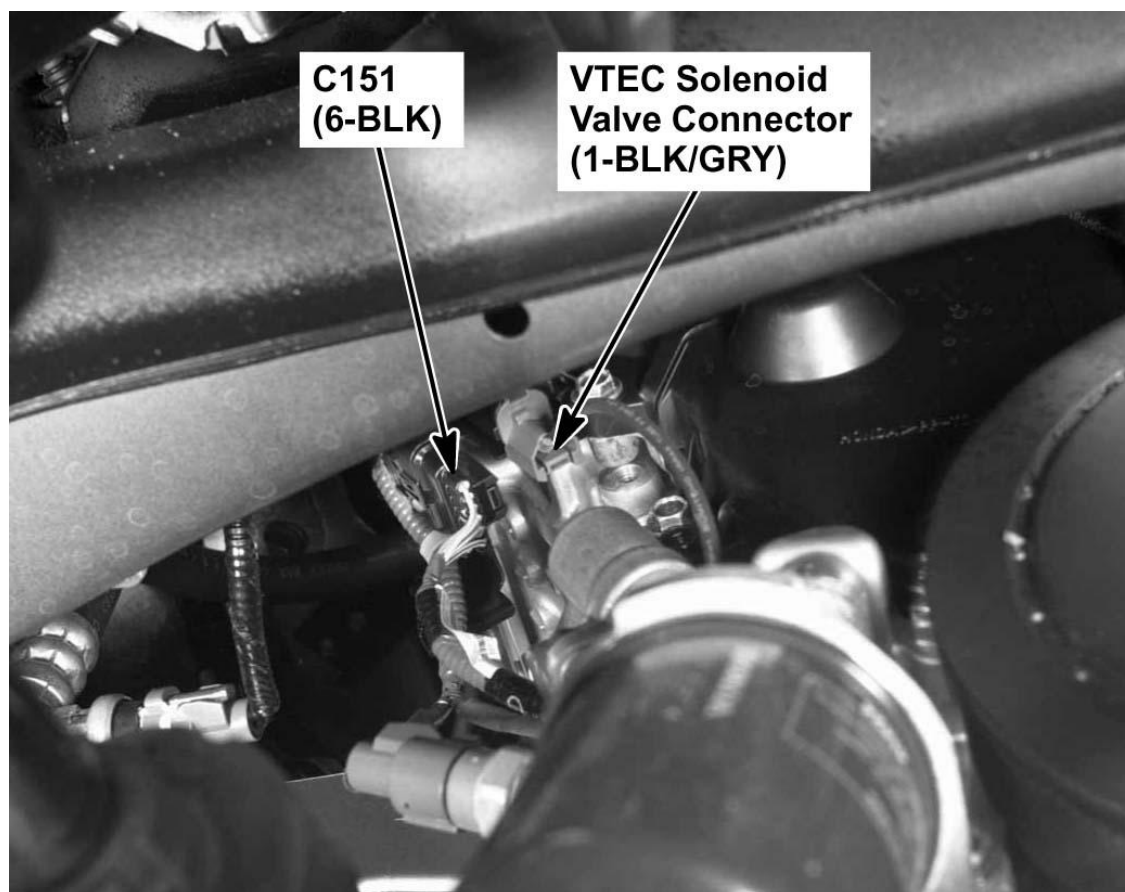

G00363632


**Fig. 176: Right Side Of Engine**

Courtesy of AMERICAN HONDA MOTOR CO., INC.

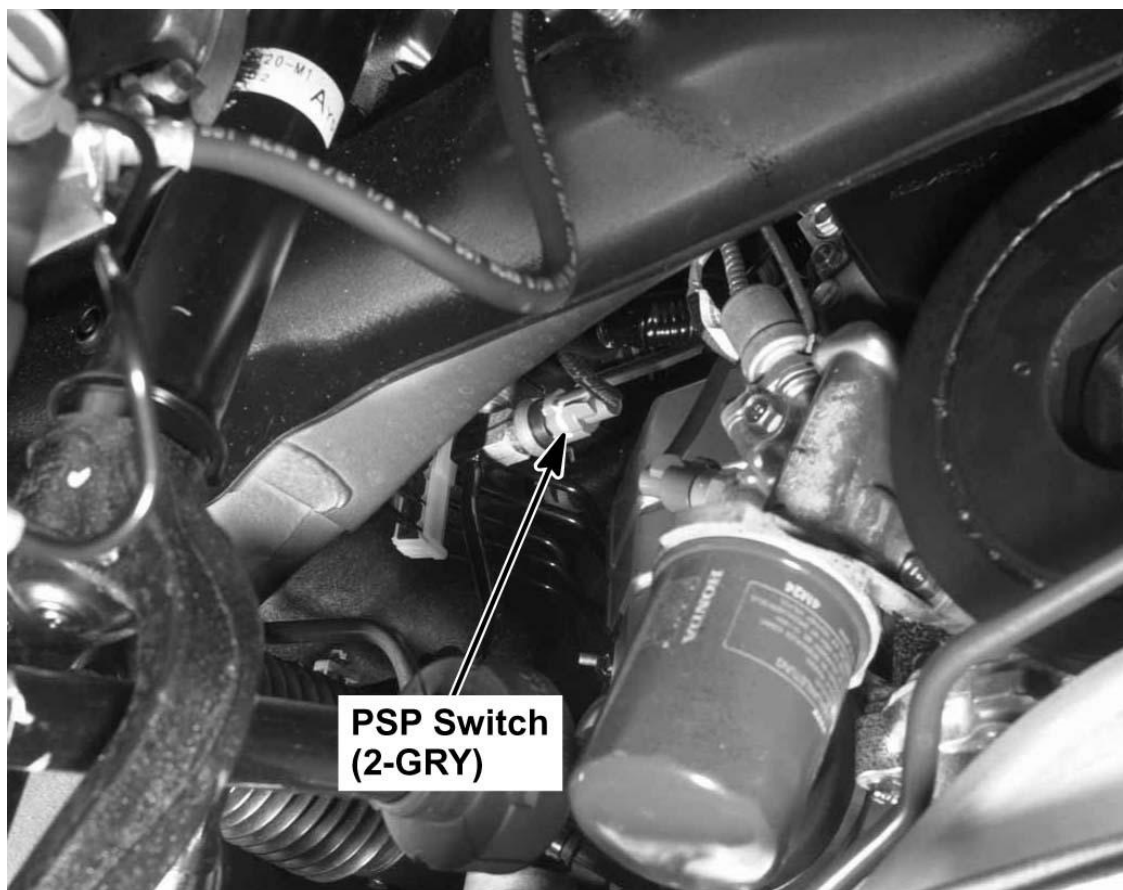


G00363633

**Fig. 177: Right Side Of Engine Compartment**  
Courtesy of AMERICAN HONDA MOTOR CO., INC.

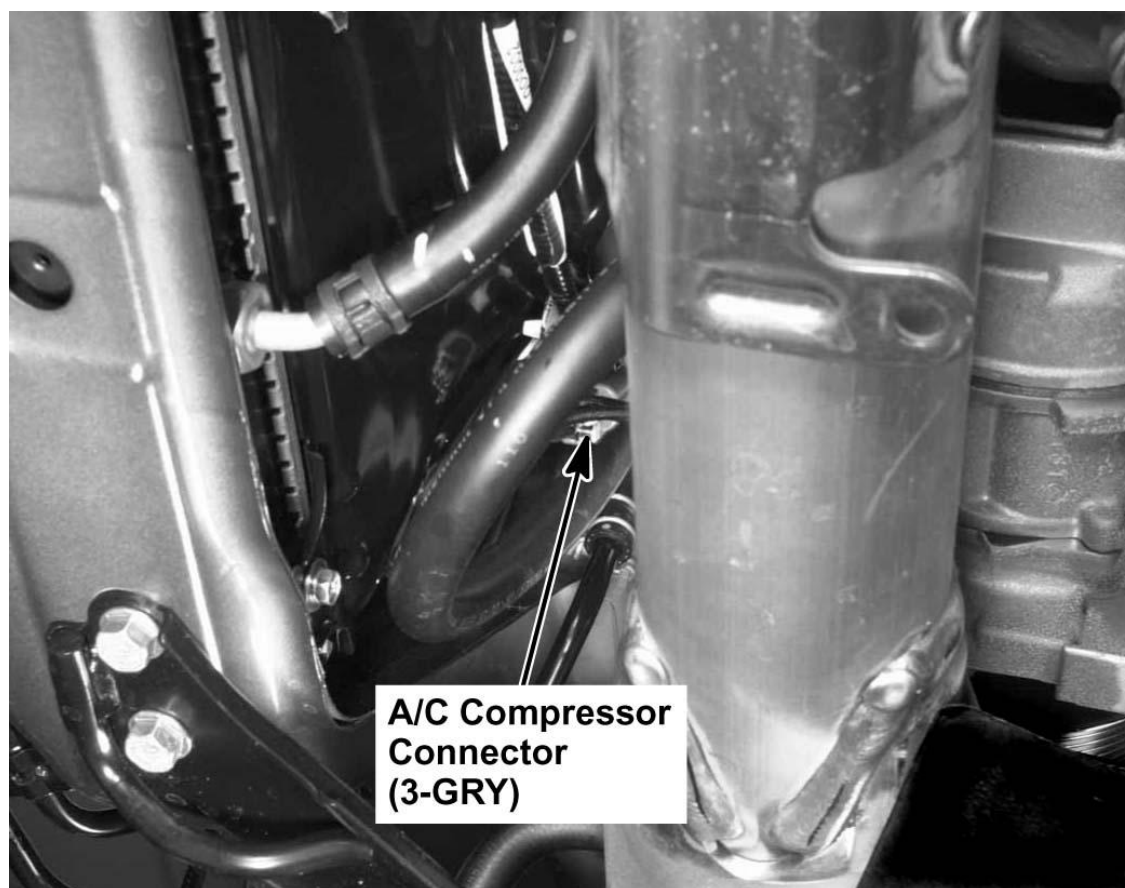


G00363634

**Fig. 178: Right Side Of Engine Compartment**  
Courtesy of AMERICAN HONDA MOTOR CO., INC.

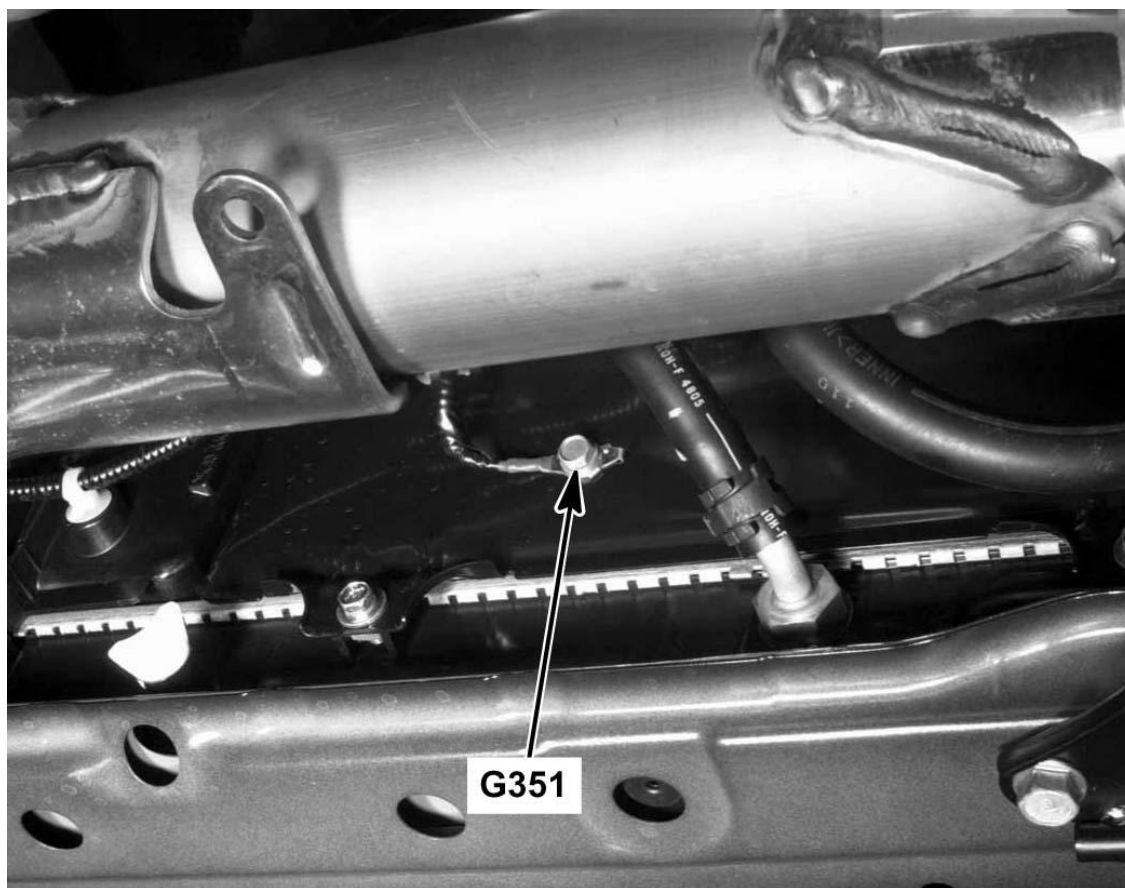

G00363635


**Fig. 179: Middle Of Engine Compartment**  
Courtesy of AMERICAN HONDA MOTOR CO., INC.

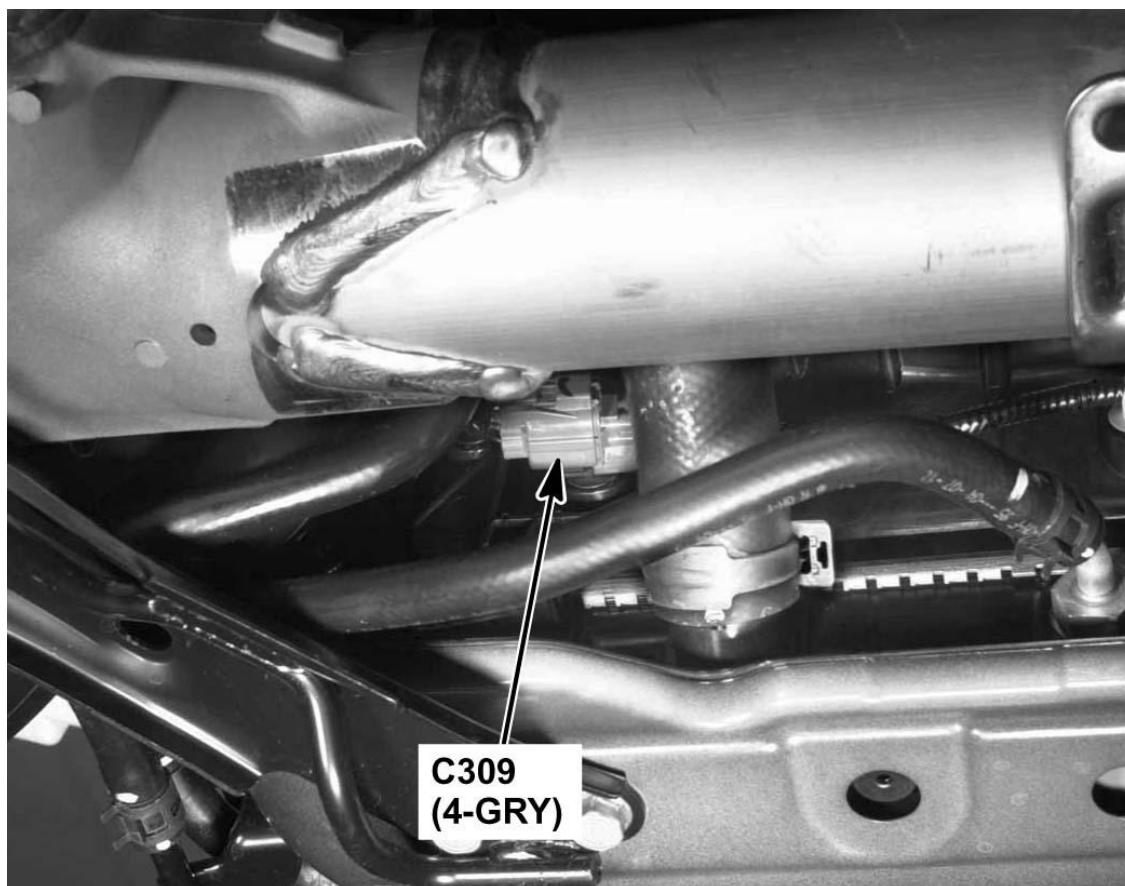

G00363636


**Fig. 180: Left Side Of Engine Compartment**  
Courtesy of AMERICAN HONDA MOTOR CO., INC.



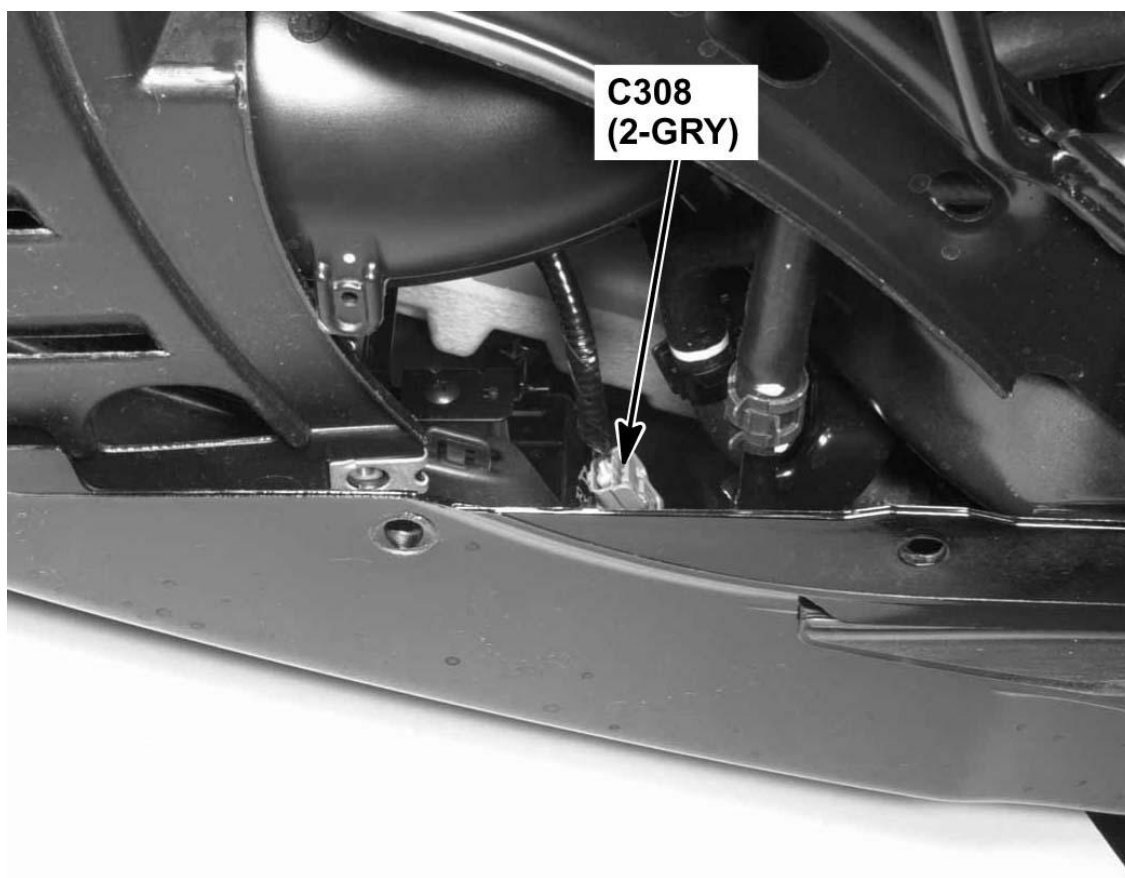

G00363637


**Fig. 181: Left Side Of Engine Compartment**  
Courtesy of AMERICAN HONDA MOTOR CO., INC.

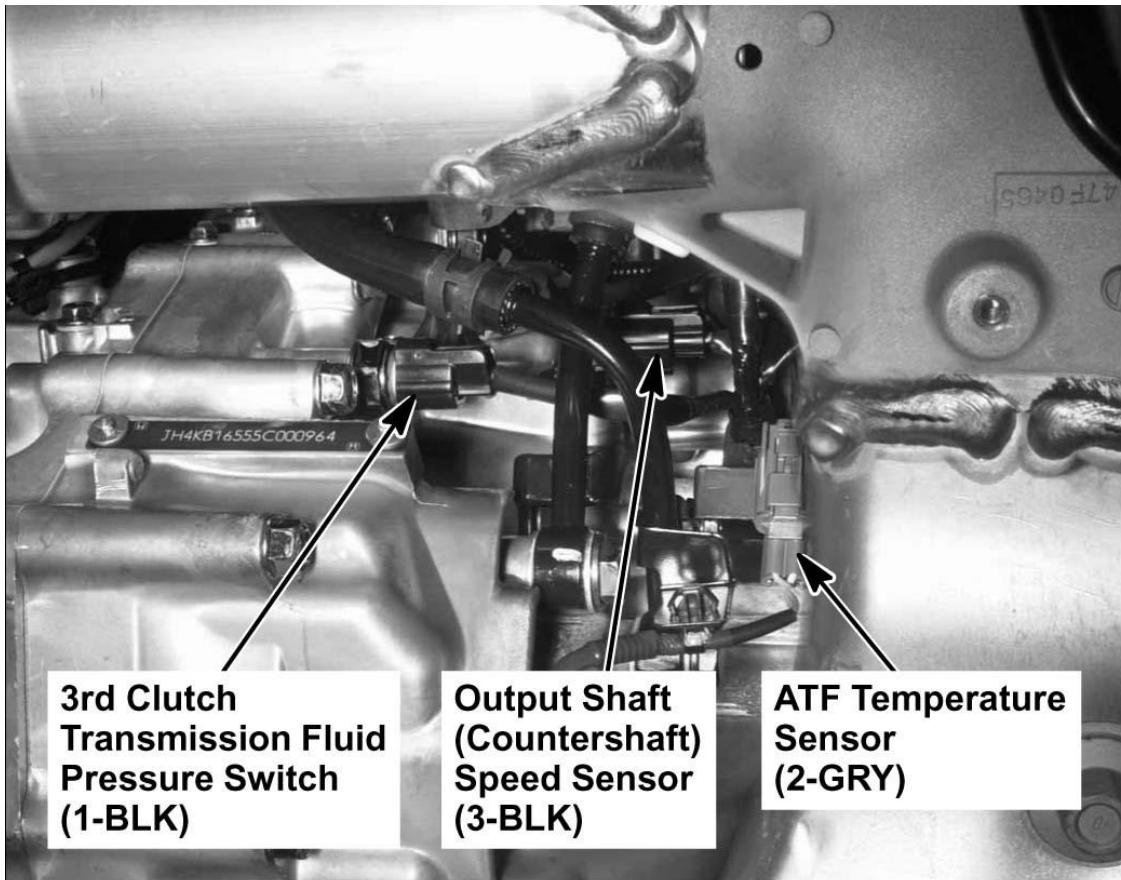

G00363638

**Fig. 182: Transmission Housing**


Courtesy of AMERICAN HONDA MOTOR CO., INC.

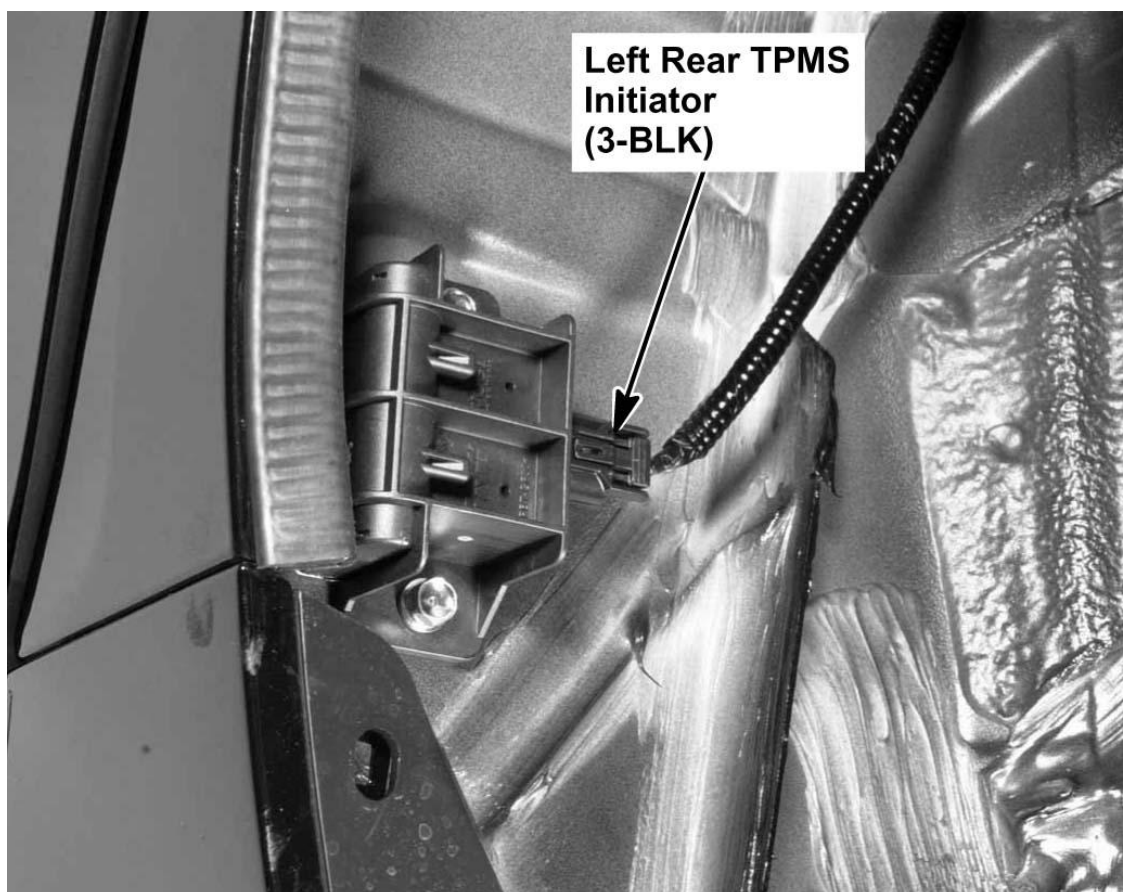

Left Rear TPMS  
Initiator  
(3-BLK)

G00363639


**Fig. 183: Left Rear Fenderwell (Right Similar)**  
Courtesy of AMERICAN HONDA MOTOR CO., INC.

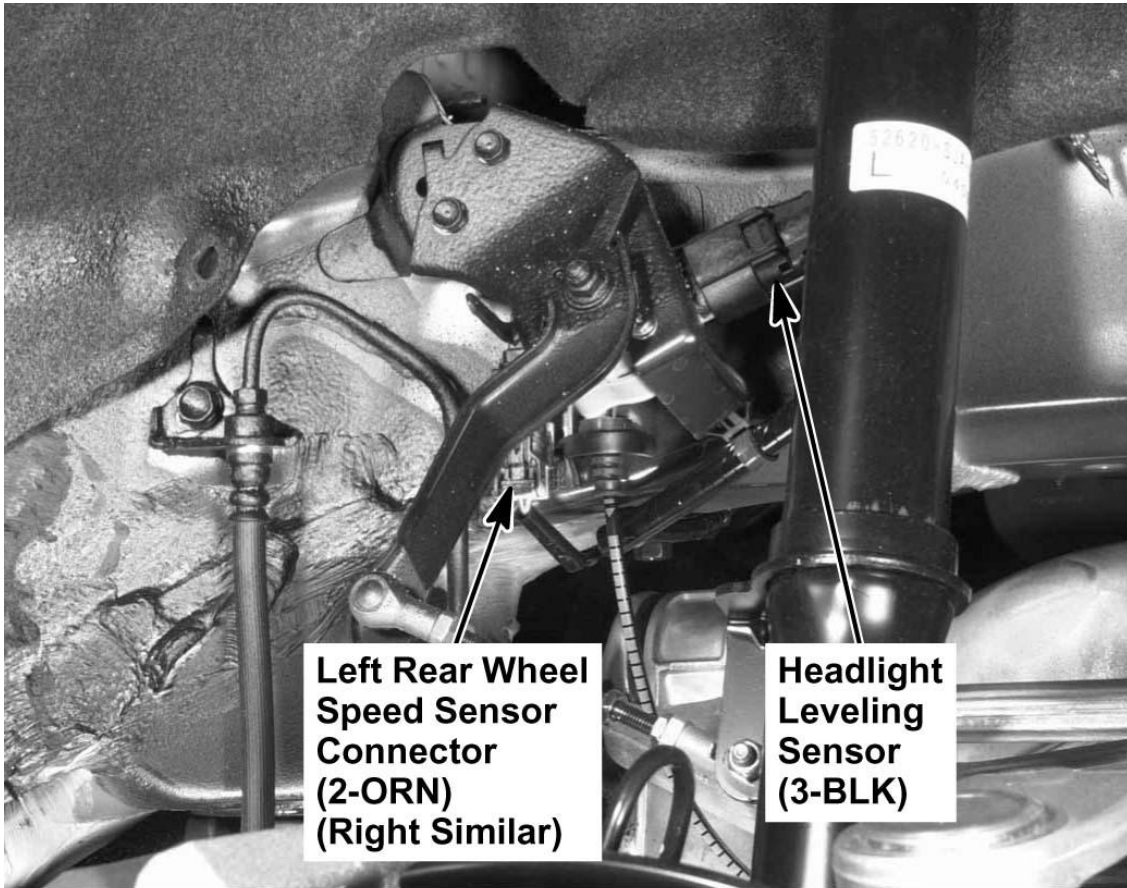

G00363640

**Fig. 184: Under Left Rear Of Vehicle**  
Courtesy of AMERICAN HONDA MOTOR CO., INC.



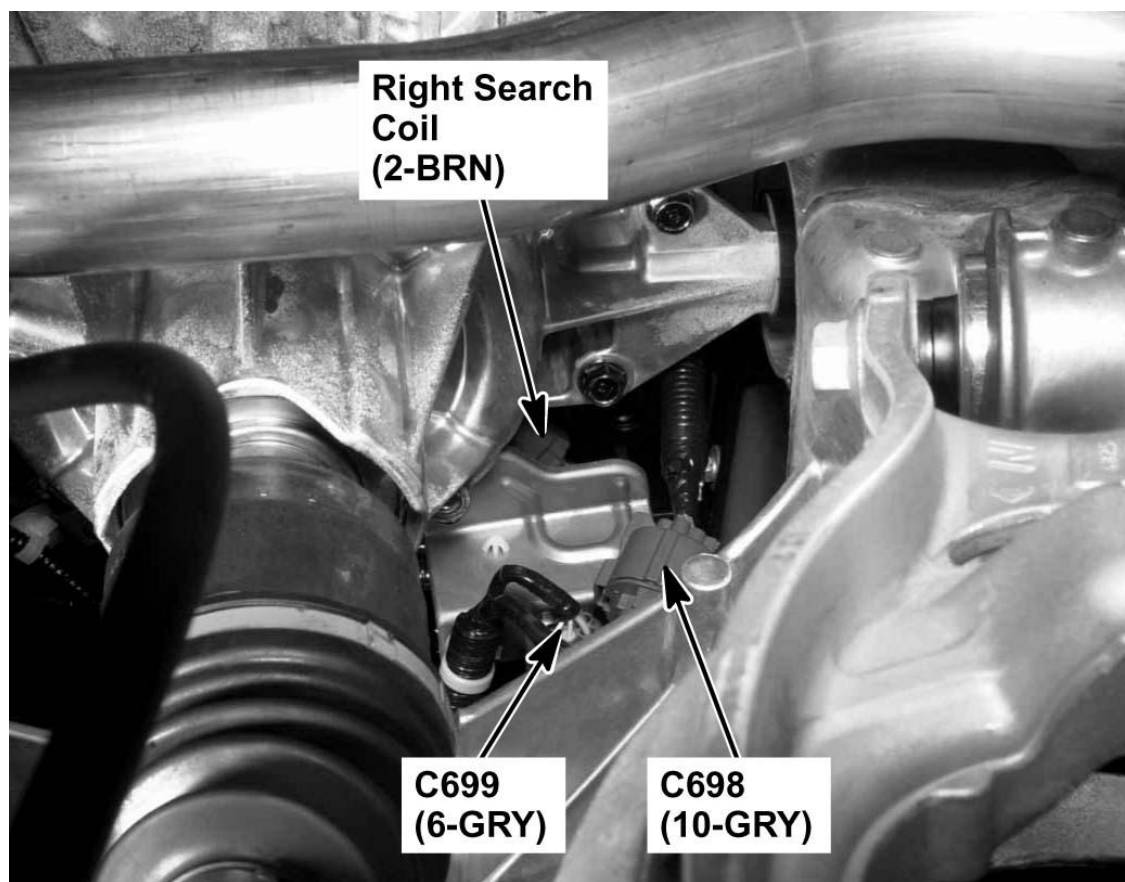


G00363641

**Fig. 185: Rear Differential**

Courtesy of AMERICAN HONDA MOTOR CO., INC.




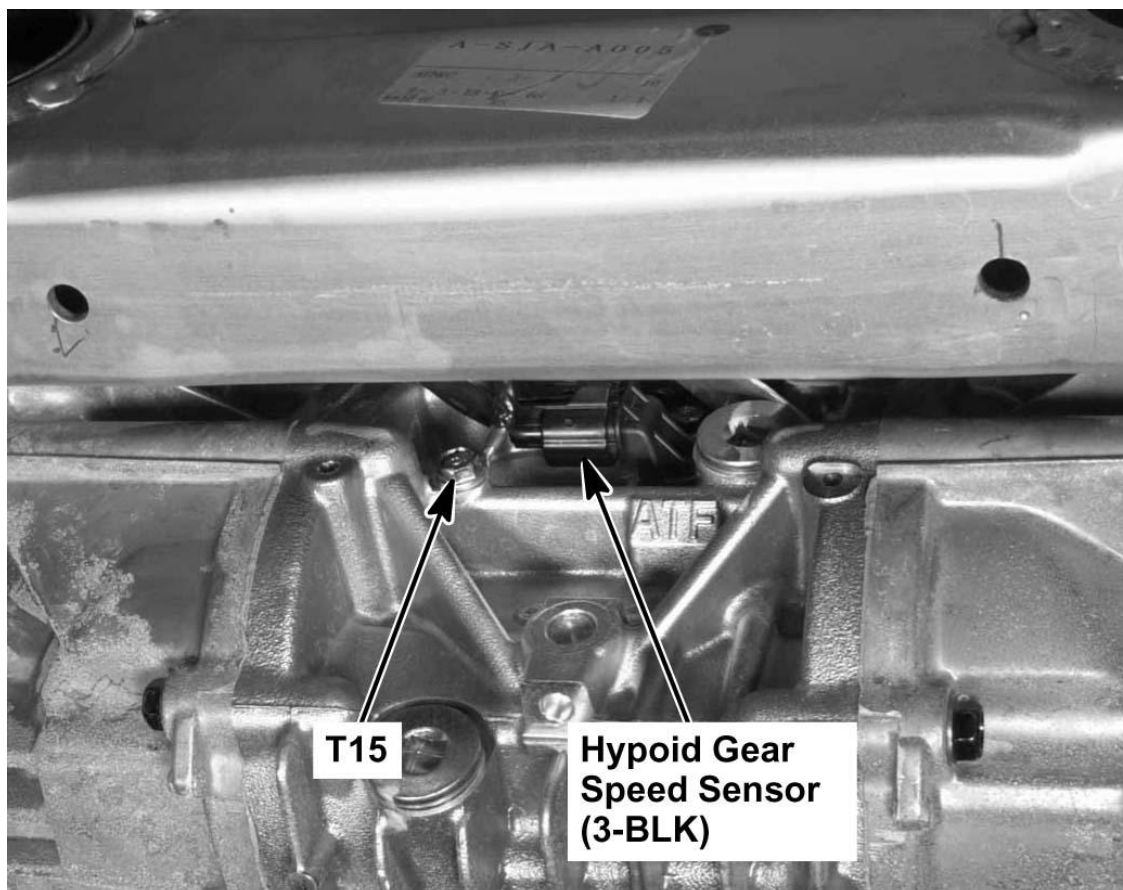

G00363642

**Fig. 186: Rear Differential**


Courtesy of AMERICAN HONDA MOTOR CO., INC.

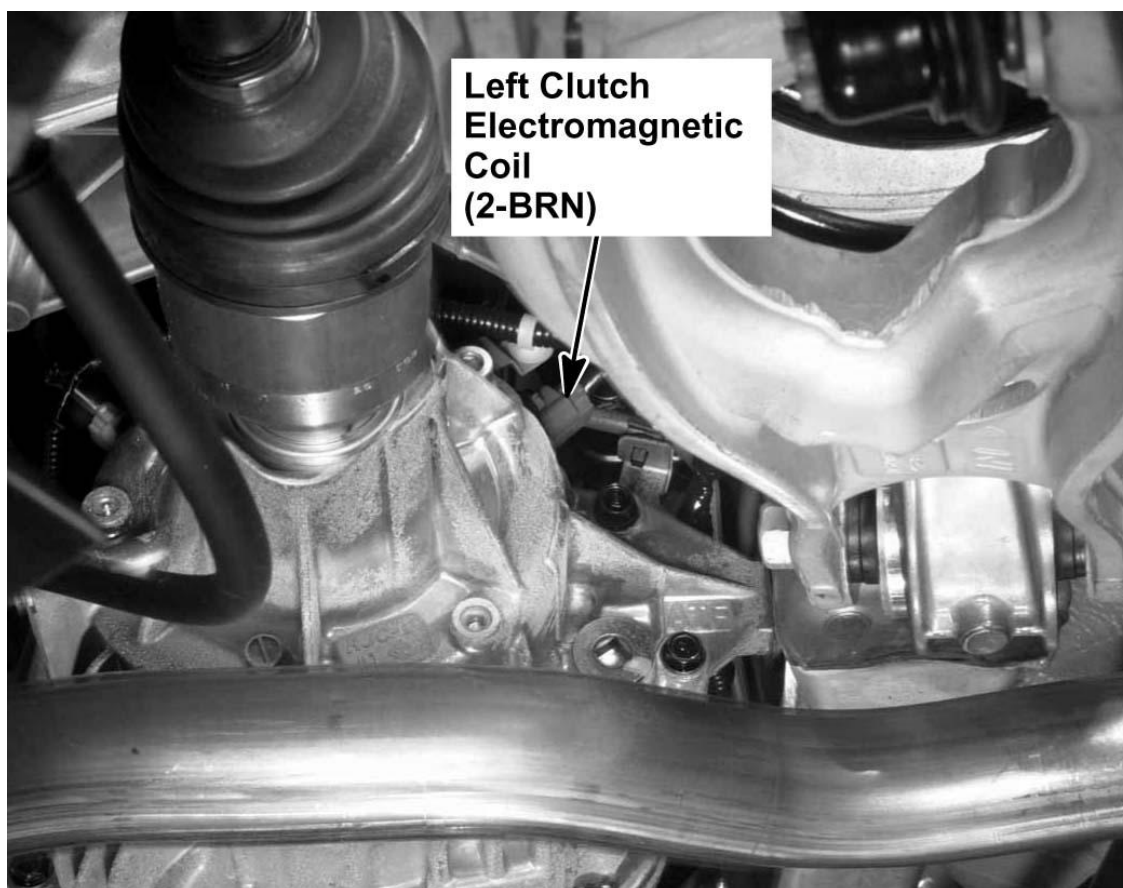

G00363643

**Fig. 187: Rear Differential**


Courtesy of AMERICAN HONDA MOTOR CO., INC.

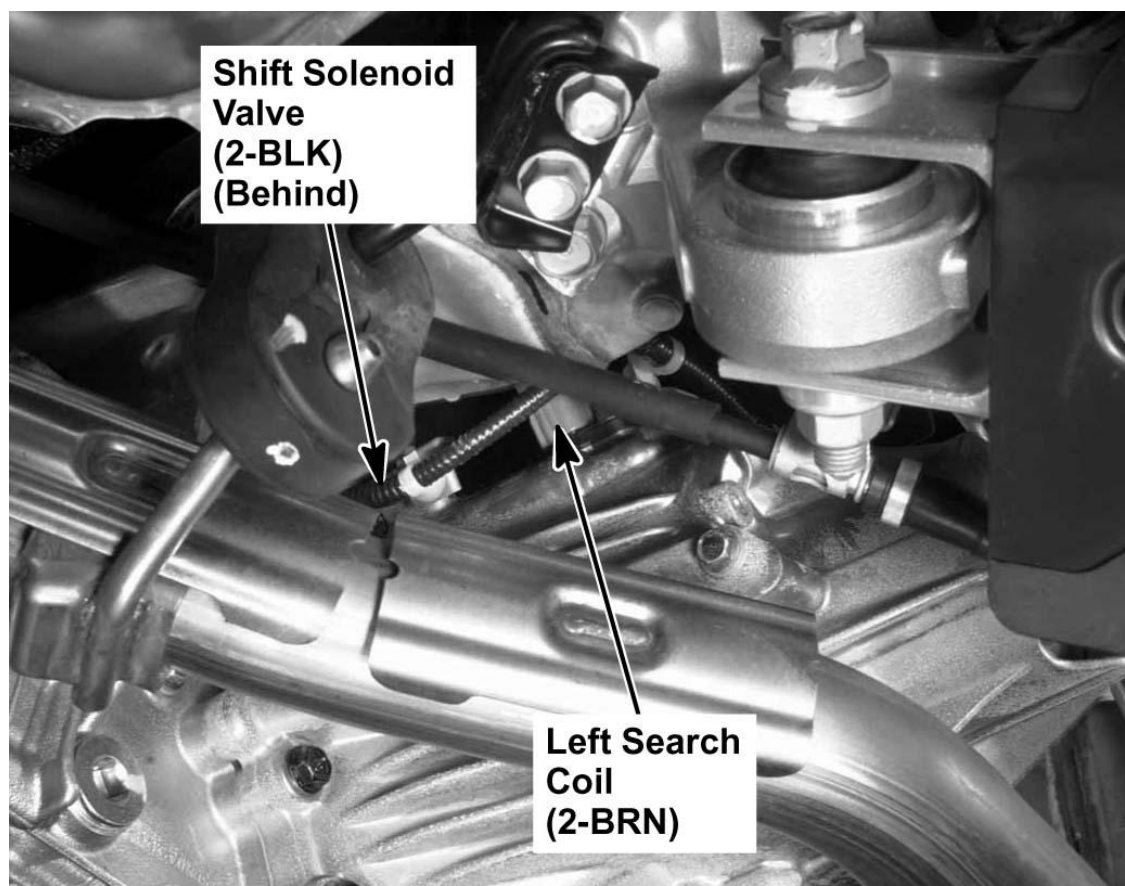

G00363644

**Fig. 188: Rear Differential**


Courtesy of AMERICAN HONDA MOTOR CO., INC.

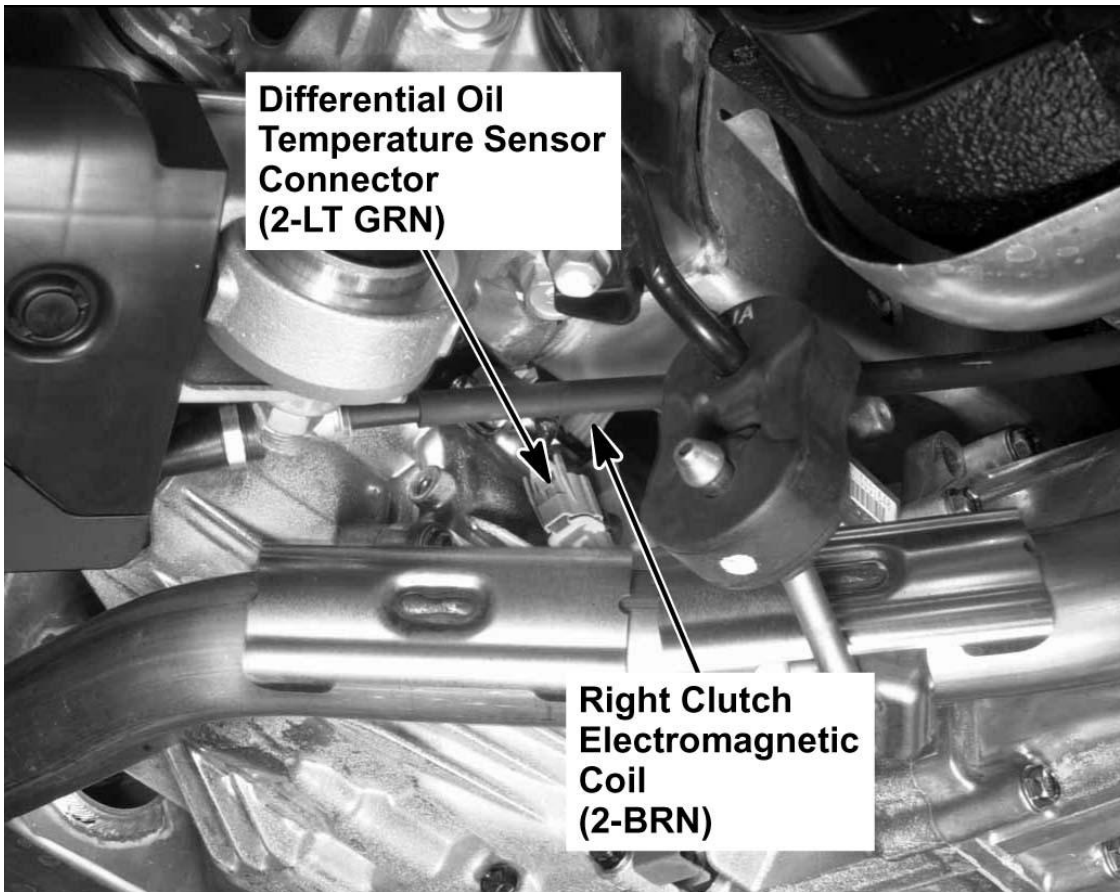

G00363645

**Fig. 189: Rear Differential**


Courtesy of AMERICAN HONDA MOTOR CO., INC.

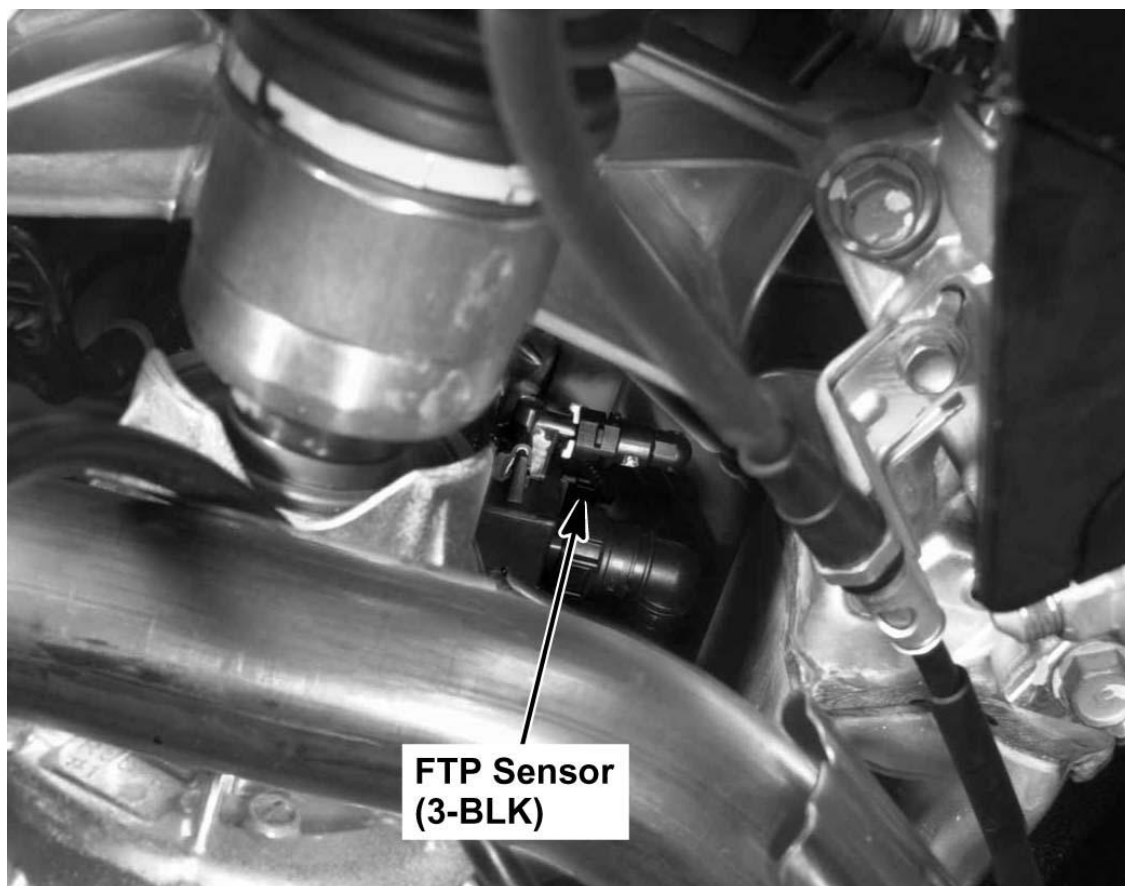

G00363646

**Fig. 190: Above Rear Differential**  
Courtesy of AMERICAN HONDA MOTOR CO., INC.



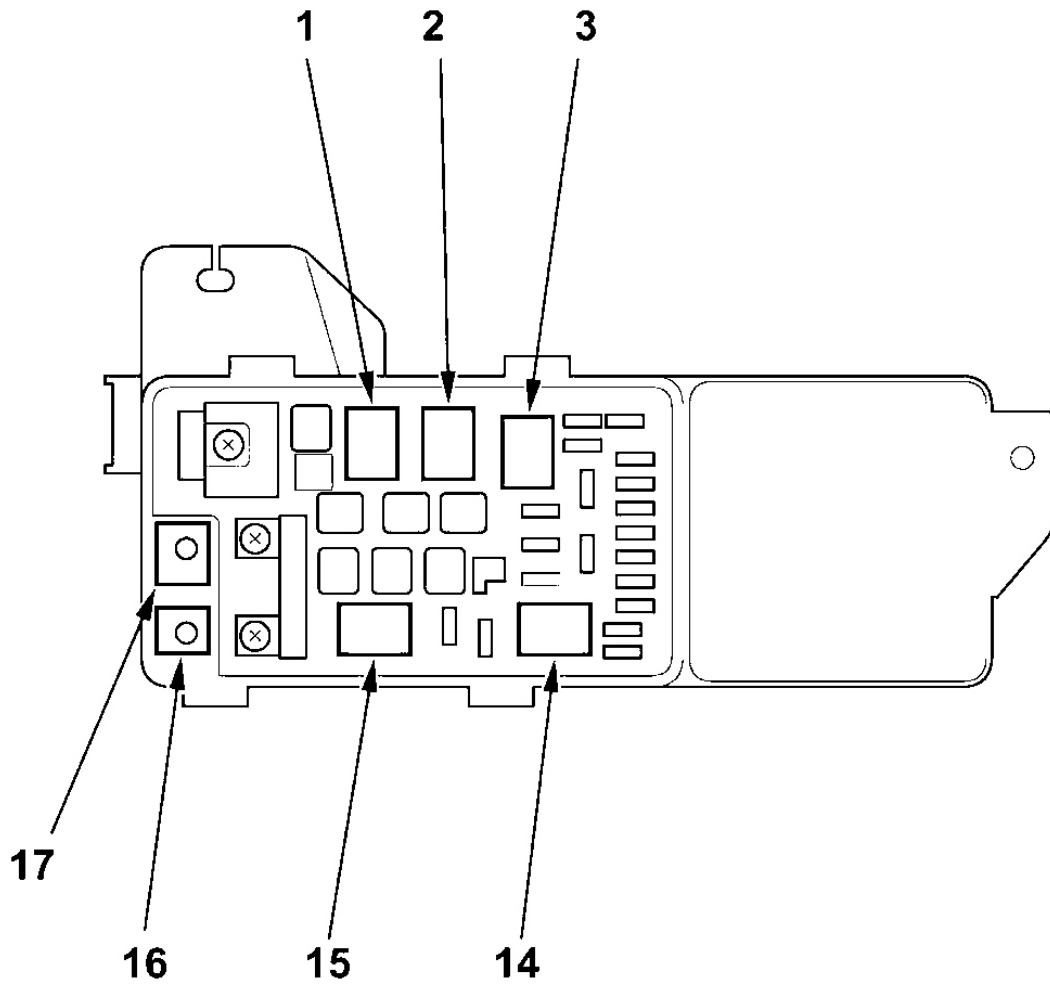


G00363648

**Fig. 191: Left Rear Of Engine Compartment**  
Courtesy of AMERICAN HONDA MOTOR CO., INC.

## 2005 Acura RL


2005-06 ACURA RL

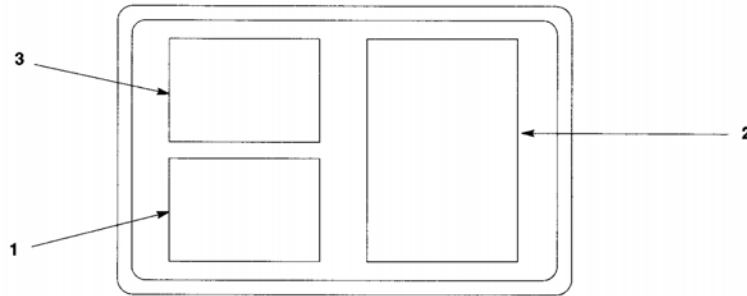

Ref	Socket	Cavities	Connects to
1	DRL Relay (Canada)	5	Engine Compartment Wire Harness A (Left Branch)
2	Radiator Fan Control (RFC) Unit Relay	4	Engine Compartment Wire Harness A (Left Branch)
3	Adaptive Cruise Control Relay ('06: Technology Package)	5	Engine Compartment Wire Harness A (Left Branch)


G00430634

**Fig. 192: Left Rear Of Engine Compartment**  
Courtesy of AMERICAN HONDA MOTOR CO., INC.

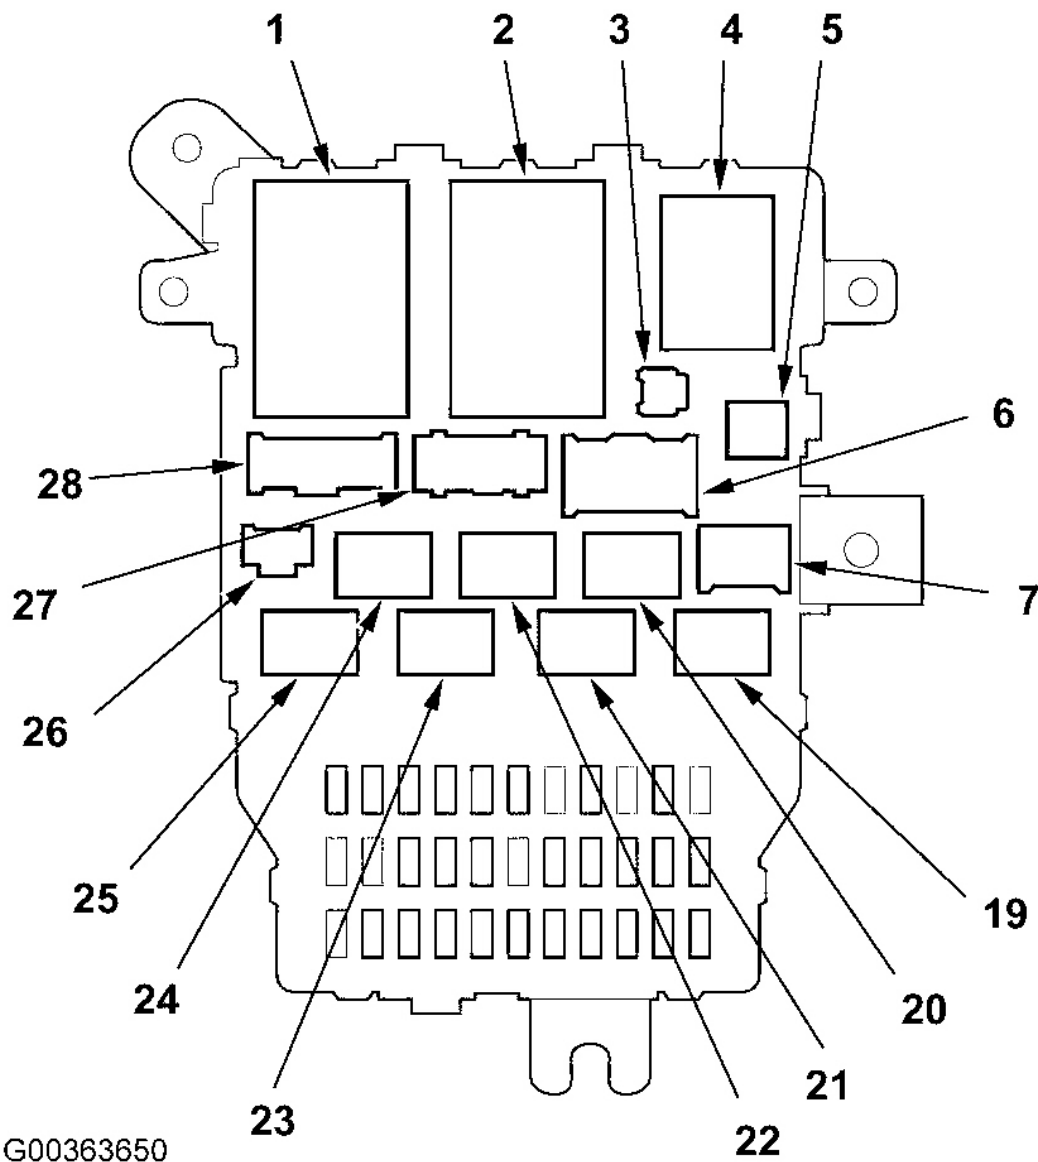


**Fig. 193: Behind Left Kick Panel**

Courtesy of AMERICAN HONDA MOTOR CO., INC.

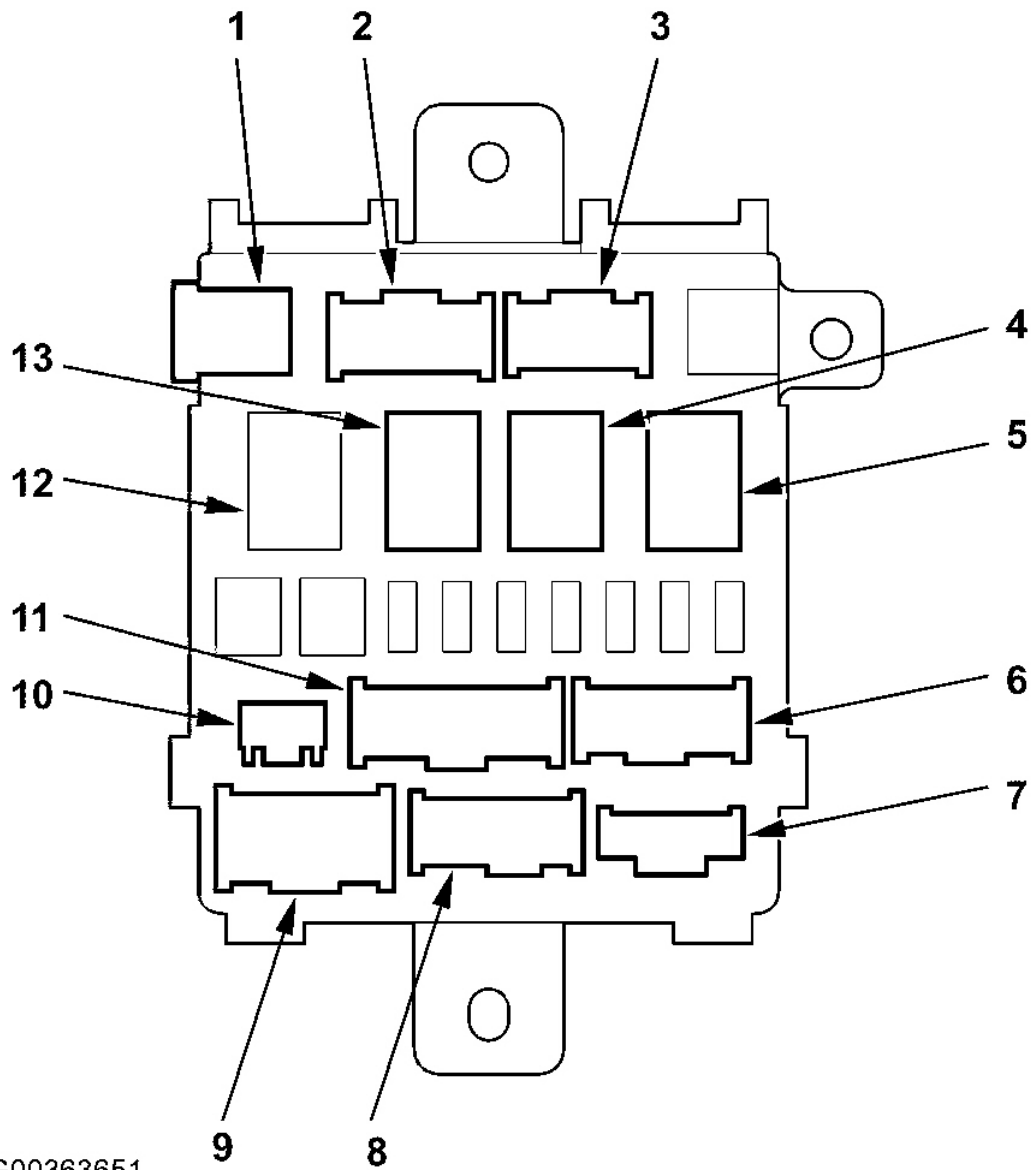

G00363651


**Fig. 194: Behind Right Kick Panel**  
 Courtesy of AMERICAN HONDA MOTOR CO., INC.

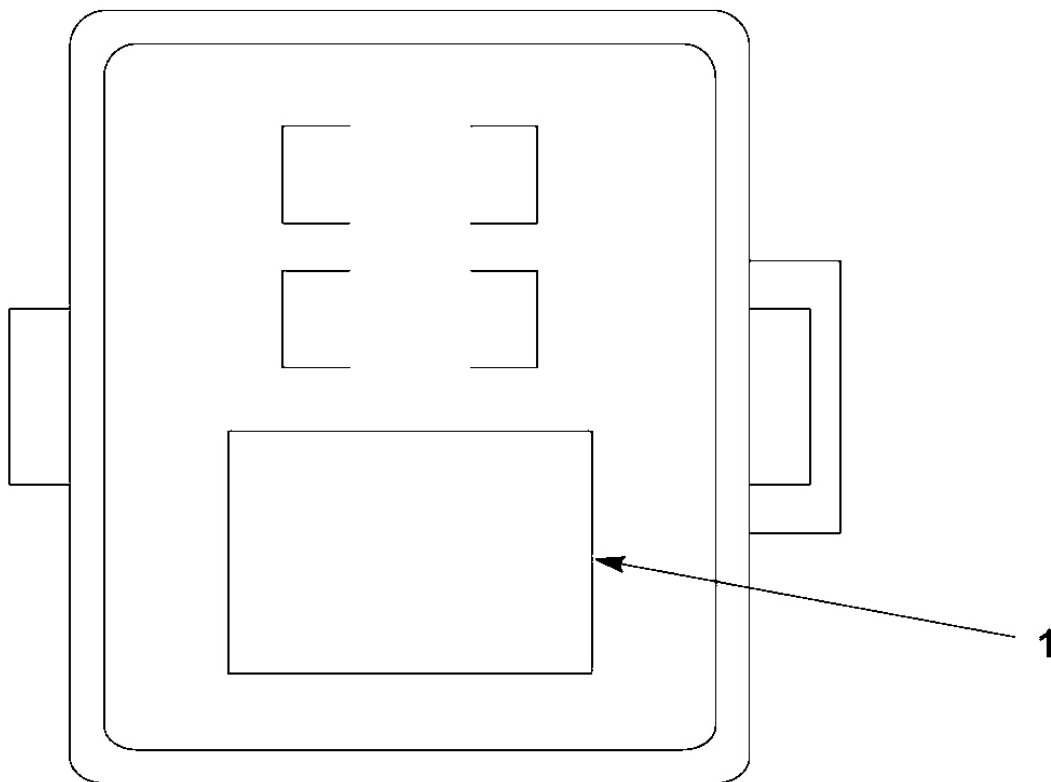

G00363652


**Fig. 195: Under Left Side Of Dash (2005)**  
Courtesy of AMERICAN HONDA MOTOR CO., INC.



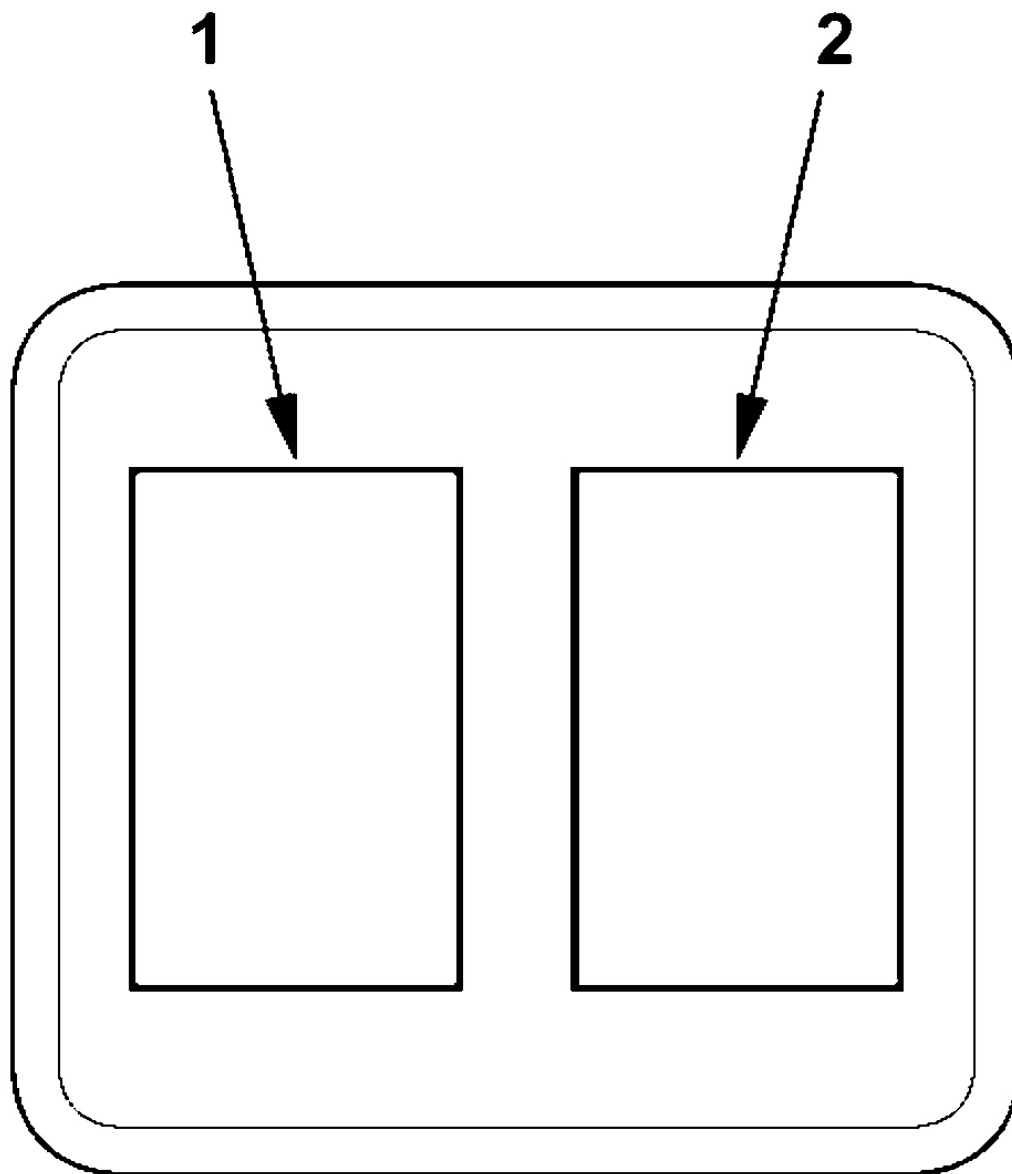

G00363653

**Fig. 196: Under Left Side Of Dash**  
Courtesy of AMERICAN HONDA MOTOR CO., INC.

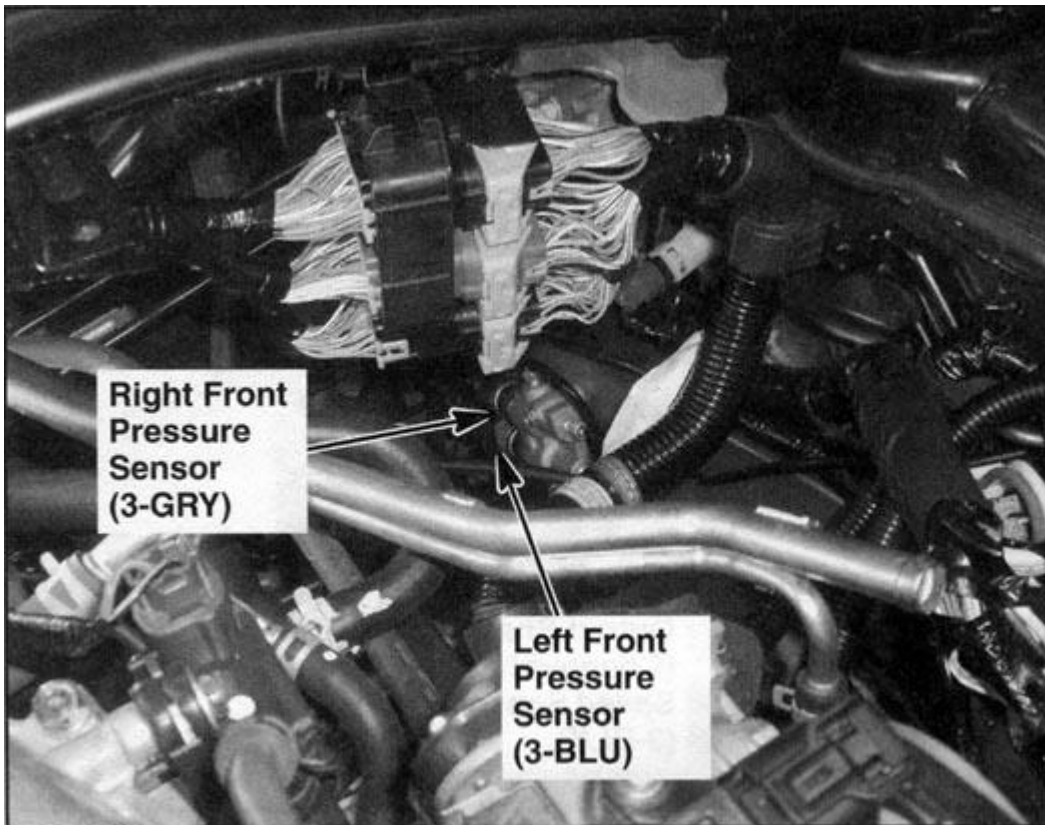

G00430628

**Fig. 197: Left Side Of Engine Compartment (2006)**


Courtesy of AMERICAN HONDA MOTOR CO., INC.



G00430629

**Fig. 198: Under Left Side Of Dash (2006)**


Courtesy of AMERICAN HONDA MOTOR CO., INC.

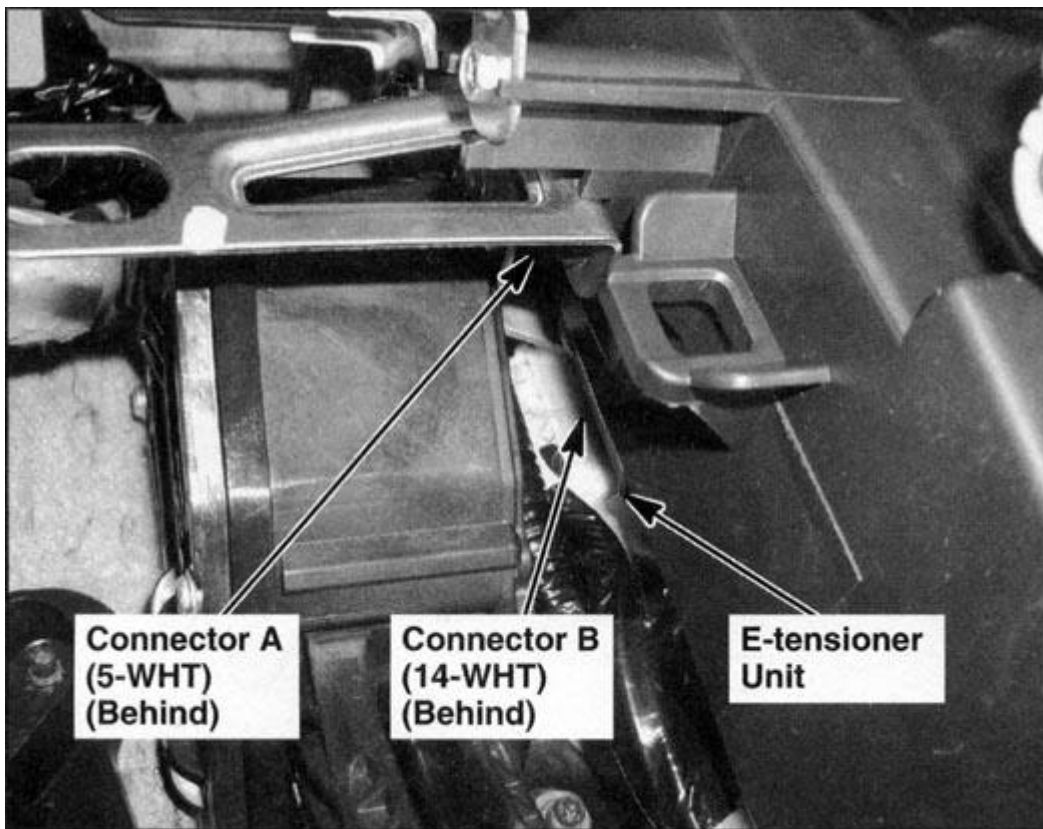

G00430630


**Fig. 199: Under Middle Of Dash (2006)**

Courtesy of AMERICAN HONDA MOTOR CO., INC.

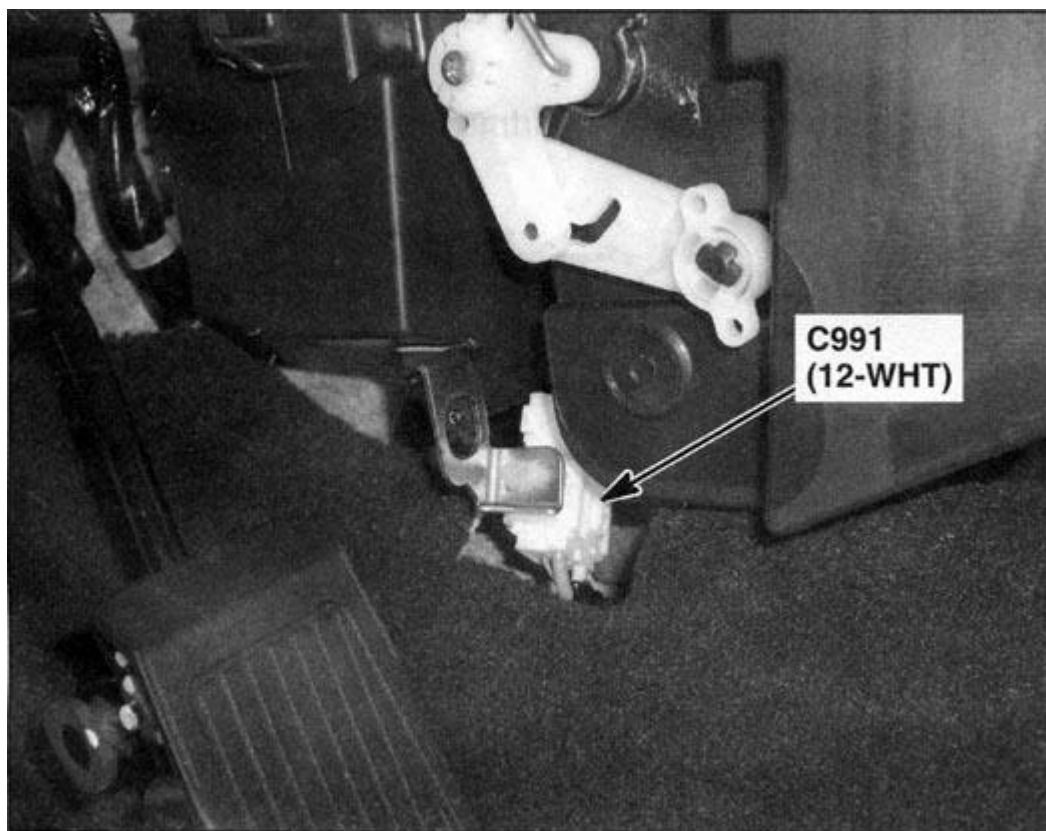

G00430631

**Fig. 200: Under Middle Of Dash (2006)**  
Courtesy of AMERICAN HONDA MOTOR CO., INC.

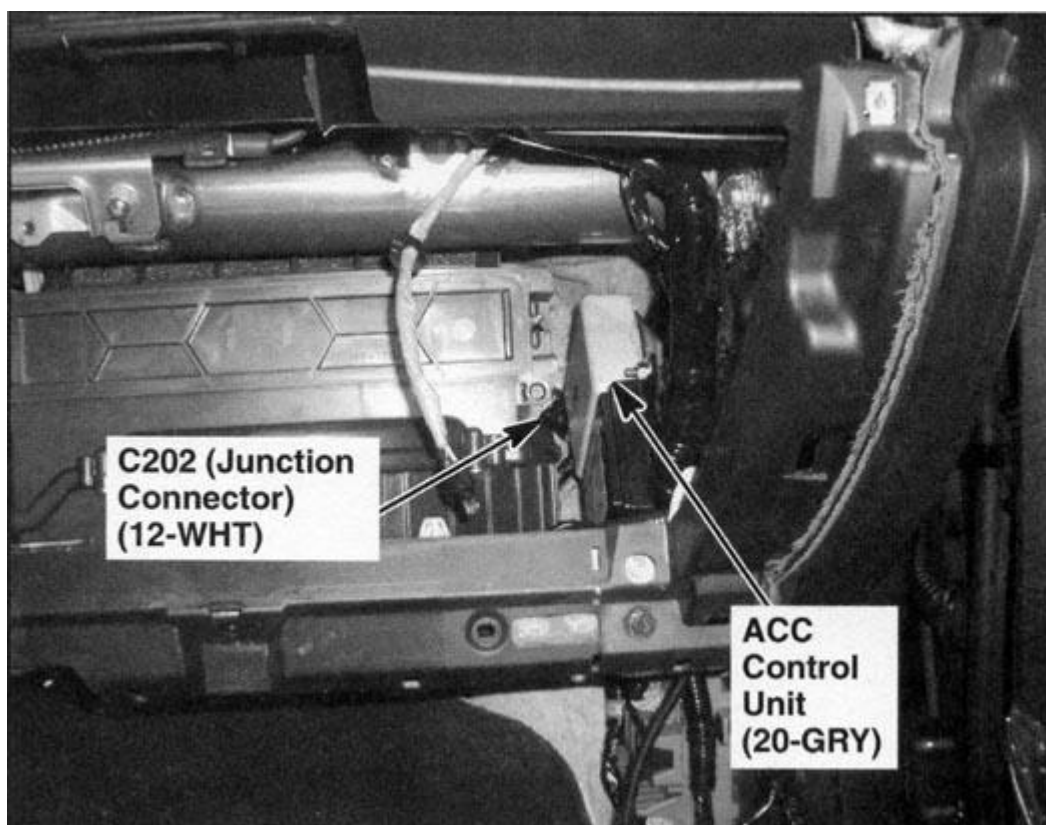


G00430632



**Fig. 201: Behind Right Side Of Glove Box (2006)**


Courtesy of AMERICAN HONDA MOTOR CO., INC.

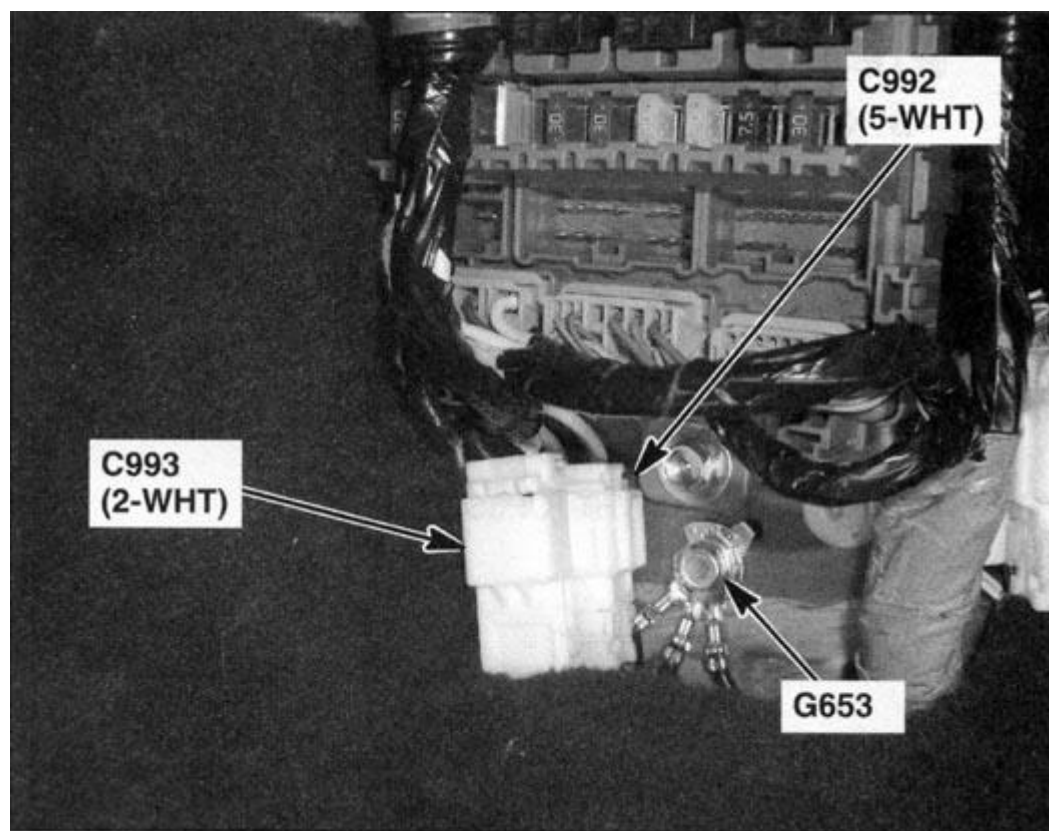

G00430633

**Fig. 202: Behind Right Kick Panel (2006)**

Courtesy of AMERICAN HONDA MOTOR CO., INC.

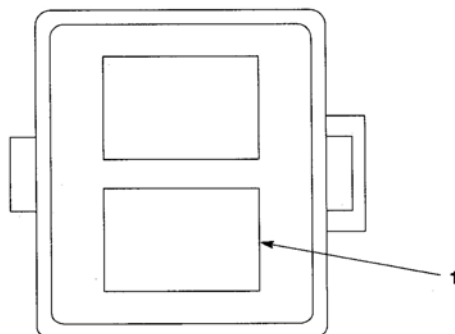

Ref	Socket	Cavities	Connects to
1	Starter Cut Relay 1	5	Engine Compartment Wire Harness (Left Branch)

G00430635

**Fig. 203: Under Left Side Of Dash (2006)**

Courtesy of AMERICAN HONDA MOTOR CO., INC.