

2007 ACURA

RL

BUZZERS, RELAYS & TIMERS

BUZZERS, RELAYS & TIMERS LOCATION

Component	Location
Accessory Power Socket Relay (20)	In driver's under-dash fuse/relay box. See Fig. 188.
A/C Compressor Clutch Relay (2)	In under-hood fuse/relay box. See Fig. 186.
ACC Relay (2)	In auxiliary under-dash relay box. See Fig. 190.
Adaptive Cruise Control Relay (3)	In auxiliary under-hood relay box. See Fig. 187.
A/F Sensor Relay (21)	In driver's under-dash fuse/relay box. See Fig. 188.
Blower Motor Relay (1)	In under-hood fuse/relay box. See Fig. 186.
DRL Relay (1)	In auxiliary under-hood relay box. See Fig. 187.
Fog Light Relay (14)	In under-hood fuse/relay box. See Fig. 186.
Fuel Fill Door Opener Relay (5)	In passenger's under-dash fuse/relay box. See Fig. 189.
HVAC Control Motor Relay	Behind right side of dash. See Fig. 88.
Ignition Coil Relay (24)	In driver's under-dash fuse/relay box. See Fig. 188.
IG2 Relay (1)	In auxiliary under-dash relay box. See Fig. 190.
Keyless Answer Back Buzzer	Behind middle of rear bumper. See Fig. 163.
Optional Relay (12)	In passenger's under-dash fuse/relay box. See Fig. 189.
PGM-FI Main Relay 1 (22)	In driver's under-dash fuse/relay box. See Fig. 188.
PGM-FI Main Relay 2 (25)	In driver's under-dash fuse/relay box. See Fig. 188.
Radiator Fan Control (RFC) Unit Relay (2)	In auxiliary under-hood relay box. See Fig. 187.
Rear Window Defogger Relay (3)	In under-hood fuse/relay box. See Fig. 186.
Seat Heater Relay (4)	In passenger's under-dash fuse/relay box. See Fig. 189.
SH-AWD Relay	Behind rear seat. See Fig. 146.
Starter Cut Relay 1 (1)	In auxiliary under-dash relay holder. See Fig. 197.
Starter Cut Relay 2 (19)	In driver's under-dash fuse/relay box. See Fig. 188.
Throttle Actuator Control Module Relay (13)	In passenger's under-dash fuse/relay box. See Fig. 189.
Turn Signal/Hazard Relay 2 (Sounder)	Under left side of dash. See Fig. 42.
Turn Signal/Hazard Relay (4)	In driver's under-dash fuse/relay box. See Fig. 188.
Windshield Wiper Motor Relay (15)	In under-hood fuse/relay box. See Fig. 186.

CIRCUIT PROTECTION DEVICES

CIRCUIT PROTECTION DEVICES LOCATION

Component	Location
Auxiliary Under-Dash Fuse Holder	Under left side of dash. See Fig. 62 .
Auxiliary Under-Dash Relay Box	Under left side of dash. See Fig. 41 .
Auxiliary Under-Dash Relay Holder	Under left side of dash. See Fig. 62 .
Auxiliary Under-Hood Relay Box	Left side of engine compartment. See Fig. 34 .
Battery Terminal Fuse Box (+)	In battery terminal fuse box. See Fig. 32 .
Driver's Under-Dash Fuse/Relay Box	Behind left kick panel. See Fig. 59 .
Passenger's Under-Dash Fuse/Relay Box	Behind right kick panel. See Fig. 93 .
Under-Hood Fuse/Relay Box	Left rear of engine compartment. See Fig. 30 .

CONTROL UNITS

CONTROL UNITS LOCATION

Component	Location
Active Noise Control Unit	Right side of trunk. See Fig. 160 .
AcuraLink Control Unit (XM Receiver)	On left side of trunk. See Fig. 152 .
Adaptive Cruise Control Unit	Behind right side of dash. See Fig. 195 .
Adaptive Front Lighting Control Unit	Under left side of dash. See Fig. 63 .
Driver's MPCS Unit	In driver's door. See Fig. 130 .
DRL Control Unit	Under left side of dash. See Fig. 64 .
ECPS Control Unit	Under left side of dash. See Fig. 63 .
E-Pretensioner Unit	Under middle of dash. See Fig. 193 .
Front Passenger's MPCS Unit	In front passenger's door. See Fig. 131 .
Fuel Pump Control Module	In left "C" pillar. See Fig. 145 .
Hands FreeLink Control Unit	Behind right kick panel. See Fig. 95 .
Headlight Leveling Control Unit	Under left side of dash. See Fig. 63 .
Immobilizer Control Unit-Receiver	On right side of steering column. See Fig. 48 .
Imoes Unit	Under middle of dash. See Fig. 73 .
Keyless Access Control Unit	Under left side of dash. See Fig. 58 .
Keyless Access RF Unit 1	Behind middle of dash. See Fig. 71 .
Keyless Access RF Unit 2	Middle of rear shelf. See Fig. 156 .
Main Antenna Module	In right "C" pillar. See Fig. 138 .
Moonroof Control Unit	Rear of roof. See Fig. 137 .
Navigation Unit	In trunk, below left side of package tray. See Fig. 153 .
OPDS Unit	In front passenger's seat back. See Fig. 106 .
PCM	Under middle of dash. See Fig. 78 .
Power Rear Window Sunshade Control Unit	Middle of rear shelf. See Fig. 155 .
Power Seat Control Unit	Under driver's seat. See Fig. 102 .
Power Tilt/Telescopic Steering Control Unit	Under left side of dash. See Fig. 41 .
RFC Unit	Front middle of engine compartment. See Fig. 28 .

2007 Acura RL

2007 ACURA RL

SH-AWD Control Unit	Behind rear seat. See Fig. 149.
SRS Unit	Under lower middle of dash. See Fig. 76.
Sub-Antenna Module	In left "C" pillar. See Fig. 142.
Throttle Actuator Control Module	Behind right kick panel. See Fig. 96.
TPMS Control Unit	Right side of rear shelf. See Fig. 158.
VSA Modulator-Control Unit	On right side of engine compartment. See Fig. 2.

MOTORS**MOTORS LOCATION**

Component	Location
Blower Motor	Under right side of dash. See Fig. 90.
Center/Left/Right Rear Headrest Actuator	Behind respective rear seat headrest. See Fig. 113.
Driver's Air Mix Control Motor	Below left side of dash. See Fig. 66.
Driver's Cool Vent Control Motor	Under left side of dash. See Fig. 65.
Driver's Lumbar Support Motor Connector	Under right side of driver's seat. See Fig. 99.
Driver's Power Seat Slide Motor	Under driver's seat. See Fig. 102.
Driver's Power Window Motor	Center of driver's door. See Fig. 128.
Front Passenger's Air Mix Control Motor	Behind right side of dash. See Fig. 85.
Front Passenger's Cool Vent Control Motor	Behind right side of dash. See Fig. 85.
Front Passenger's Lumbar Support Motor Connector	Under front passenger's seat. See Fig. 107.
Front Passenger's Power Seat Recline Motor	Under front passenger's seat. See Fig. 107.
Front Passenger's Power Seat Slide Motor	Under front passenger's seat. See Fig. 110.
Front Passenger's Power Window Motor	Center of front passenger's door. See Fig. 128.
Fuel Tank Unit	Under left side of rear seat. See Fig. 118.
Left Power Mirror Connector	In driver's door. See Fig. 125.
Left Rear Door Lock Actuator Connector	Rear of left rear door. See Fig. 199.
Left Rear Power Window Motor	Center of left rear door. See Fig. 133.
Left/Right Adaptive Front Lighting Gear Box	Behind respective headlight assembly. See Fig. 26.
Left/Right Headlight Leveling Motor	Behind respective headlight assembly. See Fig. 27.
Mode Control Motor	Under left side of dash. See Fig. 64.
Rear Vent Control Motor	Under middle of dash. See Fig. 79.
Recirculation Control Motor	Behind glove box. See Fig. 88.
Right Rear Door Lock Actuator Connector	Rear of right rear door.
Right Rear Power Window Motor	Center of right rear door. See Fig. 133.
Starter	Left side of engine. See Fig. 22.
Windshield Washer Motor	In bottom of washer reservoir. See Fig. 164.
Windshield Wiper Motor	Left rear of engine compartment, under cowl cover. See Fig. 37.

SENDING UNITS & SENSORS

SENDING UNITS & SENSORS LOCATION

Component	Location
A/C Pressure Sensor	Right side of engine compartment. See Fig. 3.
APP Sensor	Under left side of dash. See Fig. 62.
ATF Transmission Sensor	On transmission housing. See Fig. 177.
Automatic Lighting Sensor/Sunlight Sensor	Front center of dash. See Fig. 68.
CKP Sensor 1 & 2	Right side of engine. See Fig. 170.
CMP Sensor	Right side of engine. See Fig. 7.
Differential Oil Temperature Sensor Connector	On rear differential. See Fig. 184.
Driver's Door Outer Handle Light/Touch Sensor Connector	Center of driver's door. See Fig. 129.
Driver's Power Seat Front Up-Down Motor/Position Sensor Connector	Right side of driver's seat. See Fig. 98.
Driver's Power Seat Rear Up-Down Motor/Position Sensor Connector	Left side of driver's seat. See Fig. 97.
Driver's Power Seat Recline Motor/Position Sensor Connector	Under driver's seat. See Fig. 99.
Driver's Power Seat Slide Position Sensor	Under driver's seat. See Fig. 103.
Driver's Seat Position Sensor	Under front of driver's seat. See Fig. 105.
Driver's Vent Air Temperature Sensor	Behind left side of gauge control module. See Fig. 50.
ECT Sensor 1	On top left side of engine. See Fig. 19.
ECT Sensor 2	Left side of engine. See Fig. 17.
EGR Valve Position Sensor	Left side of engine. See Fig. 19.
Evaporator Temperature Sensor Connector	Under left side of dash. See Fig. 65.
Front A/F Sensor (B2, S1) Connector	Middle of engine. See Fig. 15.
Front Passenger's Door Outer Handle Light/Touch Sensor Connector	Center of front passenger's door. See Fig. 129.
Front Passenger's Vent Air Temperature Sensor	Under right side of dash. See Fig. 86.
Front Secondary HO2S (B2, S2) Connector	Middle of engine. See Fig. 15.
FTP Sensor	Above rear differential. See Fig. 185.
Headlight Leveling Sensor	Under left rear of vehicle. See Fig. 179.
Hypoid Gear Speed Sensor	On rear differential. See Fig. 181.
IAT Sensor	Left side of engine. See Fig. 19.
In-Car Temperature Sensor	On dash, right of steering column. See Fig. 38.
Input Shaft (Mainshaft) Speed Sensor	In transmission housing. See Fig. 24.
Knock Sensor	On top middle of engine, below intake manifold. See Fig. 13.
Left Front Impact Sensor	Behind left side of front bumper. See Fig. 168.
Left Front Pressure Sensor	Left side of engine compartment. See Fig. 191.
Left Front Wheel Speed Sensor Connector	Left side of engine compartment. See Fig. 35.
Left Rear Wheel Speed Sensor Connector	Under left rear of vehicle. See Fig. 179.
Left Side Impact Sensor (1st)	At base of left "B" pillar. See Fig. 121.
Left Side Impact Sensor (2nd)	In left "C" pillar. See Fig. 143.
MAP Sensor	Left side of engine. See Fig. 16.

2007 Acura RL

2007 ACURA RL

Output Shaft (Countershaft) Speed Sensor	In transmission housing. See Fig. 177.
Outside Air Temperature Sensor	Behind middle of front bumper. See Fig. 167.
Power Telescopic Motor/Position Sensor Connector	Under steering column cover. See Fig. 49.
Power Tilt Steering Motor/Position Sensor Connector	Under steering column cover. See Fig. 49.
Rear A/F Sensor (B1, S1) Connector	Middle of engine. See Fig. 8.
Rear Safing Sensor	Under rear seat. See Fig. 120.
Rear Secondary HO2S (B1, S2) Connector	Middle of engine. See Fig. 8.
Right Front Impact Sensor	Behind right side of front bumper. See Fig. 168.
Right Front Pressure Sensor	Left side of engine compartment. See Fig. 191.
Right Front Wheel Speed Sensor Connector	On right side of engine compartment. See Fig. 1.
Right Rear Wheel Speed Sensor Connector	Under right rear of vehicle. See Fig. 179.
Right Side Impact Sensor	At base of right "B" pillar. See Fig. 121.
Right Side Impact Sensor (2nd)	In right "C" pillar. See Fig. 143.
Seat Weight Sensor Unit	Under front passenger's seat. See Fig. 111.
Secondary Fuel Gauge Sending Unit	Under right side of rear seat. See Fig. 119.
Steering Angle Sensor	On side of steering column. See Fig. 45.
TP Sensor/Throttle Actuator	On throttle body. See Fig. 18.
Yaw Rate-Lateral Acceleration Sensor	Under center console. See Fig. 80.

SOLENOIDS & SOLENOID VALVES**SOLENOIDS & SOLENOID VALVES LOCATION**

Component	Location
A/C Compressor Connector	Right side of engine compartment. See Fig. 173.
A/T Clutch Pressure Control Solenoid Valve A	On transmission housing. See Fig. 23.
A/T Clutch Pressure Control Solenoid Valve B	On transmission housing. See Fig. 23.
A/T Clutch Pressure Control Solenoid Valve C	On transmission housing. See Fig. 25.
Driver's Seat Belt Tension Reducer Solenoid Connector	On base of left "B" pillar. See Fig. 121.
ECPS Valve Connector	Left side of engine compartment. See Fig. 21.
EGR Valve	Left side of engine. See Fig. 19.
Engine Mount Control Solenoid Valve	Middle of engine. See Fig. 20.
EVAP Canister Purge Valve	At left side of engine compartment, near strut tower. See Fig. 16.
EVAP Canister Vent Shut Valve	Under rear of vehicle. See Fig. 67.
Front Passenger's Seat Belt Tension Reducer Solenoid Connector	On base of right "B" pillar. See Fig. 121.
Fuel Fill Door Opener Solenoid	On left side of trunk. See Fig. 151.
IMT Valve	Right side of engine. See Fig. 7.
Injector No. 1	Middle of engine. See Fig. 11.
Injector No. 2	Middle of engine. See Fig. 11.
Injector No. 3	Middle of engine. See Fig. 11.
Injector No. 4	Middle of engine. See Fig. 12.

2007 Acura RL

2007 ACURA RL

Injector No. 5	Middle of engine. See Fig. 12.
Injector No. 6	Middle of engine. See Fig. 12.
Left Clutch Electromagnetic Coil	On rear differential. See Fig. 182.
Right Clutch Electromagnetic Coil	On rear differential. See Fig. 184.
Rocker Arm Oil Control Solenoid (VTEC Solenoid Valve)	Right side of engine. See Fig. 171.
Shift Lock Solenoid	Under center console. See Fig. 80.
Shift Solenoid Valve	On rear differential. See Fig. 183.
Starter Solenoid	On starter. See Fig. 22.
Trunk Lid Latch Opener Solenoid Connector	Center rear of trunk. See Fig. 205.

SWITCHES

SWITCHES LOCATION

Component	Location
Brake Fluid Level Switch	Integral to brake fluid reservoir cap. See Fig. 36.
Brake Pedal Position Switch	Near brake pedal. See Fig. 57.
Driver's Seat Belt Switch Connector	Under driver's seat. See Fig. 105.
Front Passenger's Seat Belt Switch Connector	Under front passenger's seat. See Fig. 108.
Left Rear Door Lock Knob Switch Connector	Rear of left rear door. See Fig. 199.
Oil Pressure Switch	Right side of engine. See Fig. 170.
Parking Brake Switch	Under left side of dash. See Fig. 57.
PSP Switch	Right side of engine. See Fig. 172.
Right Rear Door Lock Knob Switch Connector	Rear of right rear door.
Rocker Arm Oil Pressure Switch (VTEC Oil Pressure Switch)	Right side of engine. See Fig. 170.
Security Hood Switch Connector	Behind middle of front bumper. See Fig. 166.
Transmission Range Switch	On transaxle. See Fig. 24.
Trunk Lid Latch Switch Connector	Center rear of trunk. See Fig. 205.
Washer Fluid Level Switch Connector	Behind right side of front bumper. See Fig. 164.
2nd Clutch Transmission Fluid Pressure Switch	Top left side of engine. See Fig. 20.
3rd Clutch Transmission Fluid Pressure Switch	On transmission. See Fig. 177.
4th Clutch Transmission Fluid Pressure Switch Connector	On transmission. See Fig. 25.

MISCELLANEOUS

MISCELLANEOUS LOCATION

Component	Location
Alternator	Right front of engine compartment. See Fig. 4.
AM/FM Main Antenna Amplifier	In right "C" pillar. See Fig. 138.
AM Signal Main Window Antenna	Right "C" pillar. See Fig. 138.
Antenna Sub-Lead Connector	Behind right kick panel. See Fig. 95.
Audio Amplifier	Right side of trunk. See Fig. 159.

2007 Acura RL

2007 ACURA RL

Blower Power Transistor	Behind right side of dash, left of blower motor. See Fig. 89 .
Cable Real Connector A	On steering column. See Fig. 47 .
Cable Reel Connector B	On steering column. See Fig. 46 .
Cable Reel Connector C	On steering wheel. See Fig. 44 .
DCL (Data Link Connector)	Under left side of dash. See Fig. 51 .
Driver's Airbag First & Second Inflators Connector	In base of steering column. See Fig. 43 .
Driver's E-Pretensioner	Base of left "B" pillar. See Fig. 121 .
Driver's Seat Belt Tensioner Connector	At base of left "B" pillar. See Fig. 122 .
Driver's Seat Heater Connector	Under driver's seat. See Fig. 100 .
Driver's Side Airbag Inflator Connector	Under driver's seat. See Fig. 101 .
FM Signal Main Window Antenna	Right "C" pillar. See Fig. 138 .
FM Signal Sub-Window Antenna	In left "C" pillar. See Fig. 142 .
Front Active Noise Control Microphone	In center front of roof. See Fig. 135 .
Front Interior LF Antenna	Behind middle of dash. See Fig. 73 .
Front Passenger's Airbag First & Second Inflators Connector	Behind glove box. See Fig. 85 .
Front Passenger's E-Pretensioner	Base of right "B" pillar. See Fig. 121 .
Front Passenger's Seat Belt Tensioner Connector	At base of right "B" pillar. See Fig. 122 .
Front Passenger's Seat Heater Connector	Under front passenger's seat. See Fig. 110 .
Front Passenger's Side Airbag Inflator Connector	Under front passenger seat. See Fig. 109 .
GPS Antenna	Middle of rear shelf. See Fig. 155 .
High Horn	Behind middle of front bumper. See Fig. 166 .
Ignition Coil No. 1	Middle of engine. See Fig. 9 .
Ignition Coil No. 2	Middle of engine. See Fig. 9 .
Ignition Coil No. 3	Middle of engine. See Fig. 9 .
Ignition Coil No. 4	Middle of engine. See Fig. 14 .
Ignition Coil No. 5	Middle of engine. See Fig. 14 .
Ignition Coil No. 6	Middle of engine. See Fig. 14 .
Junction Connector C105	Middle of engine. See Fig. 10 .
Junction Connector C106	Top of transmission. See Fig. 25 .
Junction Connector C107	Middle of engine. See Fig. 10 .
Junction Connector C202	Behind right side of dash. See Fig. 195 .
Junction Connector C305	Under left side of dash. See Fig. 56 .
Junction Connector C306	Under left side of dash. See Fig. 56 .
Junction Connector C307	Under left side of dash. See Fig. 62 .
Junction Connector C310	Left side of engine compartment. See Fig. 34 .
Junction Connector C404	Under left side of dash. See Fig. 192 .
Junction Connector C405	Under steering column cover. See Fig. 47 .
Junction Connector C507	Behind left side of dash. See Fig. 40 .
Junction Connector C508	Behind left side of dash. See Fig. 40 .
Junction Connector C509	Behind left side of dash. See Fig. 40 .
Junction Connector C510	Behind left side of dash. See Fig. 39 .

2007 Acura RL

2007 ACURA RL

Junction Connector C511	Behind left side of dash. See Fig. 39 .
Junction Connector C512	Behind left side of dash. See Fig. 39 .
Junction Connector C513	Behind left side of dash. See Fig. 39 .
Junction Connector C514	Under left side of dash. See Fig. 54 .
Junction Connector C515	Behind middle of dash. See Fig. 69 .
Junction Connector C516	Behind middle of dash. See Fig. 69 .
Junction Connector C517	Behind middle of dash. See Fig. 69 .
Junction Connector C518	Behind middle of dash. See Fig. 72 .
Junction Connector C519	Behind middle of dash. See Fig. 72 .
Junction Connector C520	Under center console. See Fig. 82 .
Junction Connector C521	Behind middle of dash. See Fig. 70 .
Junction Connector C522	Behind middle of dash. See Fig. 70 .
Junction Connector C523	Behind middle of dash. See Fig. 75 .
Junction Connector C524	Behind middle of dash. See Fig. 70 .
Junction Connector C525	Under right side of dash. See Fig. 92 .
Junction Connector C526	Under right side of dash. See Fig. 92 .
Junction Connector C607	Behind left kick panel. See Fig. 61 .
Junction Connector C608	Behind left kick panel. See Fig. 60 .
Junction Connector C609	Behind left kick panel. See Fig. 60 .
Junction Connector C610	Under driver's seat. See Fig. 104 .
Junction Connector C614	In left "C" pillar. See Fig. 144 .
Junction Connector C615	In left "C" pillar. See Fig. 145 .
Junction Connector C616	In left "C" pillar. See Fig. 145 .
Junction Connector C660	At base of right "B" pillar. See Fig. 122 .
Junction Connector C661	At base of left "B" pillar. See Fig. 122 .
Junction Connector C662	Behind rear seat. See Fig. 148 .
Junction Connector C663	Behind rear seat. See Fig. 148 .
Junction Connector C702	On left side of trunk. See Fig. 150 .
Junction Connector C755	In driver's door. See Fig. 130 .
Junction Connector C756	In driver's door. See Fig. 130 .
Junction Connector C757	In driver's door. See Fig. 126 .
Junction Connector C775	In front passenger's door. See Fig. 126 .
Junction Connector C776	In front passenger's door. See Fig. 131 .
Junction Connector C783	In left rear door. See Fig. 127 .
Junction Connector C793	In right rear door. See Fig. 127 .
Junction Connector C833	Middle of trunk. See Fig. 162 .
Junction Connector C852	In left front of roof. See Fig. 134 .
Left Front TPMS Initiator	Behind left side of front bumper. See Fig. 168 .
Left Rear TPMS Initiator	On left rear fenderwell. See Fig. 178 .
Left Search Coil	On rear differential. See Fig. 183 .
Left Side Curtain Airbag Inflator Connector	In left "C" pillar. See Fig. 142 .
Low Horn	Behind middle of front bumper. See Fig. 166 .
MES Connector	Under left side of dash. See Fig. 56 .
Millimeter Wave Radar	Behind front grille. See Fig. 166 .

2007 Acura RL

2007 ACURA RL

Navigation Service Check Connector	Under navigation unit. See Fig. 154 .
Noise Reduction Condenser Connector	In right "C" pillar. See Fig. 141 .
Rear Active Noise Control Microphone Connector	In rear of roof. See Fig. 200 .
Rear Bumper LF Antenna Connector	Behind middle of rear bumper. See Fig. 163 .
Rear Interior LF Antenna	Under rear of center console. See Fig. 84 .
Rear Shelf LF Antenna	Middle of rear shelf. See Fig. 157 .
Rearview Camera Connector	Middle of trunk lid. See Fig. 206 .
Right Front TPMS Initiator	Behind right side of front bumper. See Fig. 168 .
Right Rear TPMS Initiator	On right rear fenderwell. See Fig. 178 .
Right Search Coil	On rear differential. See Fig. 180 .
Right Side Curtain Airbag Inflator Connector	In right "C" pillar. See Fig. 139 .
S10 (Thermal Joint)	Top left side of engine. See Fig. 20 .
S11 (Thermal Joint)	Right side of engine compartment. See Fig. 198 .
S12 (Thermal Joint)	Top left side of engine. See Fig. 20 .
T1	In under-hood fuse/relay box. See Fig. 31 .
T2	Top of transmission housing. See Fig. 24 .
T3	Left rear of engine, near starter solenoid. See Fig. 22 .
T4	Right side of engine compartment. See Fig. 198 .
T15	On rear differential. See Fig. 181 .
T16	Behind left side rear seat headrest. See Fig. 113 .
T17	Behind center rear seat headrest. See Fig. 113 .
T18	Behind right side rear seat headrest. See Fig. 113 .
T101	In under-hood fuse/relay box. See Fig. 31 .
T102	Right side of engine compartment. See Fig. 4 .
XM Antenna Satellite Signal Connector (USA: Base)	Center rear of roof. See Fig. 202 .
XM Antenna Satellite Signal Connector (USA: Technology Package)	Center rear of roof. See Fig. 136 .
XM Antenna Terrestrial Signal Connector	Center rear of roof. See Fig. 136 .
XM Receiver	Left side of trunk. See Fig. 204 .

CONNECTORS**CONNECTORS LOCATION**

Component	Location
C101 (Black, 33 Pin)	Left side of engine compartment. See Fig. 35 .
C102 (Gray, 33 Pin)	Left side of engine compartment. See Fig. 35 .
C103 (Black, 23 Pin)	Left side of engine compartment. See Fig. 35 .
C104 (Gray, 1 Pin)	Left side of engine compartment, near shock tower. See Fig. 33 .
C109 (Brown, 1 Pin)	Top of transmission. See Fig. 25 .
C151 (Black, 6 Pin)	Right side of engine. See Fig. 171 .
C152 (Black, 1 Pin)	Top middle of engine. See Fig. 13 .

2007 Acura RL

2007 ACURA RL

C153 (Black, 5 Pin)	Top of transmission housing. See Fig. 24.
C201 (White, 18 Pin)	Behind right kick panel. See Fig. 95.
C251 (White, 13 Pin)	Under right side of dash. See Fig. 89.
C301 (White, 34 Pin)	Under left side of dash. See Fig. 53.
C302 (Brown, 3 Pin)	Behind lower left side of dash. See Fig. 53.
C303 (Yellow, 4 Pin)	Behind lower left side of dash. See Fig. 53.
C304 (White, 5 Pin)	Behind lower left side of dash. See Fig. 55.
C308 (Gray, 2 Pin)	Left side of engine compartment. See Fig. 176.
C308 (Gray, 2 Pin)	Left side of engine compartment. See Fig. 176.
C309 (Gray, 4 Pin)	Left side of engine compartment. See Fig. 175.
C401 (White, 14 Pin)	Under left side of dash.
C402 (White, 34 Pin)	Under left side of dash.
C403 (Yellow, 4 Pin)	Under left side of dash.
C501 (White, 17 Pin)	Under middle of dash. See Fig. 77.
C502 (White, 12 Pin)	Behind right side of dash. See Fig. 91.
C503 (Brown, 2 Pin)	Behind right side of dash. See Fig. 91.
C505 (Canada) (12 Pin)	Under middle of dash. See Fig. 74.
C505 (USA) (Gray, 2 Pin)	Behind middle of dash. See Fig. 74.
C551 (Light Blue, 6 Pin)	Under center console. See Fig. 83.
C599 (Gray, 8 Pin)	Under center console.
C601 (White, 23 Pin)	Behind left kick panel. See Fig. 61.
C602 (White, 20 Pin)	Behind left kick panel. See Fig. 60.
C603 (Light Blue, 6 Pin)	Behind middle of dash. See Fig. 74.
C604 (Yellow, 16 Pin)	Behind middle of dash. See Fig. 74.
C606 (White, 24 Pin)	In left "C" pillar. See Fig. 141.
C617 (White, 5 Pin)	Left side of trunk. See Fig. 203.
C631 (White, 24 Pin)	Under left side of dash. See Fig. 55.
C632 (White, 8 Pin)	Under left side of dash. See Fig. 55.
C633 (White, 6 Pin)	In right "C" pillar. See Fig. 139.
C651 (White, 34 Pin)	Behind right kick panel. See Fig. 94.
C652 (White, 8 Pin)	Behind right kick panel. See Fig. 94.
C653 (White, 23 Pin)	Behind rear seat. See Fig. 147.
C654 (White, 12 Pin)	Behind rear seat. See Fig. 147.
C655 (Yellow, 16 Pin)	Behind rear seat. See Fig. 147.
C656 (White, 20 Pin)	In right "C" pillar. See Fig. 140.
C657 (USA: Base) (White, 12 Pin)	Right side of trunk. See Fig. 161.
C657 (USA: Technology Package & Canada) (White, 16 Pin)	Right side of trunk. See Fig. 161.
C658 (White, 12 Pin)	Behind rear seat. See Fig. 148.
C659 (White, 8 Pin)	Behind rear seat. See Fig. 148.
C698 (Gray, 10 Pin)	Near rear differential. See Fig. 180.
C699 (Gray, 6 Pin)	Near rear differential. See Fig. 180.
C701 (White, 20 Pin)	Left side of trunk. See Fig. 150.
C751 (White, 14 Pin)	Under left side of dash. See Fig. 55.

2007 Acura RL

2007 ACURA RL

C752 (White, 20 Pin)	Front of driver's door. See Fig. 124.
C754 (White, 28 Pin)	In driver's door. See Fig. 125.
C771 (White, 20 Pin)	Under right side of dash. See Fig. 91.
C772 (Light Blue, 6 Pin)	Behind right kick panel. See Fig. 95.
C773 (White, 20 Pin)	In front passenger's door. See Fig. 125.
C774 (White, 20 Pin)	Front of front passenger's door. See Fig. 124.
C781 (White, 18 Pin)	Left "B" pillar. See Fig. 123.
C782 (White, 6 Pin)	In left rear door. See Fig. 132.
C791 (Gray, 17 Pin)	Right "B" pillar. See Fig. 123.
C792 (White, 6 Pin)	In right rear door. See Fig. 132.
C801 (Gray, 4 Pin)	Under front passenger's seat. See Fig. 109.
C831 (USA: Base) (White, 12 Pin)	Middle of trunk lid. See Fig. 162.
C831 (USA: Technology Package & Canada) (White, 16 Pin)	Middle of trunk lid. See Fig. 162.
C851 (White, 8 Pin)	Rear of roof. See Fig. 137.
C901 (White, 23 Pin)	Under driver's seat. See Fig. 101.
C903 (Gray, 2 Pin)	Under driver's seat. See Fig. 101.
C951 (Gray, 3 Pin)	Under rear seat. See Fig. 116.
C961 (Gray, 3 Pin)	Right side of rear seat. See Fig. 114.
C962 (Gray, 3 Pin)	Behind center of rear seat. See Fig. 115.
C963 (Gray, 3 Pin)	Behind center of rear seat. See Fig. 115.
C971 (Base) (Gray, 10 Pin)	Under driver's seat. See Fig. 105.
C971 (Canada: Elite) (12 Pin)	Under driver's seat. See Fig. 105.
C981 (Base) (Gray, 10 Pin)	Under front passenger's seat. See Fig. 112.
C981 (Canada: Elite) (12 Pin)	Under front passenger's seat. See Fig. 112.
C991 (White, 12 Pin)	Under middle of dash. See Fig. 194.
C992 (White, 5 Pin)	Behind right kick panel. See Fig. 196.
C993 (White, 2 Pin)	Behind right kick panel. See Fig. 196.

GROUND S**GROUND S LOCATION**

Component	Location
G1	Left side of engine compartment. See Fig. 29.
G2	Top of transmission housing. See Fig. 24.
G101	Left side of engine. See Fig. 17.
G102	On right front of engine. See Fig. 6.
G201	Behind right side of front bumper. See Fig. 165.
G202	Right side of engine compartment. See Fig. 5.
G301	Behind left side of front bumper. See Fig. 169.
G351	Middle of engine compartment. See Fig. 174.
G401	Under right side of dash. See Fig. 87.
G501	Under left side of dash. See Fig. 52.
G502	Under left side of dash. See Fig. 52.

2007 Acura RL

2007 ACURA RL

G503	Under middle of dash. See Fig. 73.
G504	Under middle of dash. See Fig. 75.
G505	Under center console. See Fig. 81.
G506	Behind glove box. See Fig. 86.
G601	At left side of floor. See Fig. 117.
G602	In left "C" pillar. See Fig. 116.
G603	In left "C" pillar. See Fig. 144.
G604	In left "C" pillar. See Fig. 142.
G651	At right side of floor. See Fig. 117.
G652	In right "C" pillar. See Fig. 116.
G653	Behind right kick panel. See Fig. 196.
G701	Left side of trunk. See Fig. 150.
G801	In rear of roof. See Fig. 201.
G851	In right "C" pillar. See Fig. 139.


COMPONENT LOCATION GRAPHICS

NOTE: Figures may show multiple component locations. Refer to appropriate table for proper figure references.




G00447066

Fig. 1: Right Side Of Engine Compartment
Courtesy of AMERICAN HONDA MOTOR CO., INC.

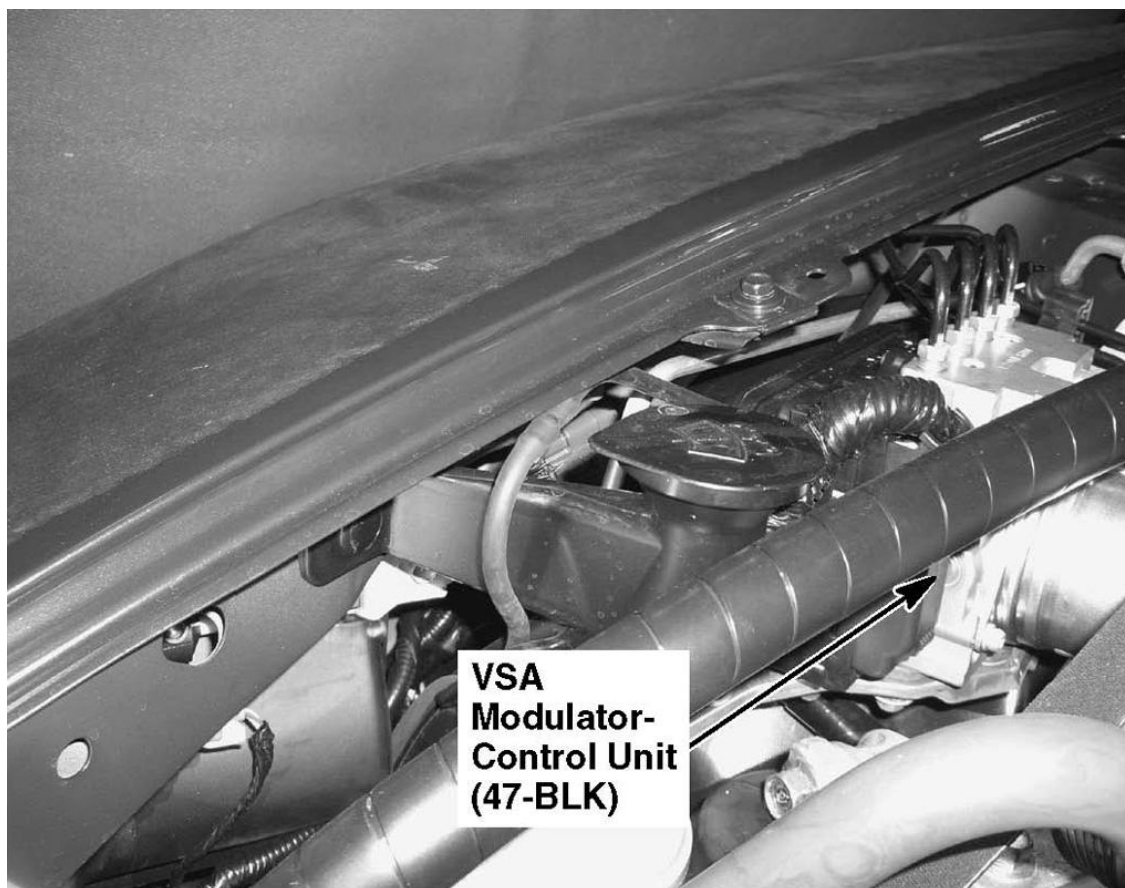


G00447065

Fig. 2: Right Side Of Engine Compartment
Courtesy of AMERICAN HONDA MOTOR CO., INC.

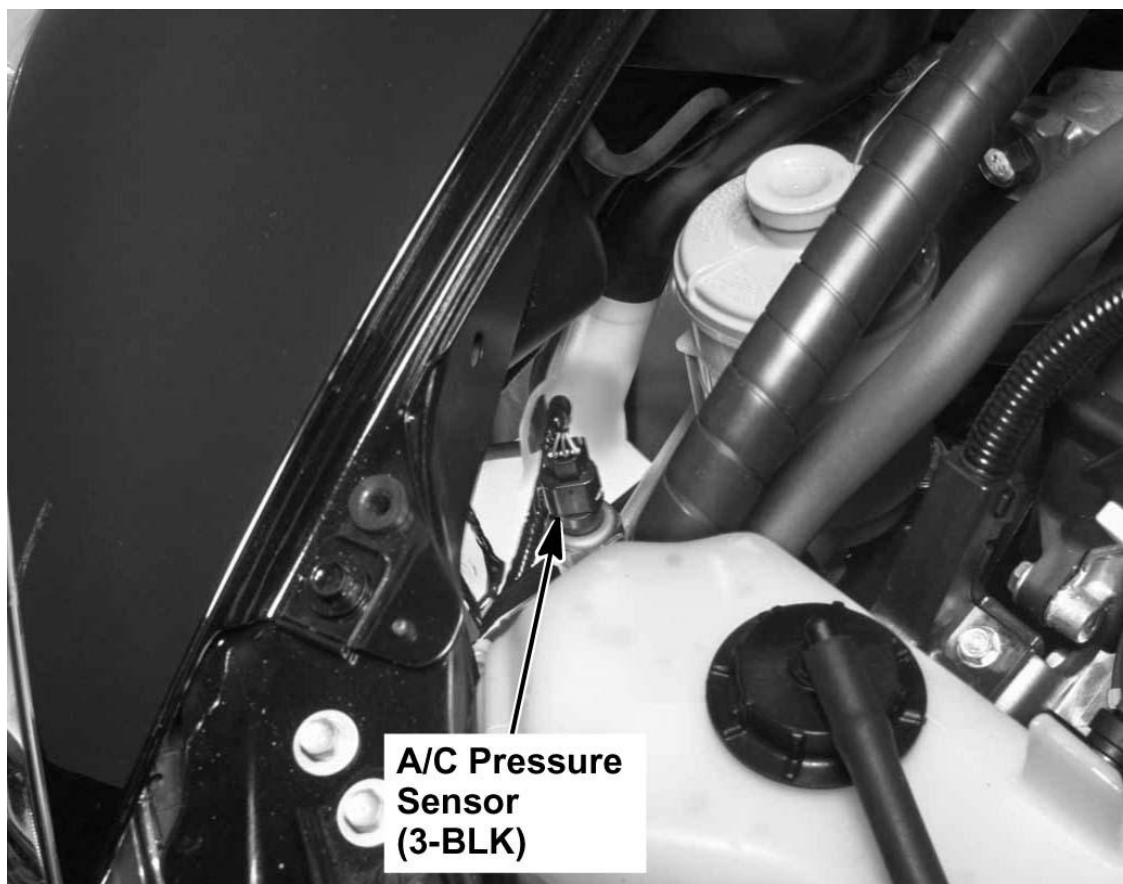


G00363458

Fig. 3: Right Side Of Engine Compartment
Courtesy of AMERICAN HONDA MOTOR CO., INC.

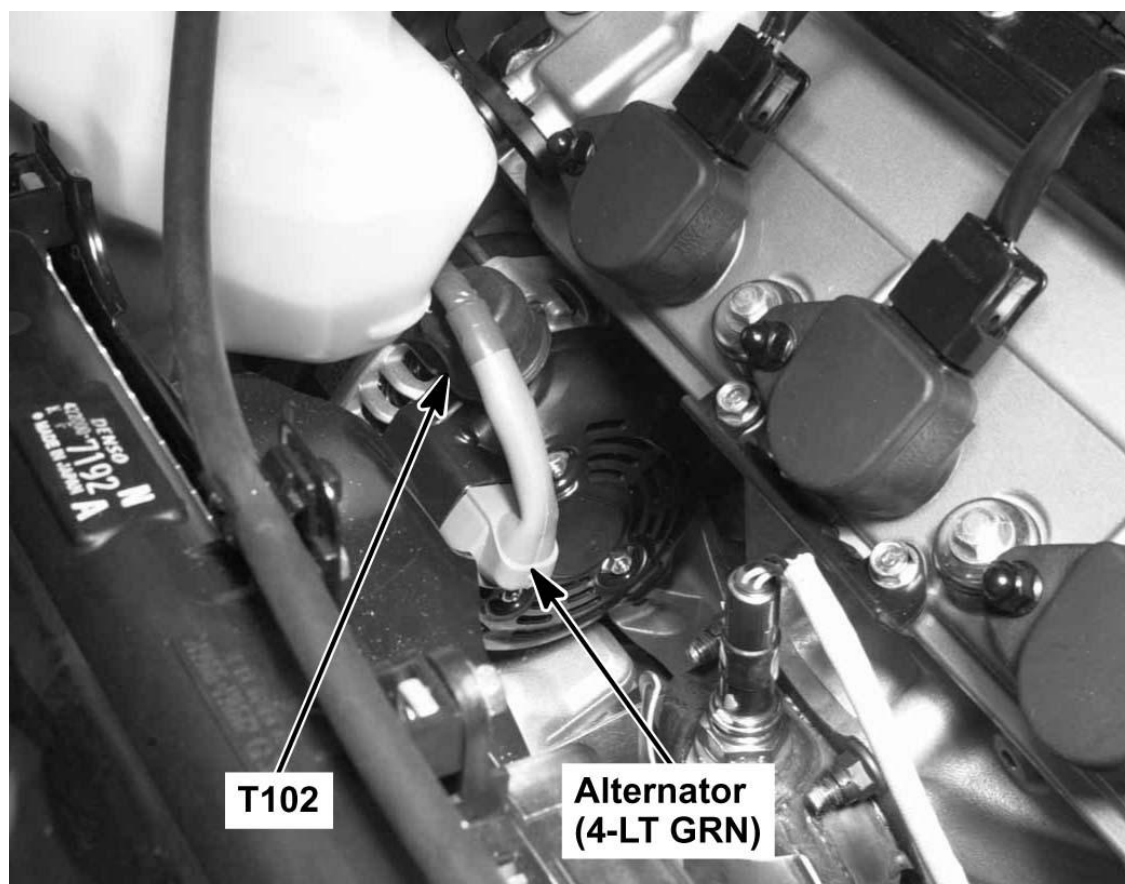


G00363459

Fig. 4: Right Side Of Engine Compartment
Courtesy of AMERICAN HONDA MOTOR CO., INC.

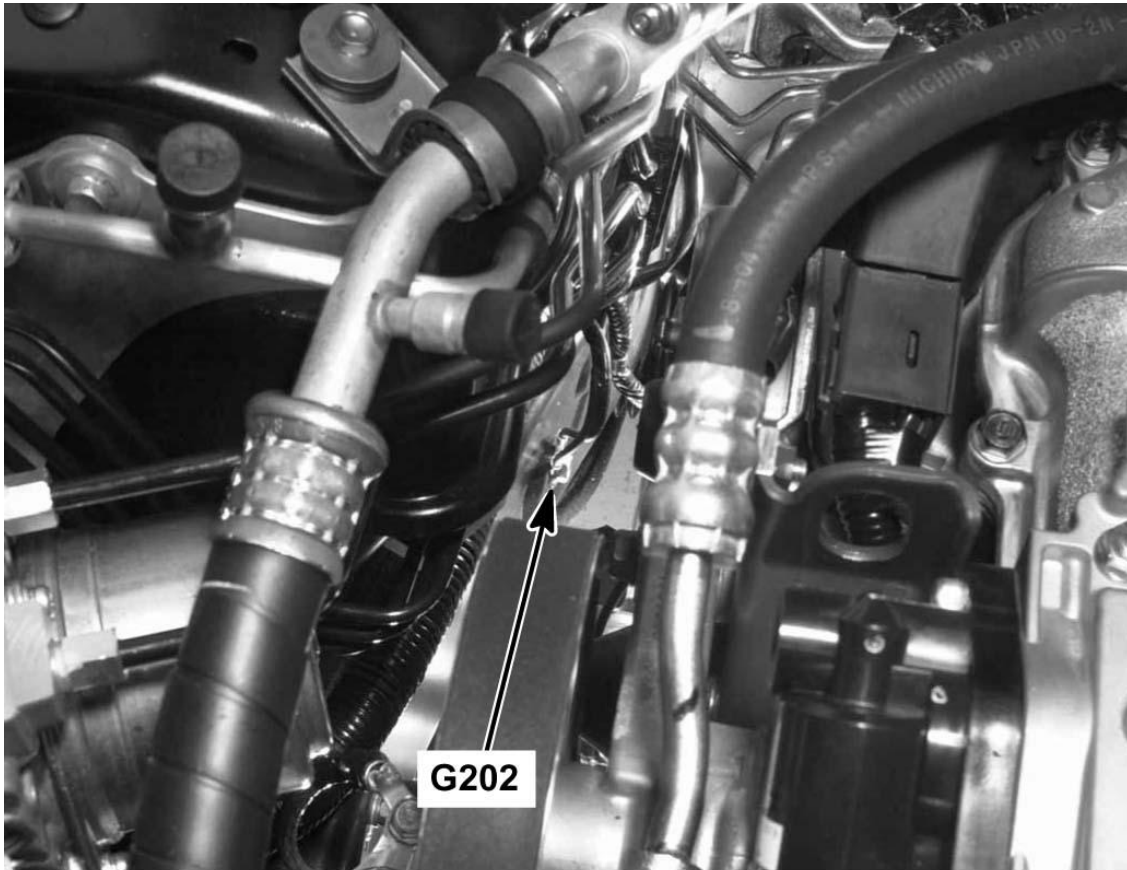

G00363460


Fig. 5: Right Side Of Engine Compartment
Courtesy of AMERICAN HONDA MOTOR CO., INC.

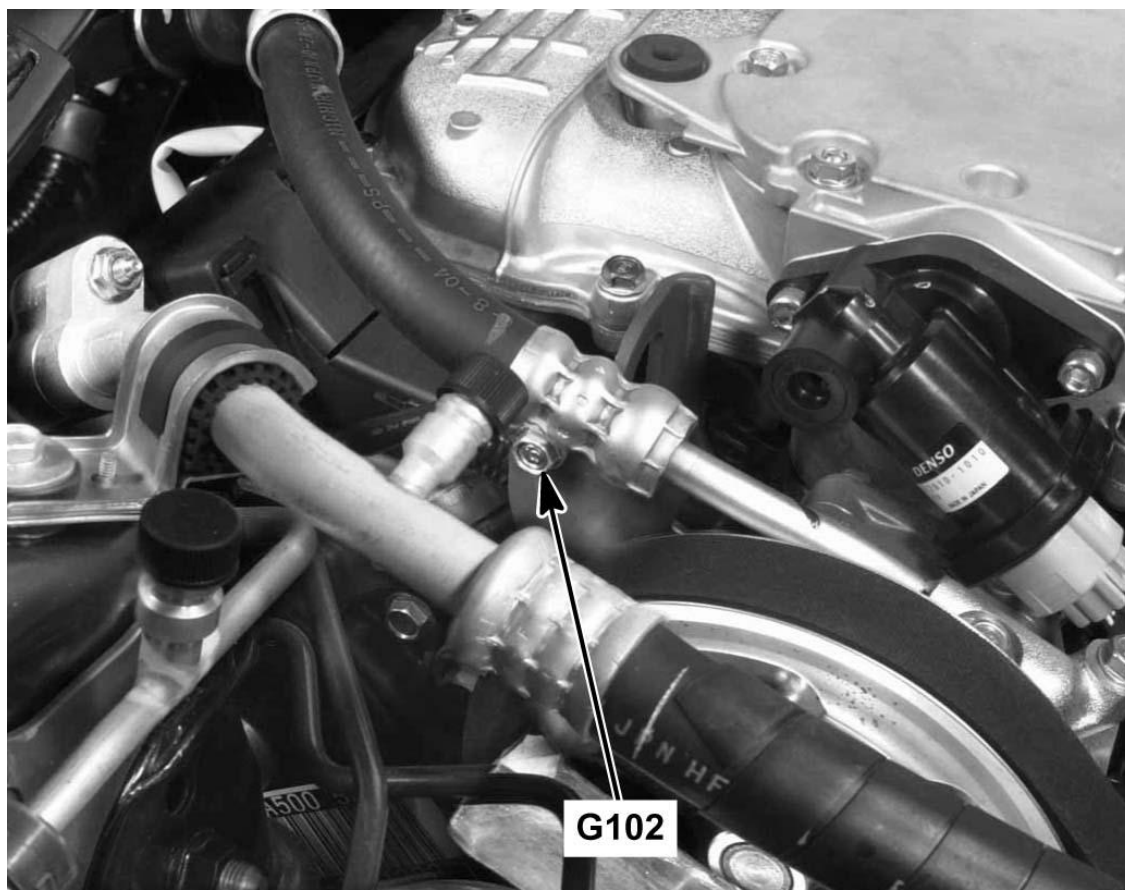

G00363461

Fig. 6: Right Side Of Engine


Courtesy of AMERICAN HONDA MOTOR CO., INC.

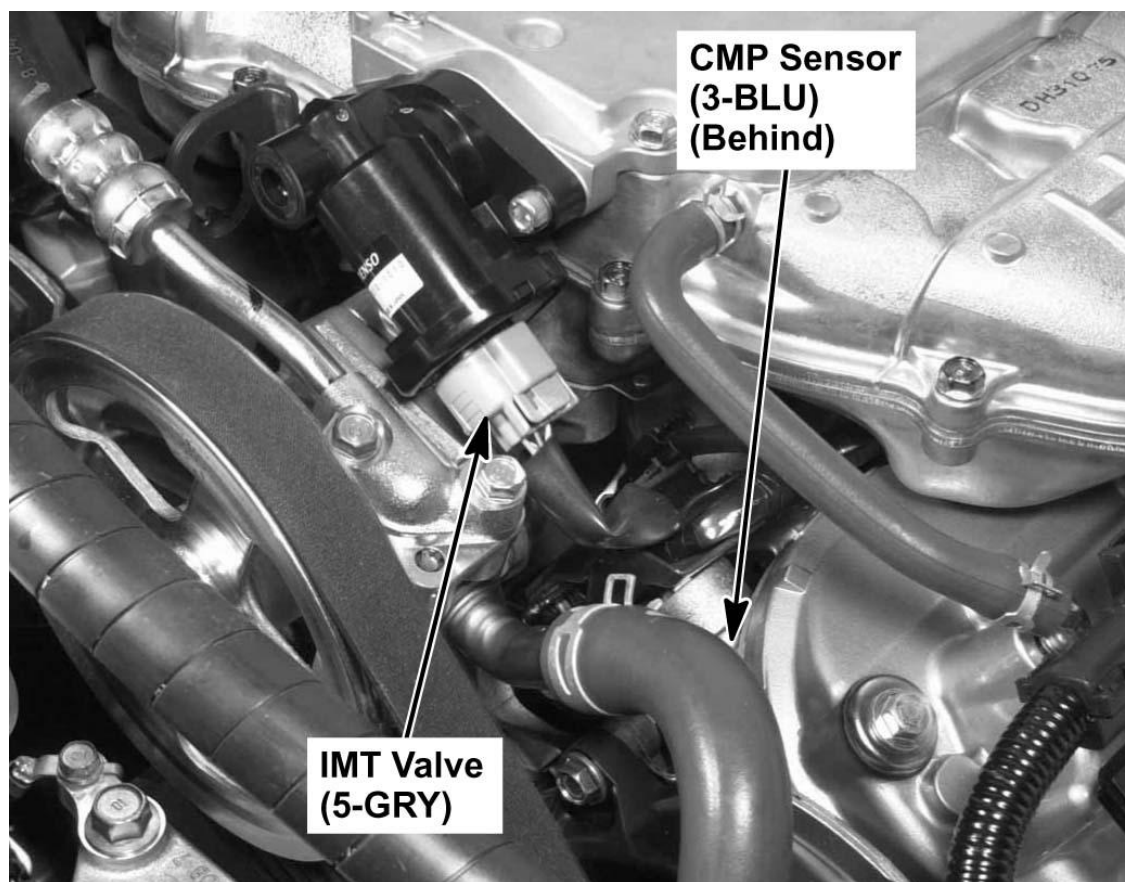

G00363462


Fig. 7: Right Side Of Engine

Courtesy of AMERICAN HONDA MOTOR CO., INC.

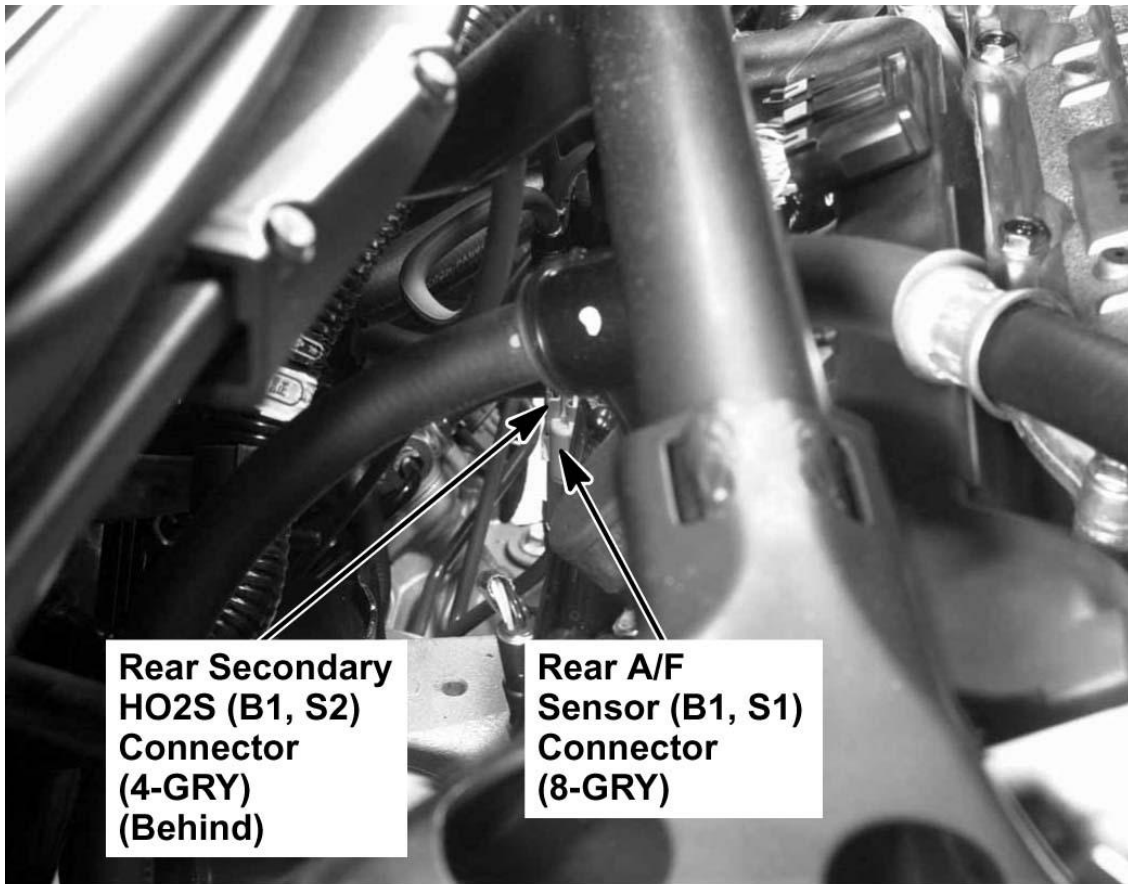

G00363463


Fig. 8: Middle Of Engine
Courtesy of AMERICAN HONDA MOTOR CO., INC.

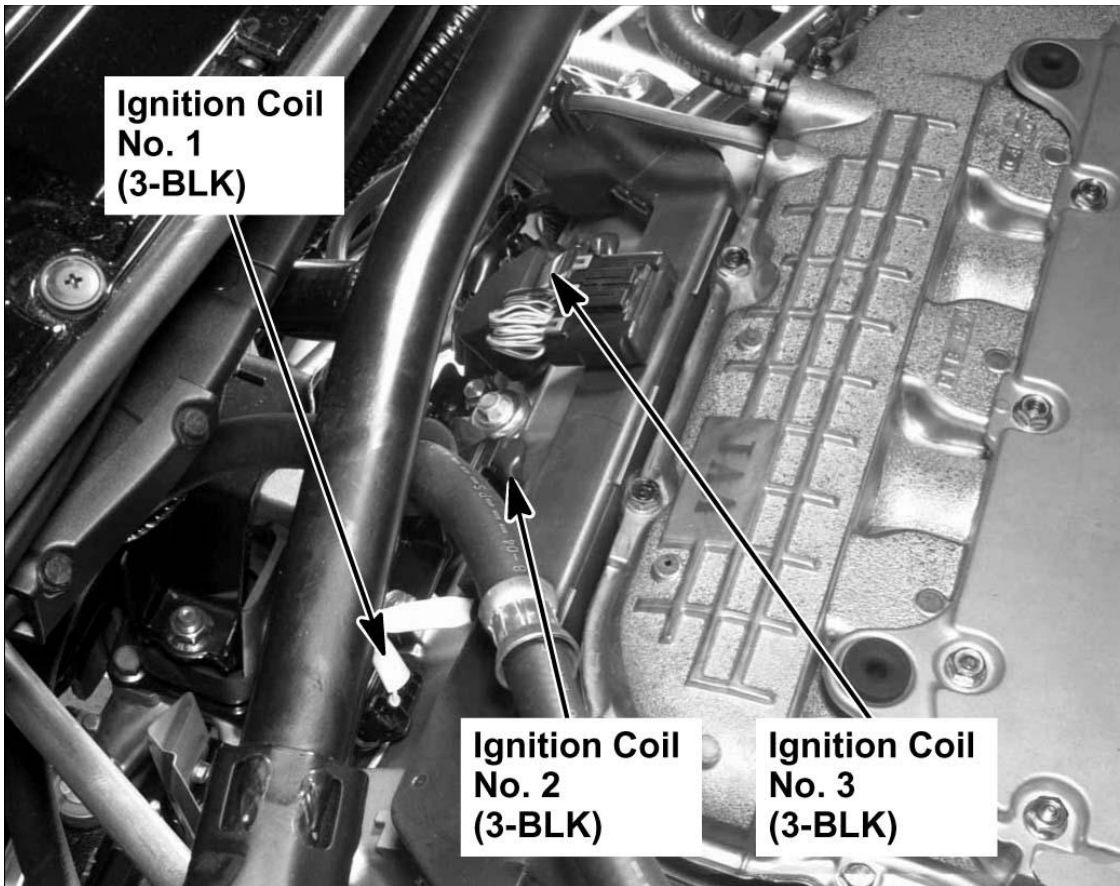

G00363464

Fig. 9: Middle Of Engine


Courtesy of AMERICAN HONDA MOTOR CO., INC.

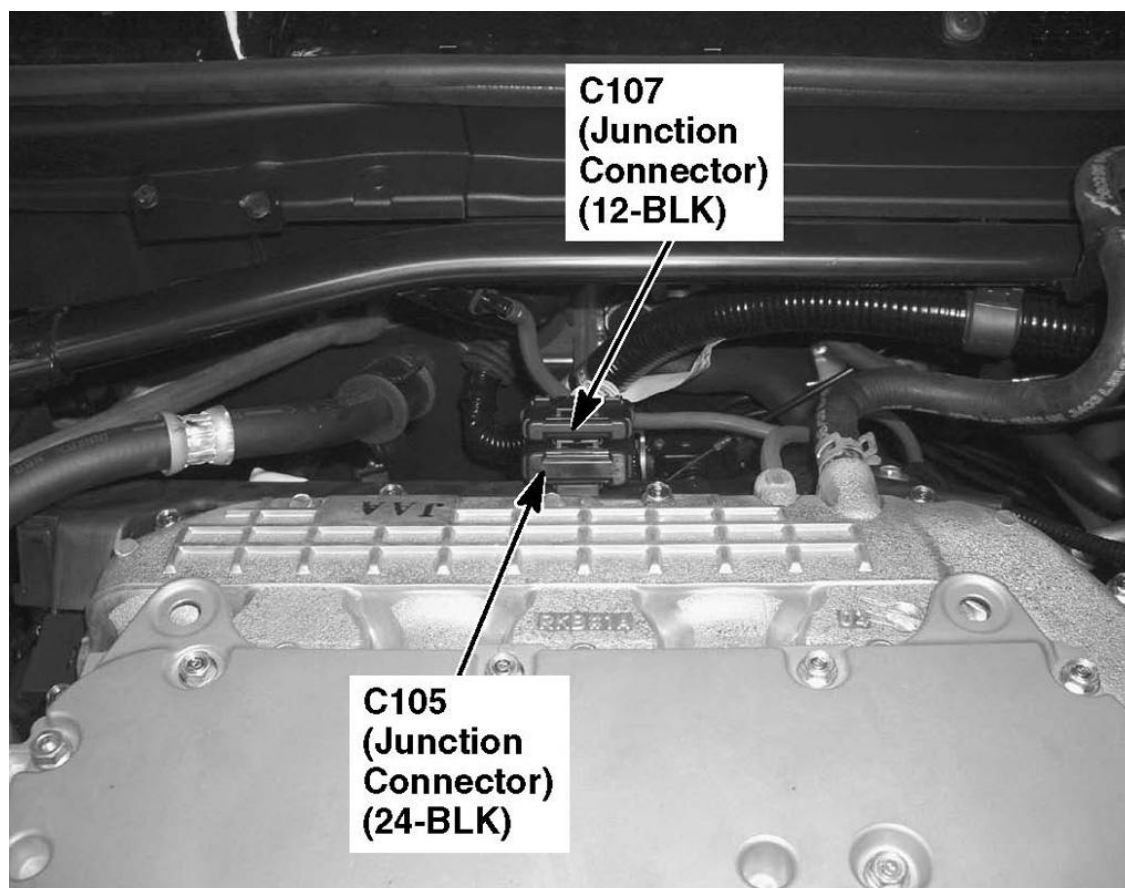

G00447063

Fig. 10: Middle Of Engine


Courtesy of AMERICAN HONDA MOTOR CO., INC.

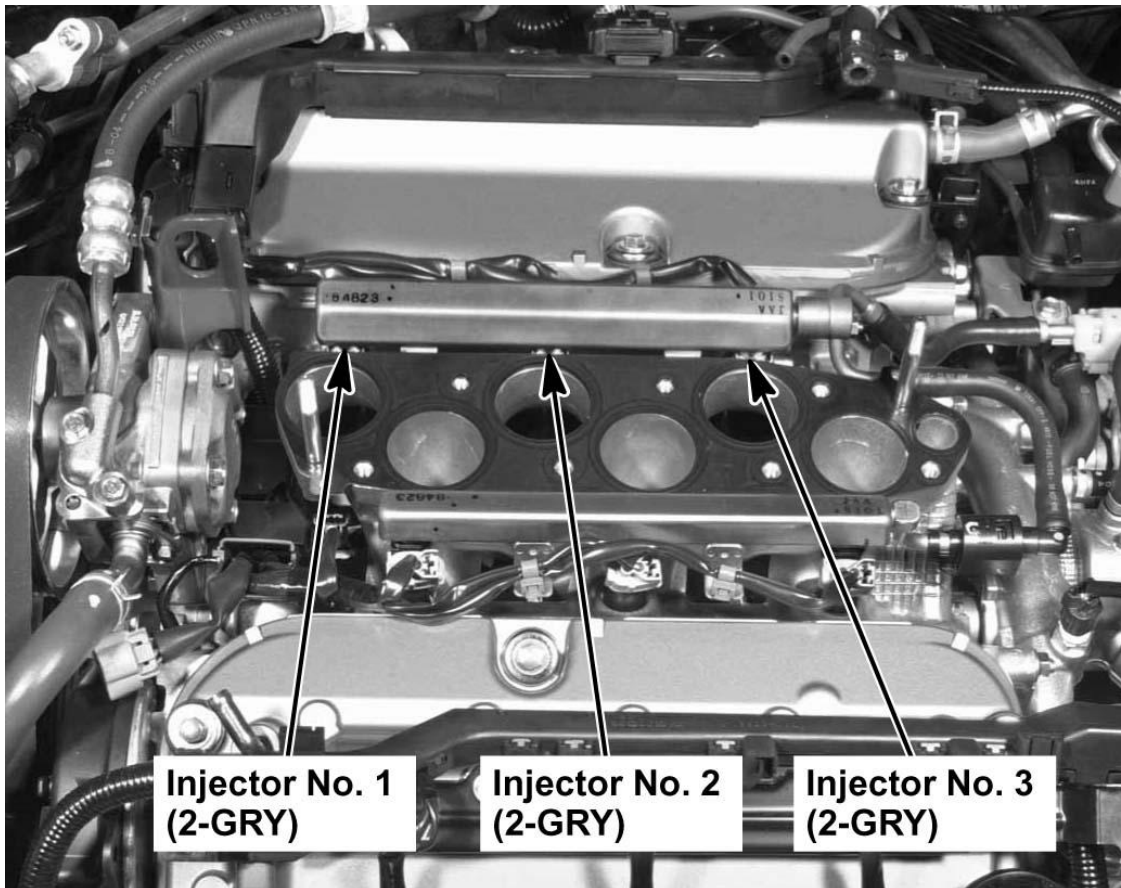

G00363466

Fig. 11: Middle Of Engine


Courtesy of AMERICAN HONDA MOTOR CO., INC.

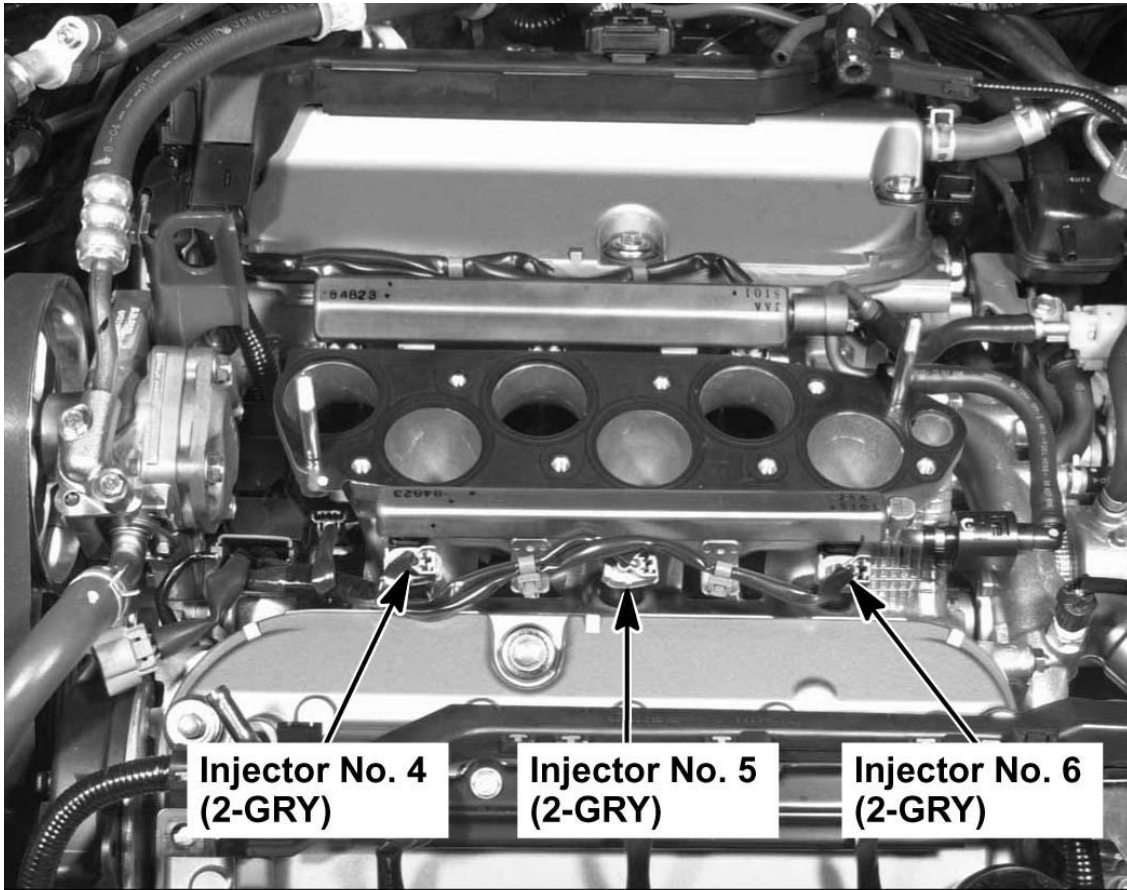

G00363467

Fig. 12: Middle Of Engine


Courtesy of AMERICAN HONDA MOTOR CO., INC.

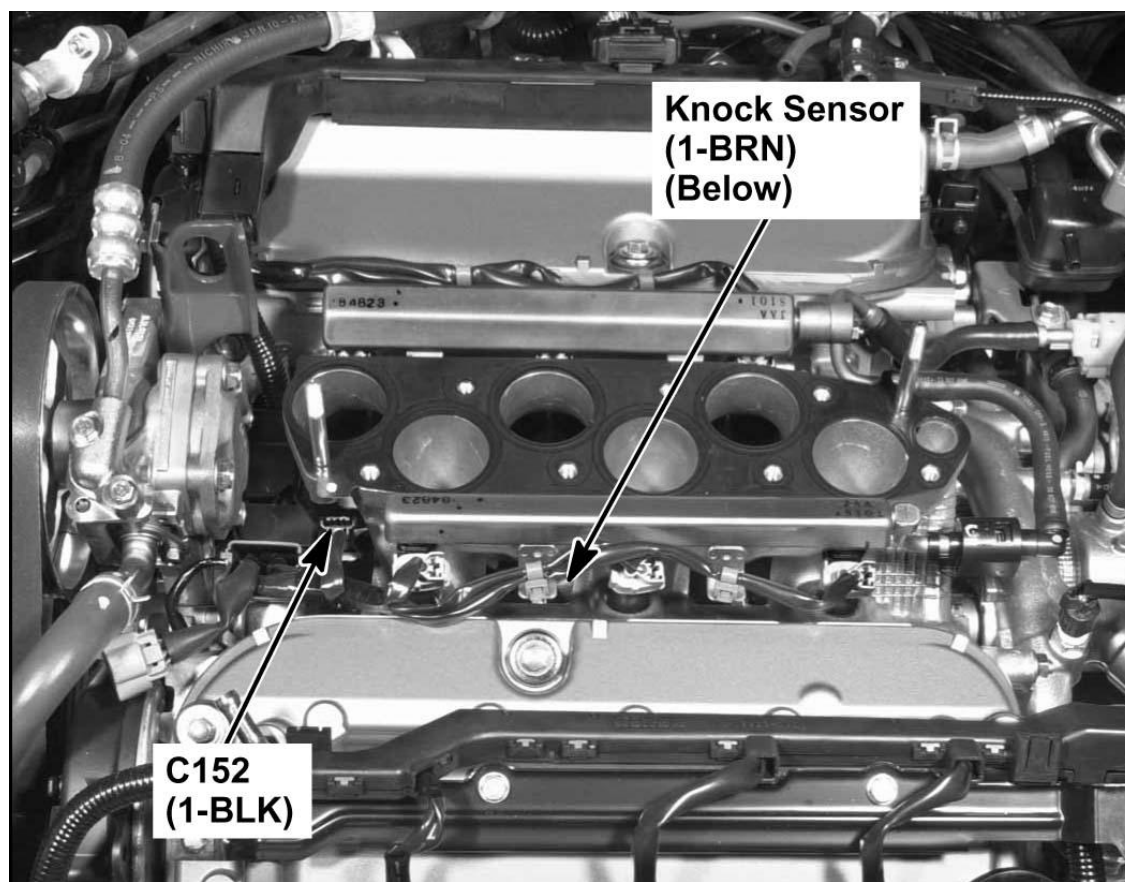

G00363468

Fig. 13: Middle Of Engine


Courtesy of AMERICAN HONDA MOTOR CO., INC.

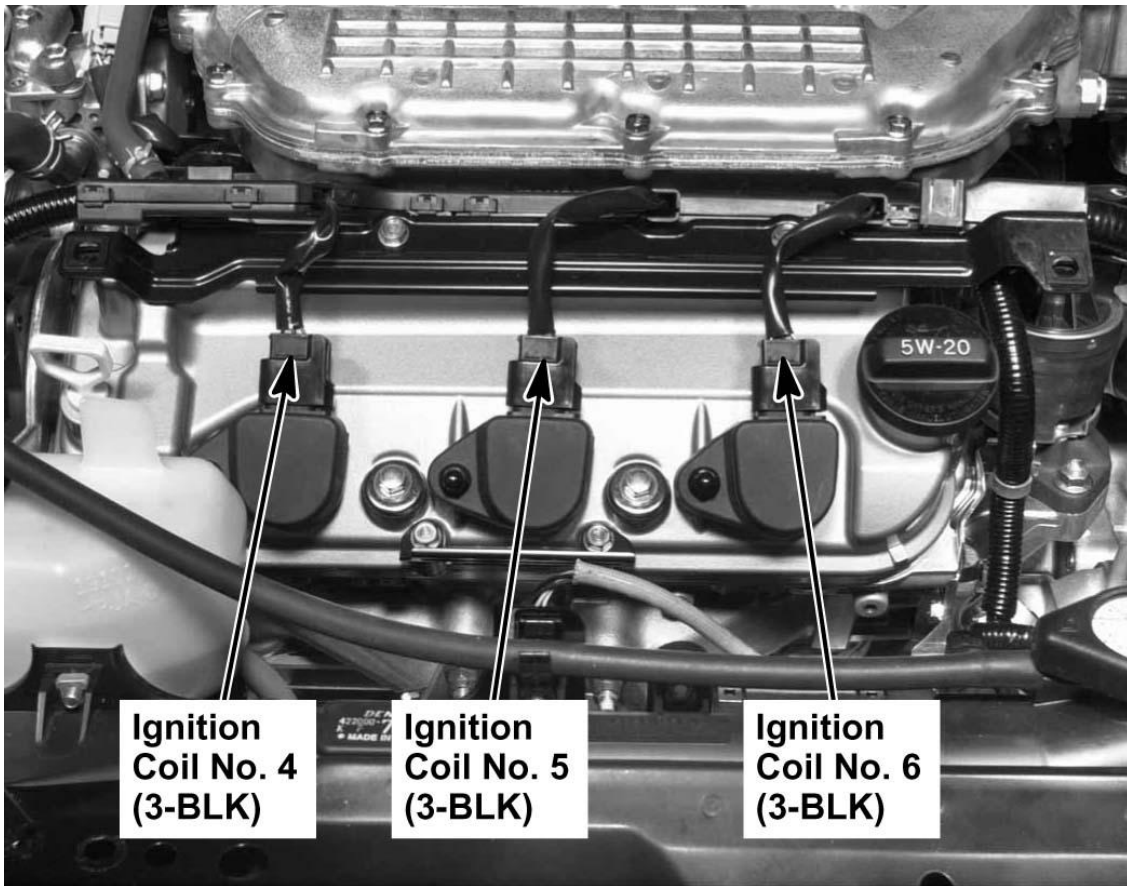

G00363469

Fig. 14: Middle Of Engine


Courtesy of AMERICAN HONDA MOTOR CO., INC.

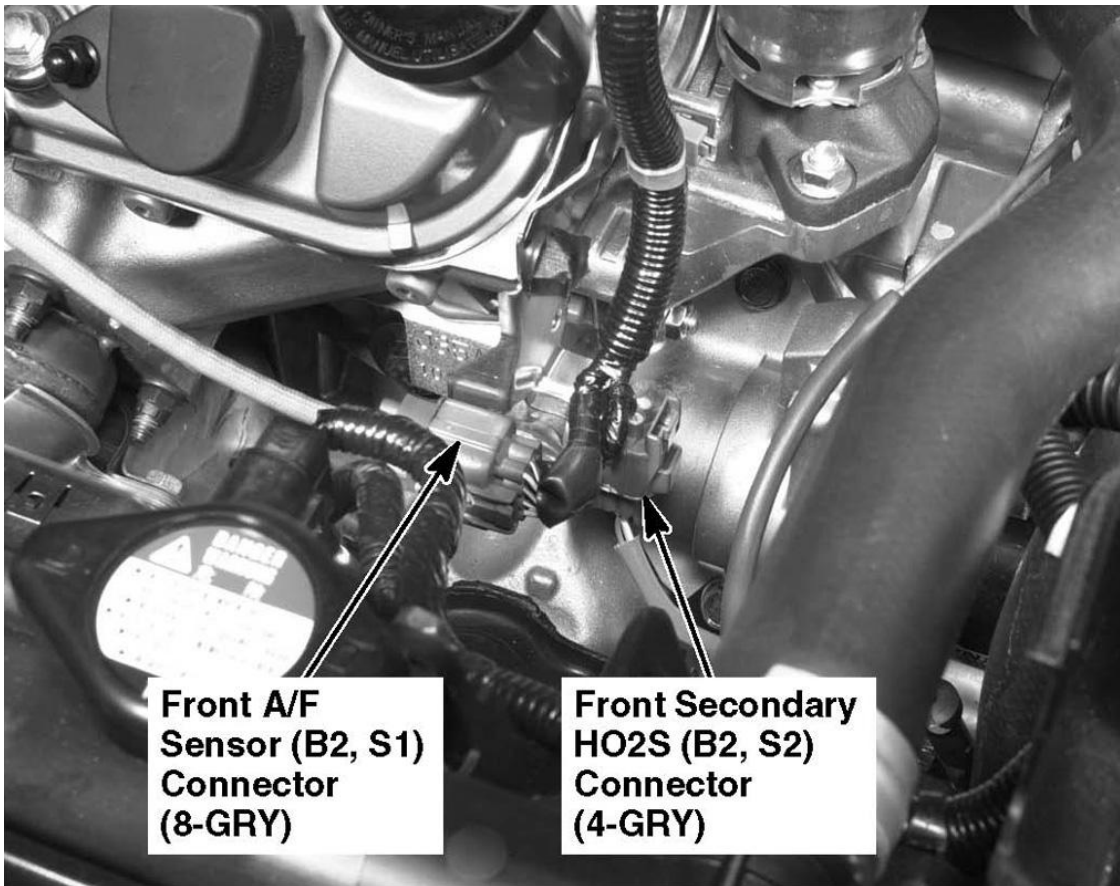

G00447064


Fig. 15: Middle Of Engine

Courtesy of AMERICAN HONDA MOTOR CO., INC.

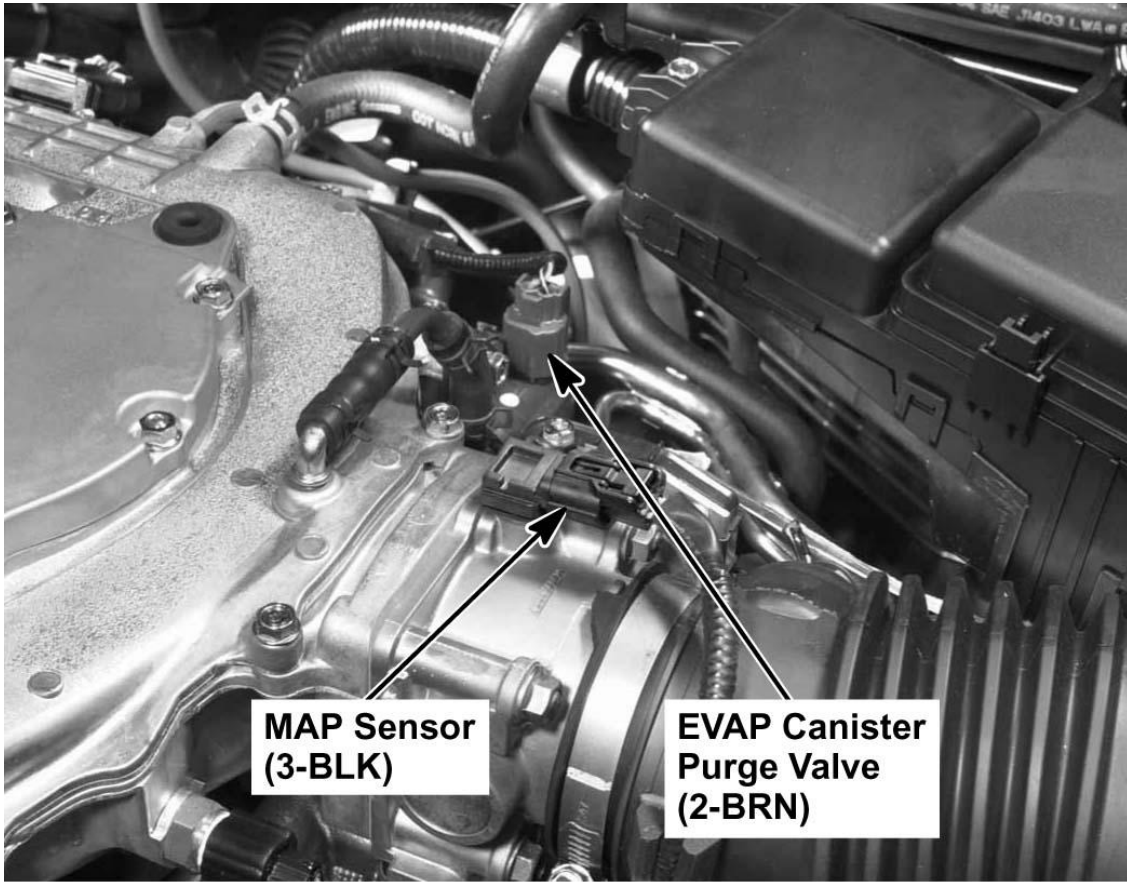

G00363471


Fig. 16: Left Side Of Engine
Courtesy of AMERICAN HONDA MOTOR CO., INC.

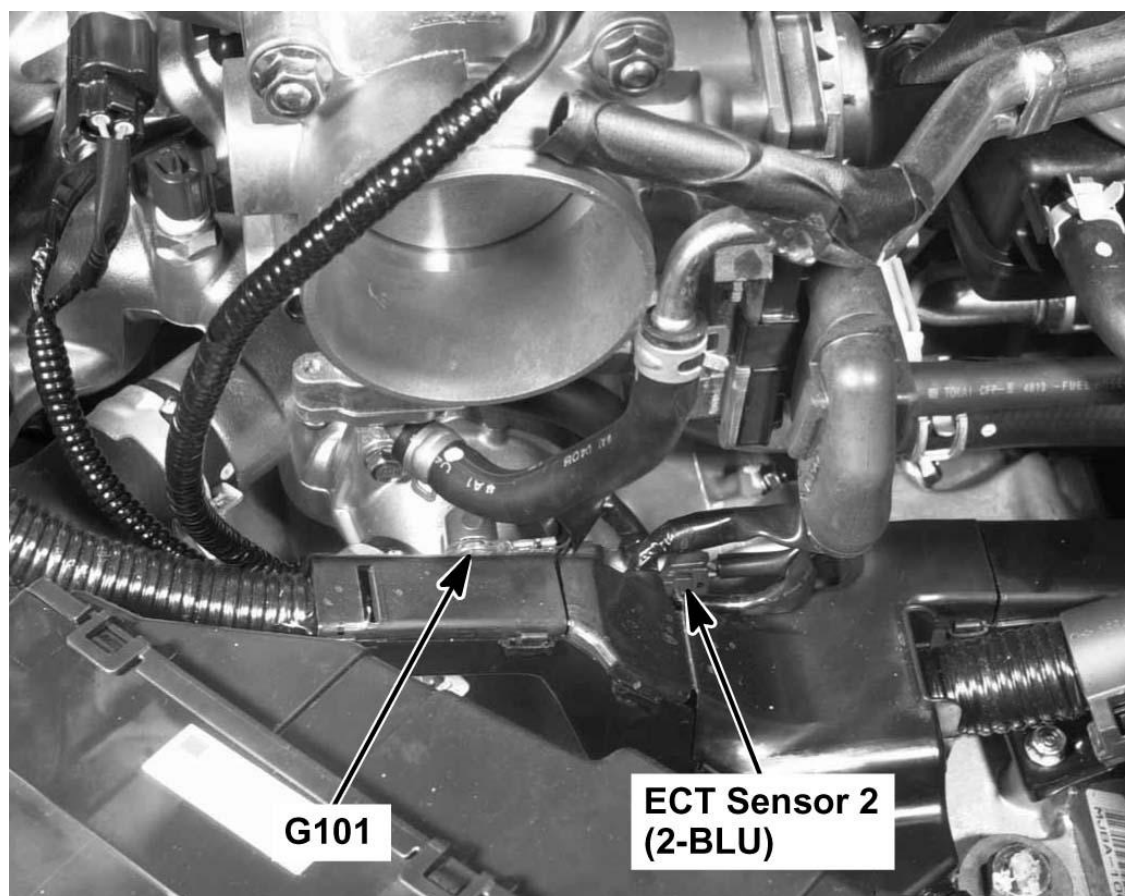

G00363472


Fig. 17: Left Side Of Engine

Courtesy of AMERICAN HONDA MOTOR CO., INC.

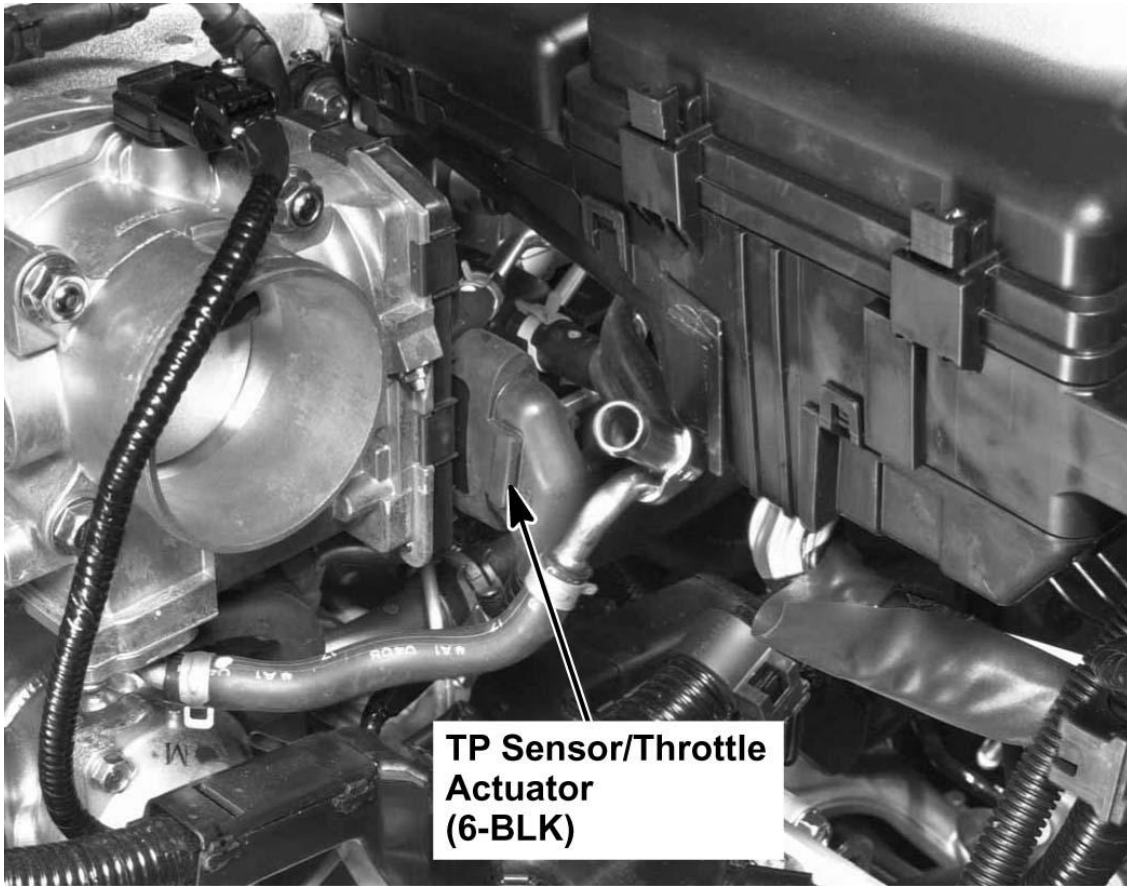


G00363473

Fig. 18: Left Side Of Engine
Courtesy of AMERICAN HONDA MOTOR CO., INC.

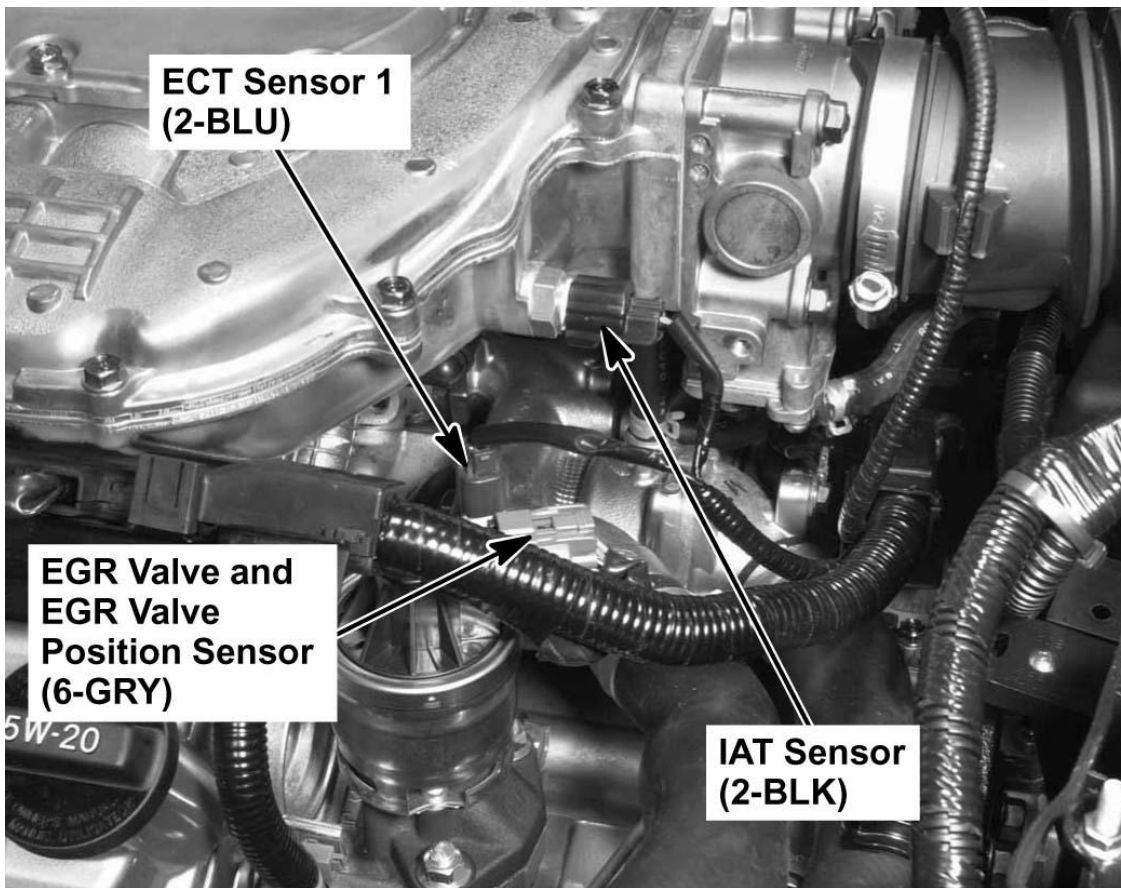

G00363474


Fig. 19: Left Side Of Engine
Courtesy of AMERICAN HONDA MOTOR CO., INC.

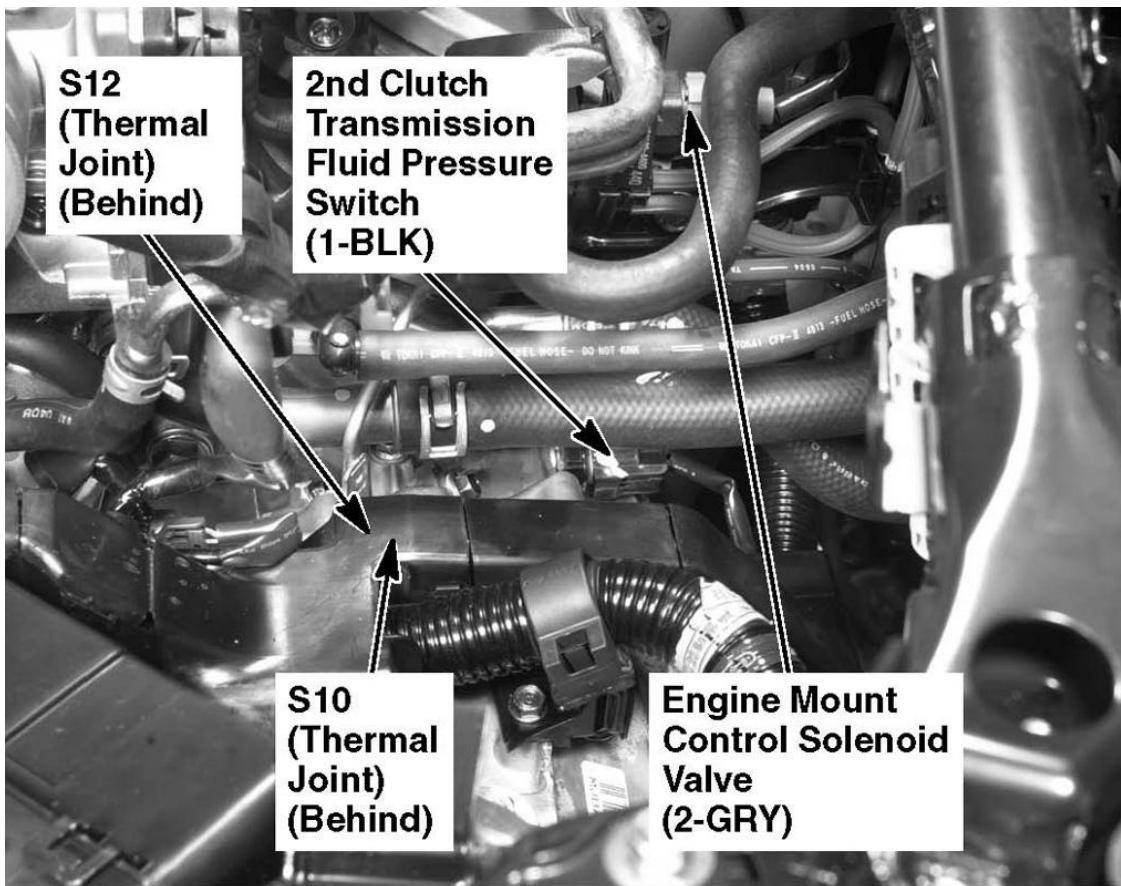

G00446869


Fig. 20: Left Side Of Engine

Courtesy of AMERICAN HONDA MOTOR CO., INC.

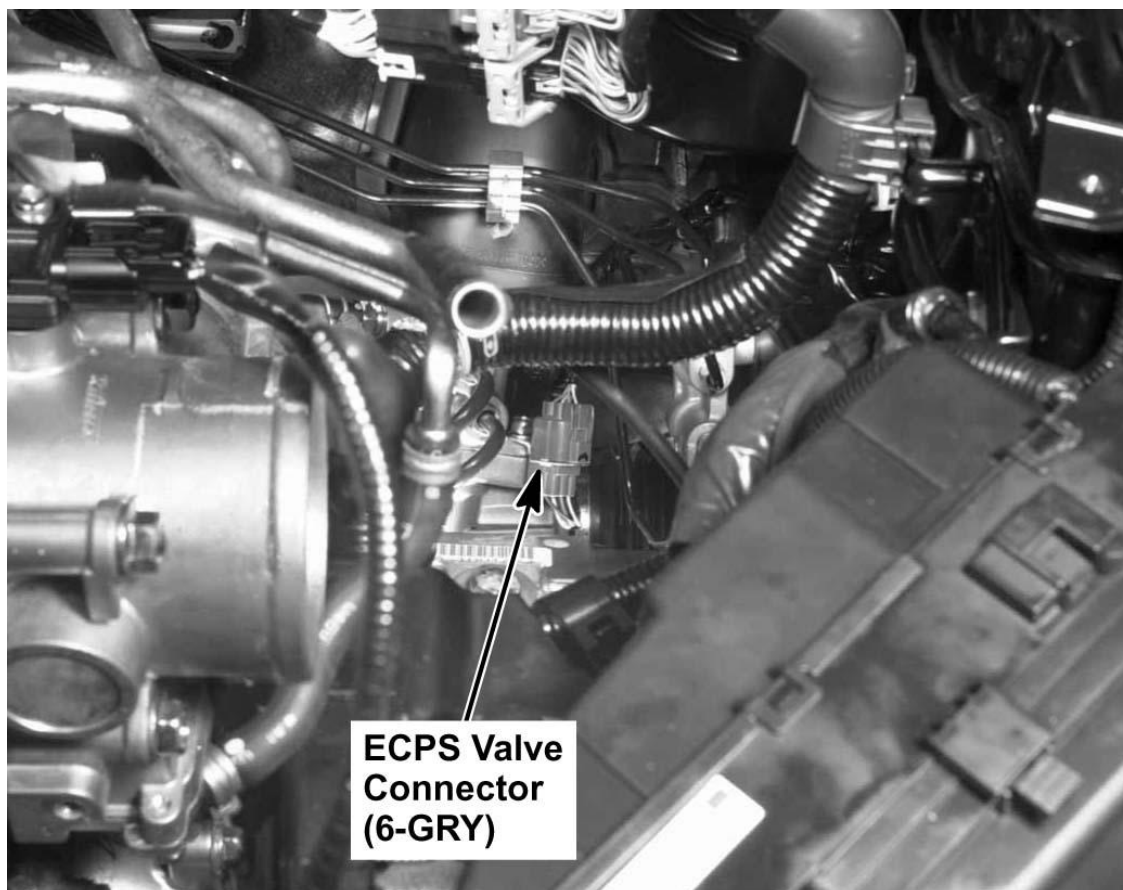


G00363476

Fig. 21: Left Side Of Engine Compartment
Courtesy of AMERICAN HONDA MOTOR CO., INC.

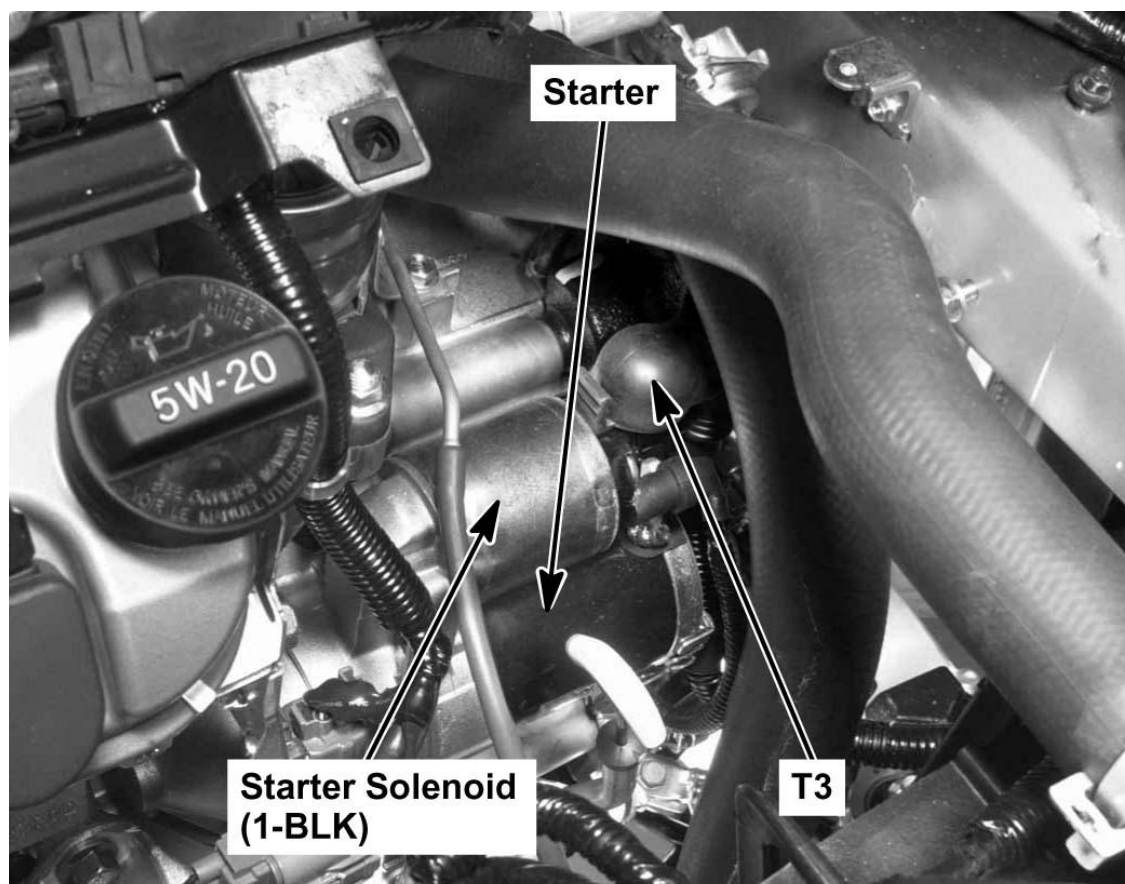


G00363477

Fig. 22: Transmission Housing
Courtesy of AMERICAN HONDA MOTOR CO., INC.

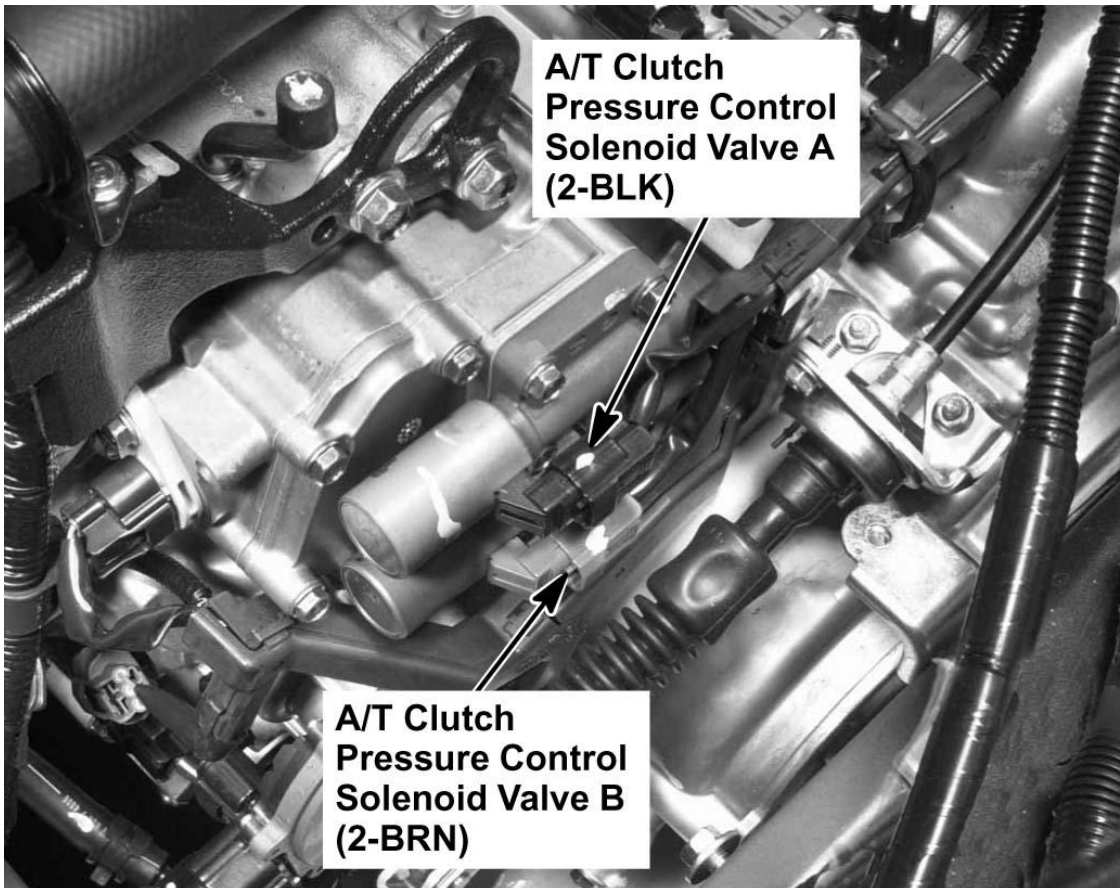

G00363478


Fig. 23: Transmission Housing
Courtesy of AMERICAN HONDA MOTOR CO., INC.

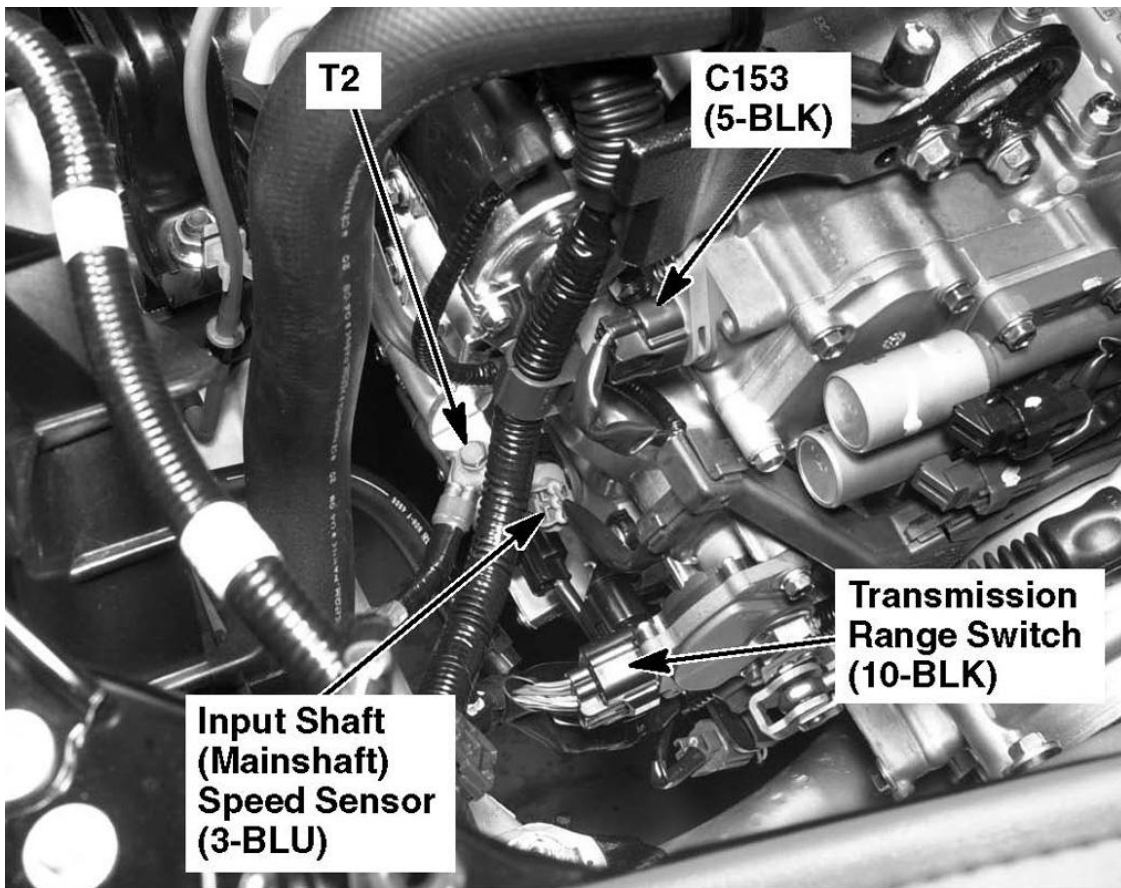

G00447070

Fig. 24: Transmission Housing


Courtesy of AMERICAN HONDA MOTOR CO., INC.

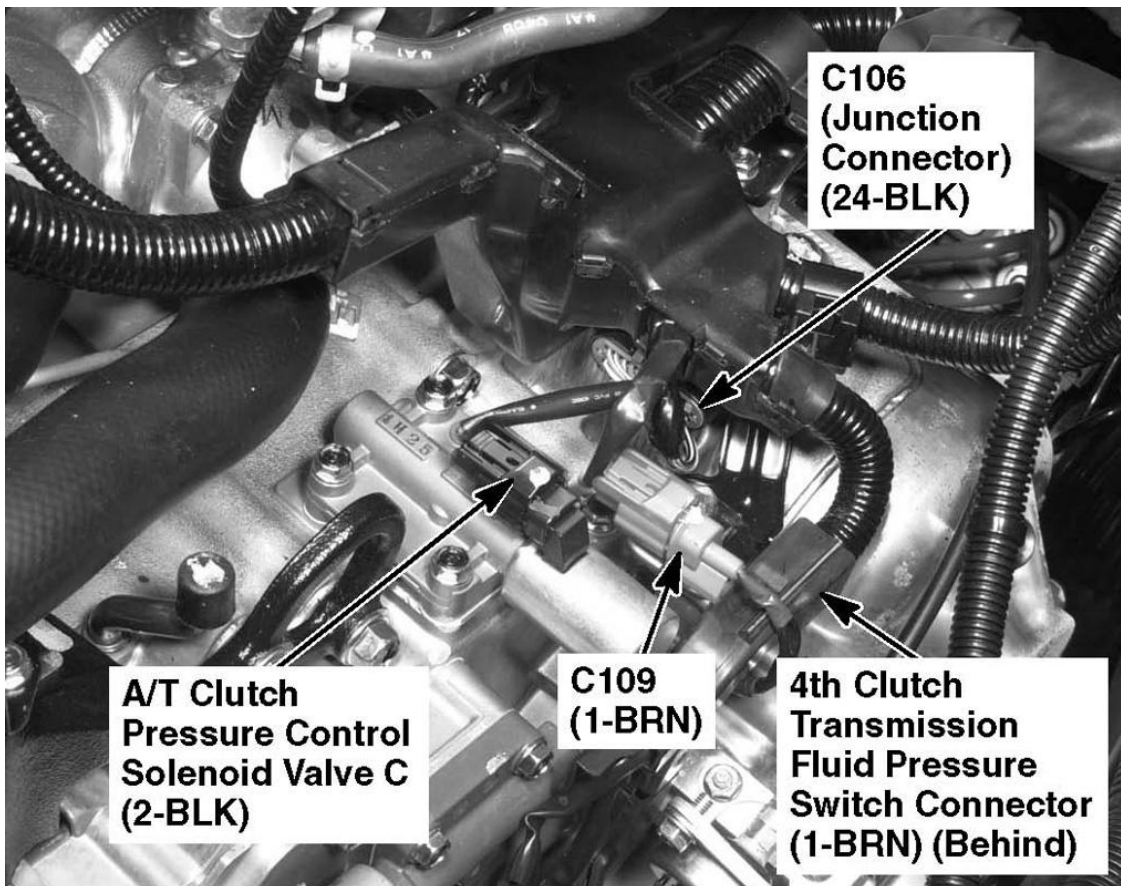

G00447069


Fig. 25: Transmission Housing

Courtesy of AMERICAN HONDA MOTOR CO., INC.

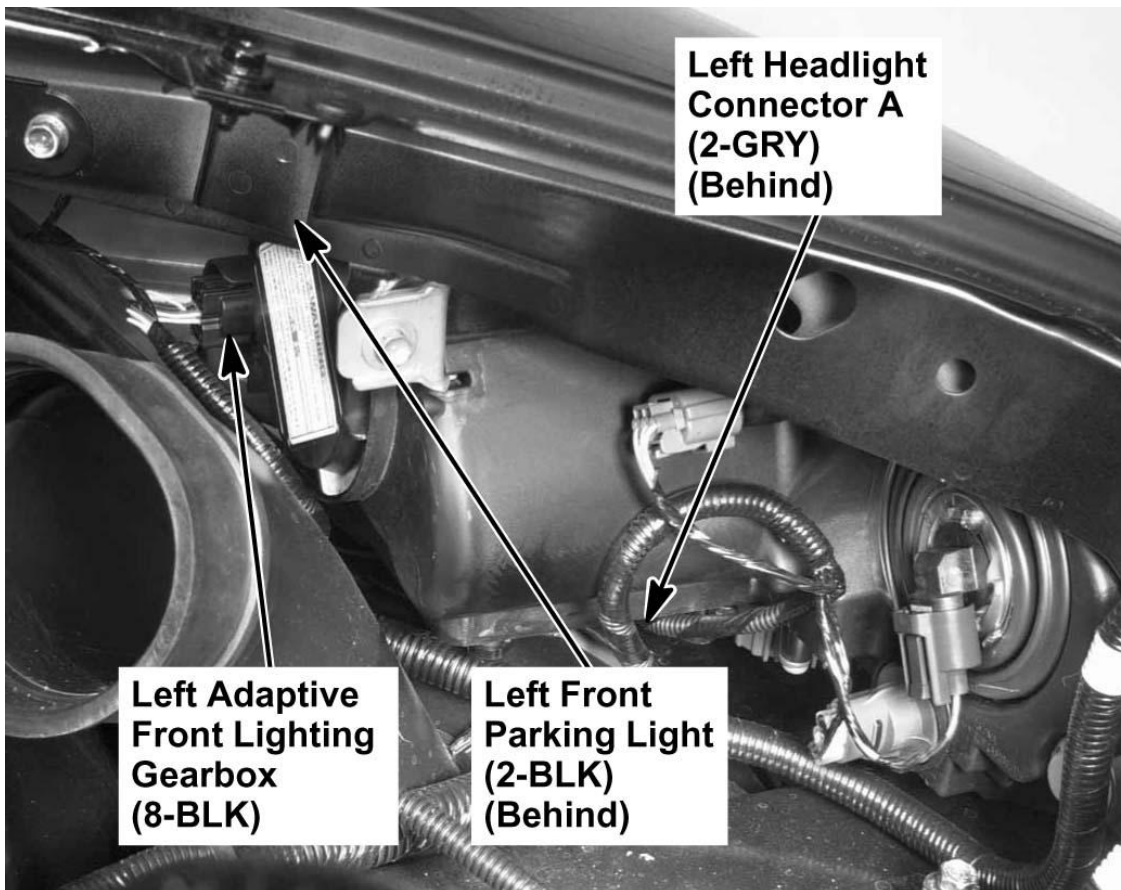


G00363481

Fig. 26: Behind Left Headlight Assembly (Right Similar)
Courtesy of AMERICAN HONDA MOTOR CO., INC.

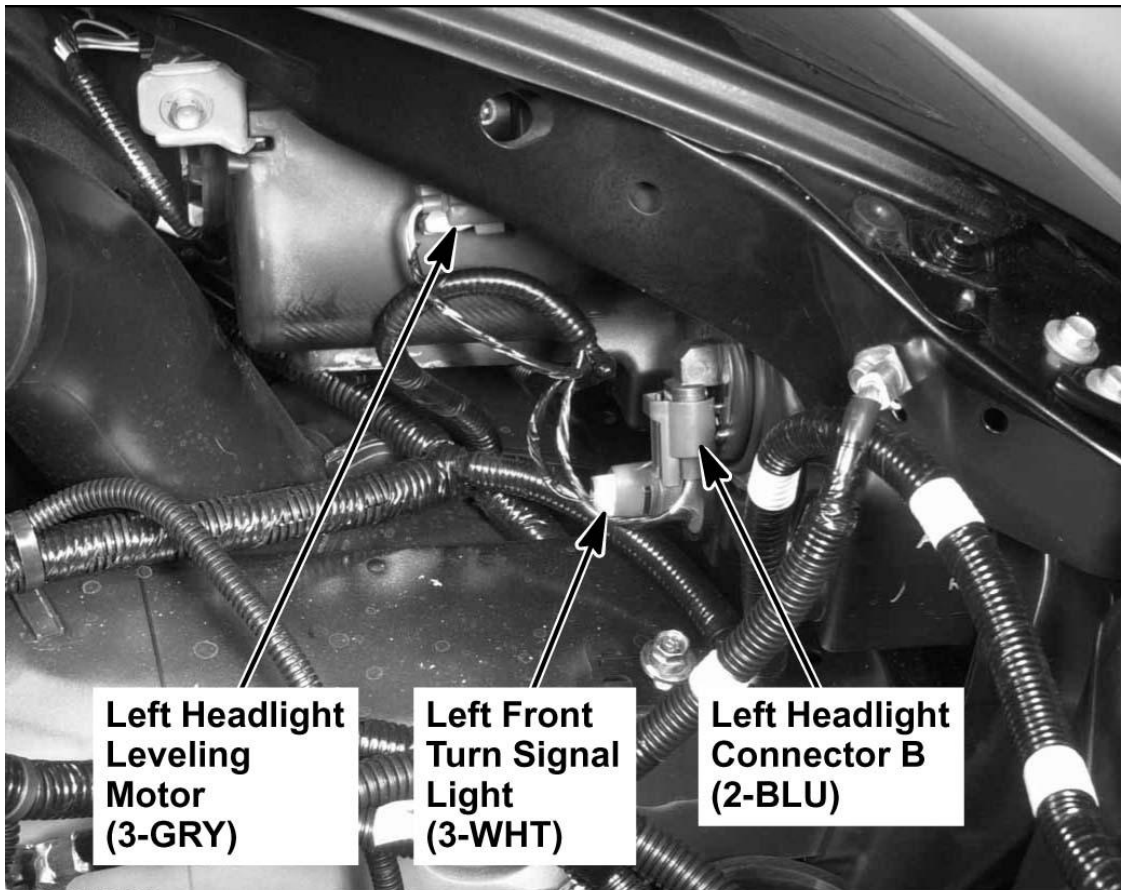


G00363482

Fig. 27: Behind Left Headlight Assembly (Right Similar)
Courtesy of AMERICAN HONDA MOTOR CO., INC.

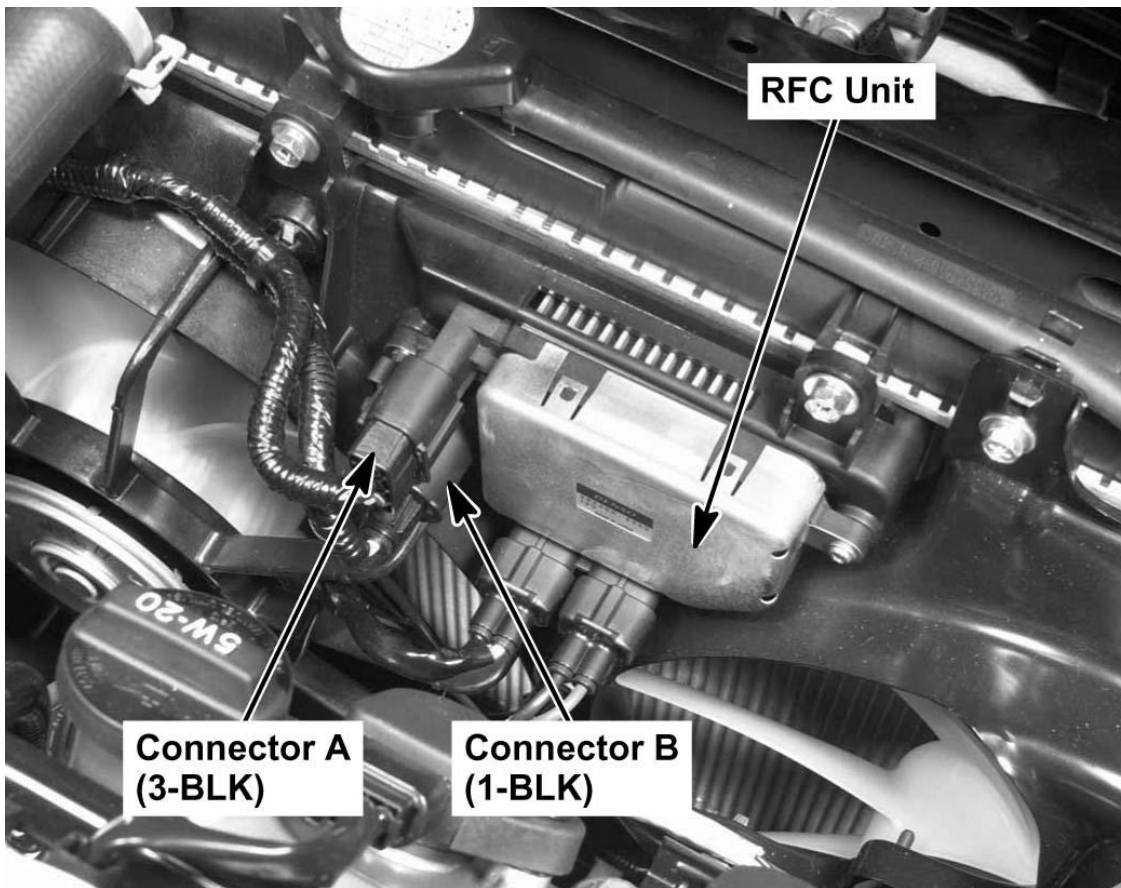


G00363483

Fig. 28: Middle Of Engine Compartment
Courtesy of AMERICAN HONDA MOTOR CO., INC.

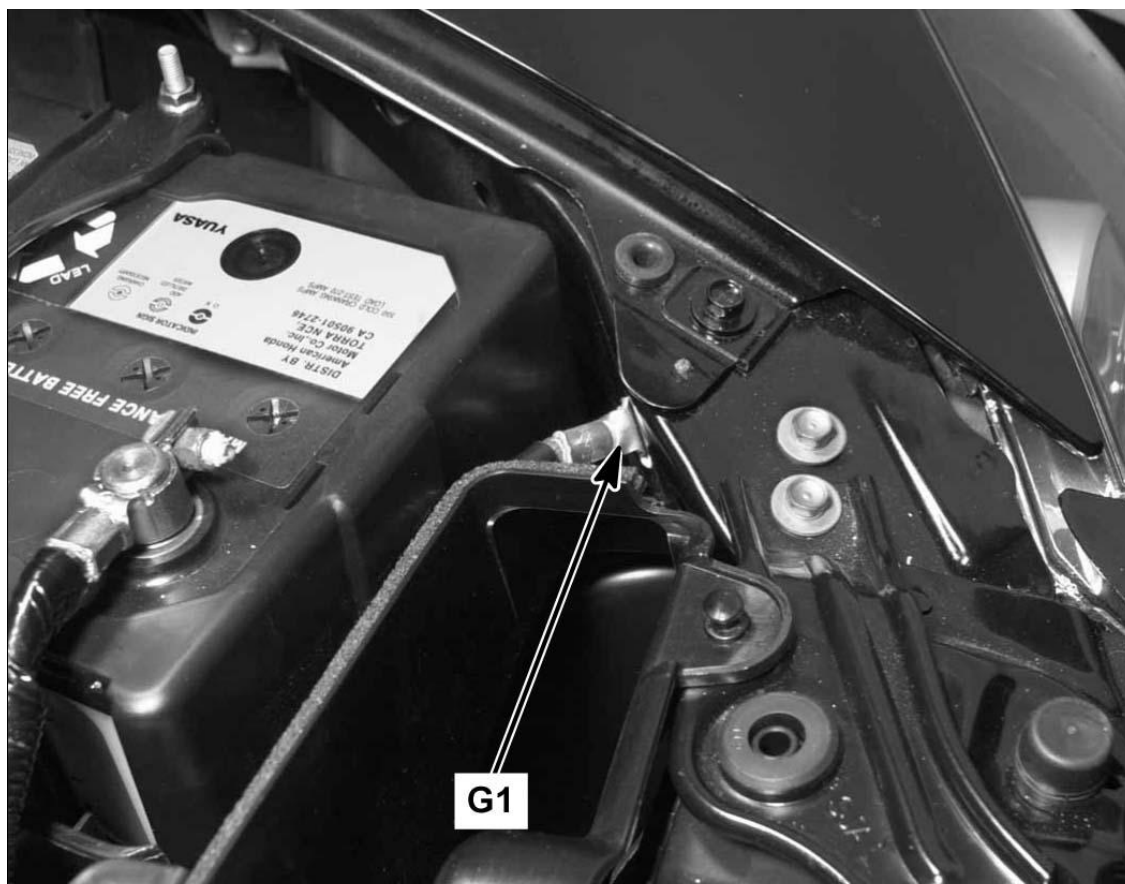

G00363484


Fig. 29: Left Side Of Engine Compartment
Courtesy of AMERICAN HONDA MOTOR CO., INC.

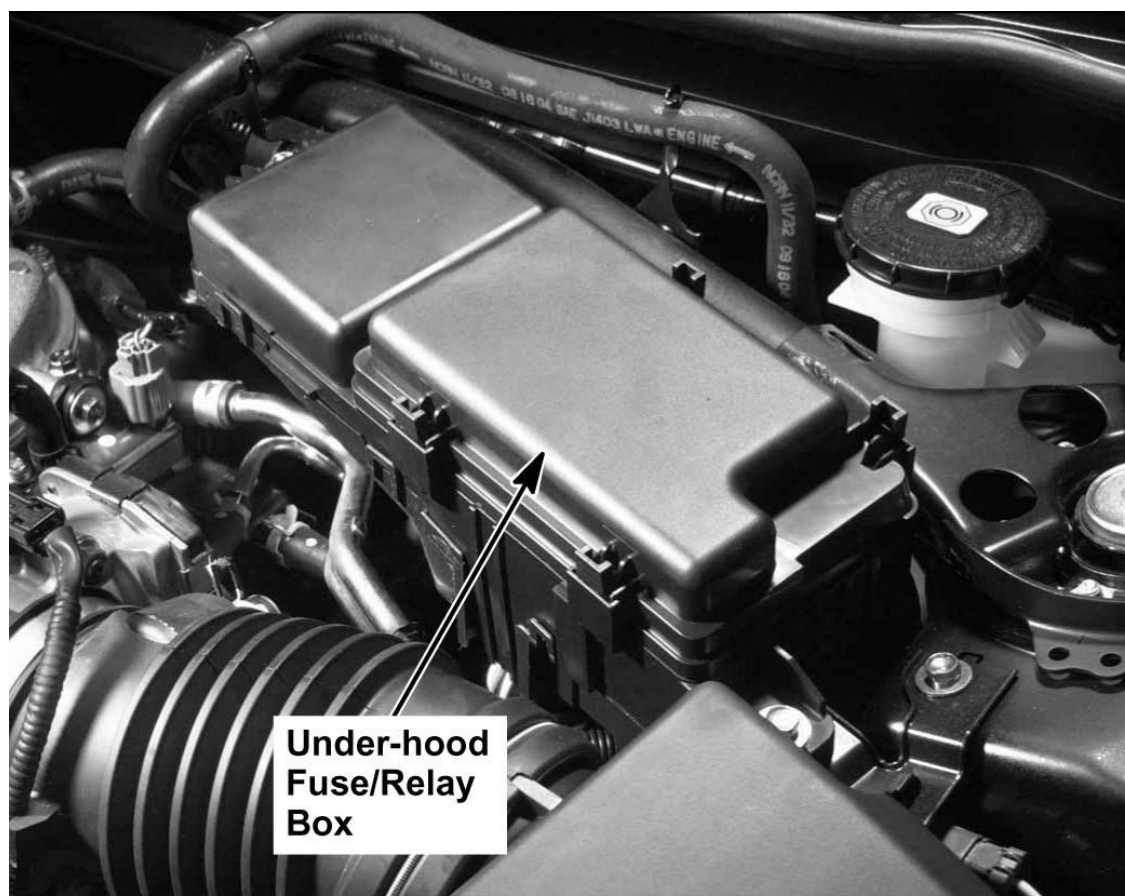

G00363485

Fig. 30: Left Side Of Engine Compartment

Courtesy of AMERICAN HONDA MOTOR CO., INC.

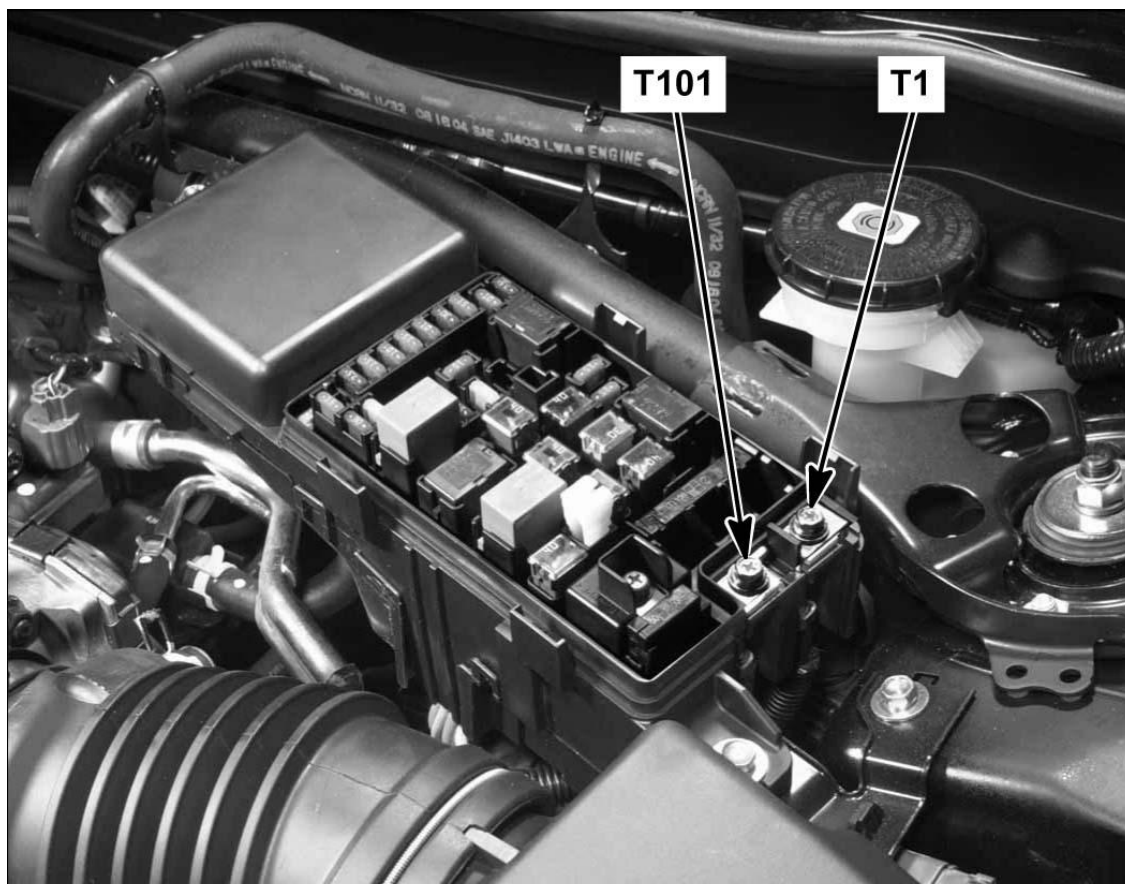


G00363486

Fig. 31: Left Side Of Engine Compartment
Courtesy of AMERICAN HONDA MOTOR CO., INC.




G00363487

Fig. 32: Left Side Of Engine Compartment
Courtesy of AMERICAN HONDA MOTOR CO., INC.

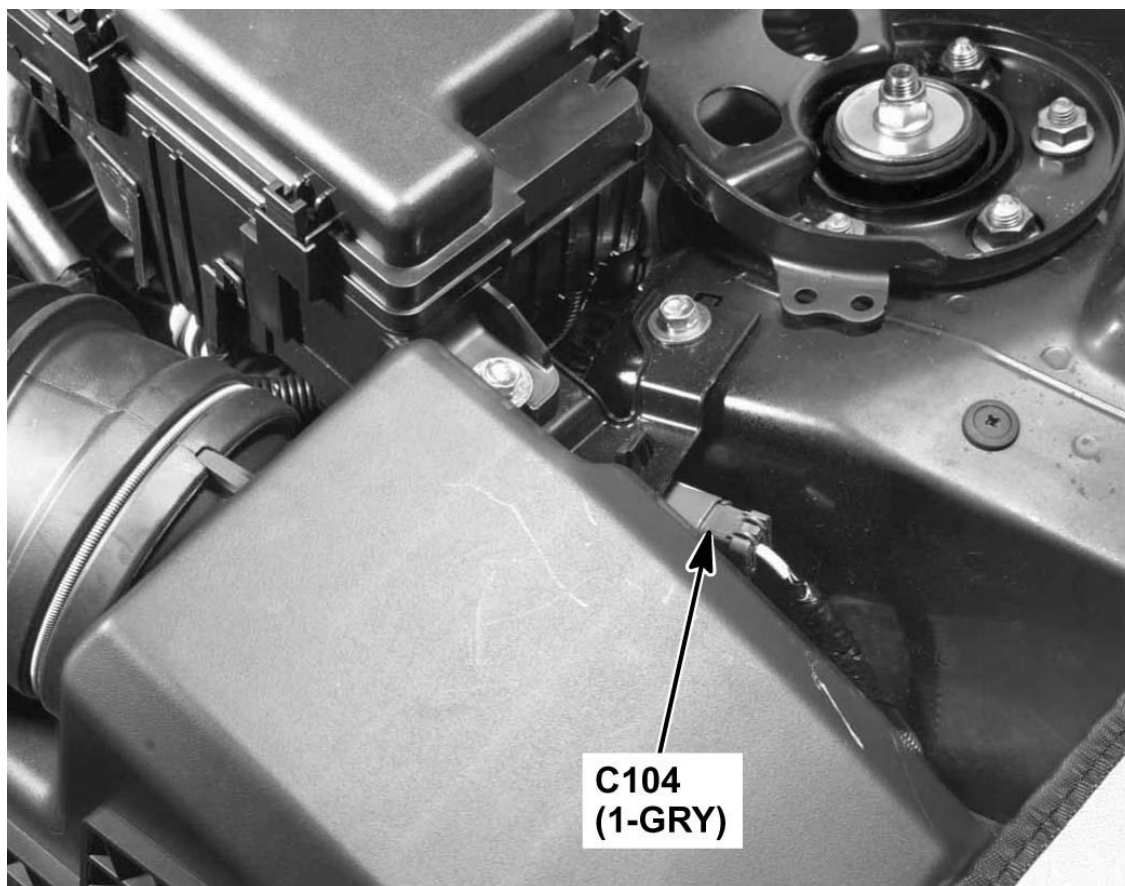


G00363488

Fig. 33: Left Side Of Engine Compartment
Courtesy of AMERICAN HONDA MOTOR CO., INC.

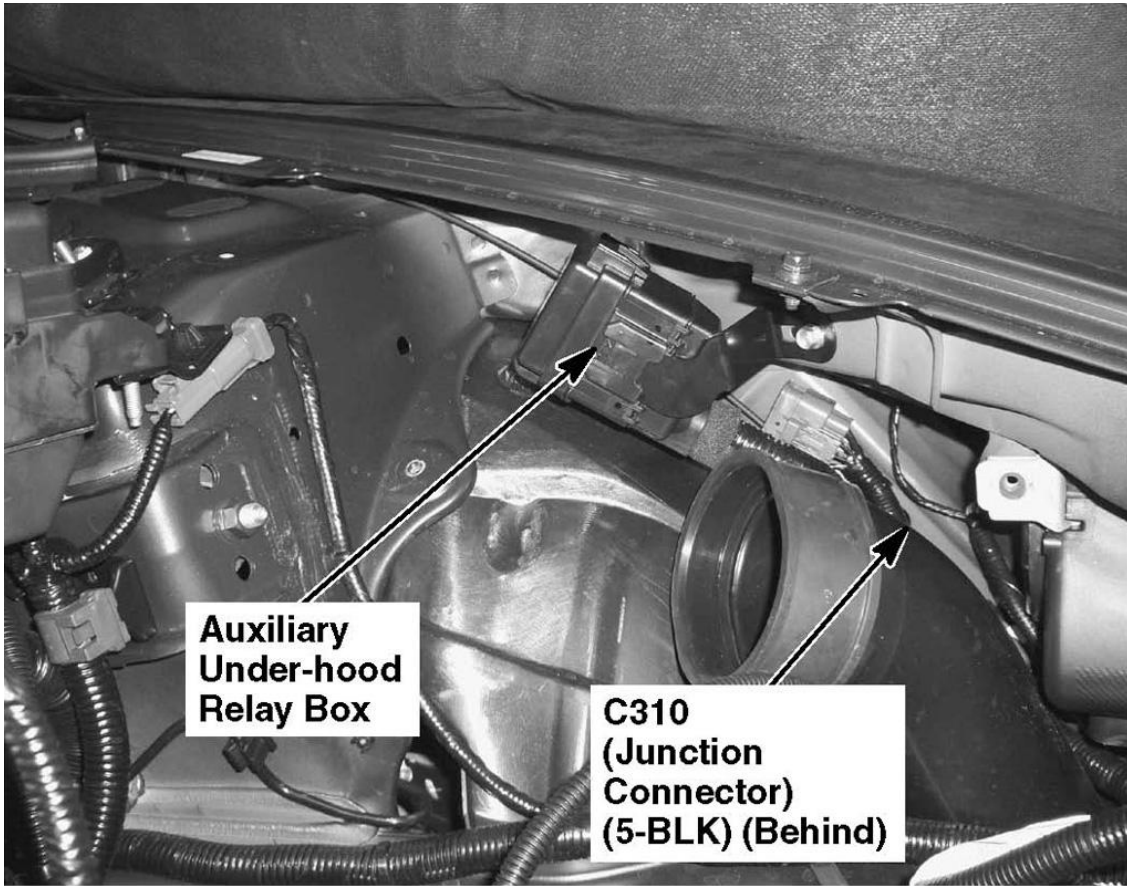

G00447061


Fig. 34: Left Side Of Engine Compartment
Courtesy of AMERICAN HONDA MOTOR CO., INC.

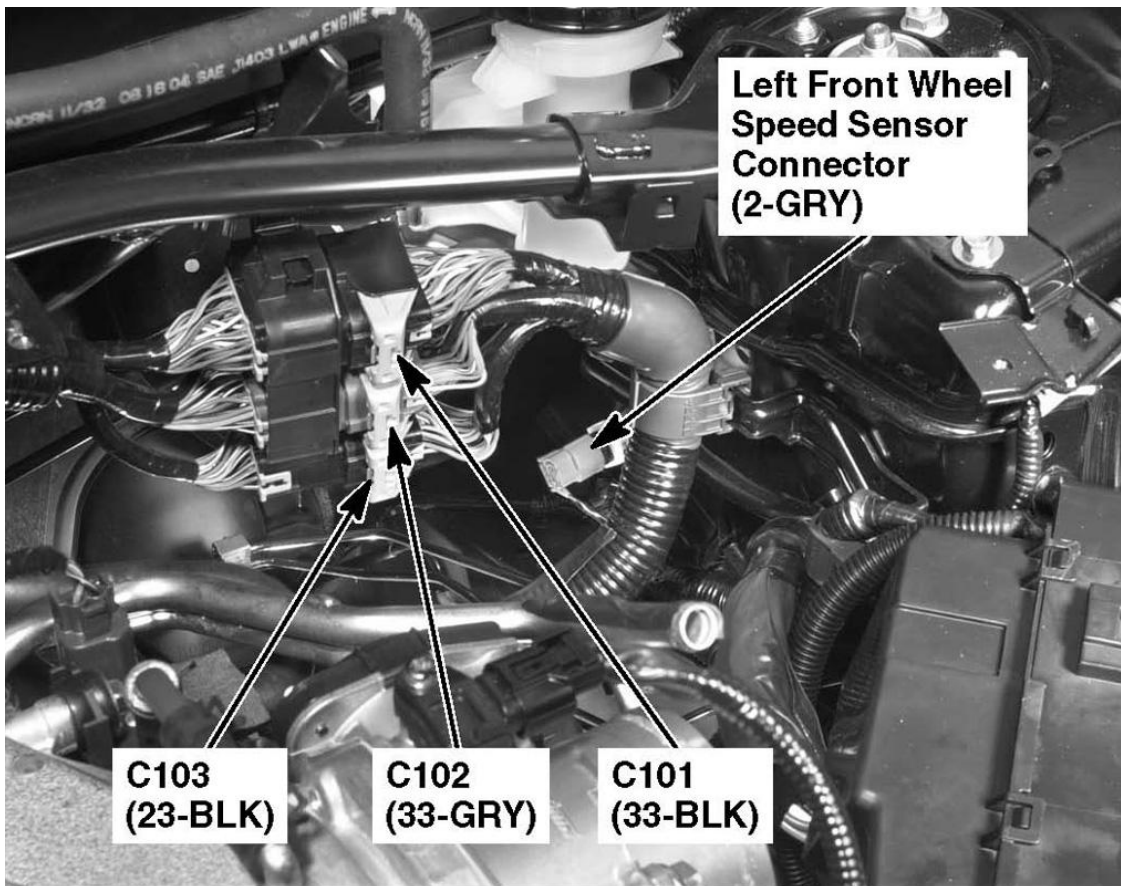

G00447062


Fig. 35: Left Side Of Engine Compartment

Courtesy of AMERICAN HONDA MOTOR CO., INC.

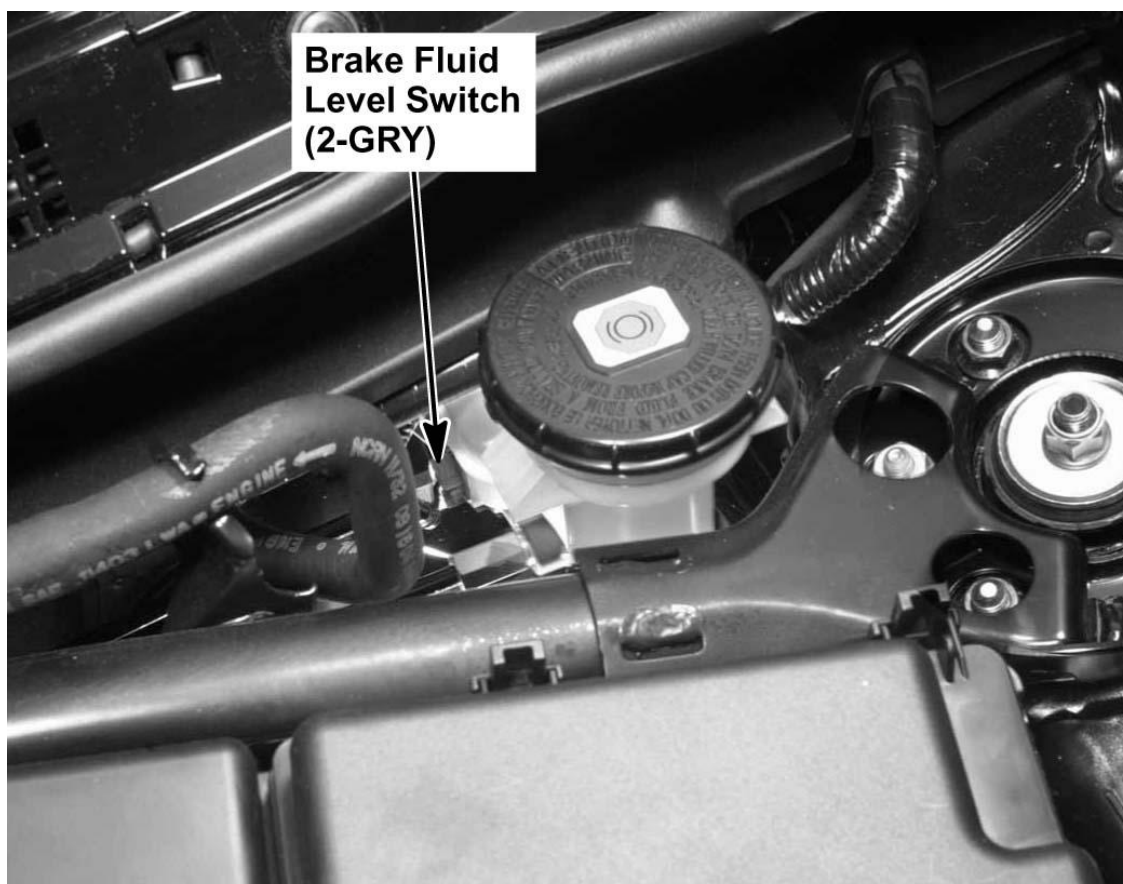


G00363491

Fig. 36: Left Side Of Engine Compartment
Courtesy of AMERICAN HONDA MOTOR CO., INC.

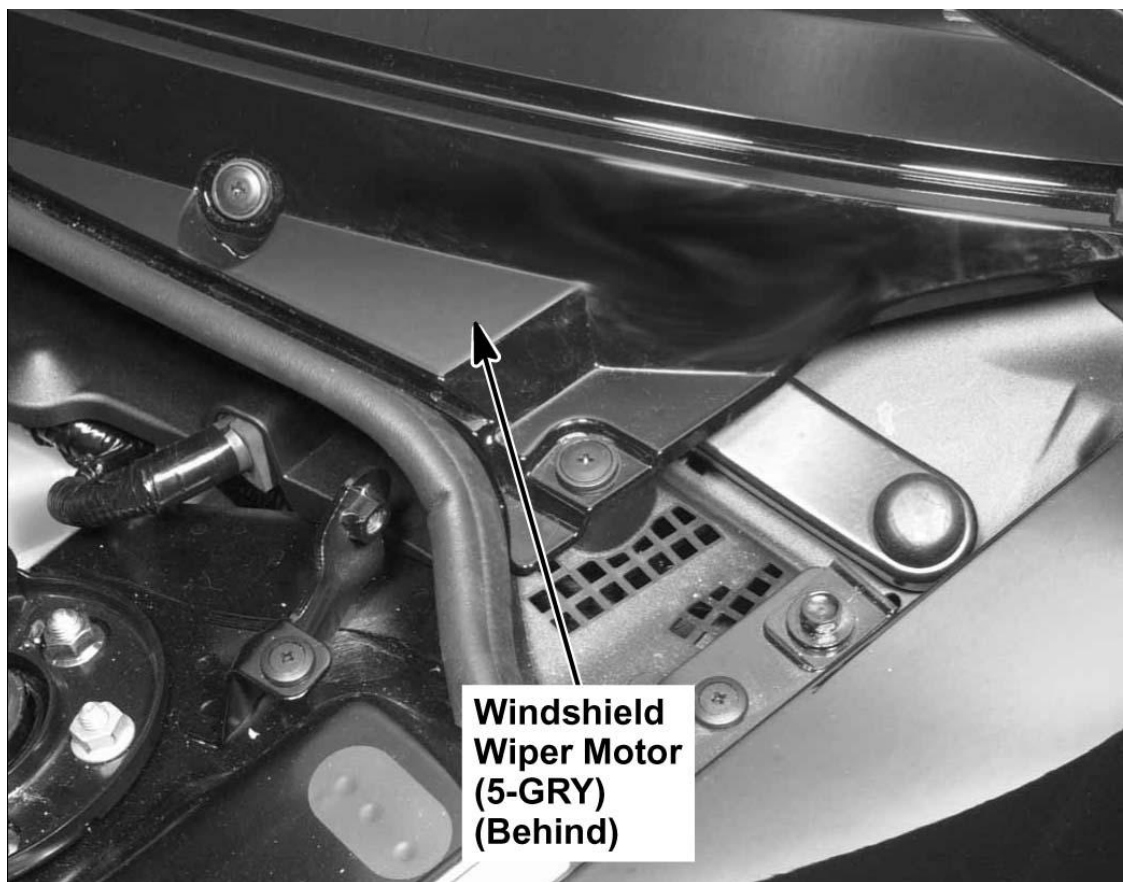

G00363492


Fig. 37: Under Left Side Of Cowl Cover
Courtesy of AMERICAN HONDA MOTOR CO., INC.

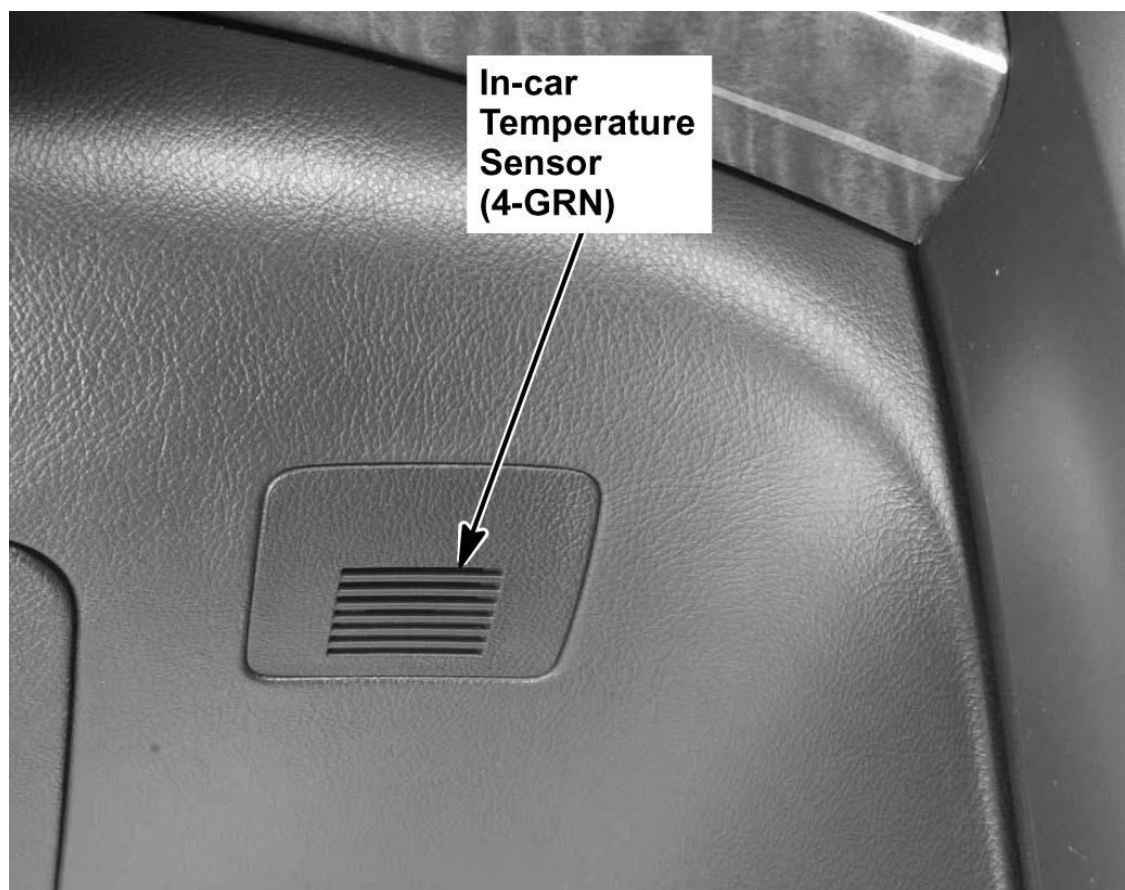

G00363493

Fig. 38: Left Side Of Dash


Courtesy of AMERICAN HONDA MOTOR CO., INC.

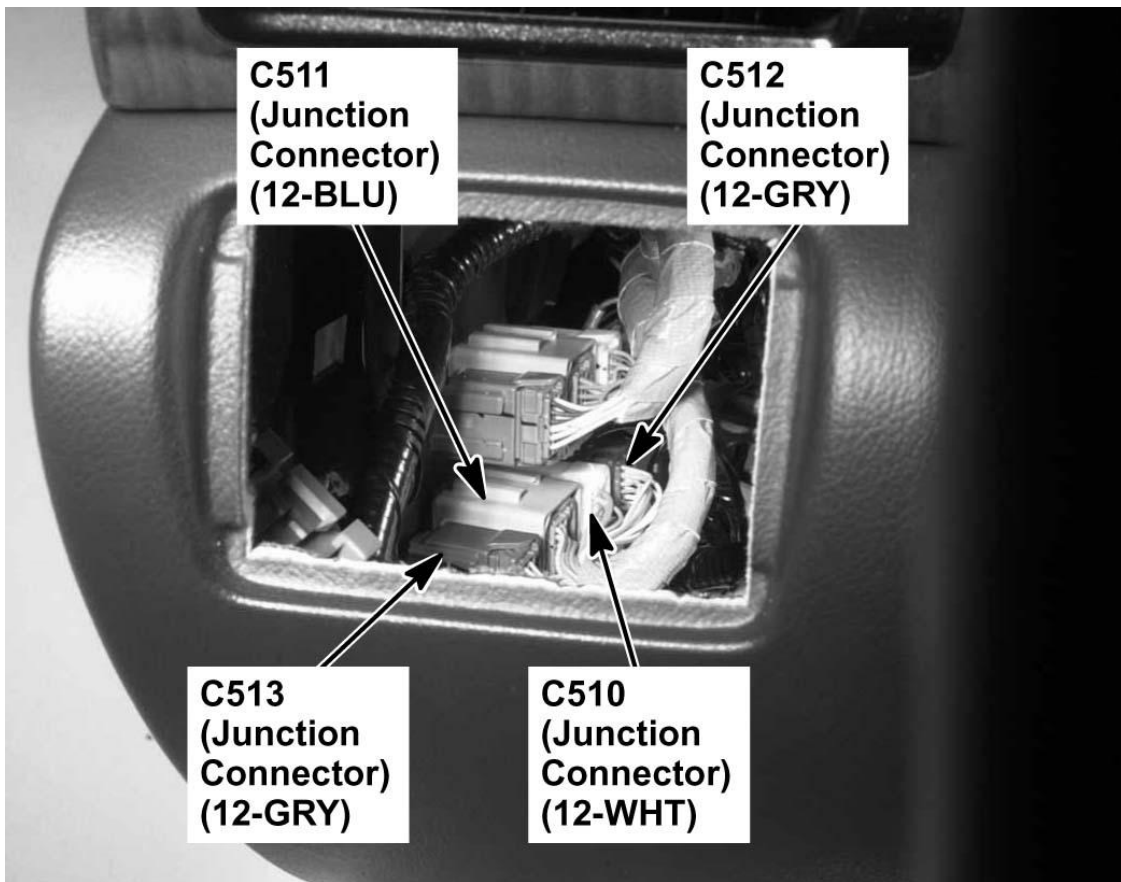

G00363494

Fig. 39: Left Side Of Dash


Courtesy of AMERICAN HONDA MOTOR CO., INC.

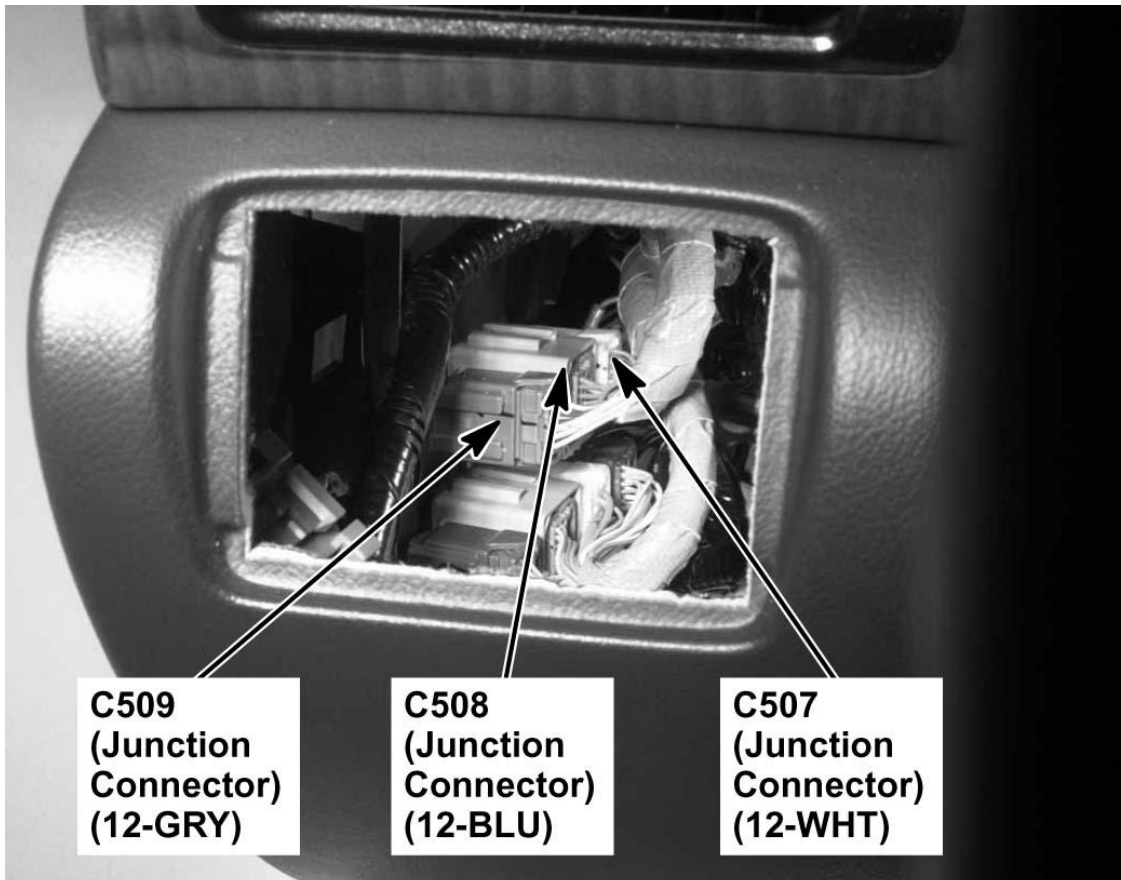

G00363495

Fig. 40: Left Side Of Dash

Courtesy of AMERICAN HONDA MOTOR CO., INC.

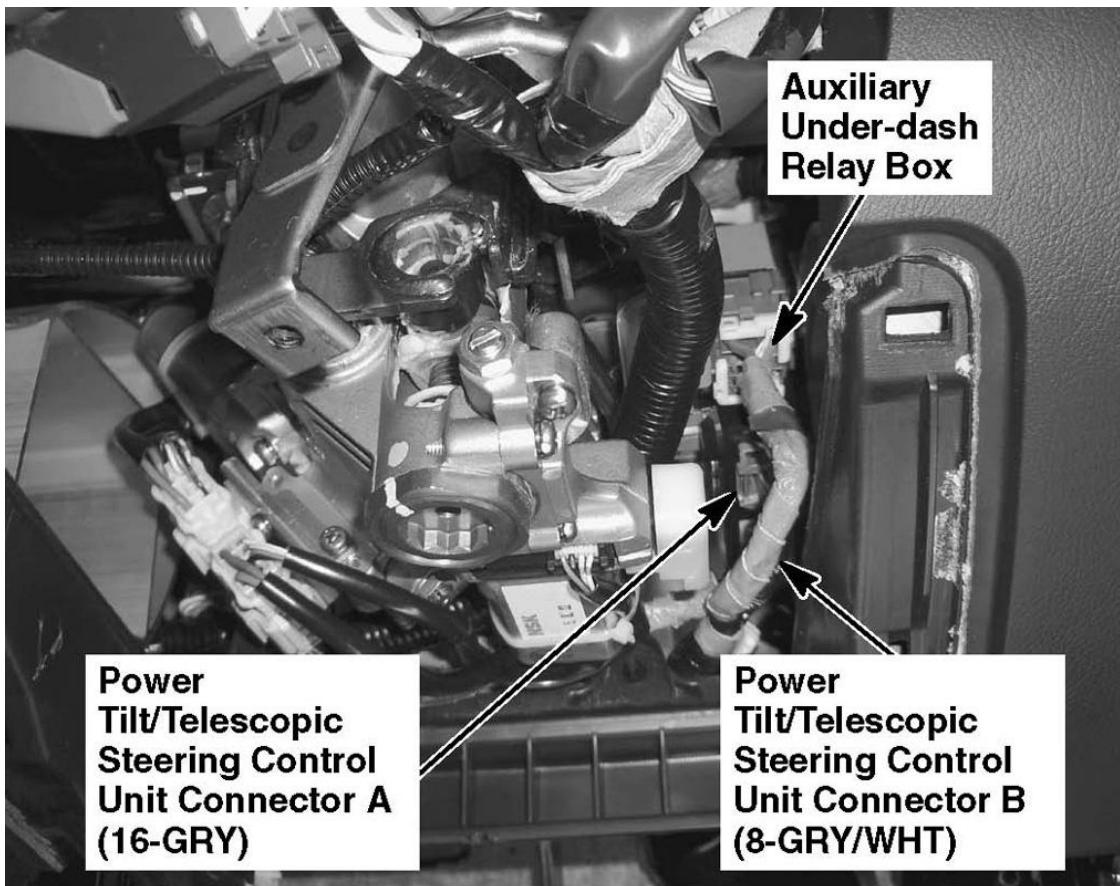

G00447072

Fig. 41: Under Left Side Of Dash


Courtesy of AMERICAN HONDA MOTOR CO., INC.



G00363497

Fig. 42: Under Left Side Of Dash


Courtesy of AMERICAN HONDA MOTOR CO., INC.

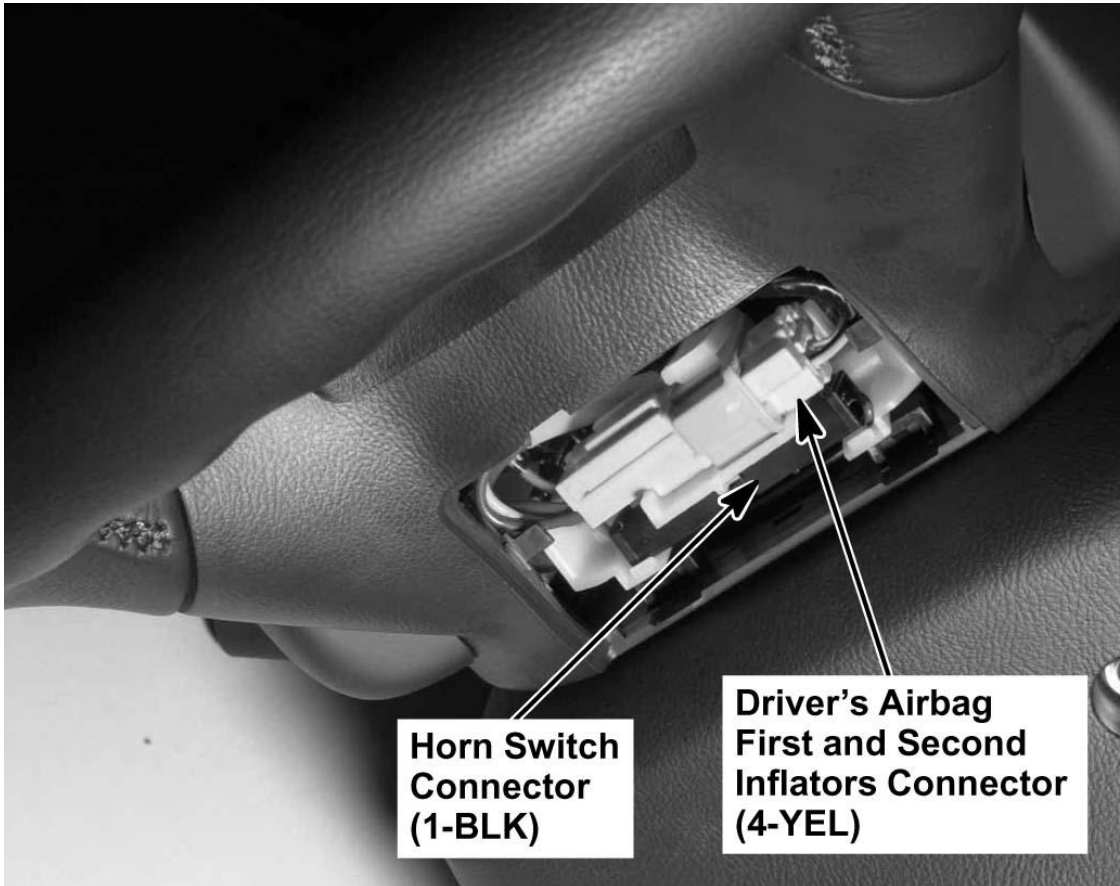

G00363498


Fig. 43: Base Of Steering Wheel

Courtesy of AMERICAN HONDA MOTOR CO., INC.

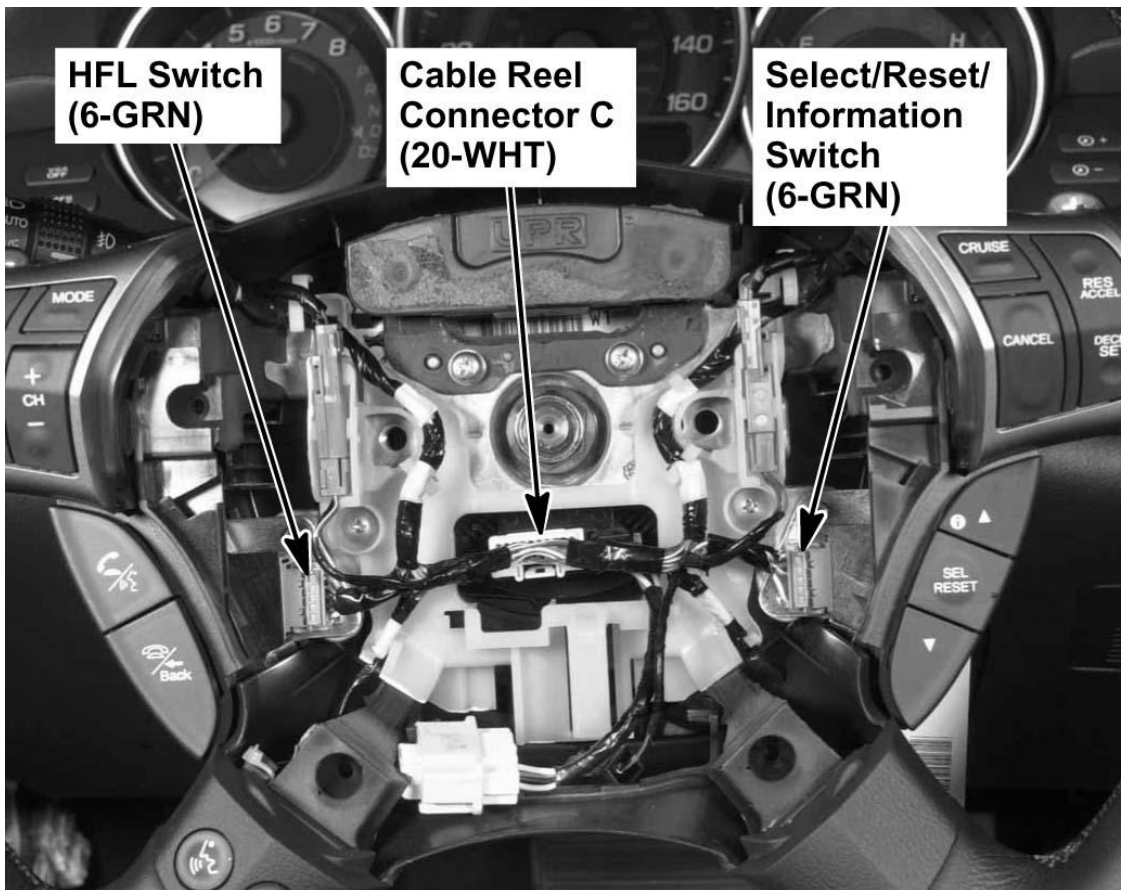


G00363499

Fig. 44: Inside Steering Wheel
Courtesy of AMERICAN HONDA MOTOR CO., INC.

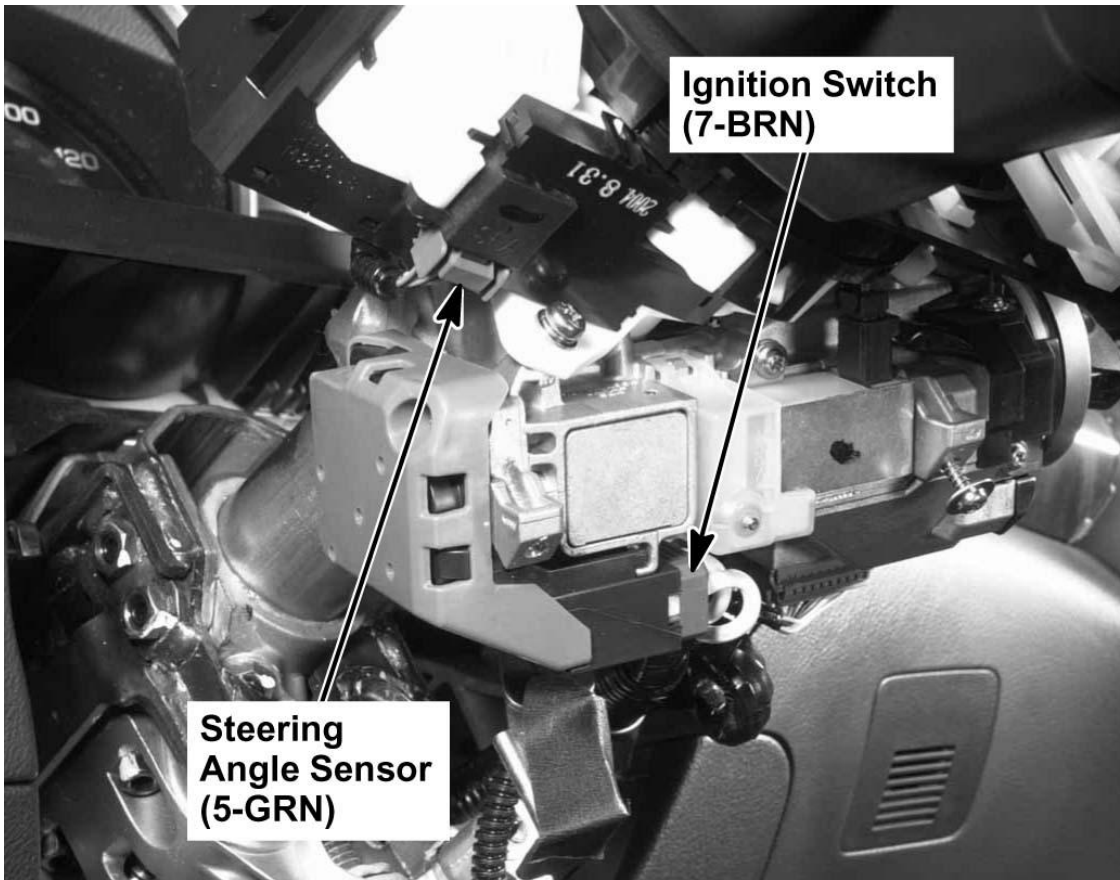


G00363500

Fig. 45: In Steering Wheel Cover
Courtesy of AMERICAN HONDA MOTOR CO., INC.

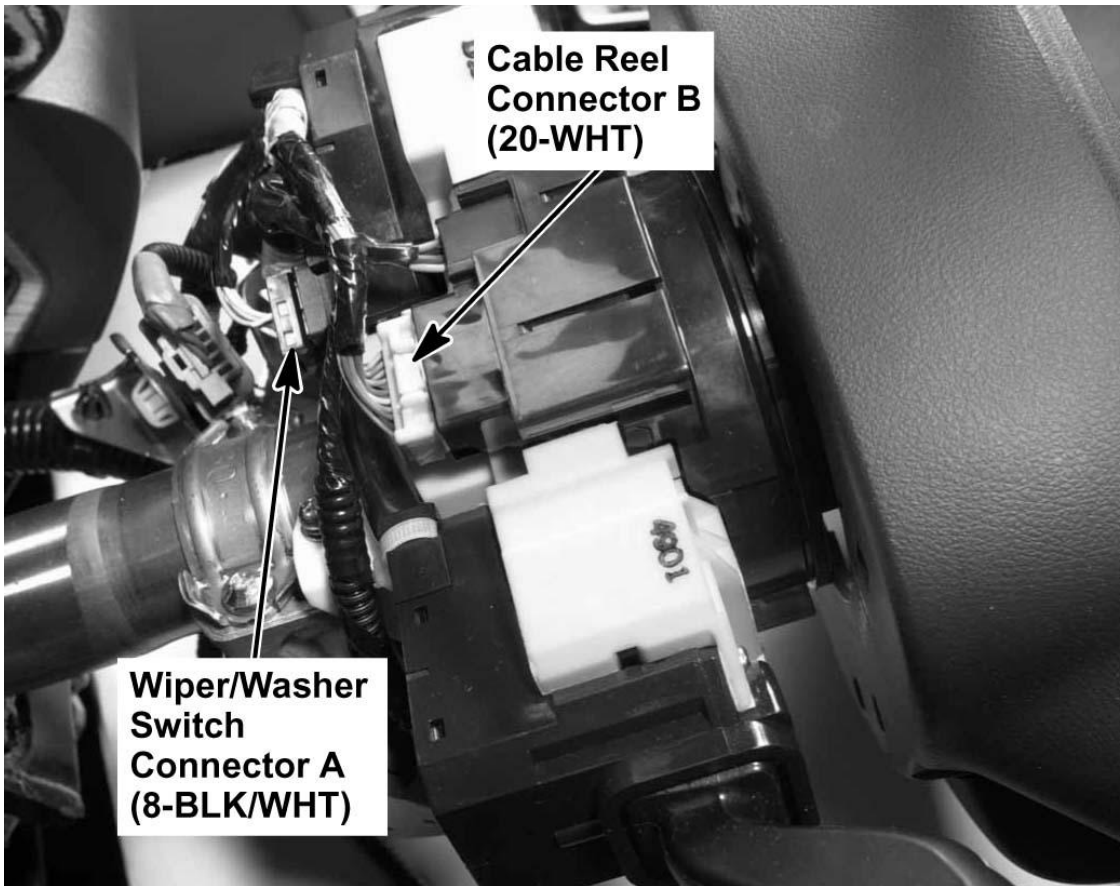


G00363501

Fig. 46: In Steering Wheel Cover
Courtesy of AMERICAN HONDA MOTOR CO., INC.

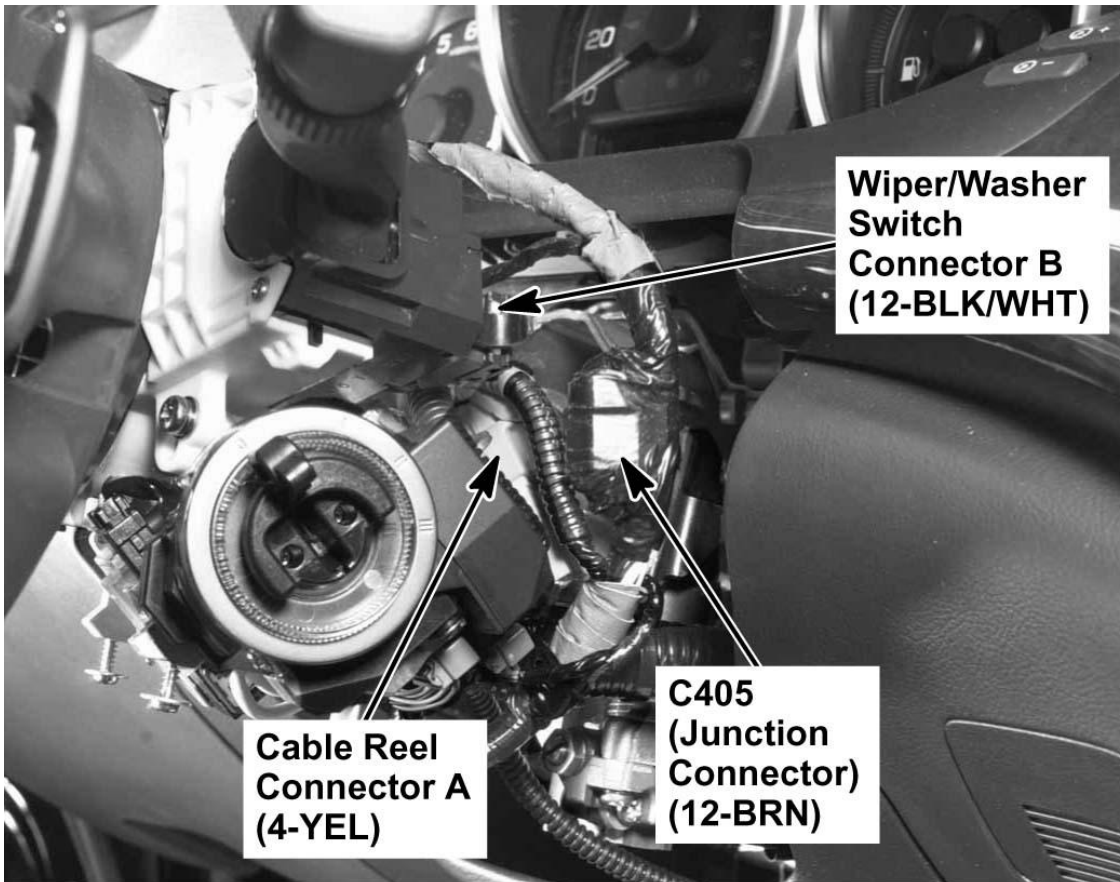


G00363502

Fig. 47: In Steering Wheel Cover
Courtesy of AMERICAN HONDA MOTOR CO., INC.

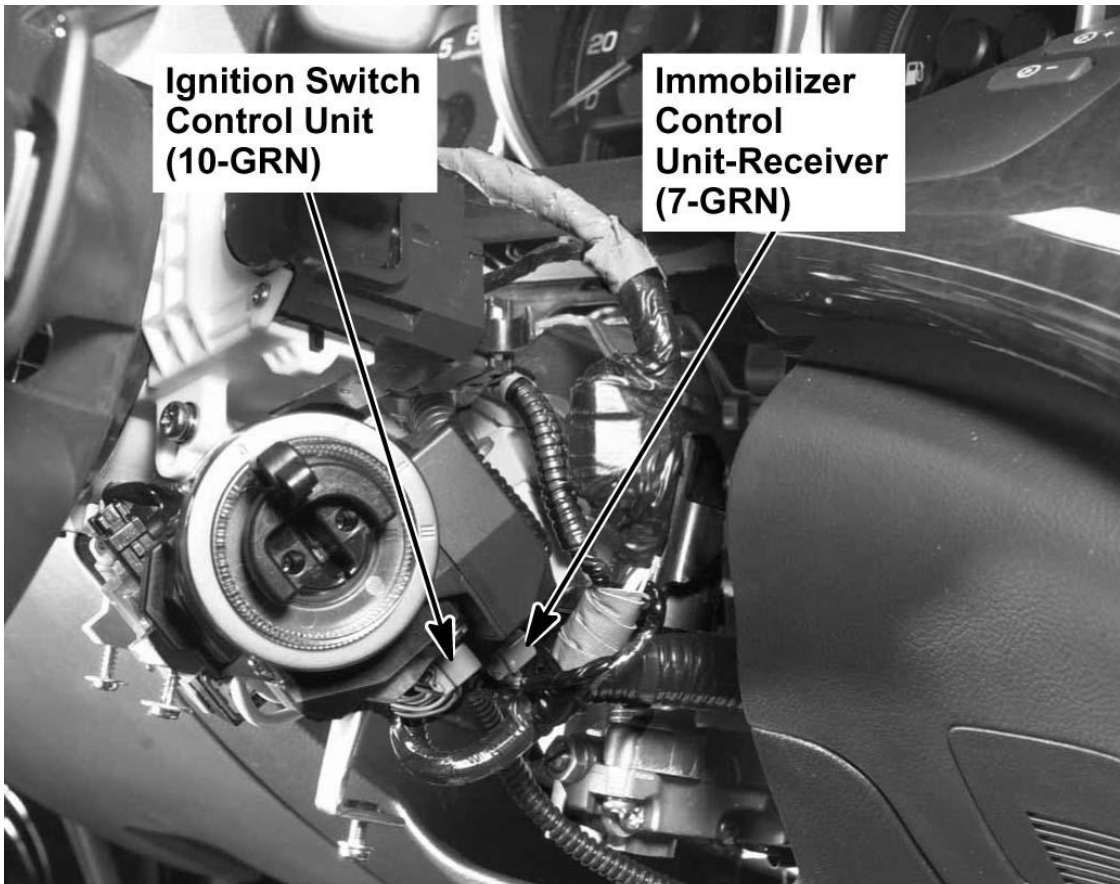

G00363503


Fig. 48: In Steering Wheel Cover
Courtesy of AMERICAN HONDA MOTOR CO., INC.

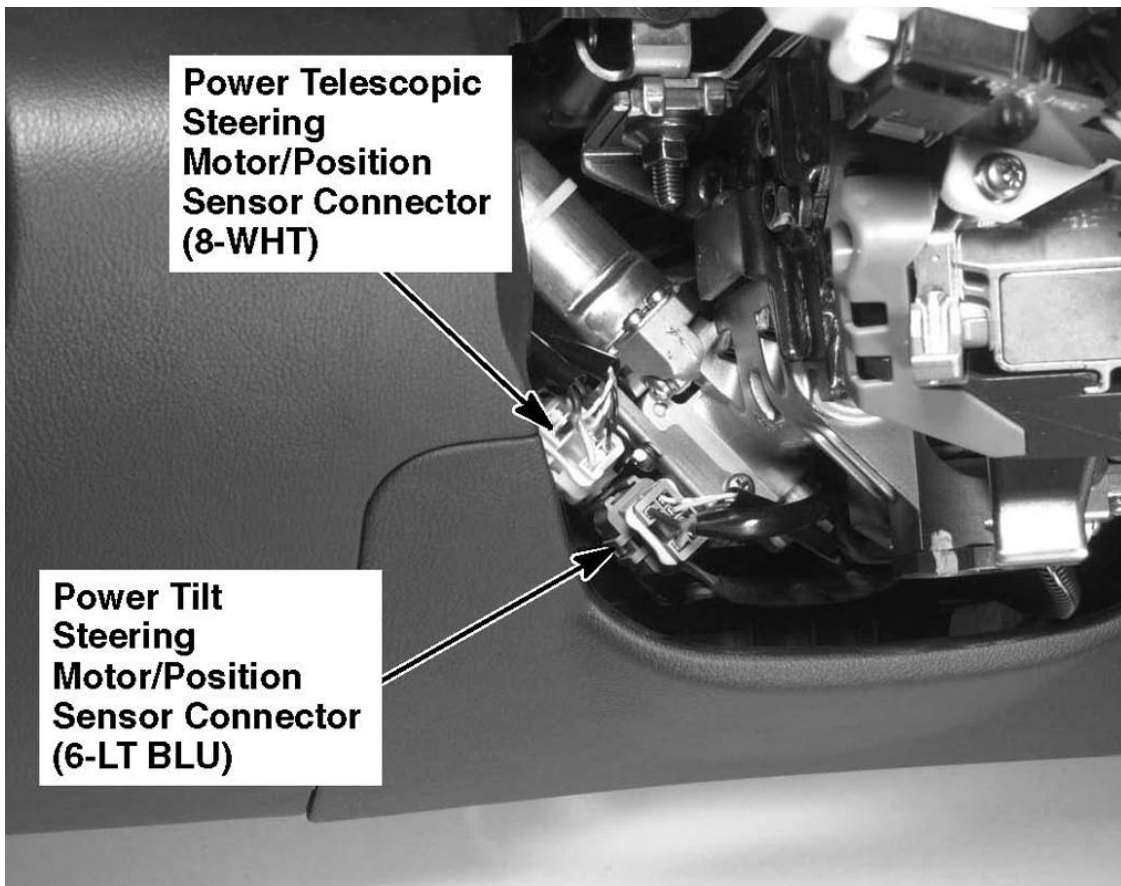

G00447105


Fig. 49: In Steering Wheel Cover

Courtesy of AMERICAN HONDA MOTOR CO., INC.

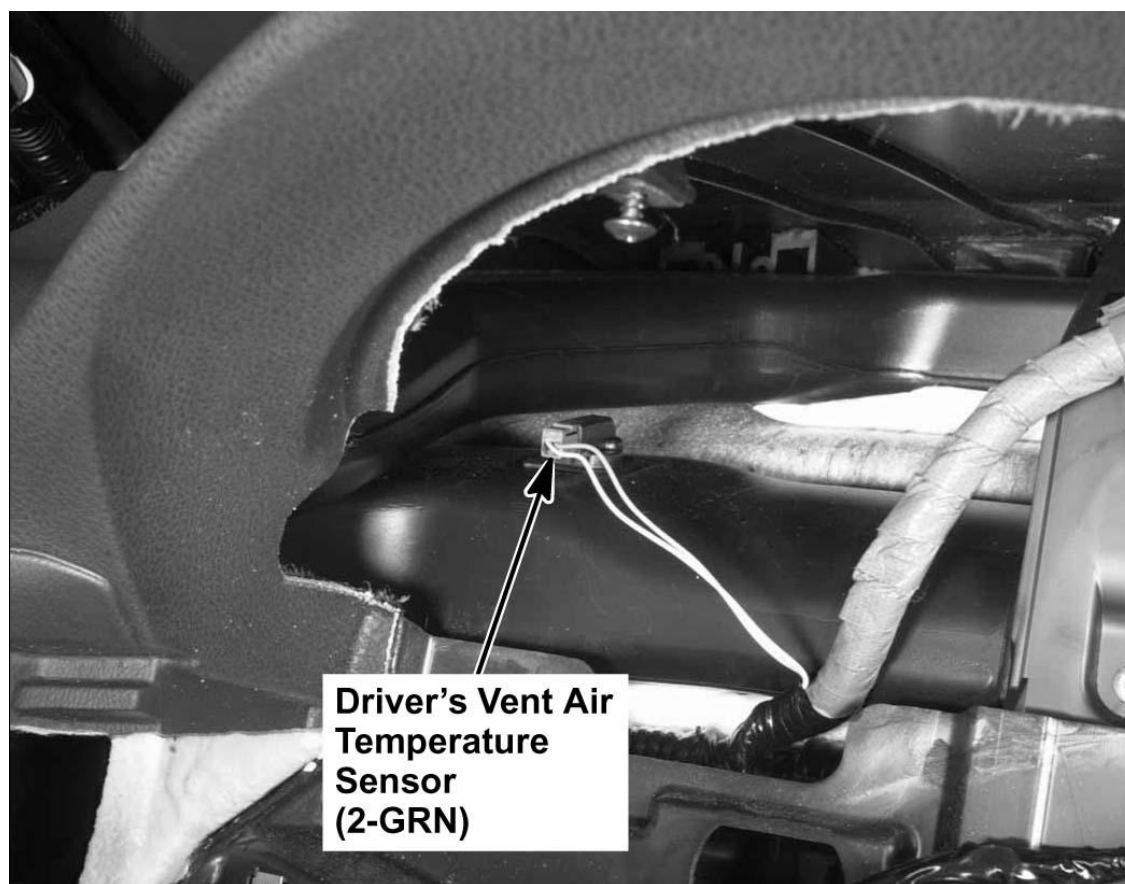

G00363505


Fig. 50: Behind Gauge Control Module
Courtesy of AMERICAN HONDA MOTOR CO., INC.

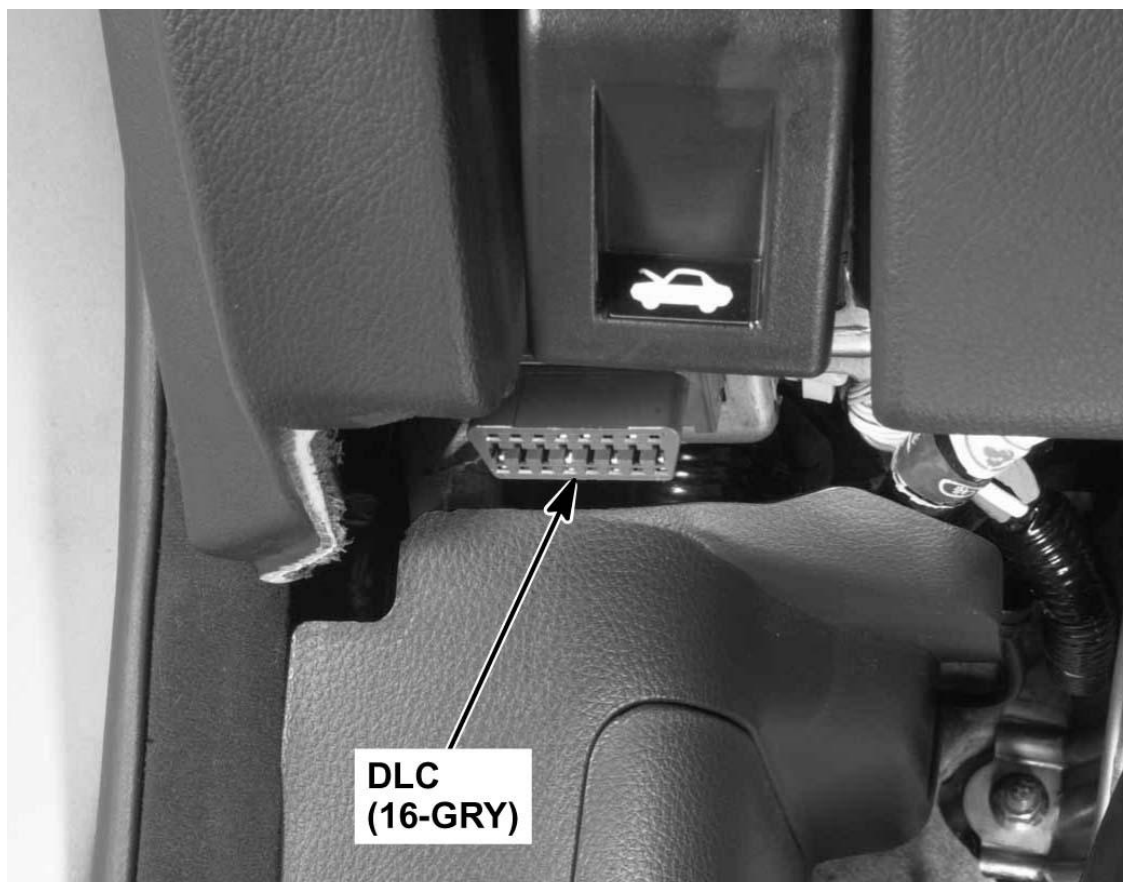

G00363506

Fig. 51: Under Left Side Of Dash


Courtesy of AMERICAN HONDA MOTOR CO., INC.

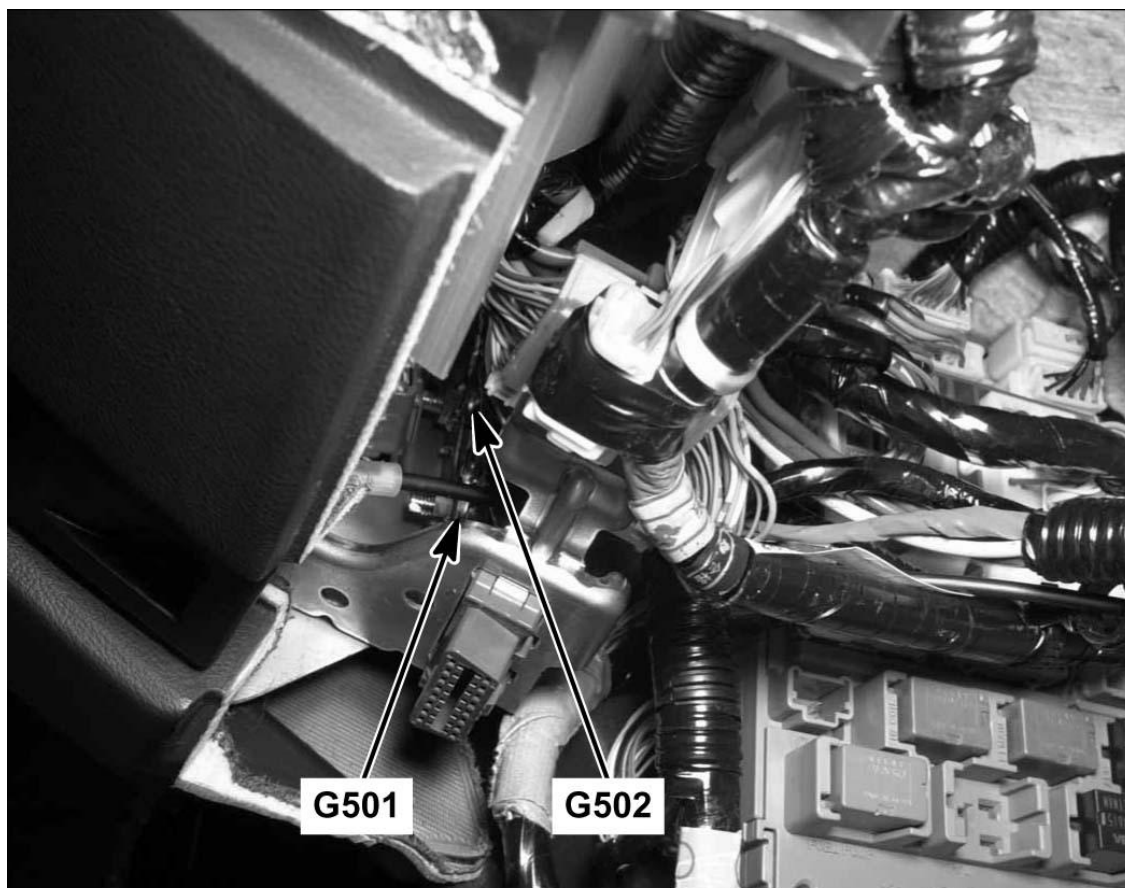

G00363507

Fig. 52: Under Left Side Of Dash


Courtesy of AMERICAN HONDA MOTOR CO., INC.

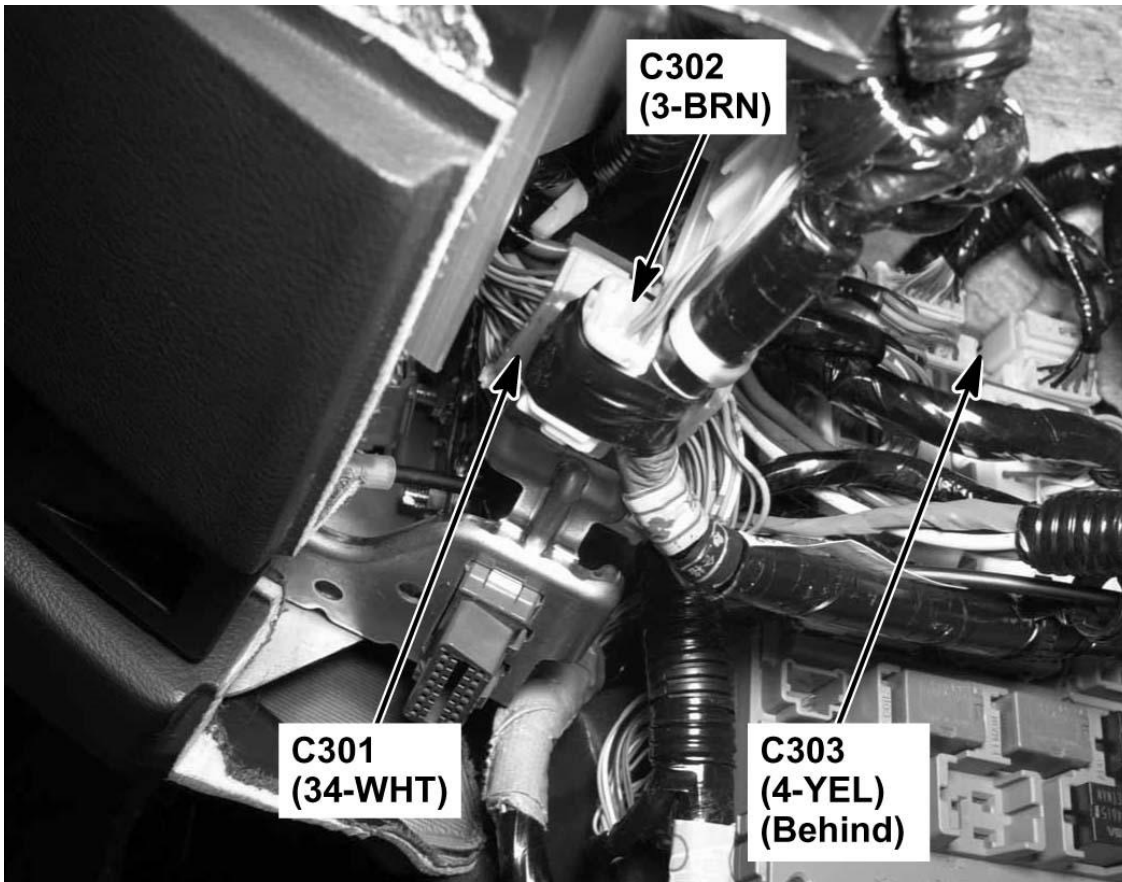

G00363509

Fig. 53: Under Left Side Of Dash


Courtesy of AMERICAN HONDA MOTOR CO., INC.

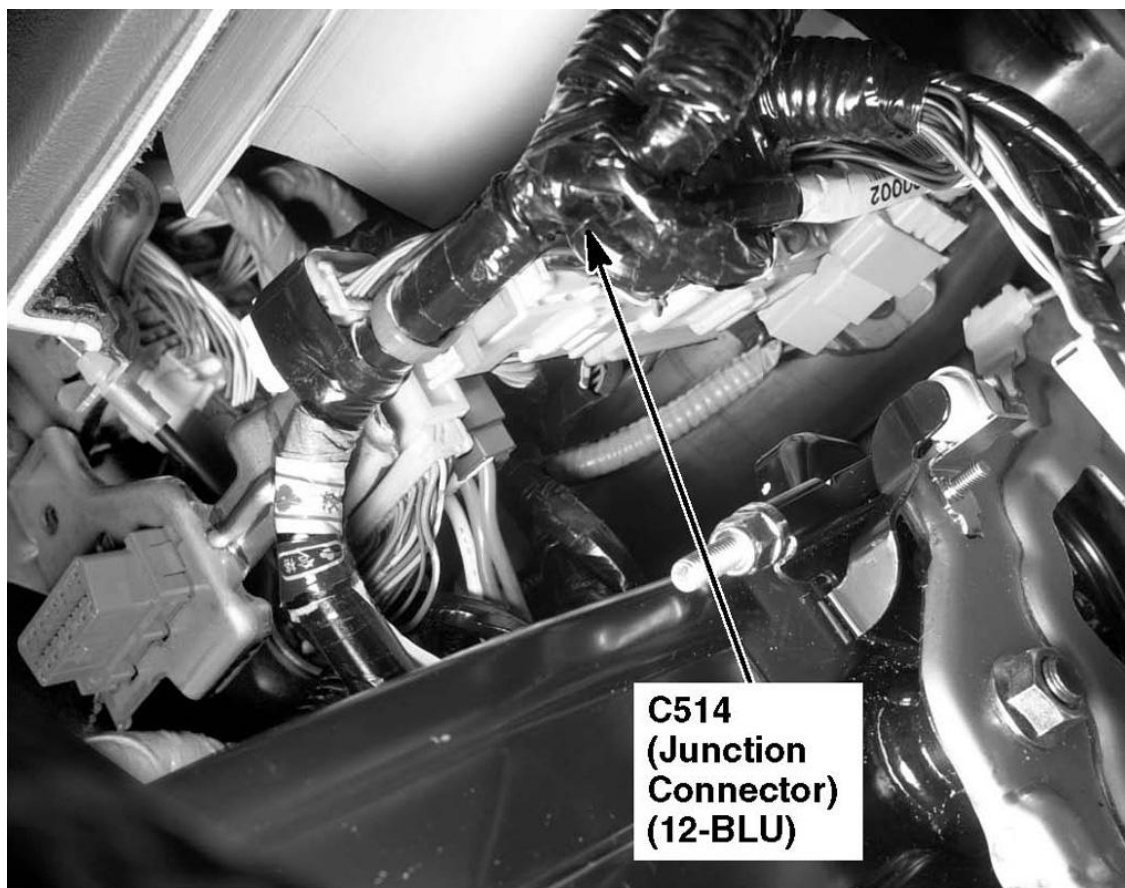

G00447073

Fig. 54: Under Left Side Of Dash


Courtesy of AMERICAN HONDA MOTOR CO., INC.

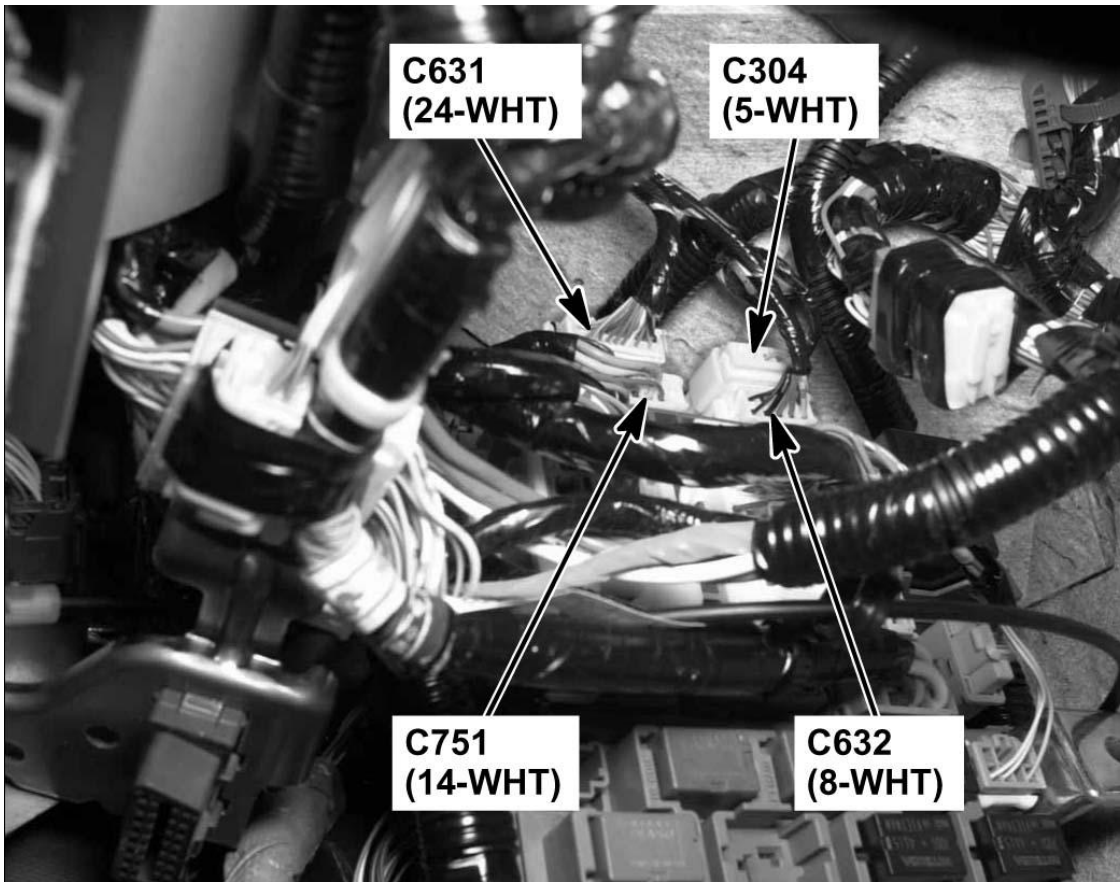

G00363511

Fig. 55: Under Left Side Of Dash


Courtesy of AMERICAN HONDA MOTOR CO., INC.

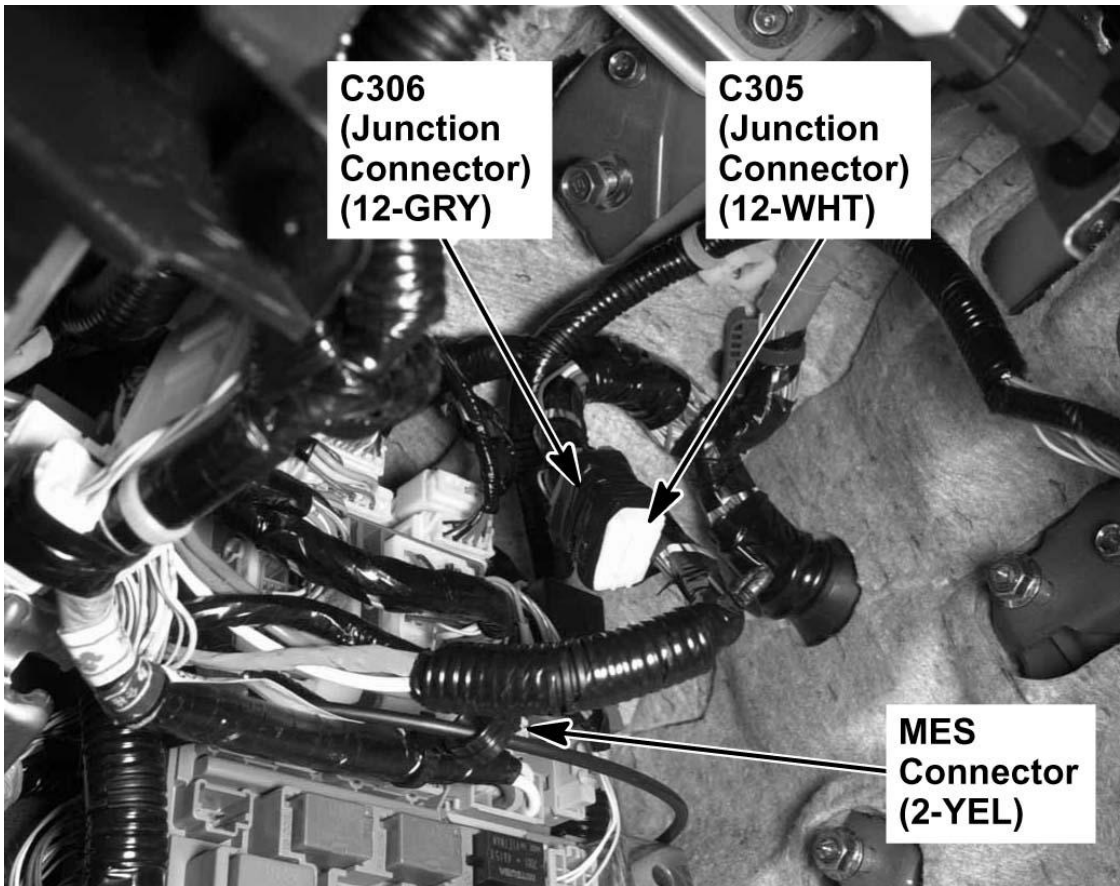

G00363512

Fig. 56: Under Left Side Of Dash


Courtesy of AMERICAN HONDA MOTOR CO., INC.

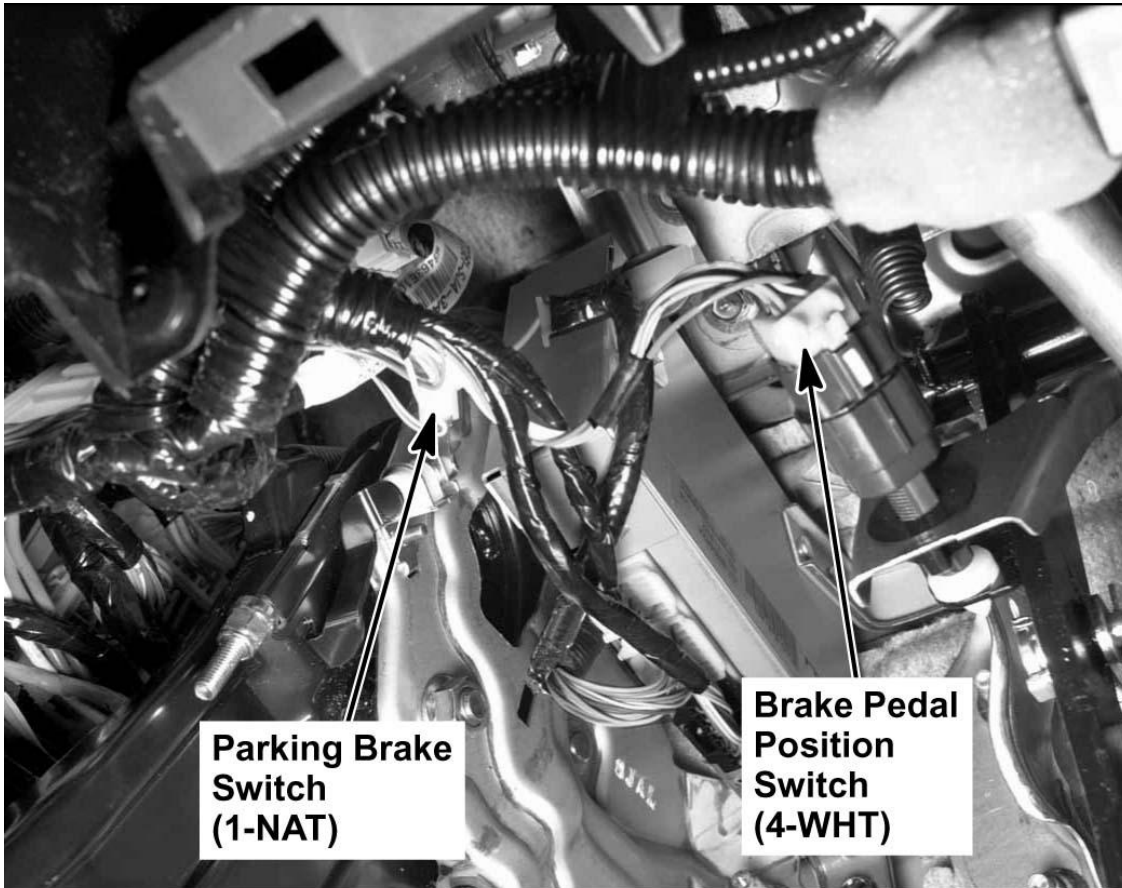

G00363513

Fig. 57: Under Left Side Of Dash


Courtesy of AMERICAN HONDA MOTOR CO., INC.

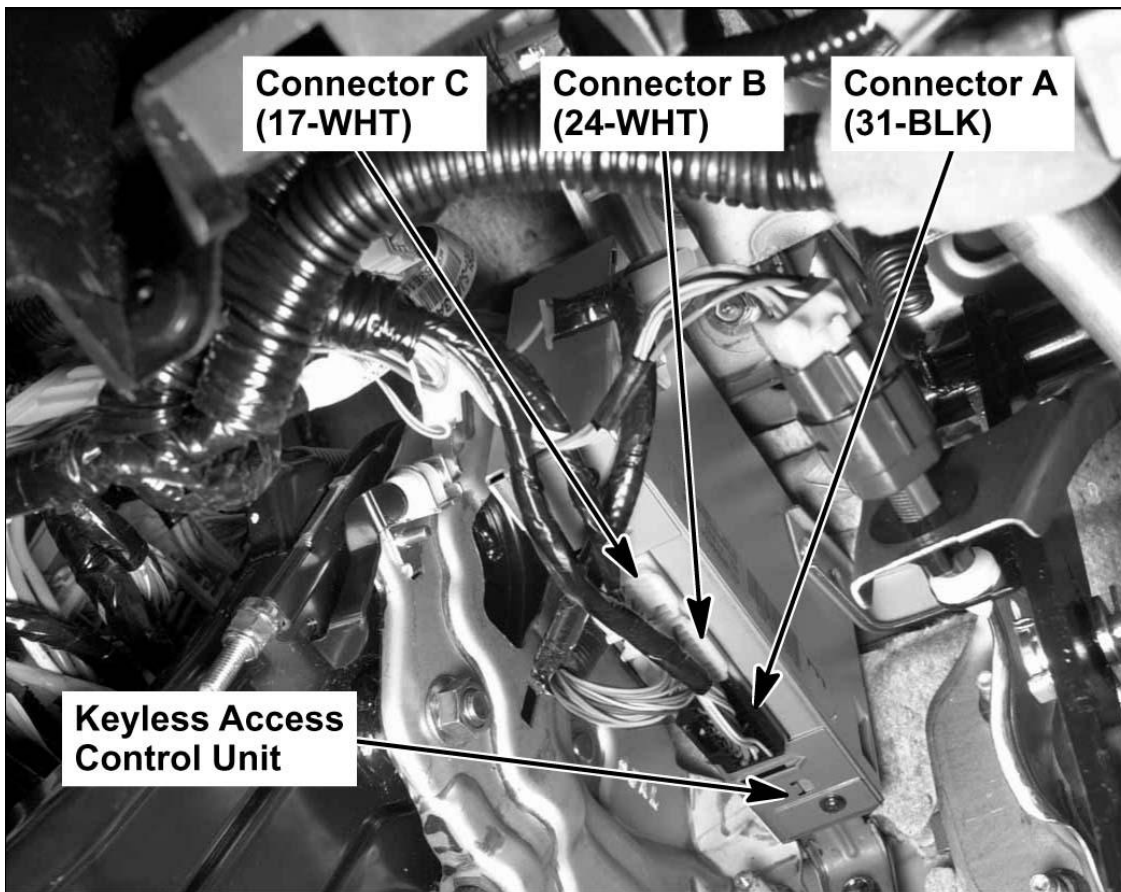

G00363514

Fig. 58: Under Left Side Of Dash


Courtesy of AMERICAN HONDA MOTOR CO., INC.

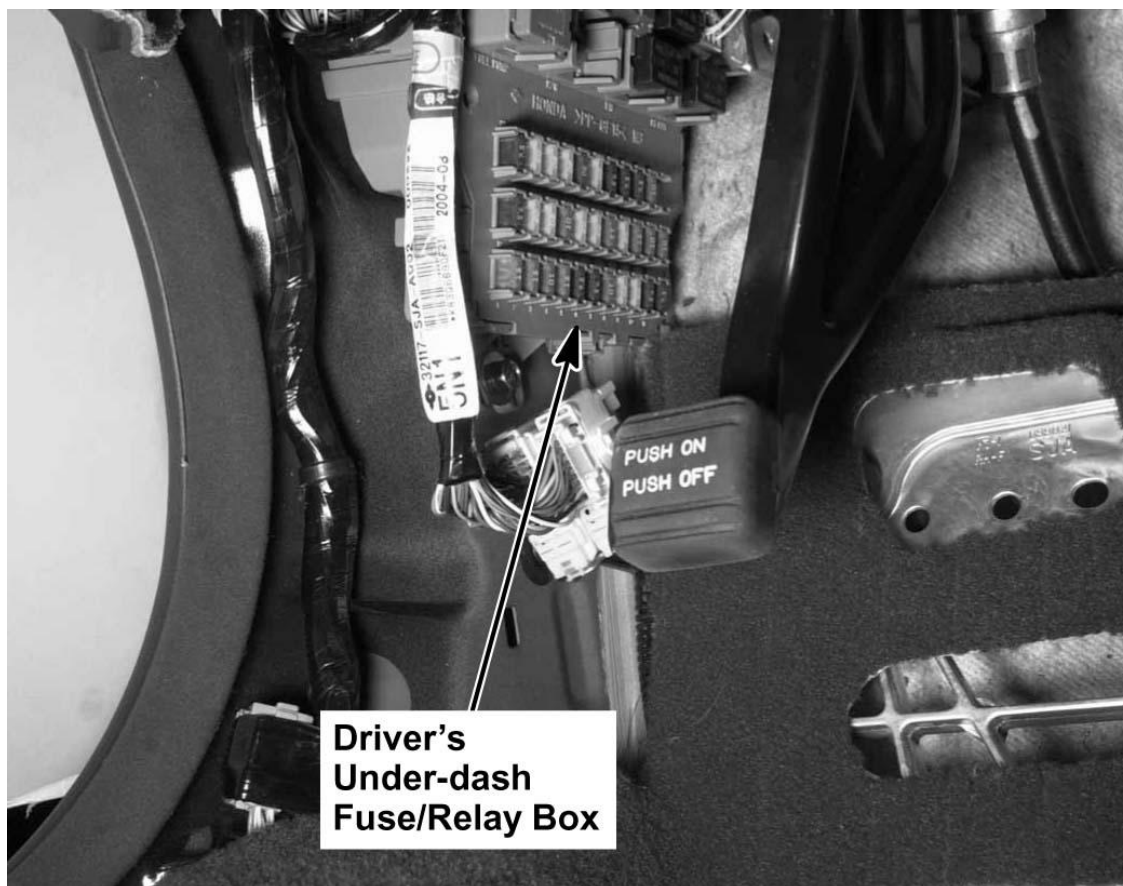

G00363515

Fig. 59: Behind Left Kick Panel


Courtesy of AMERICAN HONDA MOTOR CO., INC.

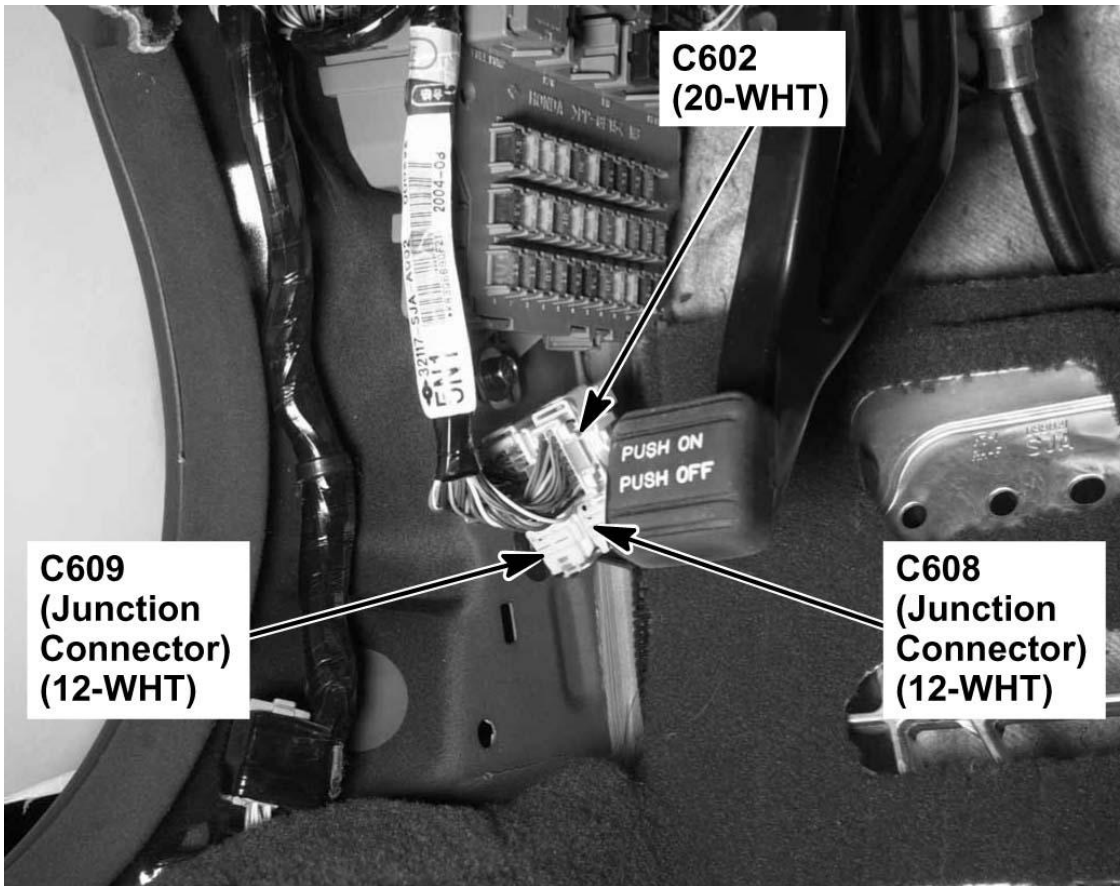

G00363516

Fig. 60: Behind Left Kick Panel


Courtesy of AMERICAN HONDA MOTOR CO., INC.

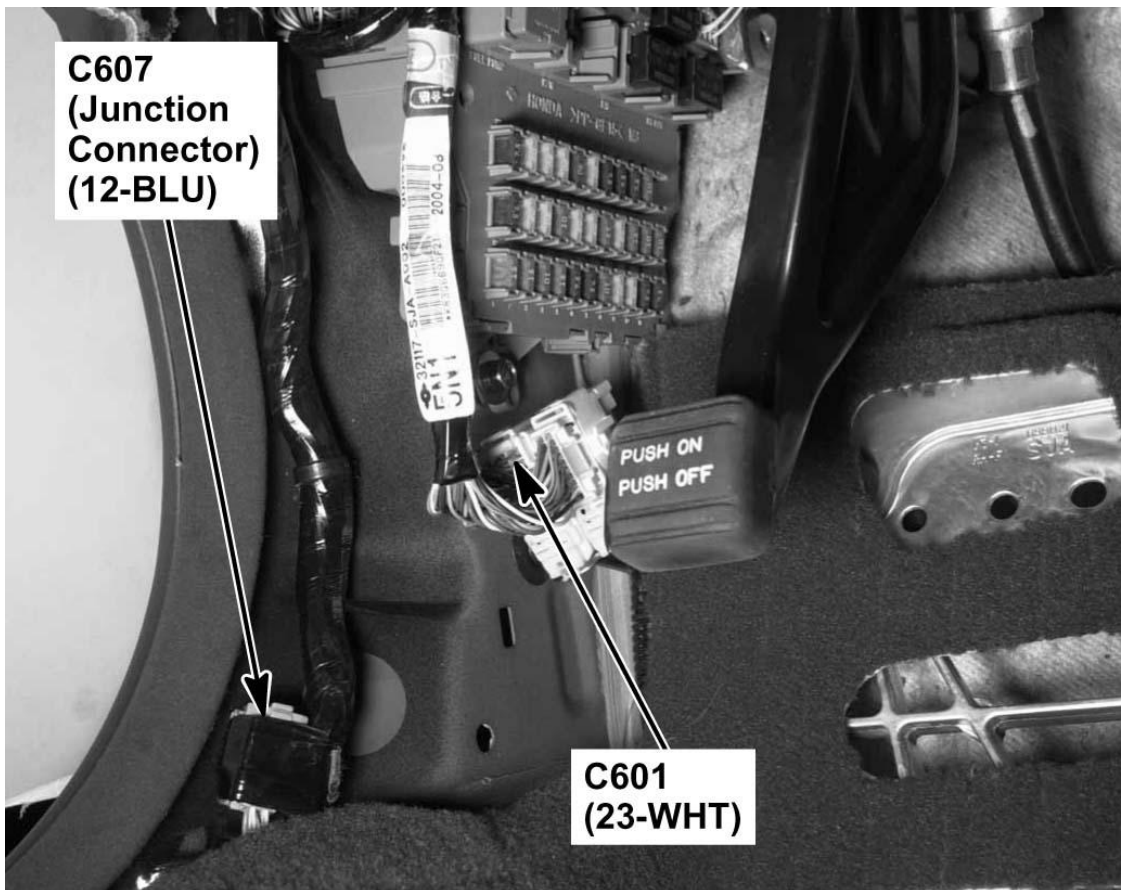

G00363517

Fig. 61: Behind Left Kick Panel


Courtesy of AMERICAN HONDA MOTOR CO., INC.

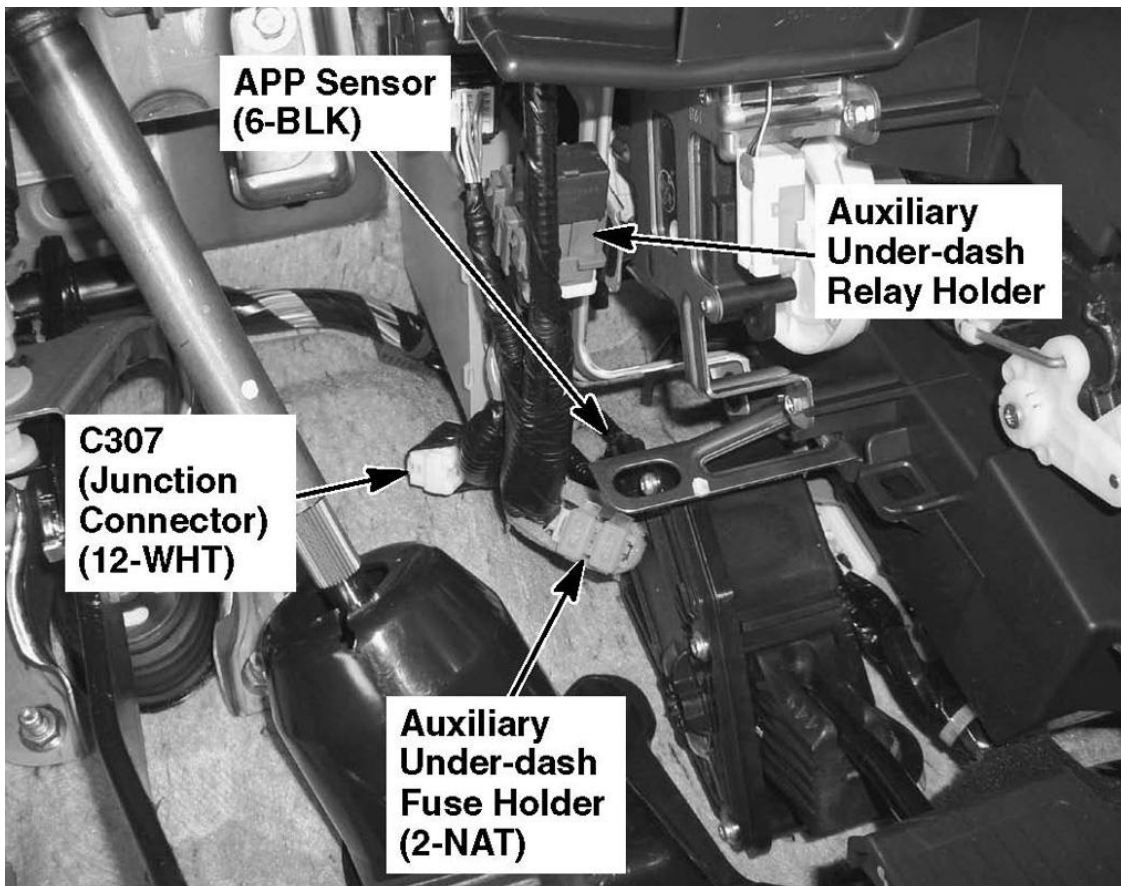

G00447074

Fig. 62: Under Left Side Of Dash


Courtesy of AMERICAN HONDA MOTOR CO., INC.

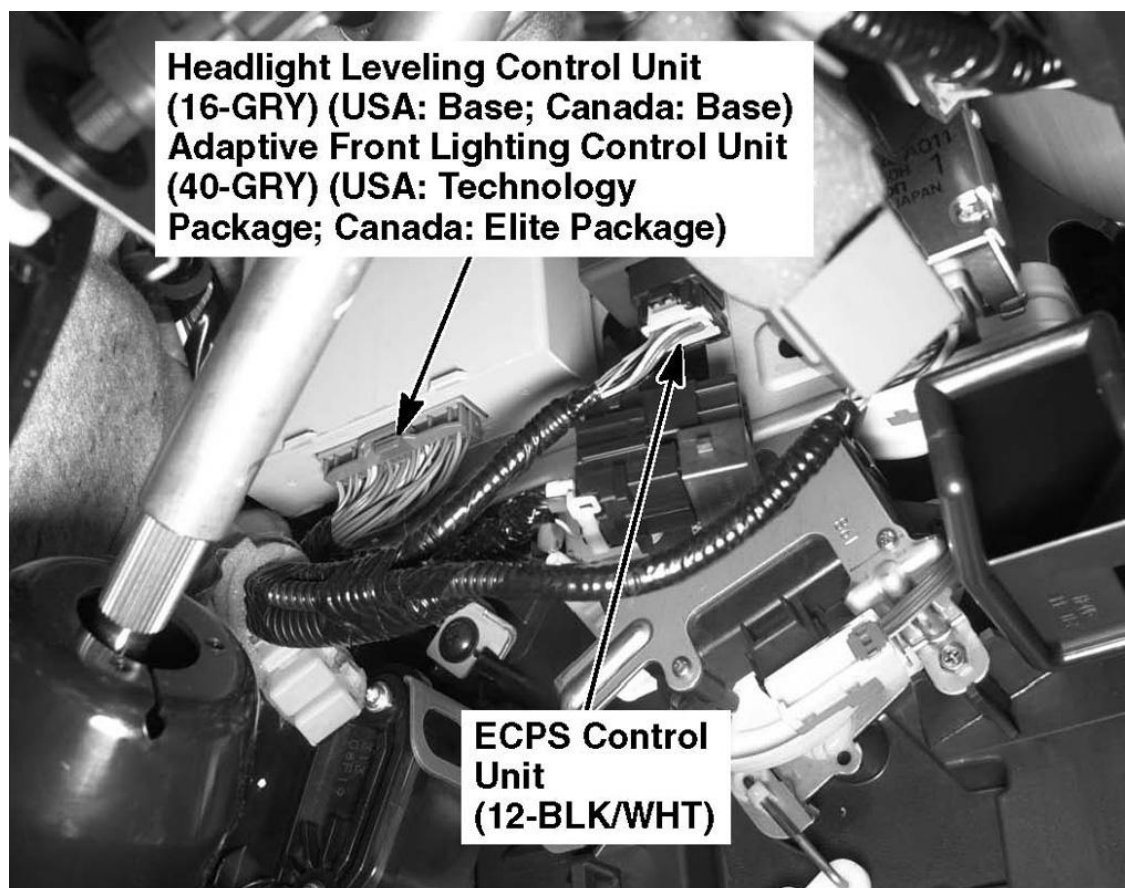

G00447075

Fig. 63: Under Left Side Of Dash


Courtesy of AMERICAN HONDA MOTOR CO., INC.

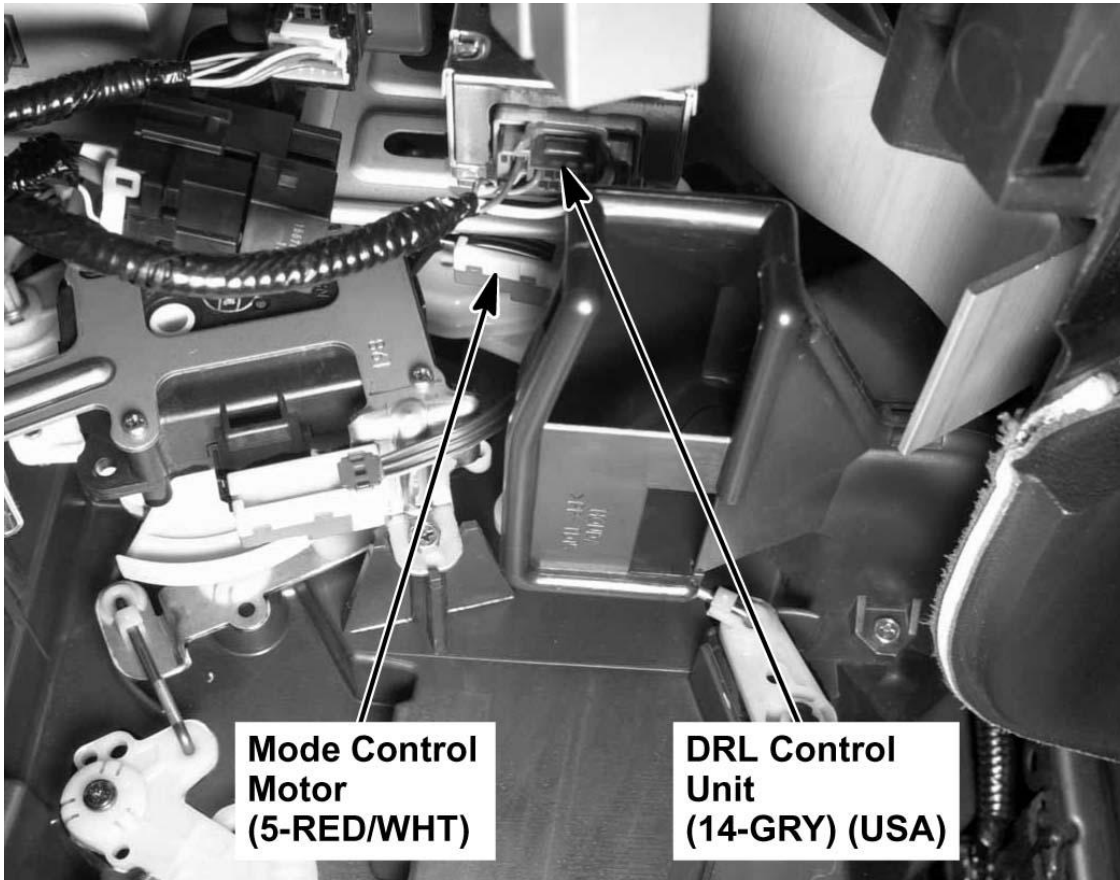

G00363521

Fig. 64: Under Left Side Of Dash

Courtesy of AMERICAN HONDA MOTOR CO., INC.

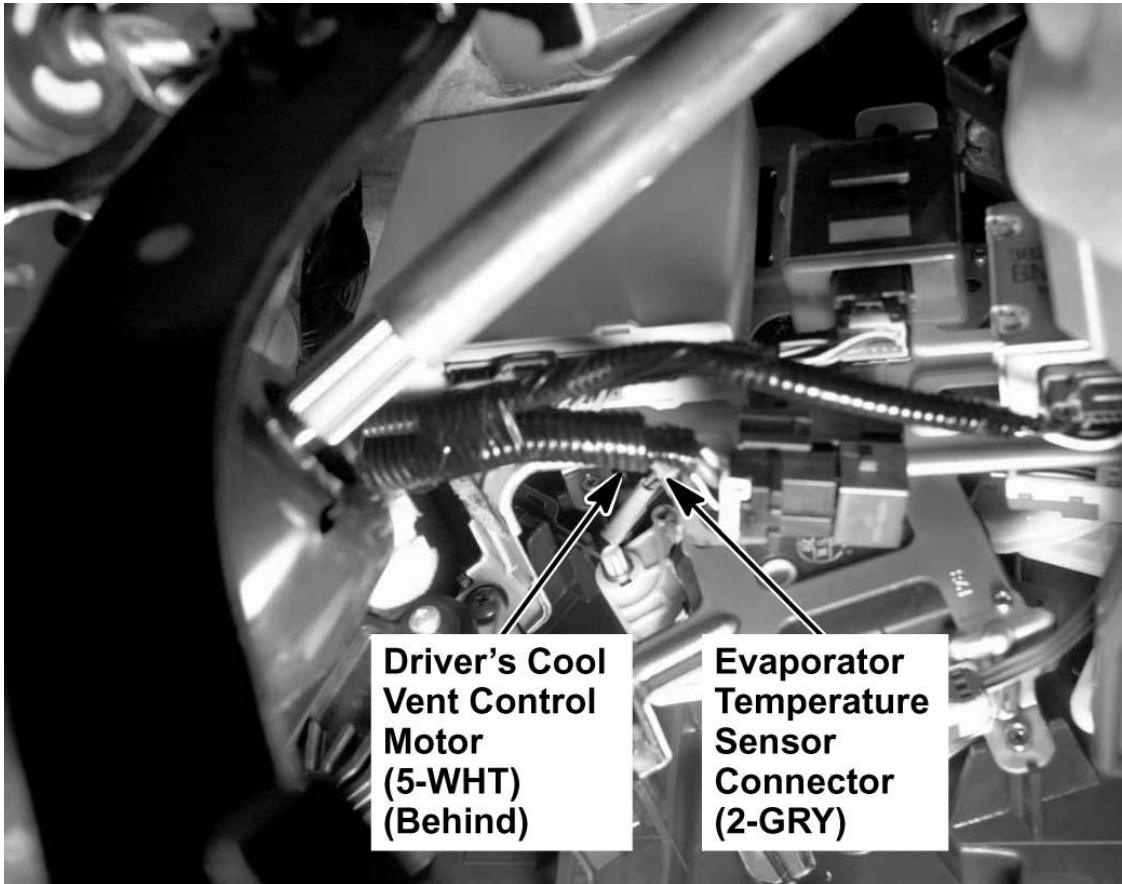

G00363522

Fig. 65: Under Left Side Of Dash


Courtesy of AMERICAN HONDA MOTOR CO., INC.



G00363523

Fig. 66: Under Left Side Of Dash


Courtesy of AMERICAN HONDA MOTOR CO., INC.

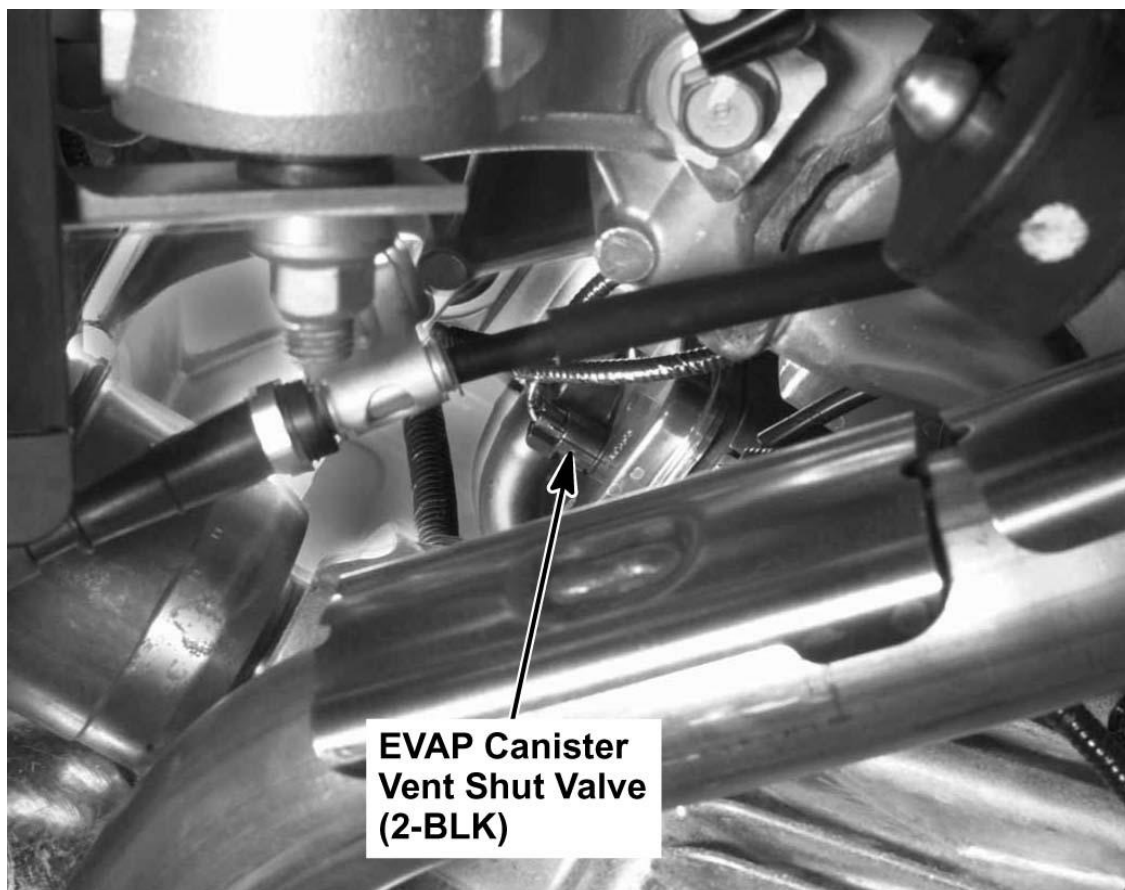

G00363524

Fig. 67: Above Rear Differential


Courtesy of AMERICAN HONDA MOTOR CO., INC.

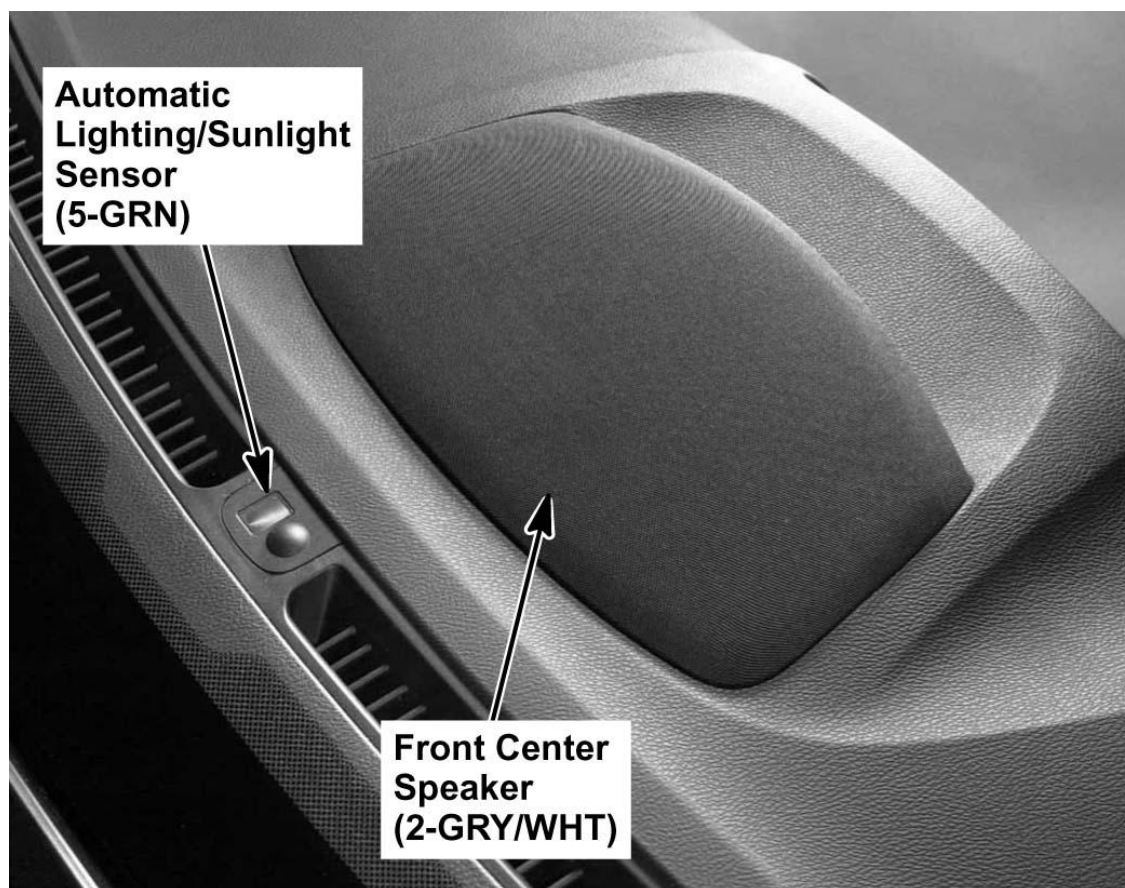

G00363525

Fig. 68: Middle Of Dash


Courtesy of AMERICAN HONDA MOTOR CO., INC.

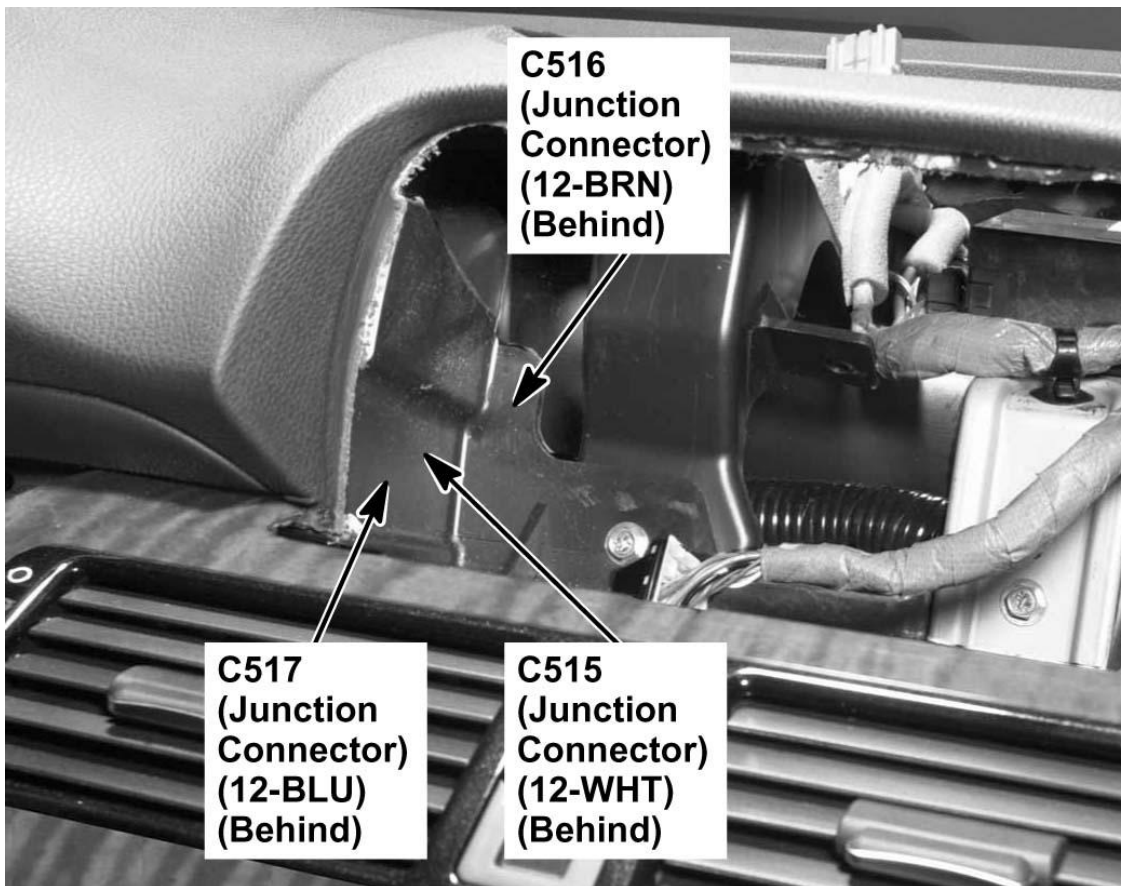

G00363527

Fig. 69: Behind Middle Of Dash


Courtesy of AMERICAN HONDA MOTOR CO., INC.

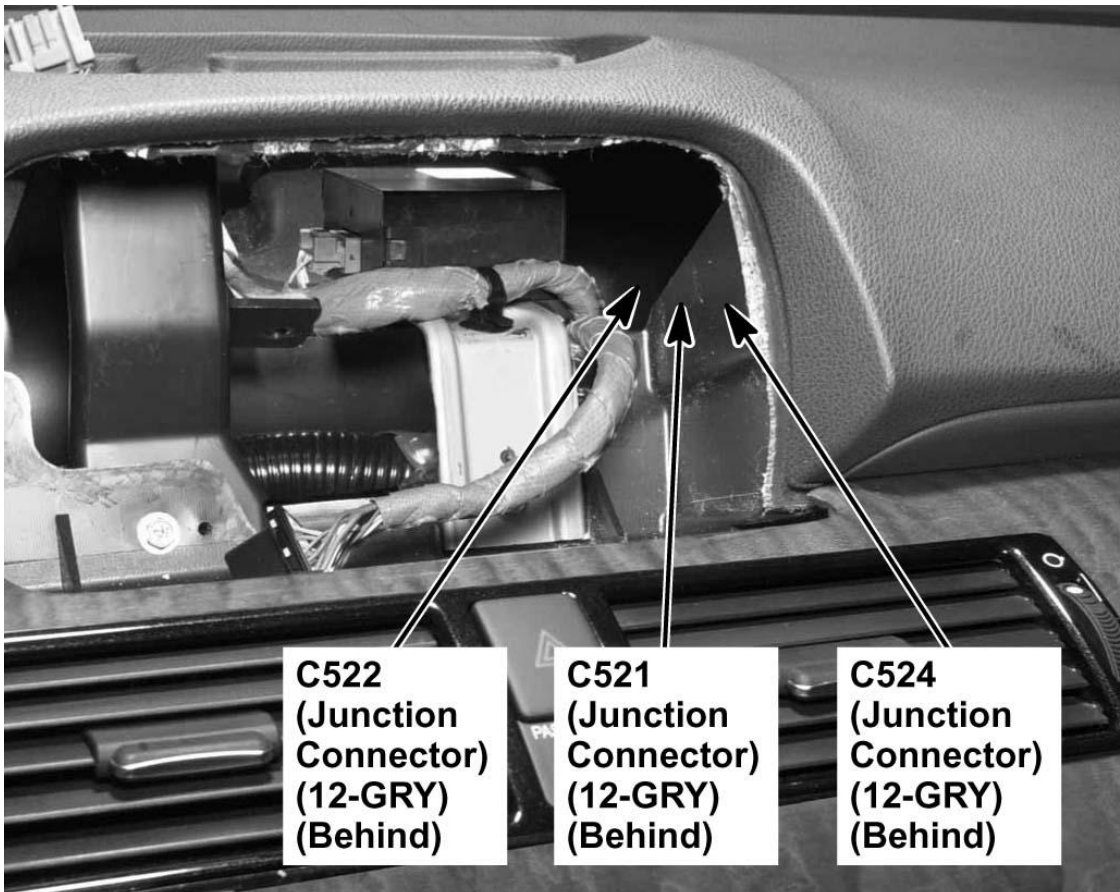

G00363528

Fig. 70: Behind Middle Of Dash


Courtesy of AMERICAN HONDA MOTOR CO., INC.

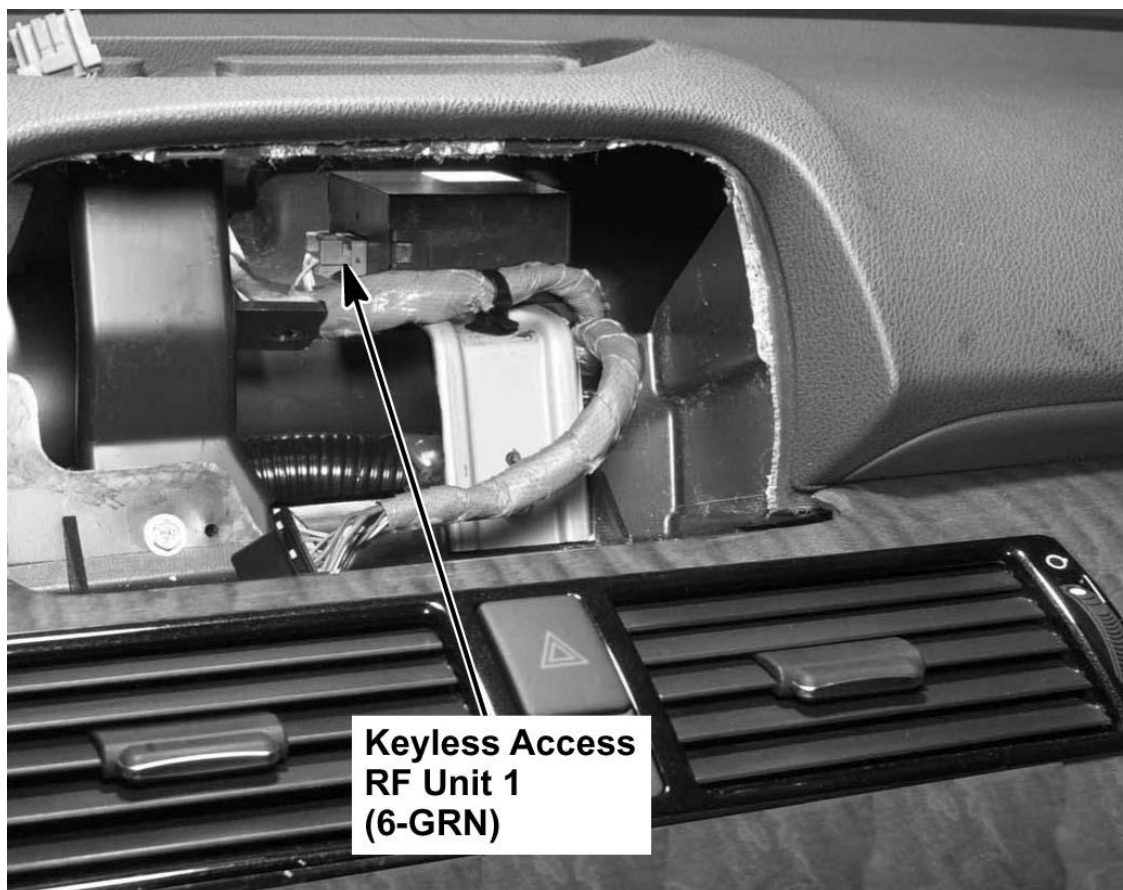

G00363529

Fig. 71: Behind Middle Of Dash


Courtesy of AMERICAN HONDA MOTOR CO., INC.

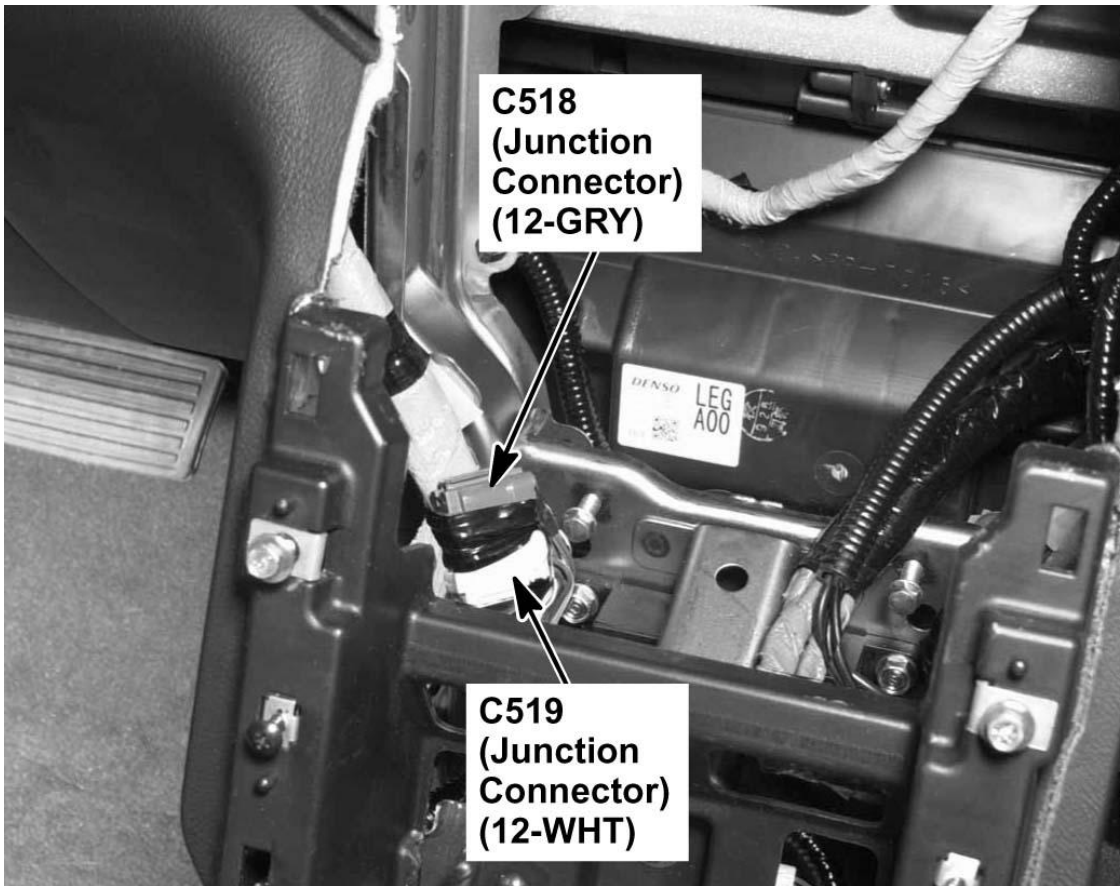

G00363530

Fig. 72: Behind Middle Of Dash

Courtesy of AMERICAN HONDA MOTOR CO., INC.

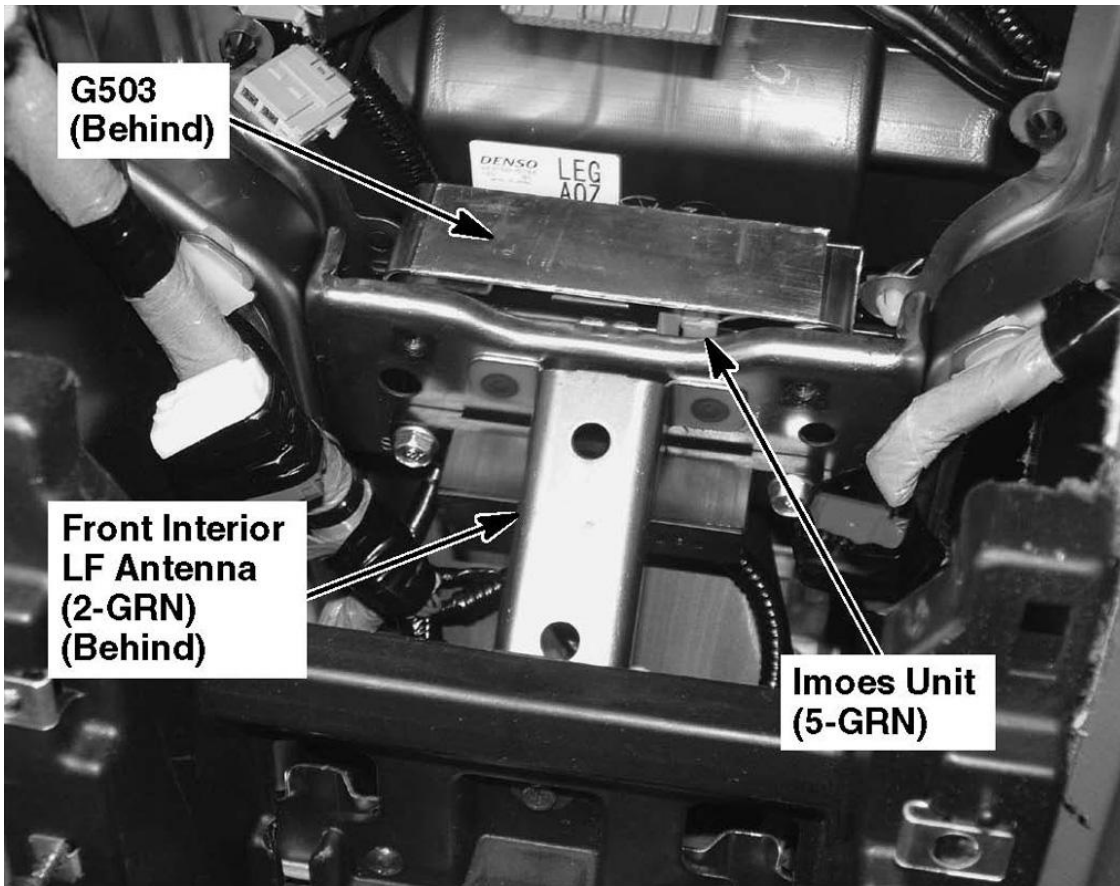

G00447077

Fig. 73: Behind Middle Of Dash


Courtesy of AMERICAN HONDA MOTOR CO., INC.



G00447078

Fig. 74: Behind Middle Of Dash


Courtesy of AMERICAN HONDA MOTOR CO., INC.

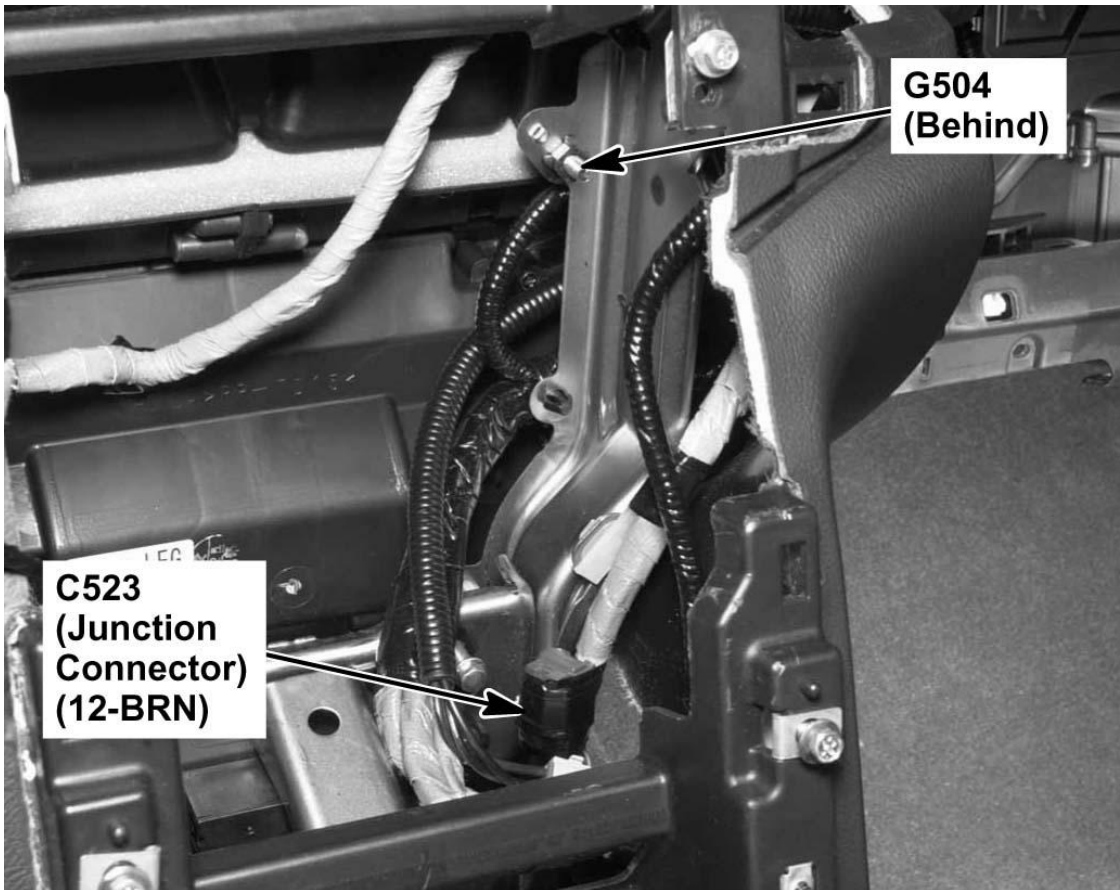

G00363533

Fig. 75: Behind Middle Of Dash


Courtesy of AMERICAN HONDA MOTOR CO., INC.

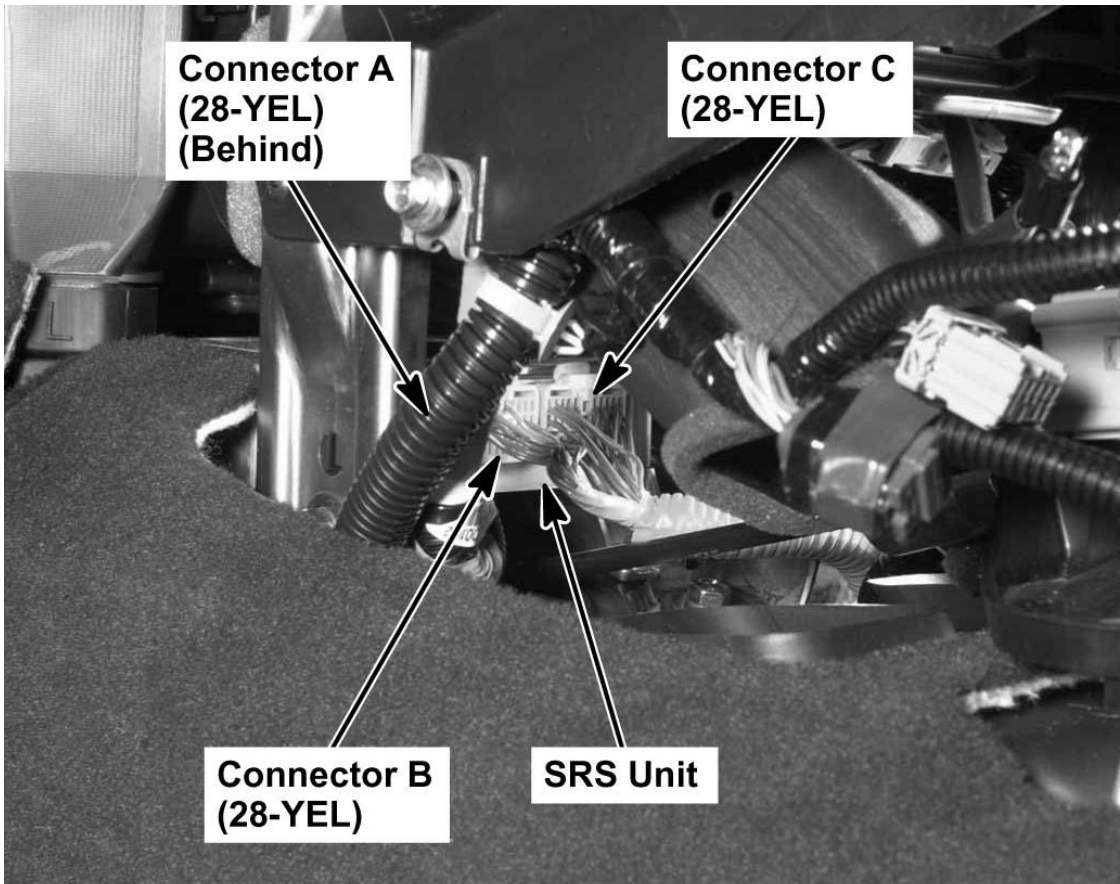

G00363534

Fig. 76: Behind Middle Of Dash


Courtesy of AMERICAN HONDA MOTOR CO., INC.

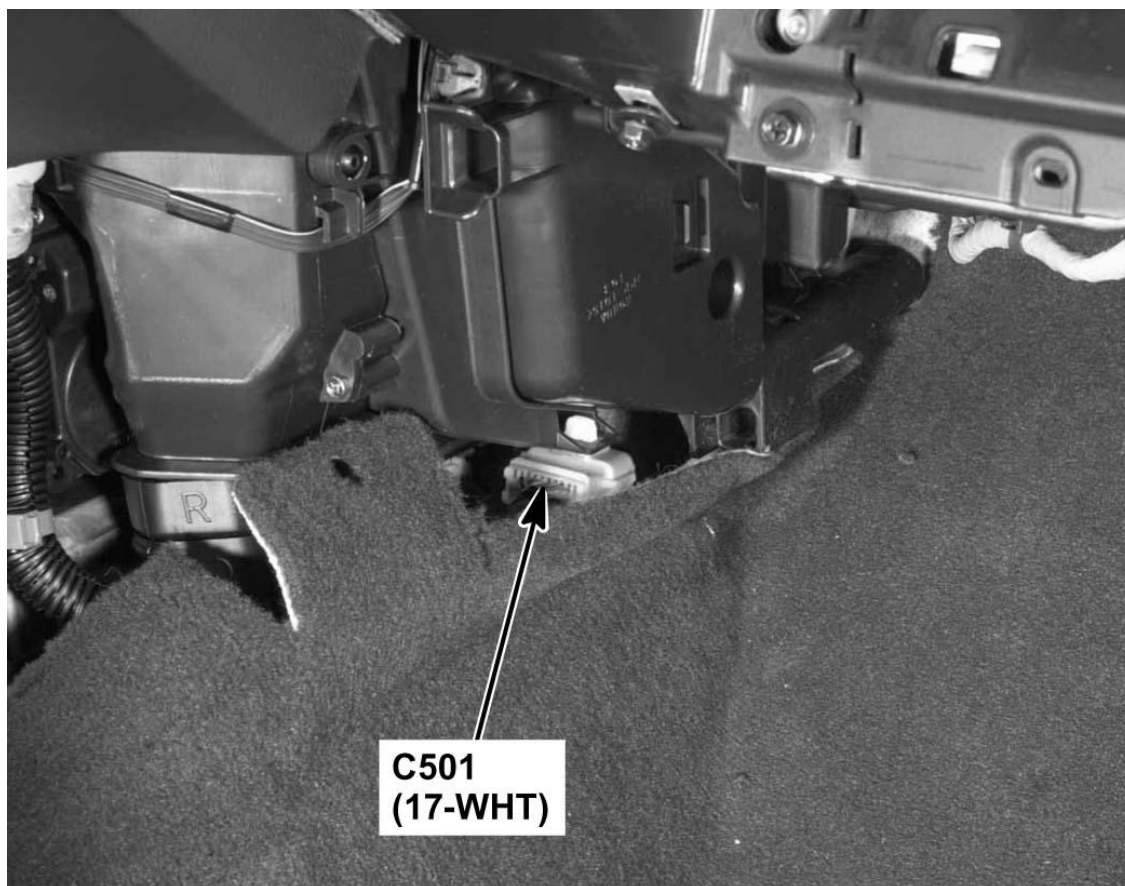

G00363535

Fig. 77: Under Middle Of Dash

Courtesy of AMERICAN HONDA MOTOR CO., INC.

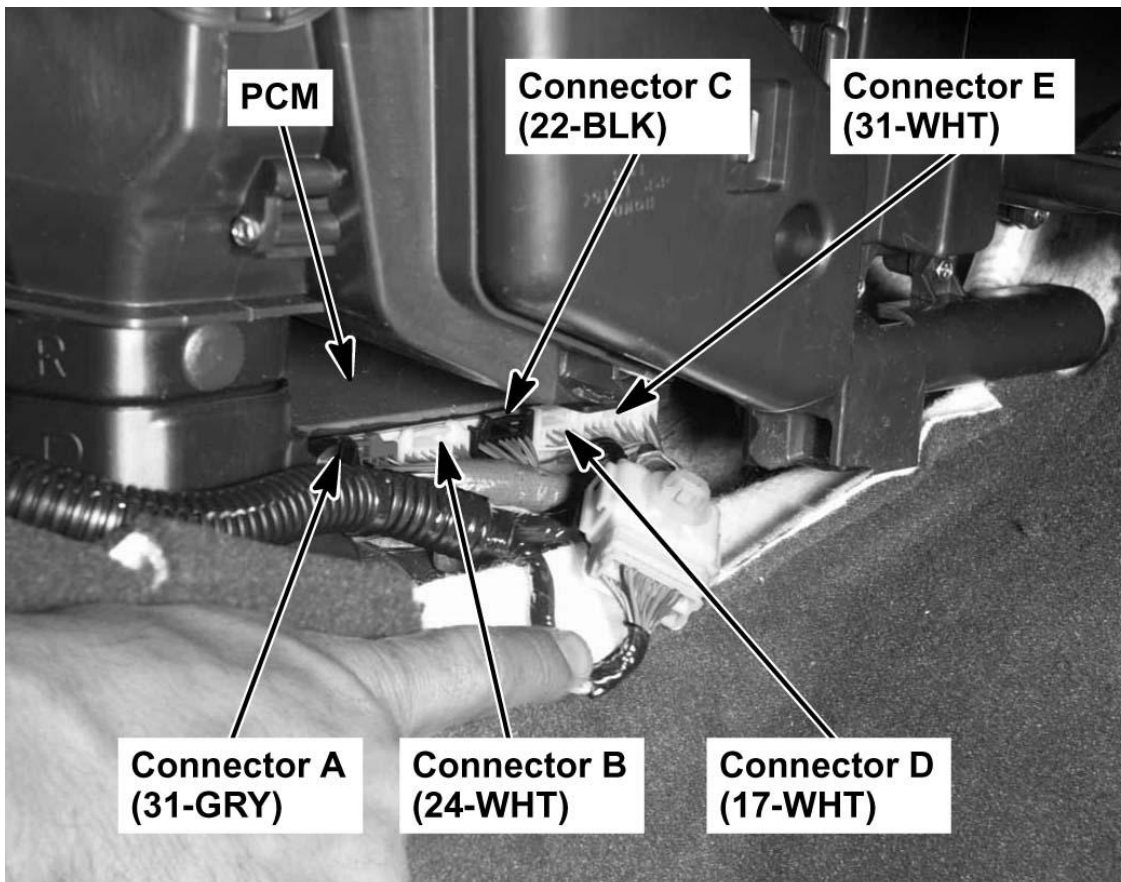

G00363536

Fig. 78: Under Middle Of Dash


Courtesy of AMERICAN HONDA MOTOR CO., INC.



G00363537


Fig. 79: Under Middle Of Dash

Courtesy of AMERICAN HONDA MOTOR CO., INC.

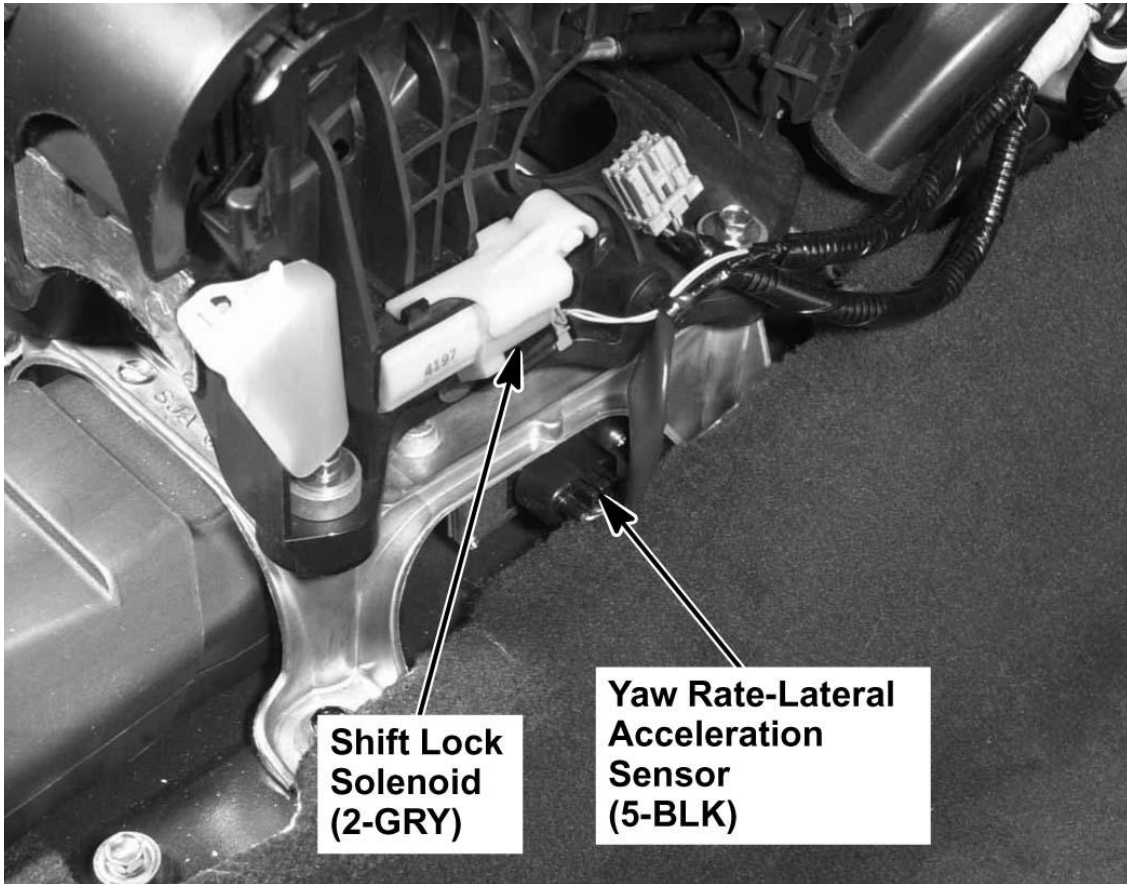


G00363538

Fig. 80: Under Center Console
Courtesy of AMERICAN HONDA MOTOR CO., INC.

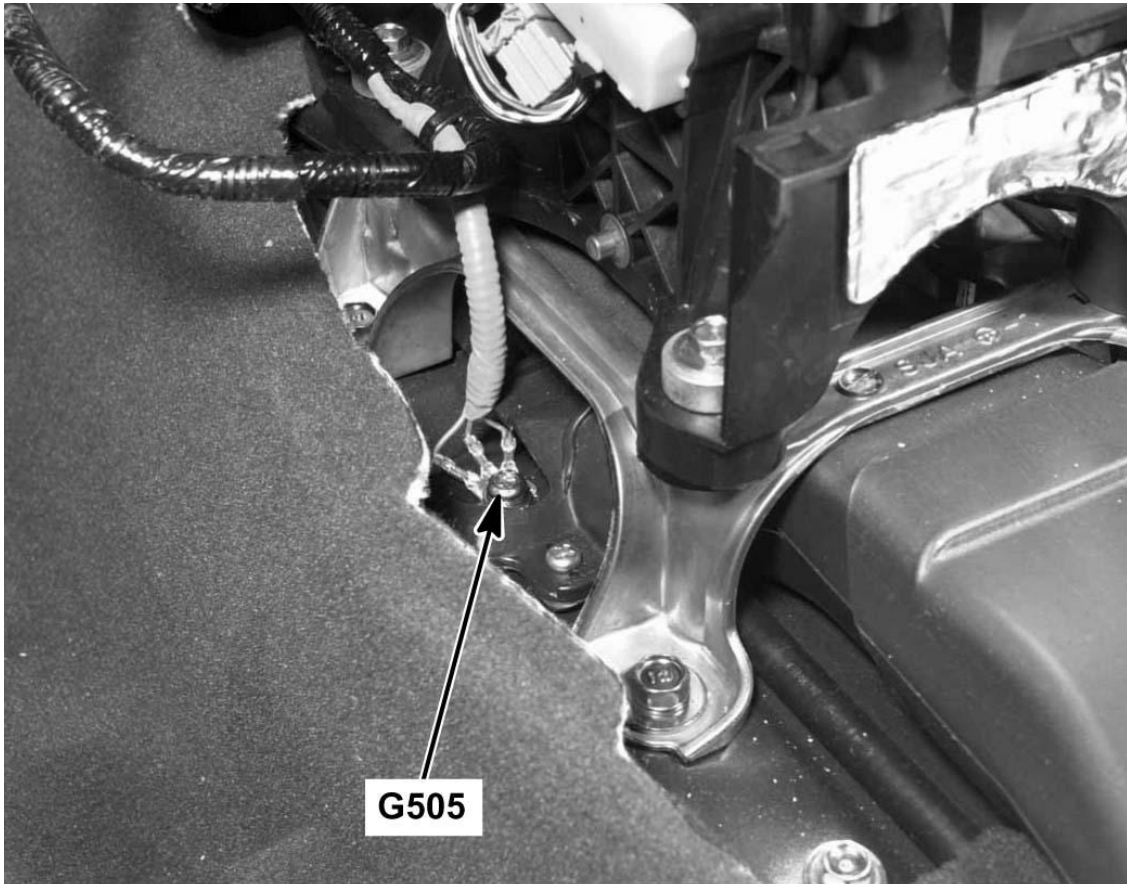

G00363539

Fig. 81: Under Center Console
Courtesy of AMERICAN HONDA MOTOR CO., INC.

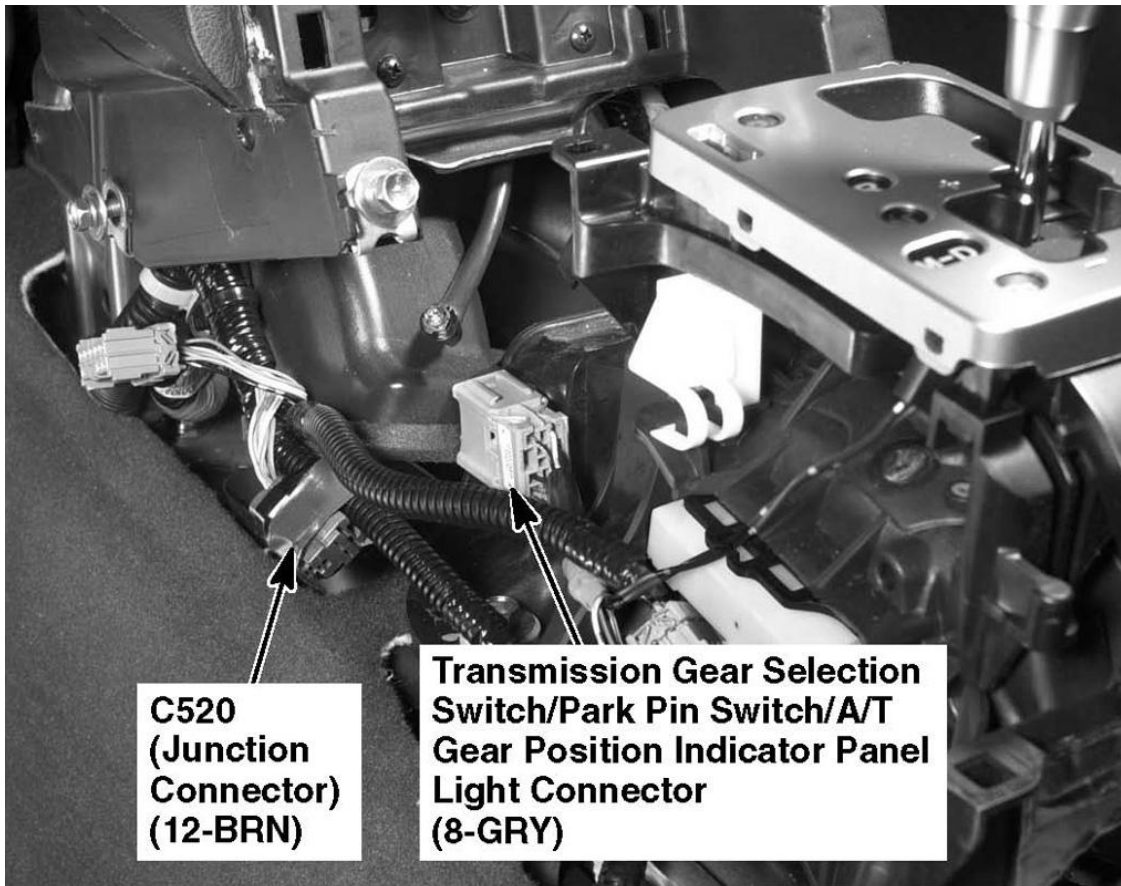

G00447079

Fig. 82: Under Center Console

Courtesy of AMERICAN HONDA MOTOR CO., INC.



G00447083

Fig. 83: Under Center Console


Courtesy of AMERICAN HONDA MOTOR CO., INC.



G00363542

Fig. 84: Under Center Console


Courtesy of AMERICAN HONDA MOTOR CO., INC.

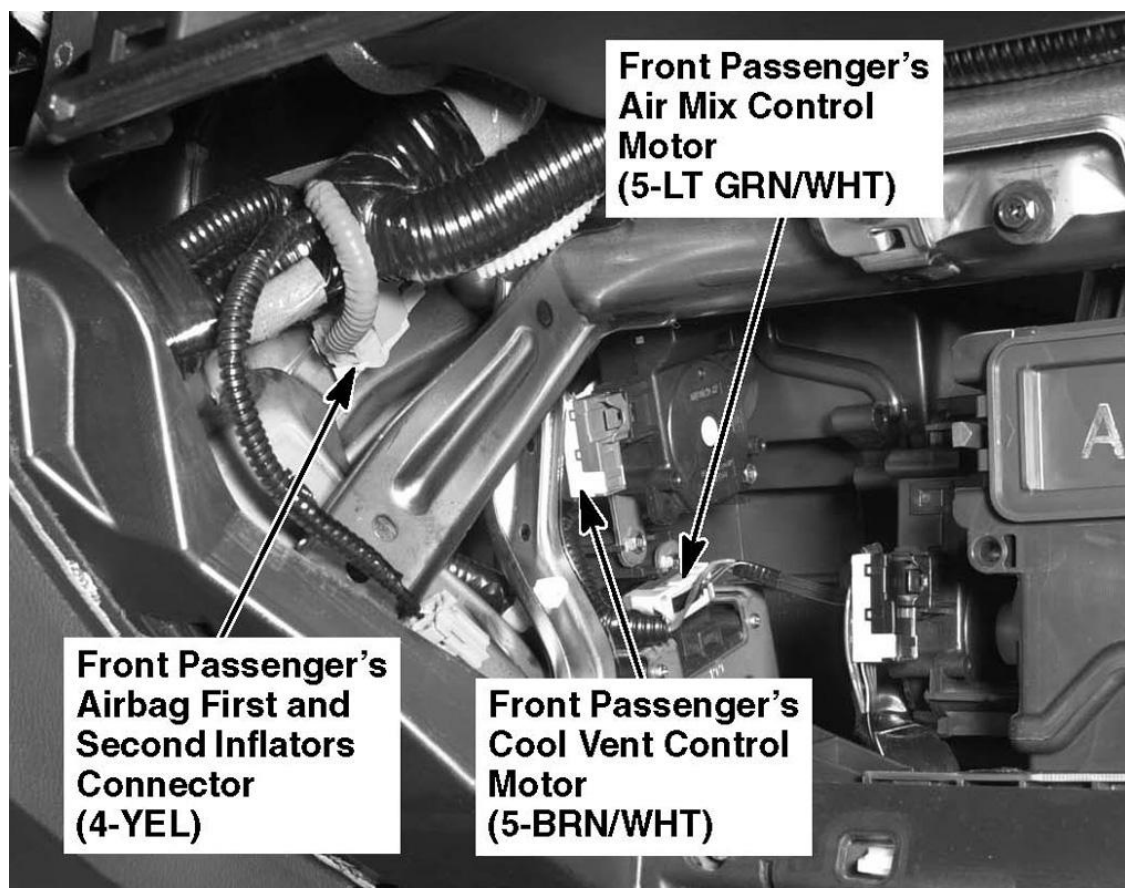

G00447084

Fig. 85: Behind Glove Box


Courtesy of AMERICAN HONDA MOTOR CO., INC.

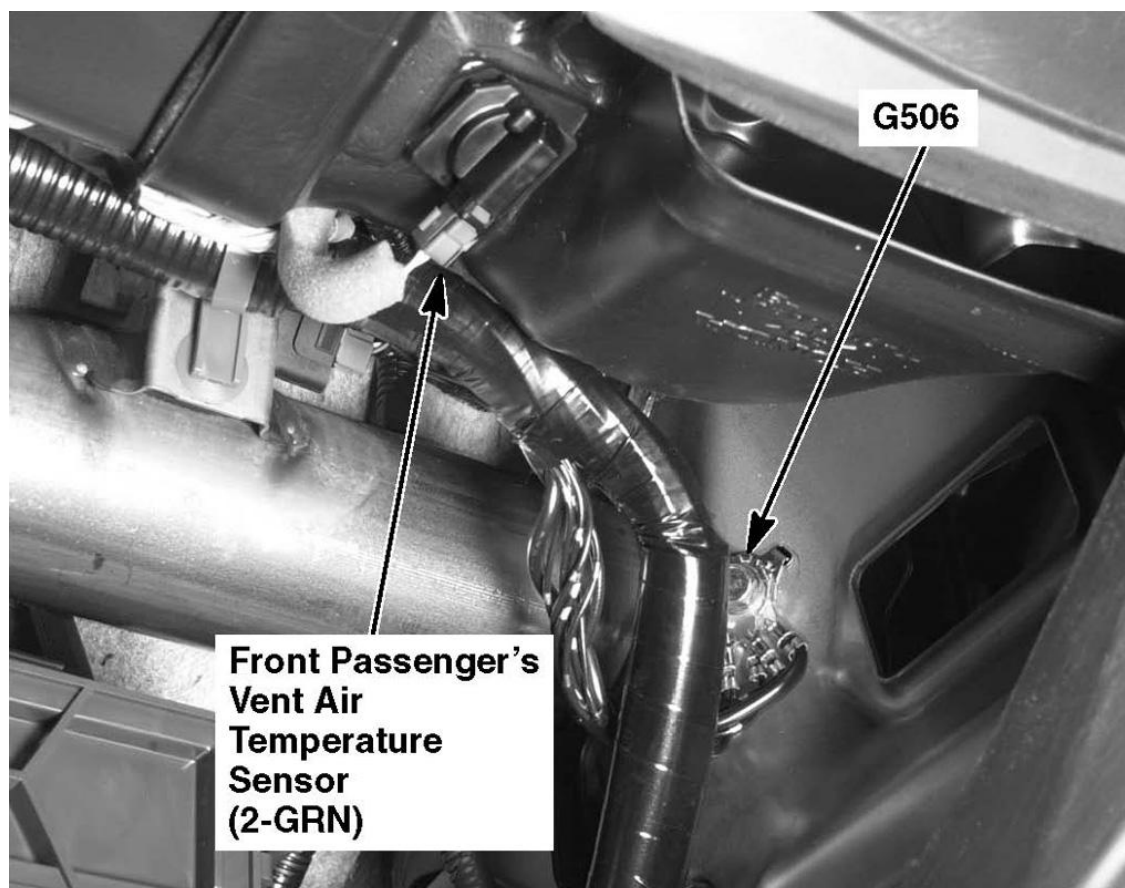

G00447085

Fig. 86: Behind Glove Box


Courtesy of AMERICAN HONDA MOTOR CO., INC.

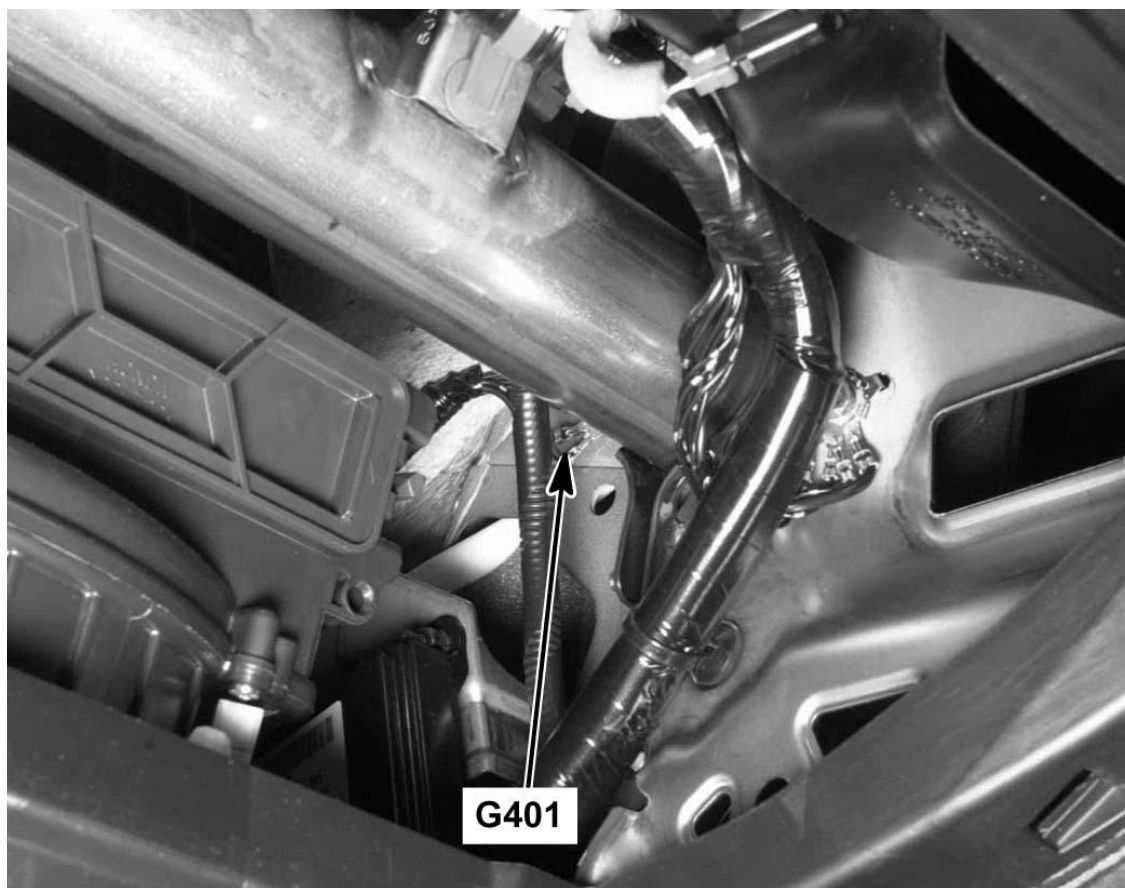

G00363545

Fig. 87: Behind Glove Box


Courtesy of AMERICAN HONDA MOTOR CO., INC.

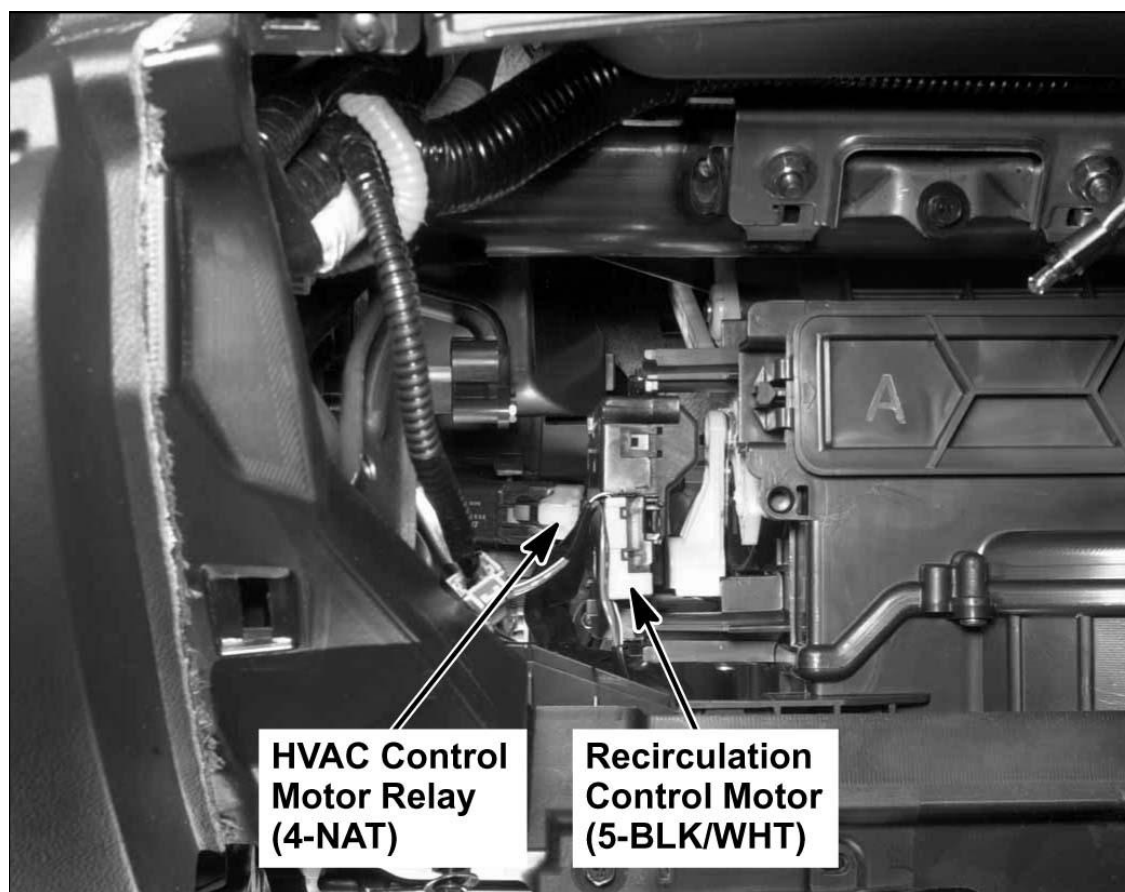

G00363546

Fig. 88: Behind Glove Box


Courtesy of AMERICAN HONDA MOTOR CO., INC.

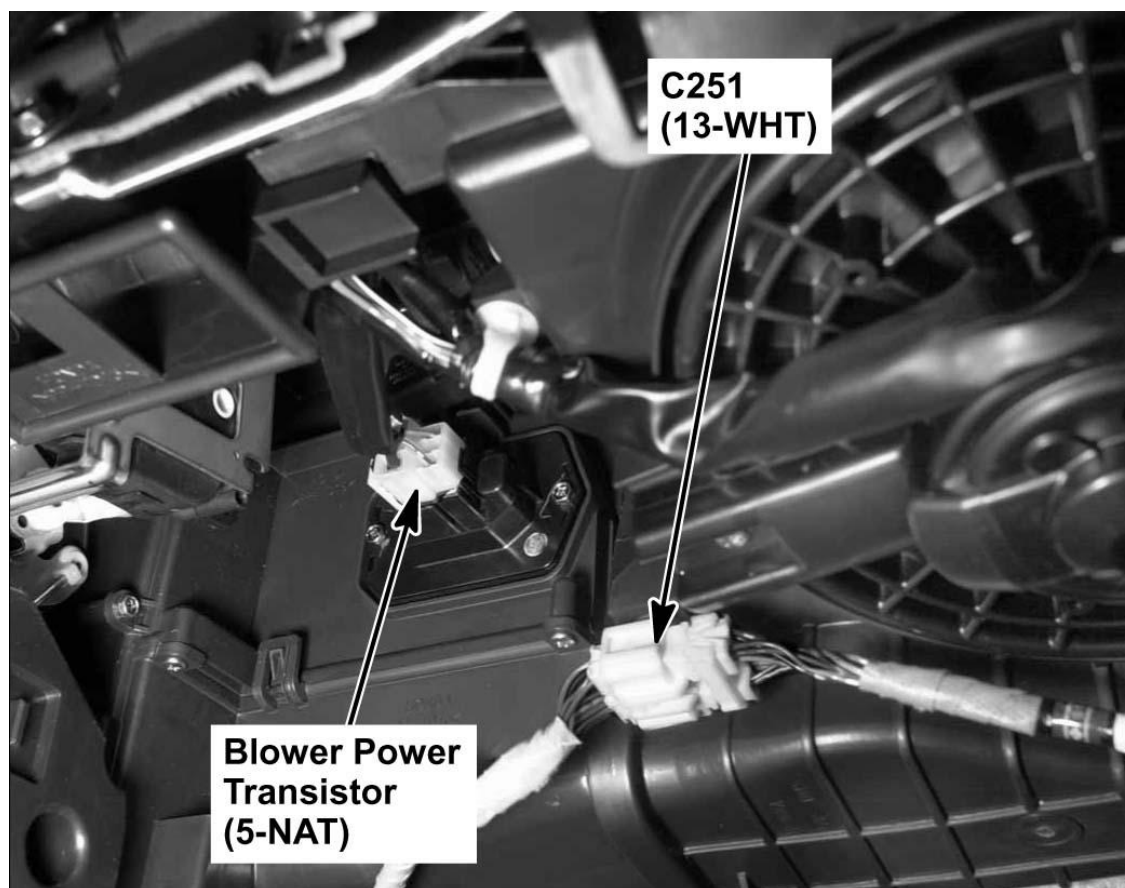

G00363547

Fig. 89: Under Right Side Of Dash


Courtesy of AMERICAN HONDA MOTOR CO., INC.

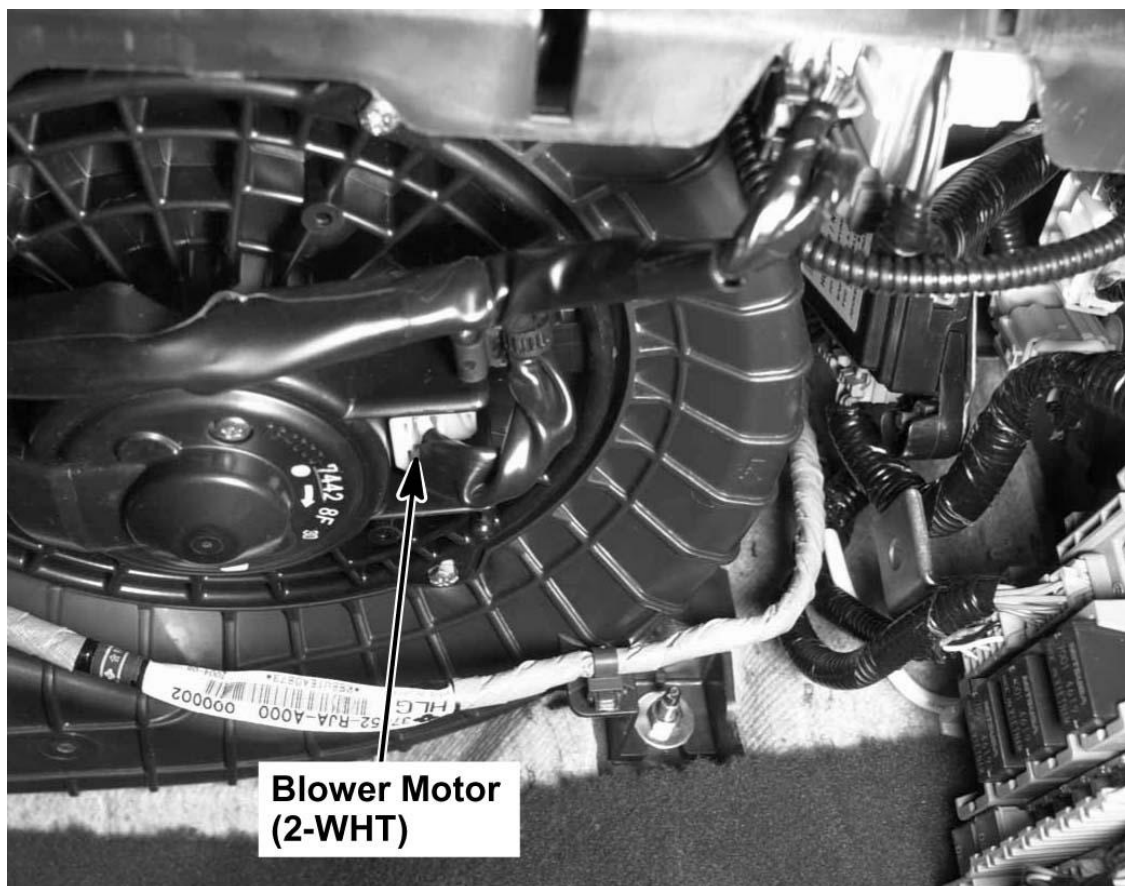

G00363548

Fig. 90: Under Right Side Of Dash


Courtesy of AMERICAN HONDA MOTOR CO., INC.

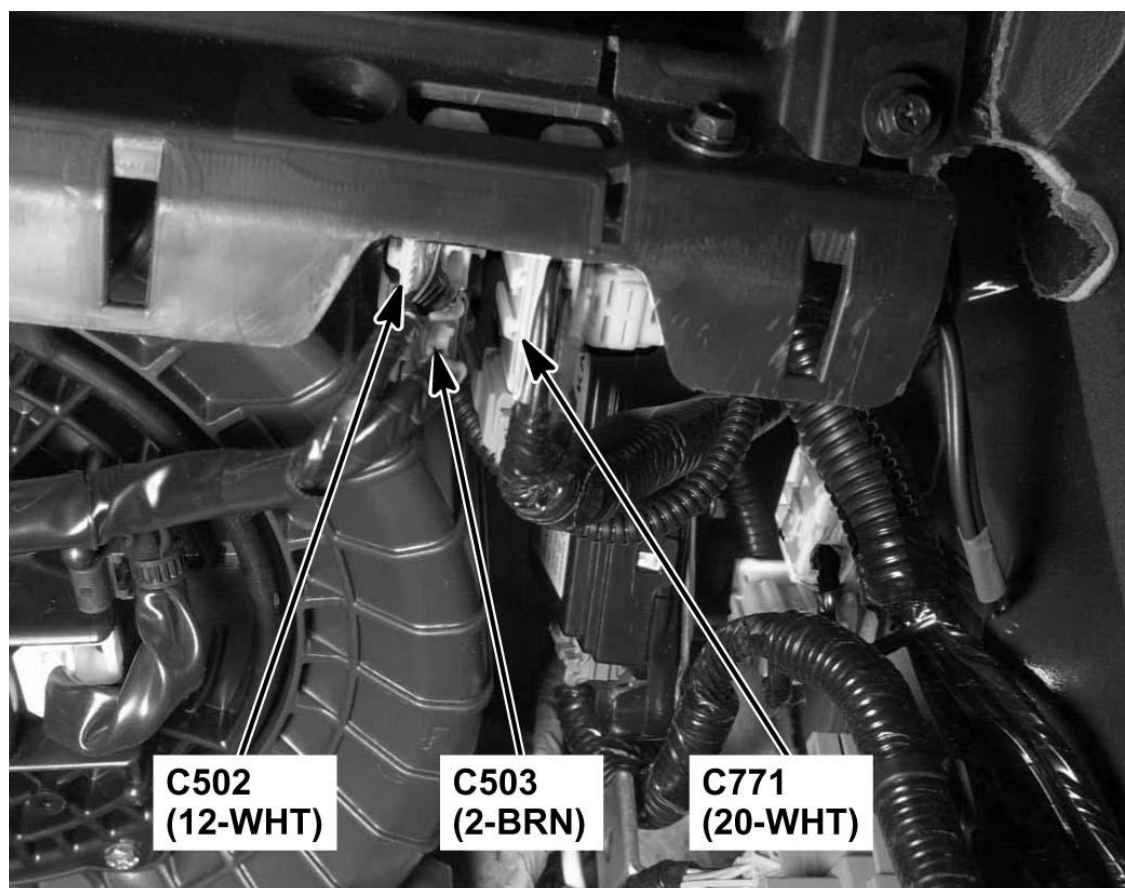

G00363549

Fig. 91: Under Right Side Of Dash


Courtesy of AMERICAN HONDA MOTOR CO., INC.

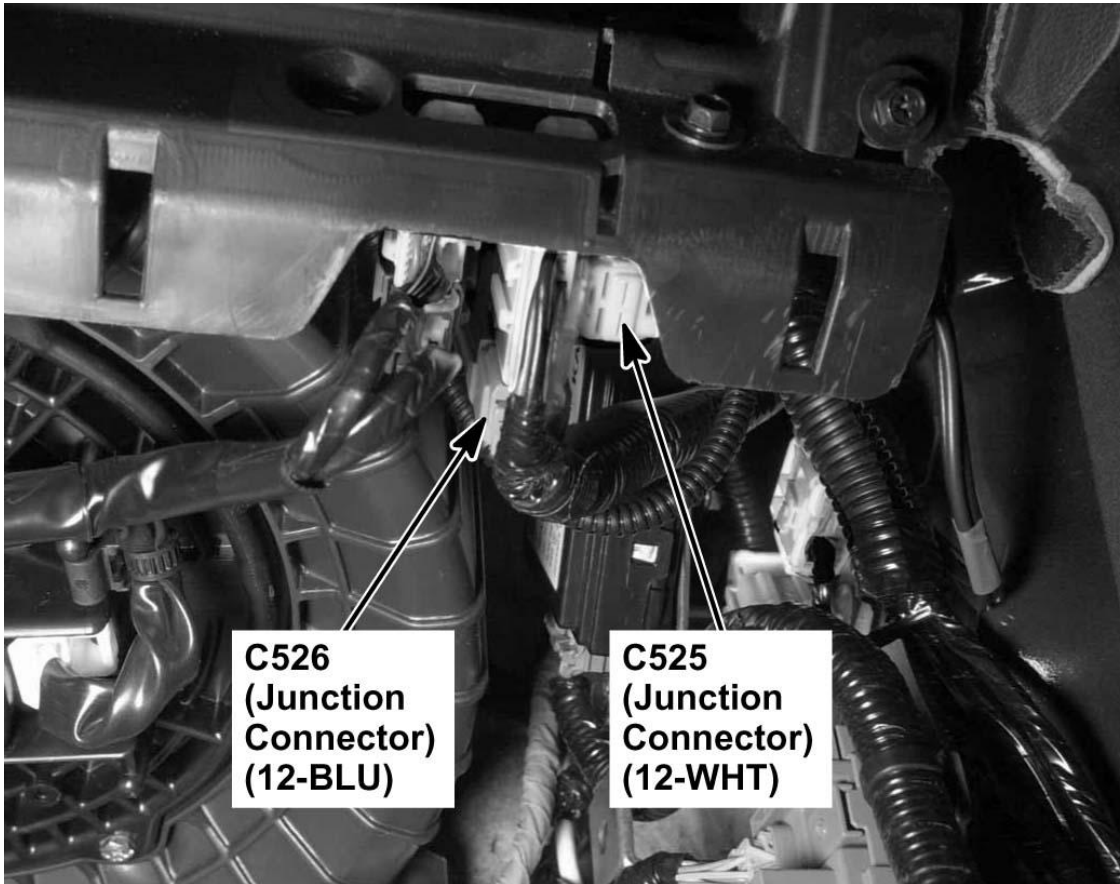

G00363550

Fig. 92: Under Right Side Of Dash


Courtesy of AMERICAN HONDA MOTOR CO., INC.

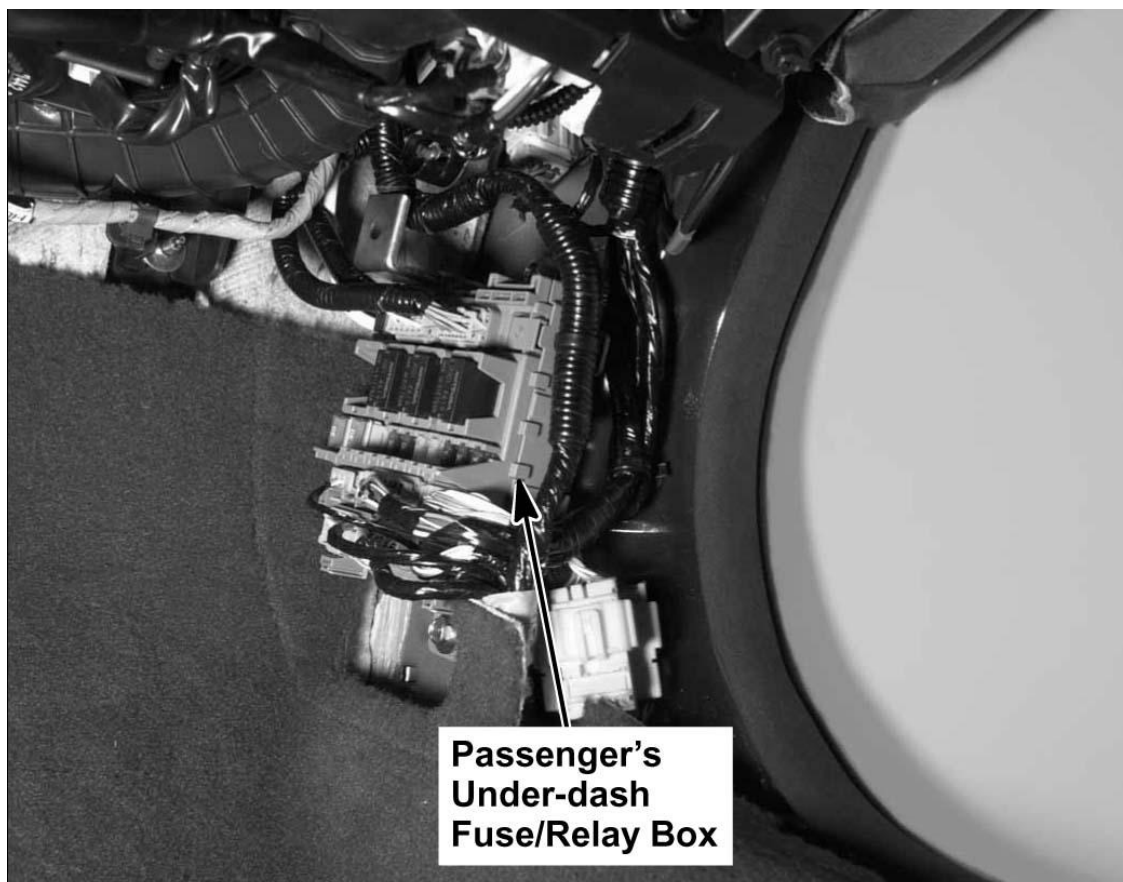

G00363551

Fig. 93: Behind Right Kick Panel


Courtesy of AMERICAN HONDA MOTOR CO., INC.

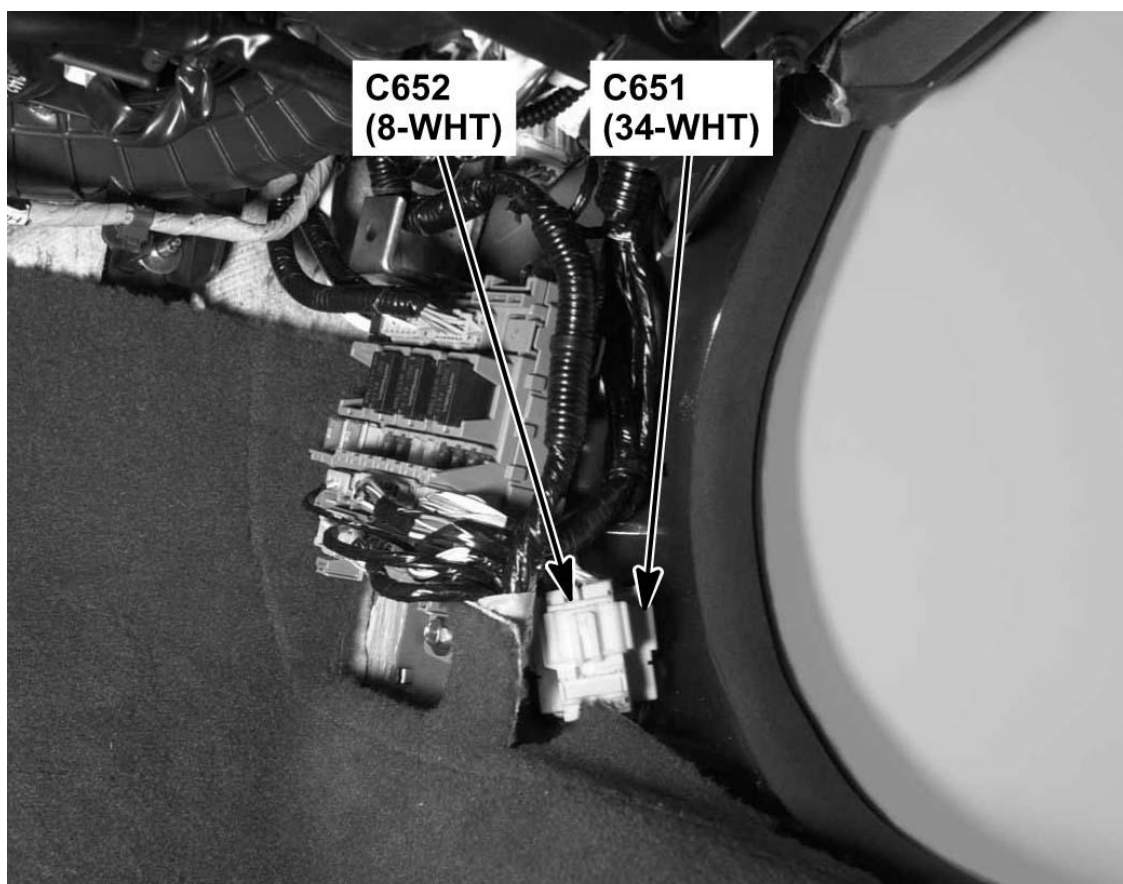

G00363552

Fig. 94: Behind Right Kick Panel


Courtesy of AMERICAN HONDA MOTOR CO., INC.

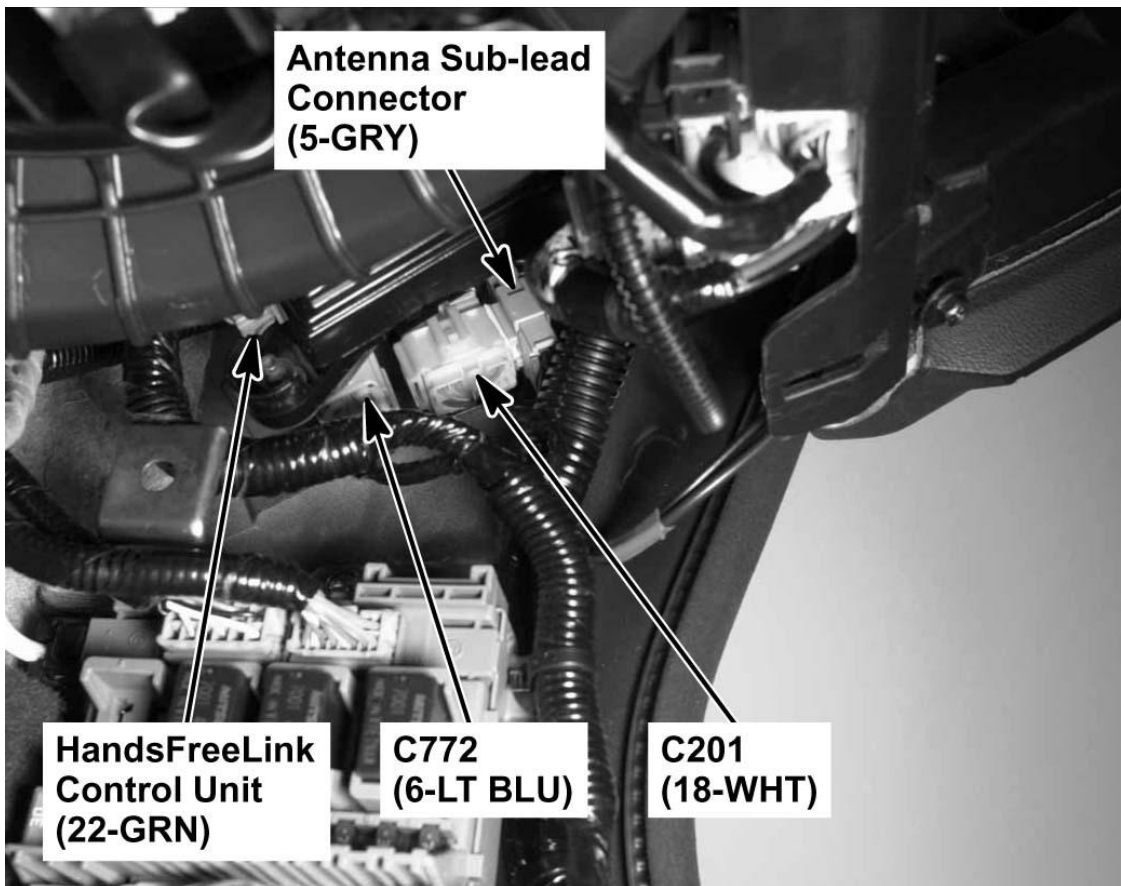

G00363553

Fig. 95: Behind Right Kick Panel


Courtesy of AMERICAN HONDA MOTOR CO., INC.

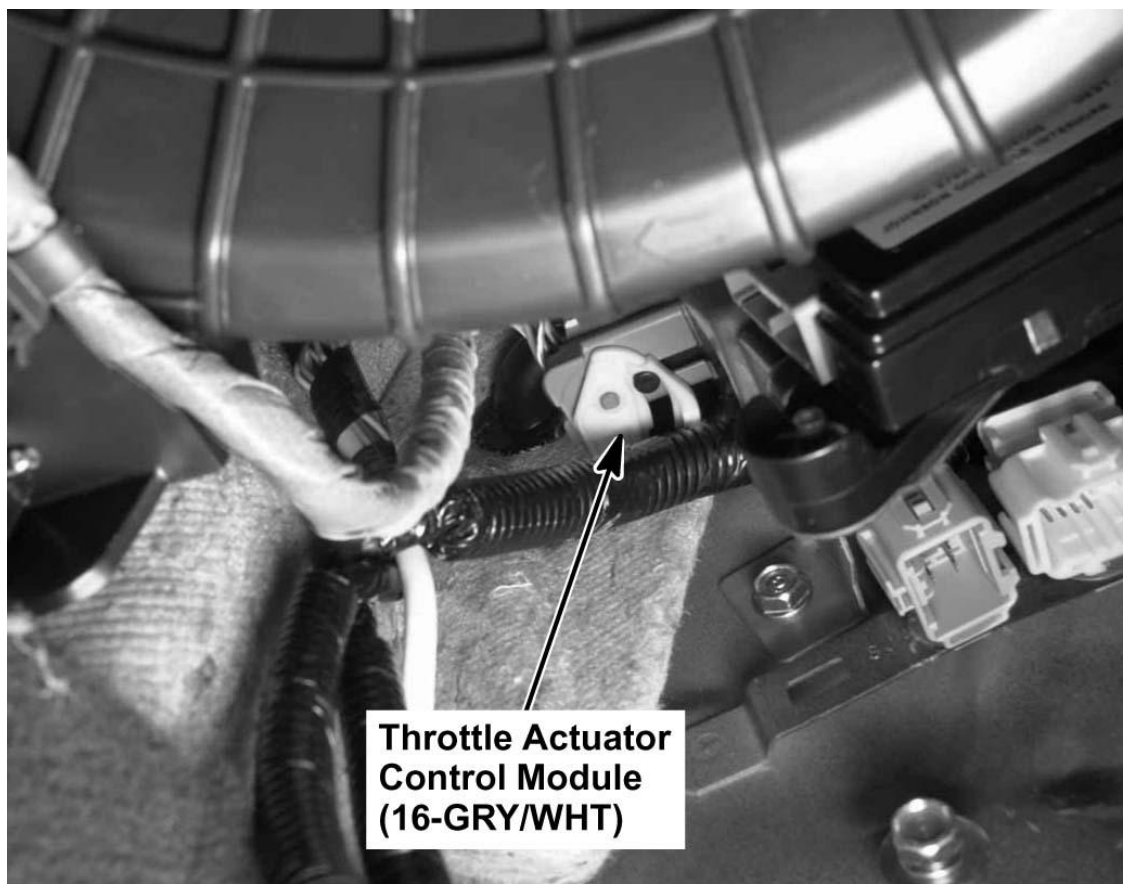

G00363554


Fig. 96: Behind Right Kick Panel

Courtesy of AMERICAN HONDA MOTOR CO., INC.

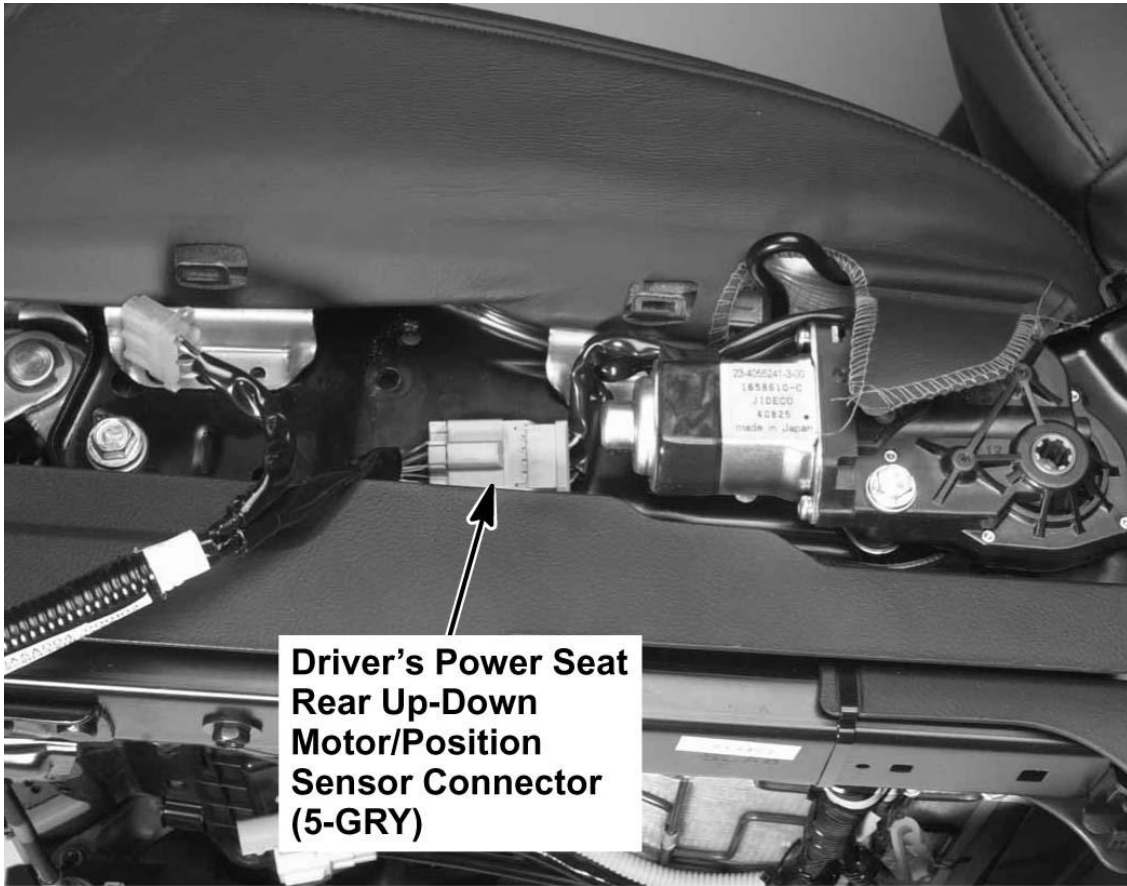


G00363555

Fig. 97: Left Side Of Driver's Seat
Courtesy of AMERICAN HONDA MOTOR CO., INC.

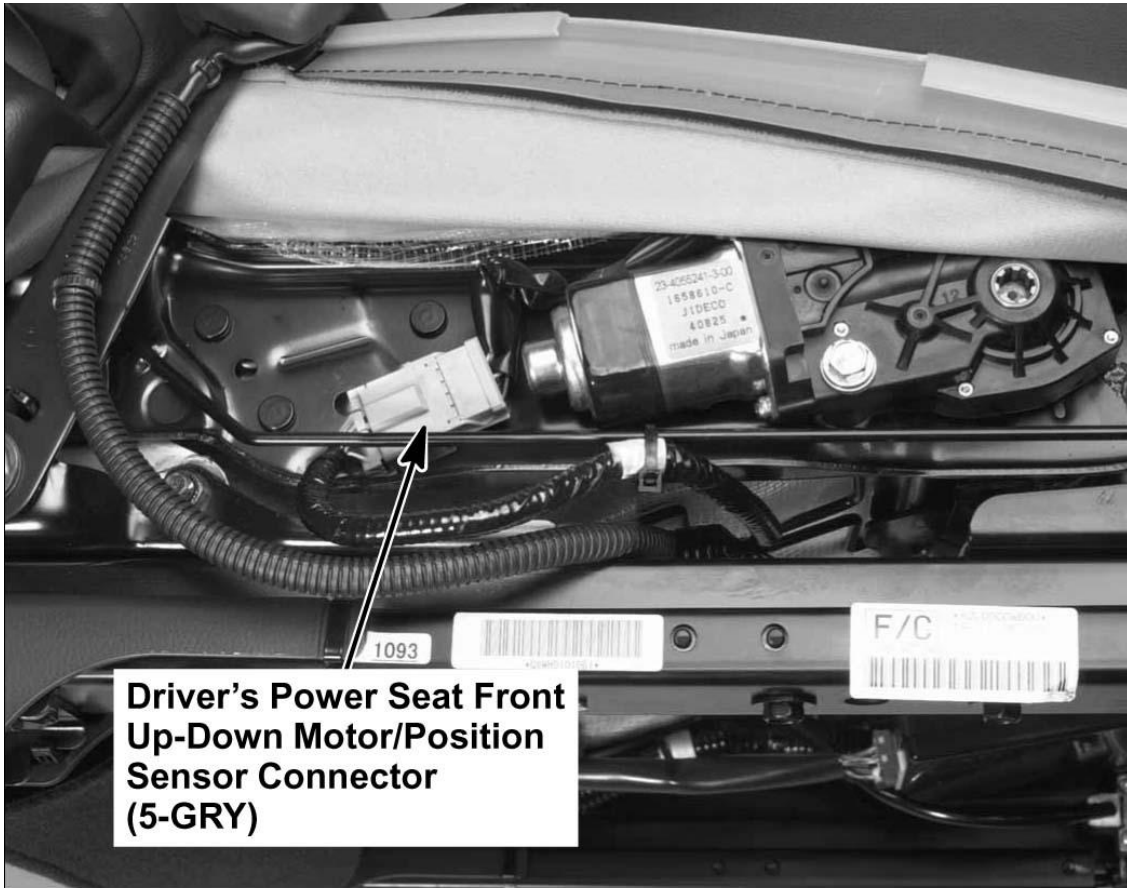

G00363556


Fig. 98: Right Side Of Driver's Seat
Courtesy of AMERICAN HONDA MOTOR CO., INC.

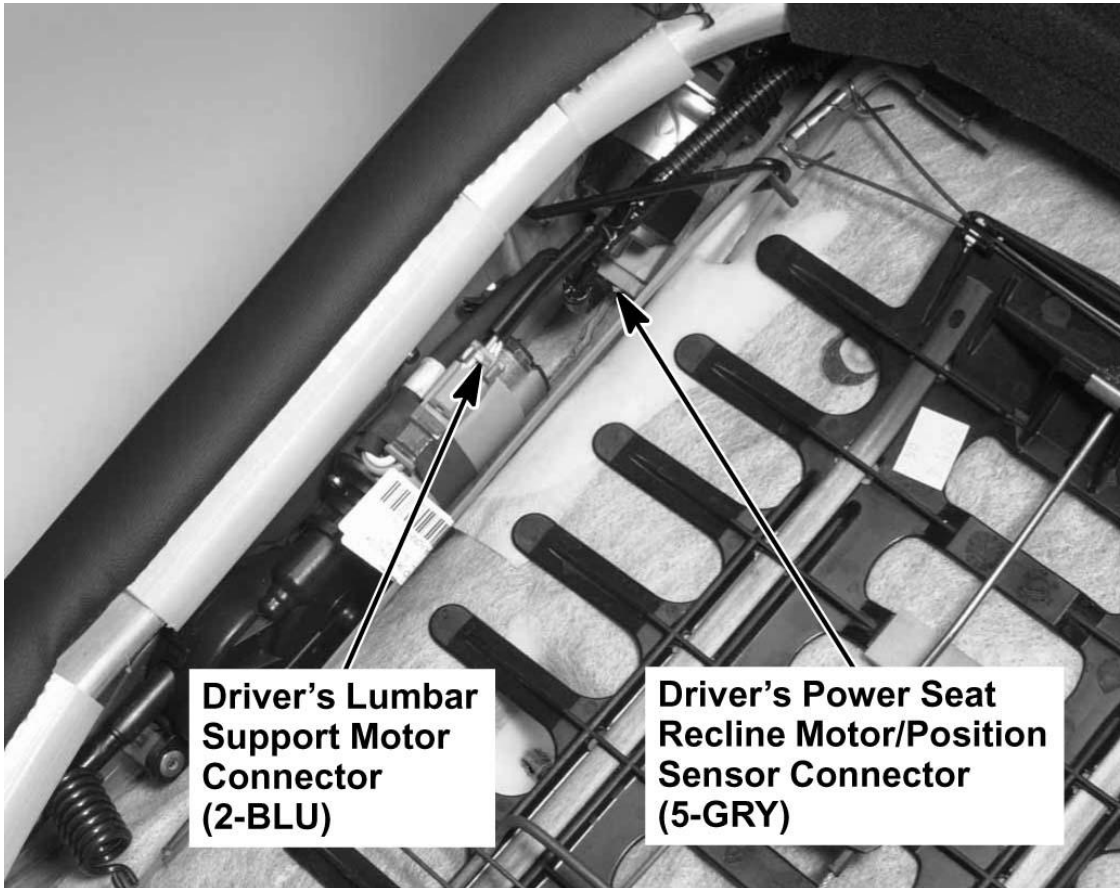

G00363557


Fig. 99: Right Side Of Driver's Seat

Courtesy of AMERICAN HONDA MOTOR CO., INC.

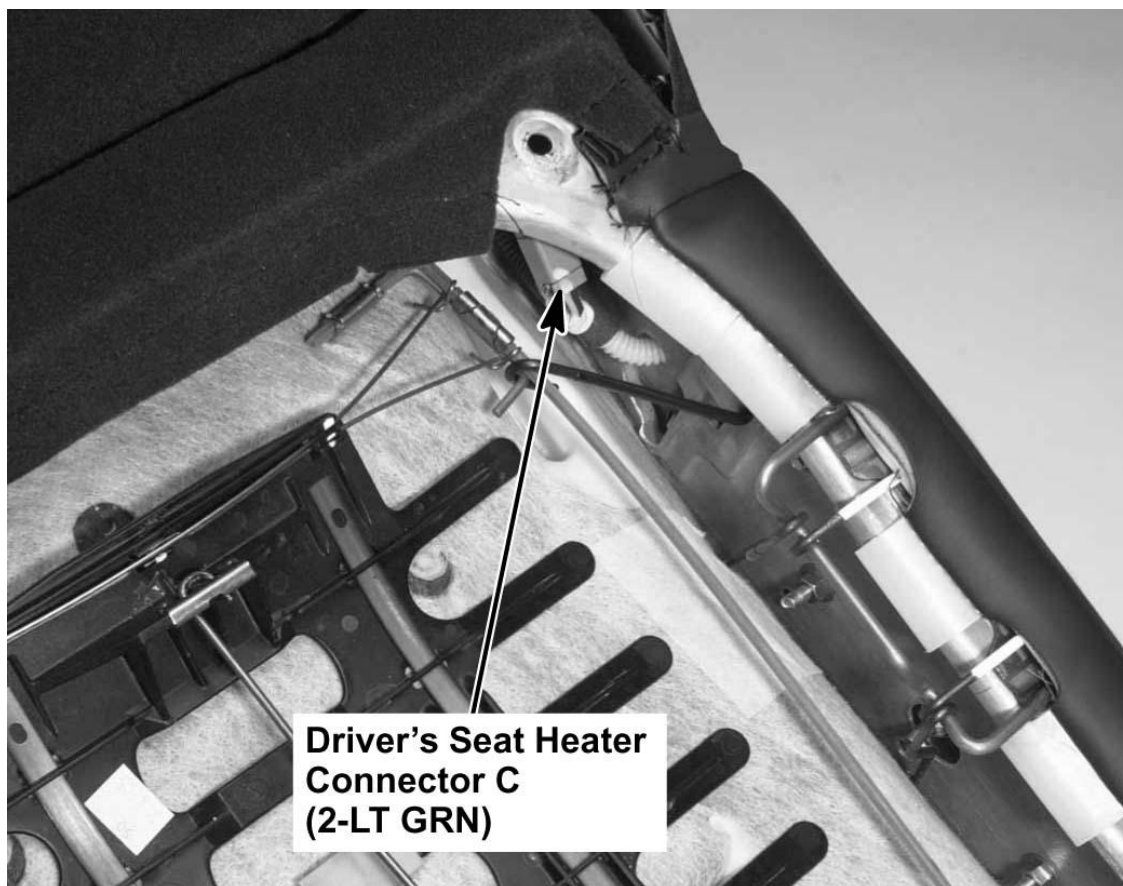


G00363558

Fig. 100: Right Side Of Driver's Seat
Courtesy of AMERICAN HONDA MOTOR CO., INC.

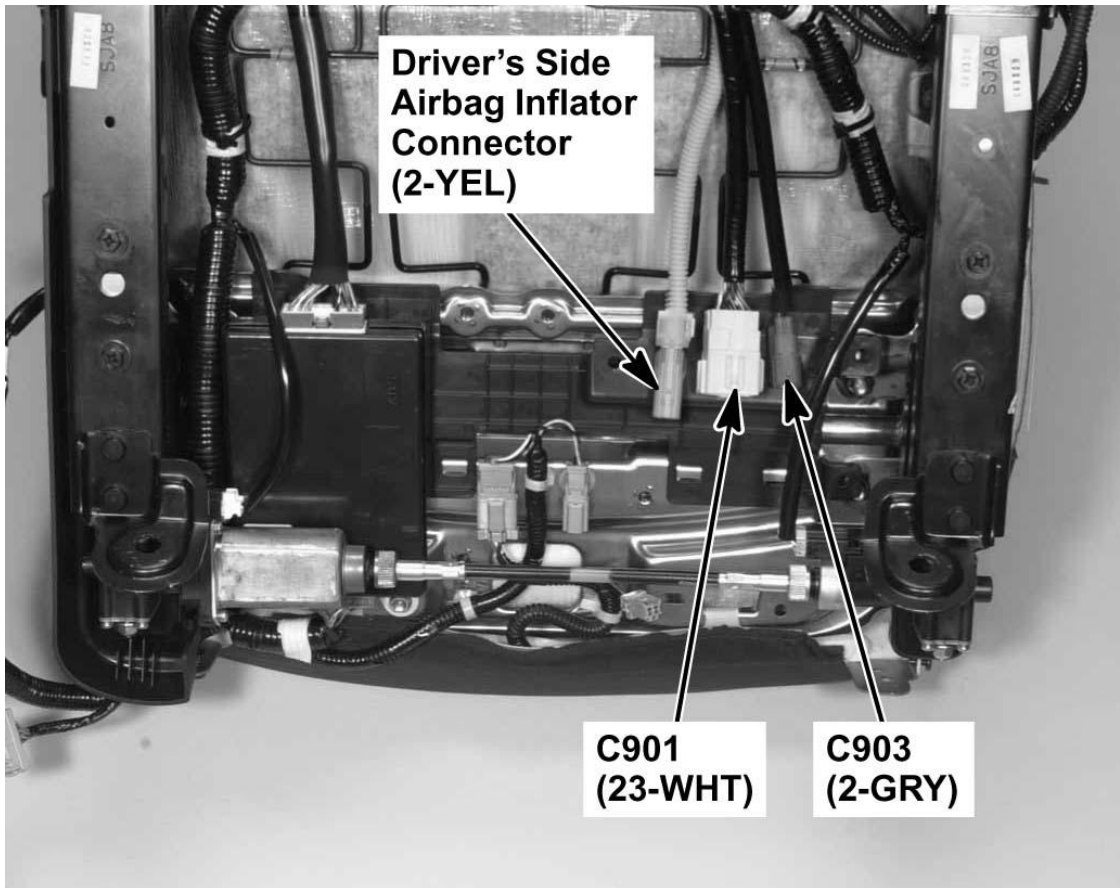


G00363559

Fig. 101: Under Driver's Seat
Courtesy of AMERICAN HONDA MOTOR CO., INC.

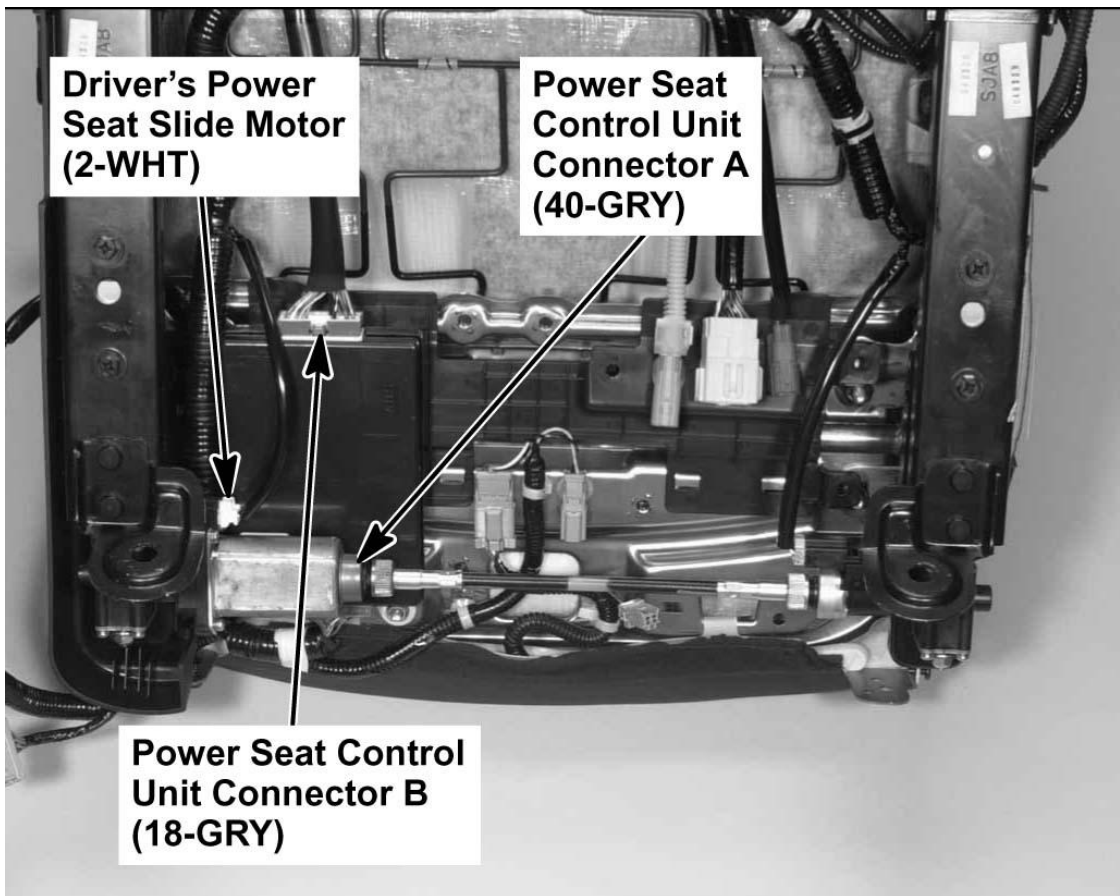

G00363560

Fig. 102: Under Driver's Seat
Courtesy of AMERICAN HONDA MOTOR CO., INC.

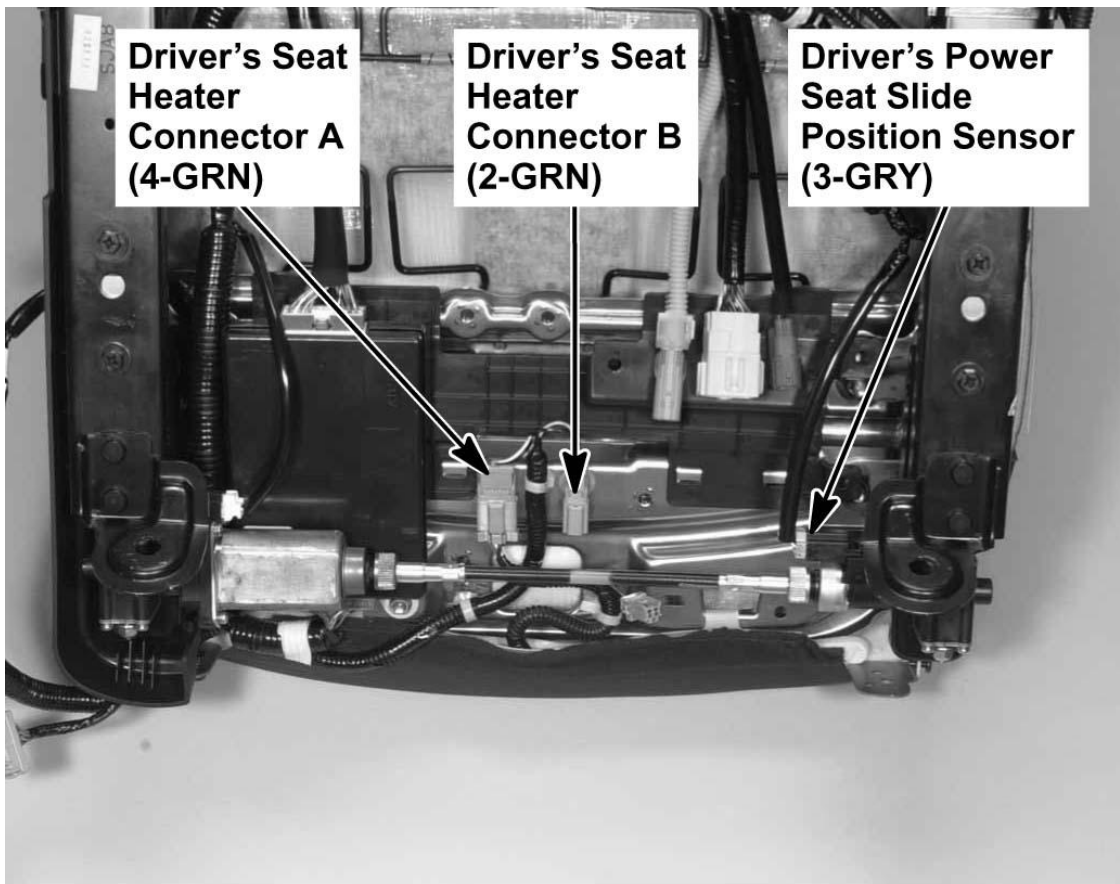


G00363561

Fig. 103: Under Driver's Seat
Courtesy of AMERICAN HONDA MOTOR CO., INC.




G00363562

Fig. 104: Under Driver's Seat
Courtesy of AMERICAN HONDA MOTOR CO., INC.

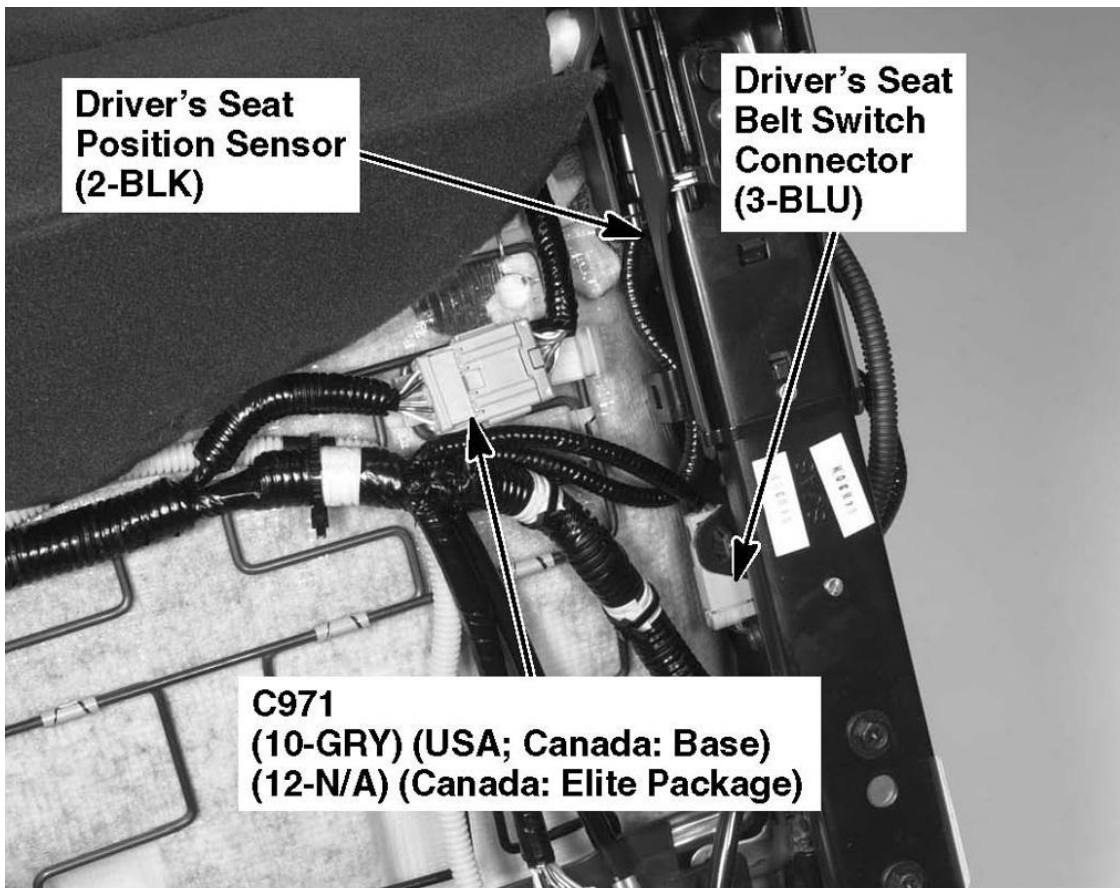


G00447088

Fig. 105: Under Driver's Seat
Courtesy of AMERICAN HONDA MOTOR CO., INC.

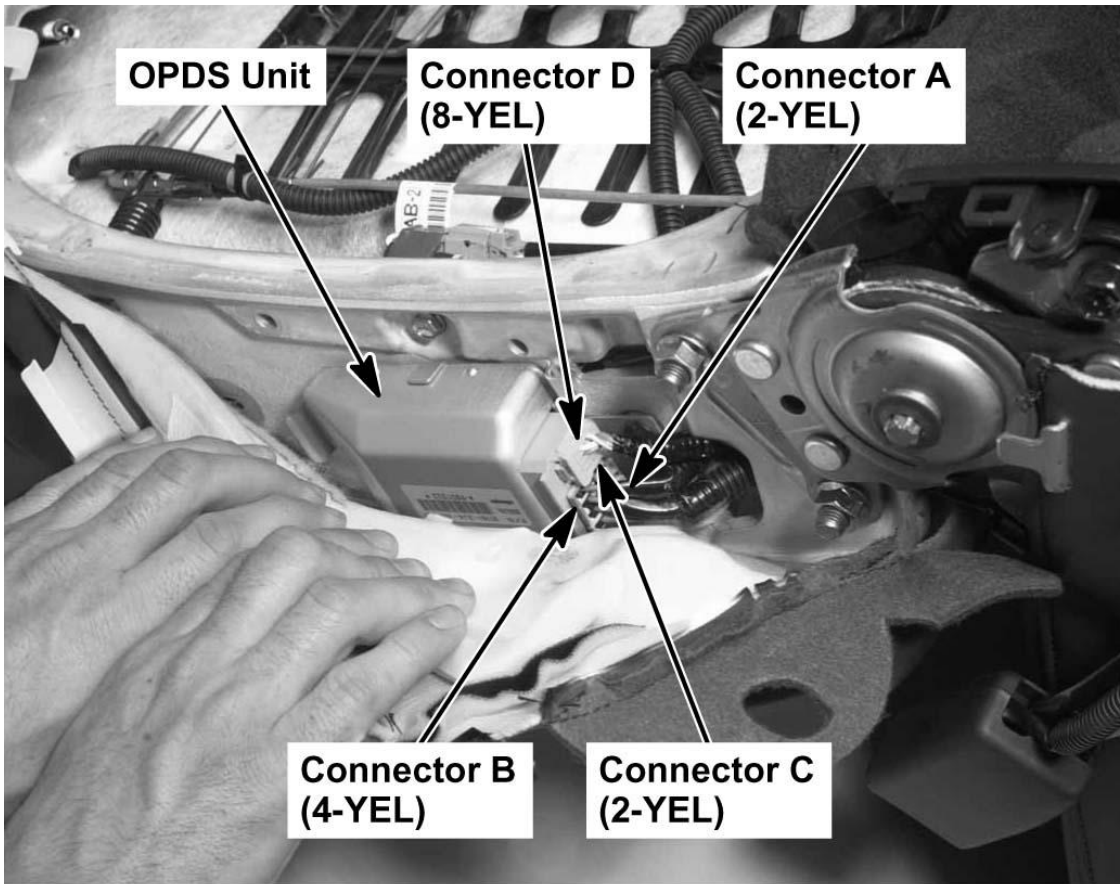


G00363564

Fig. 106: In Front Passenger's Seat
Courtesy of AMERICAN HONDA MOTOR CO., INC.

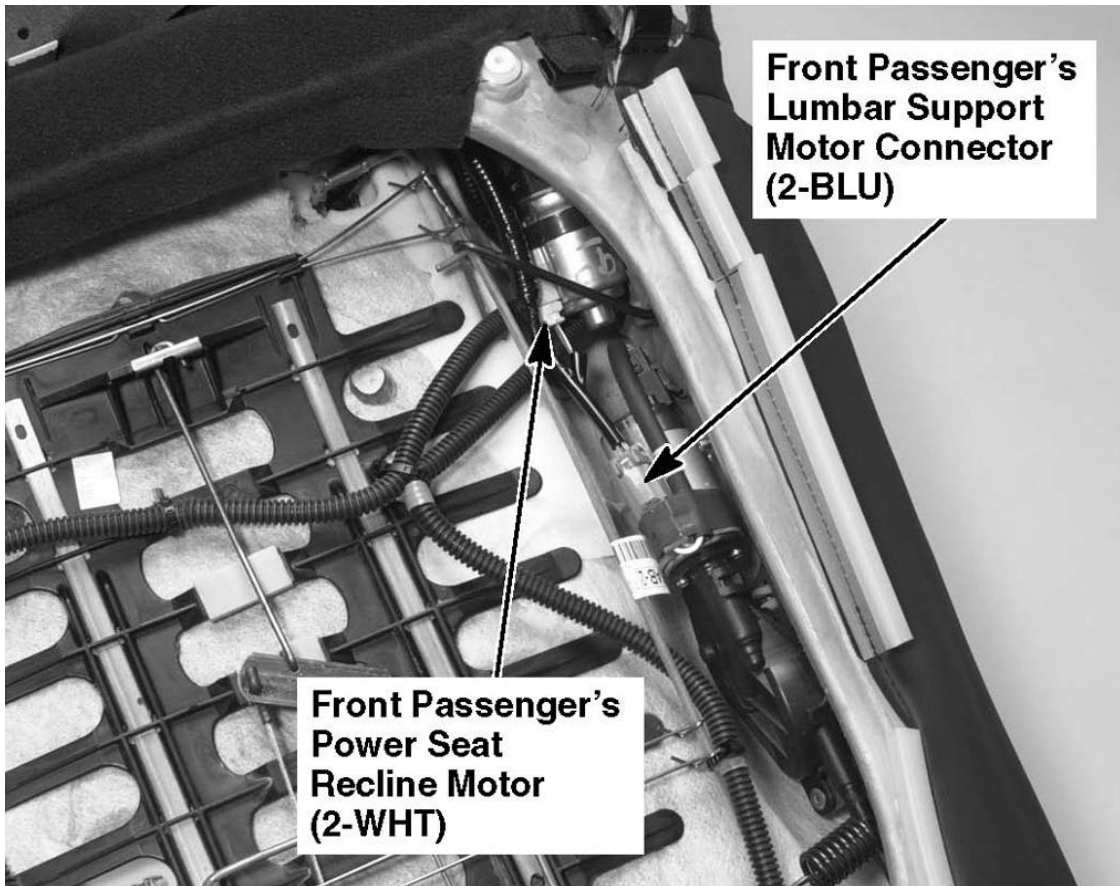


G00447089

Fig. 107: Left Side Of Front Passenger's Seat
Courtesy of AMERICAN HONDA MOTOR CO., INC.

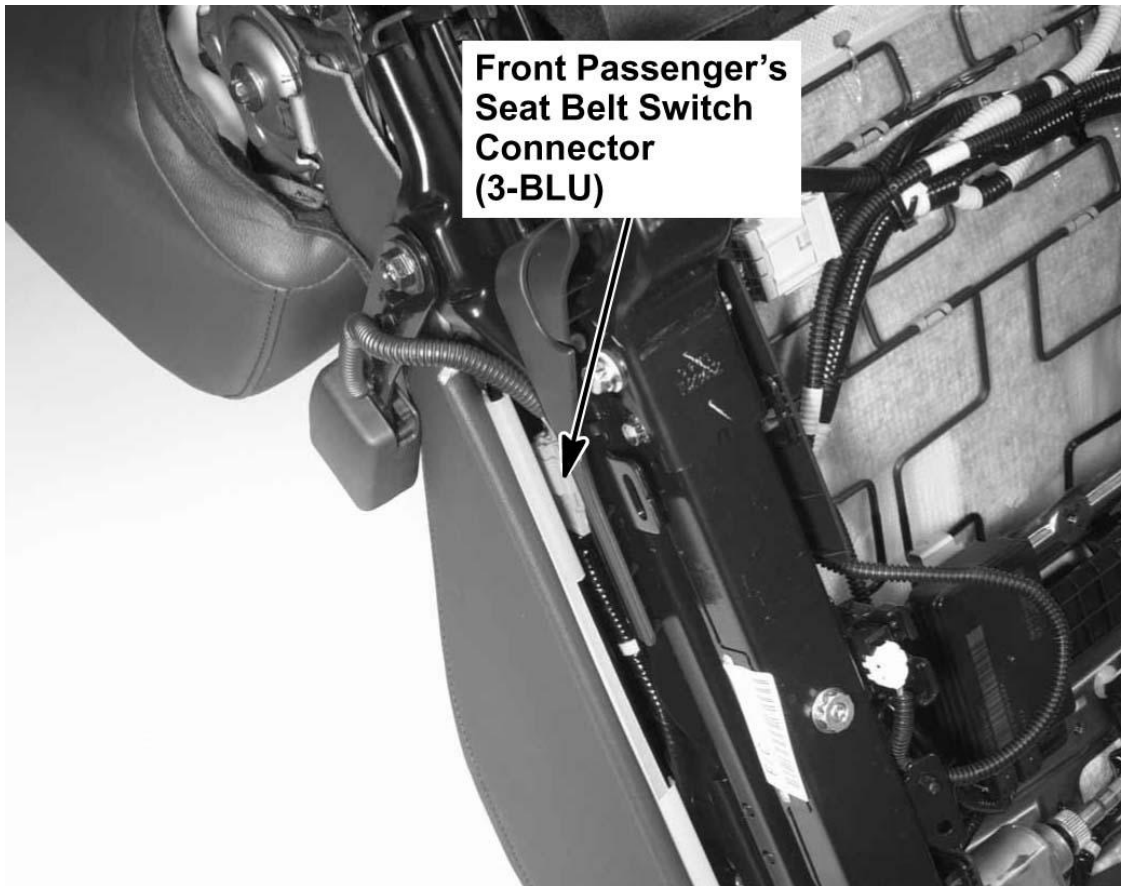


G00363566

Fig. 108: Left Side Of Front Passenger's Seat
Courtesy of AMERICAN HONDA MOTOR CO., INC.

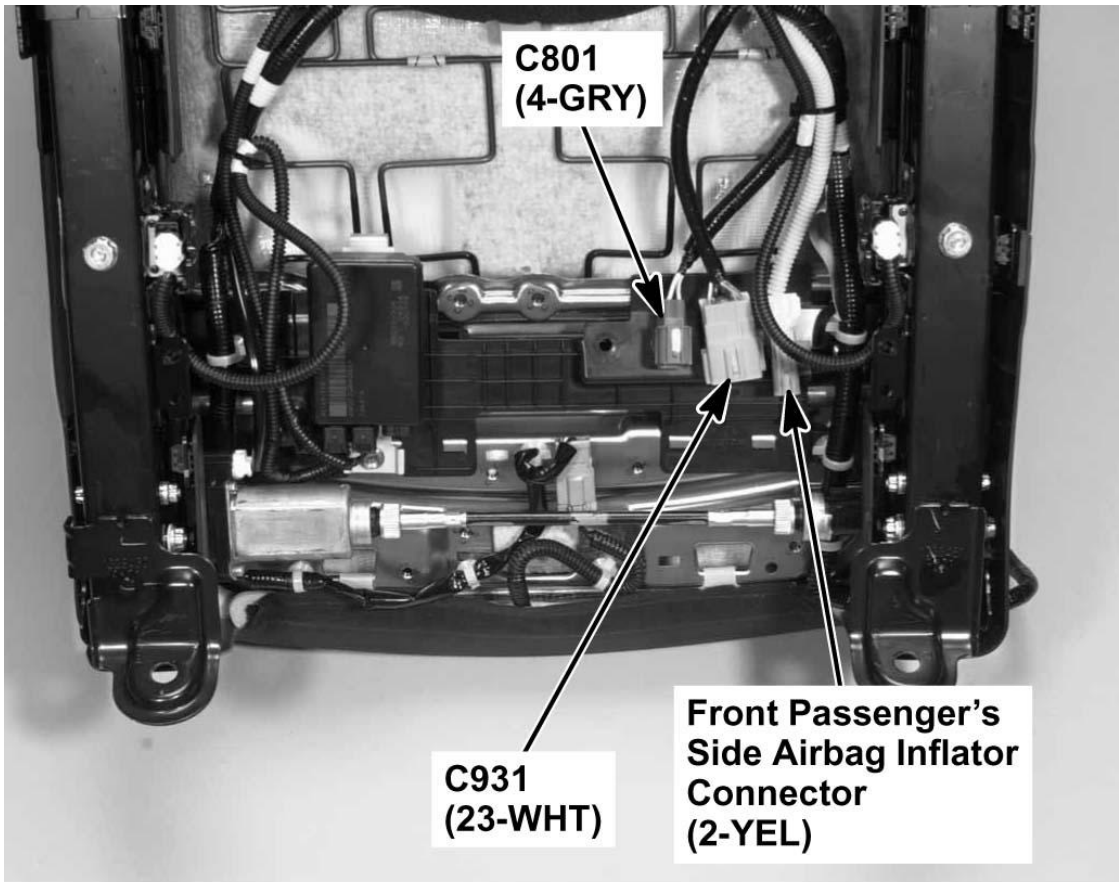


G00363567

Fig. 109: Under Front Passenger's Seat
Courtesy of AMERICAN HONDA MOTOR CO., INC.

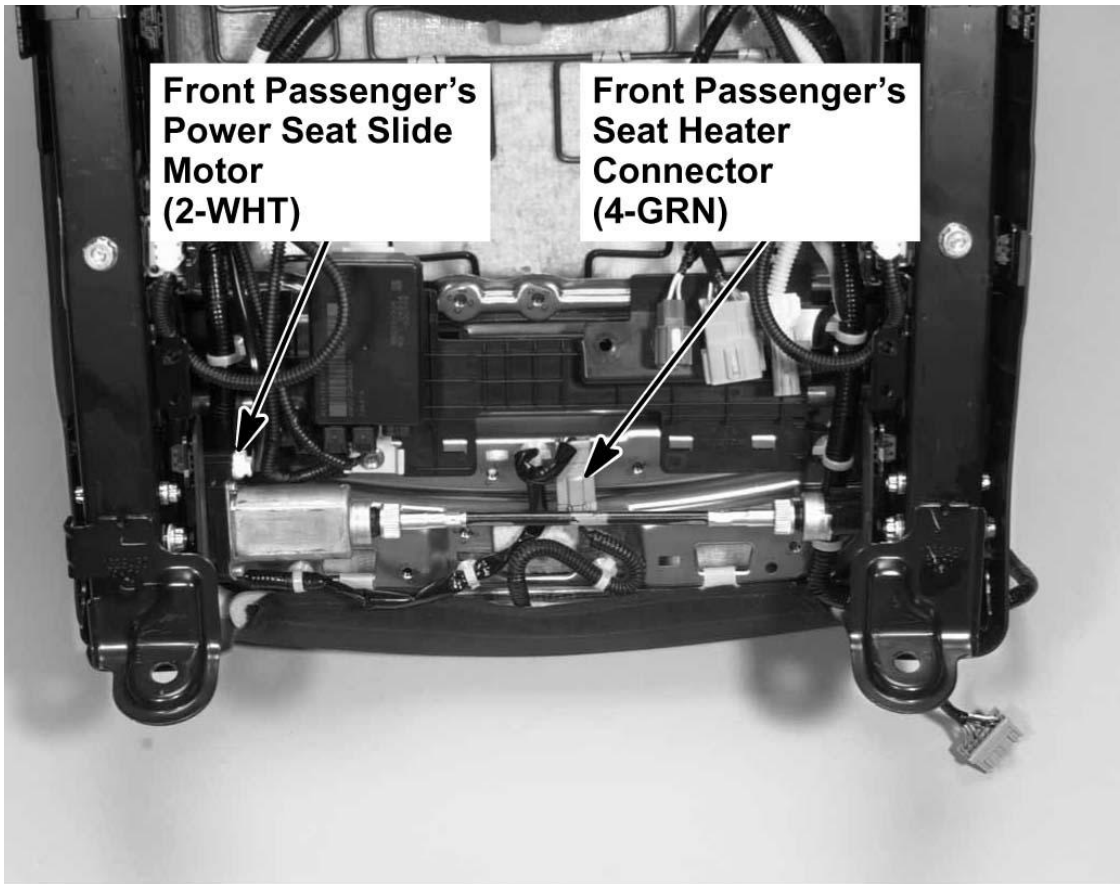


G00363568

Fig. 110: Under Front Passenger's Seat
Courtesy of AMERICAN HONDA MOTOR CO., INC.

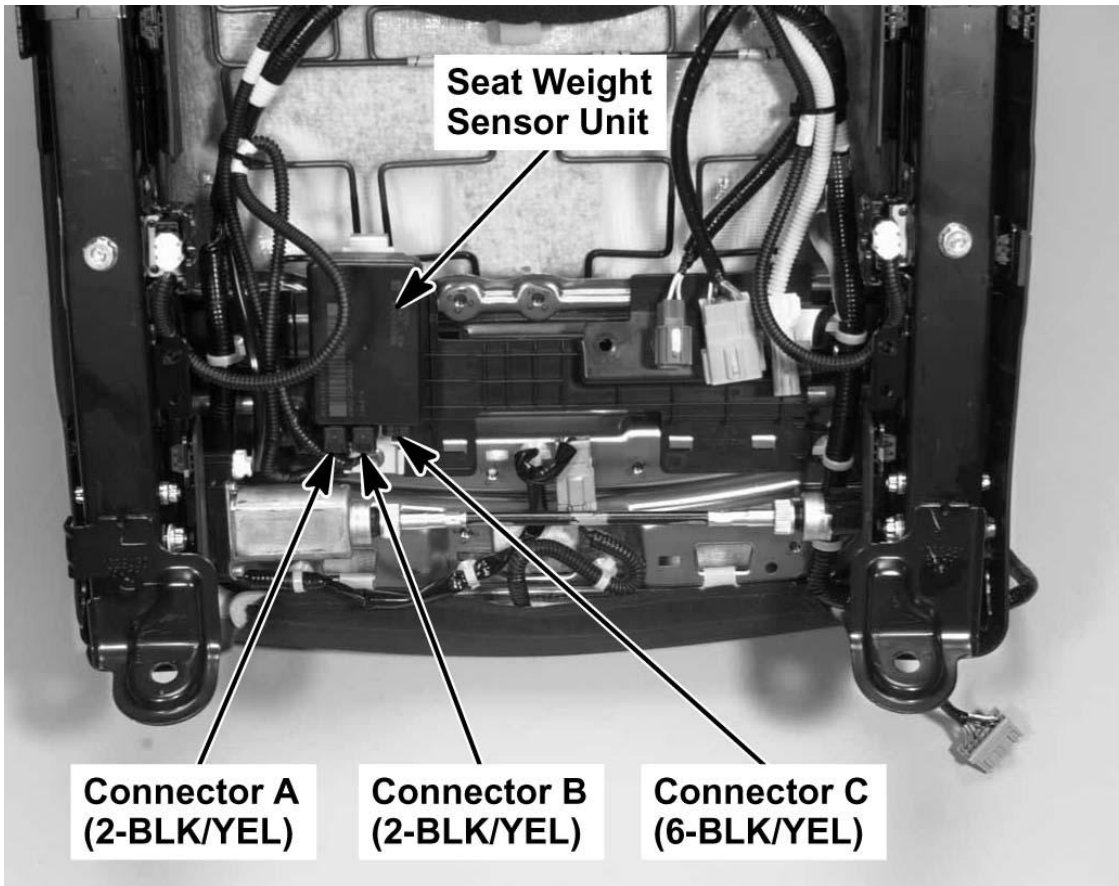


G00363569

Fig. 111: Under Front Passenger's Seat
Courtesy of AMERICAN HONDA MOTOR CO., INC.

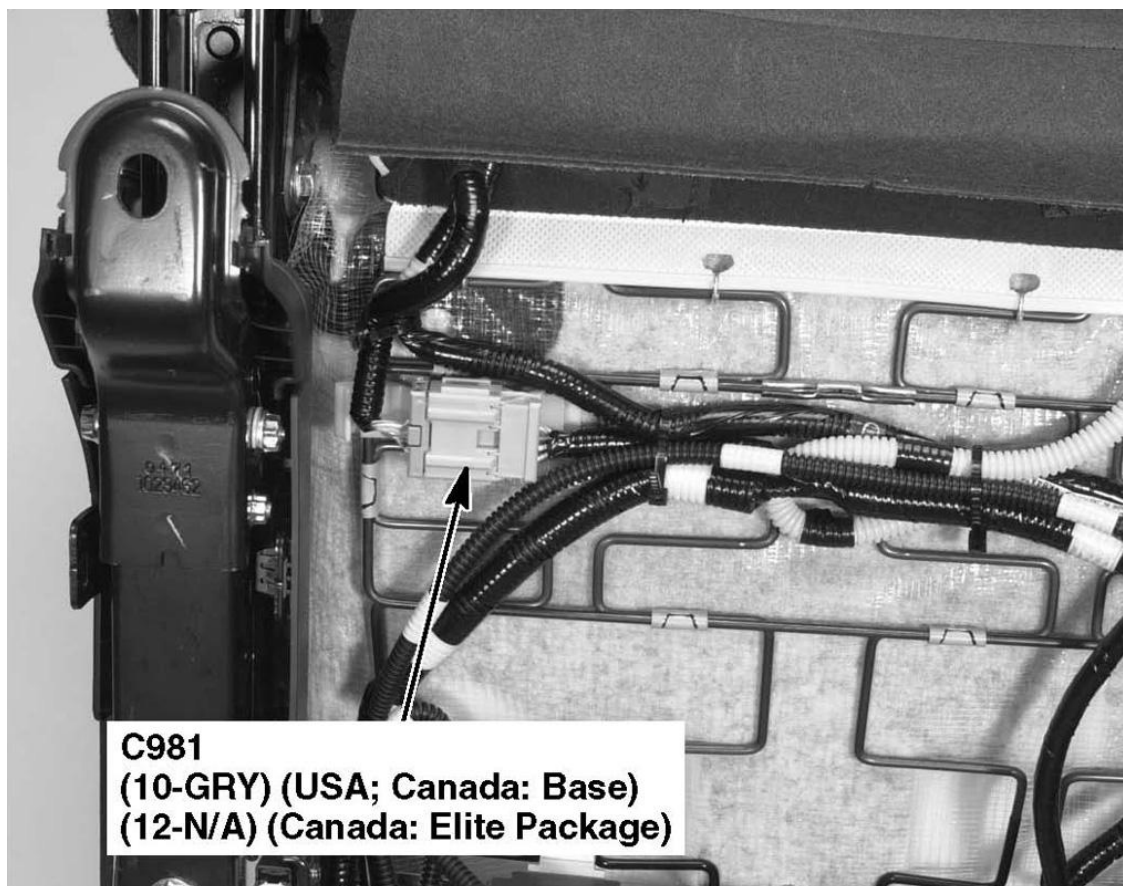

G00447090

Fig. 112: Under Front Passenger's Seat
Courtesy of AMERICAN HONDA MOTOR CO., INC.

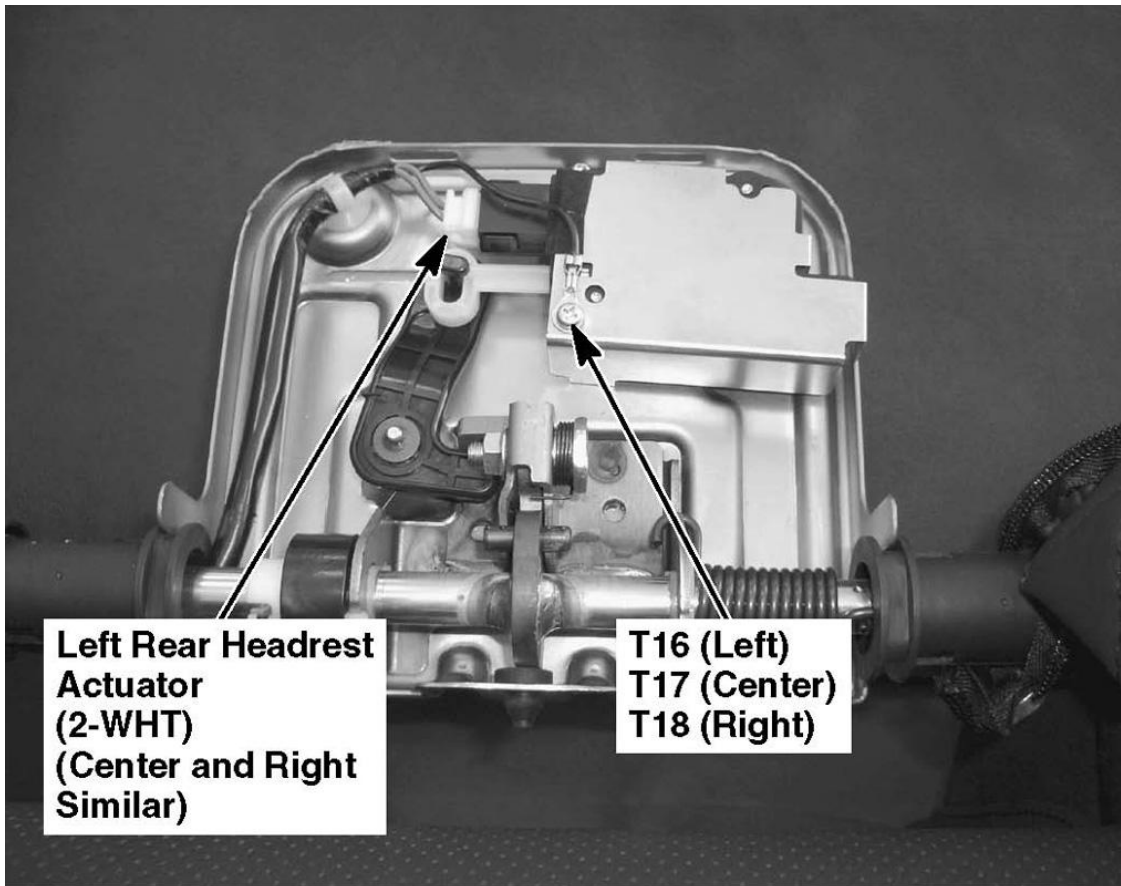

G00447091

Fig. 113: Left Rear Headrest


Courtesy of AMERICAN HONDA MOTOR CO., INC.



G00363572


Fig. 114: Right Side Of Rear Seat

Courtesy of AMERICAN HONDA MOTOR CO., INC.

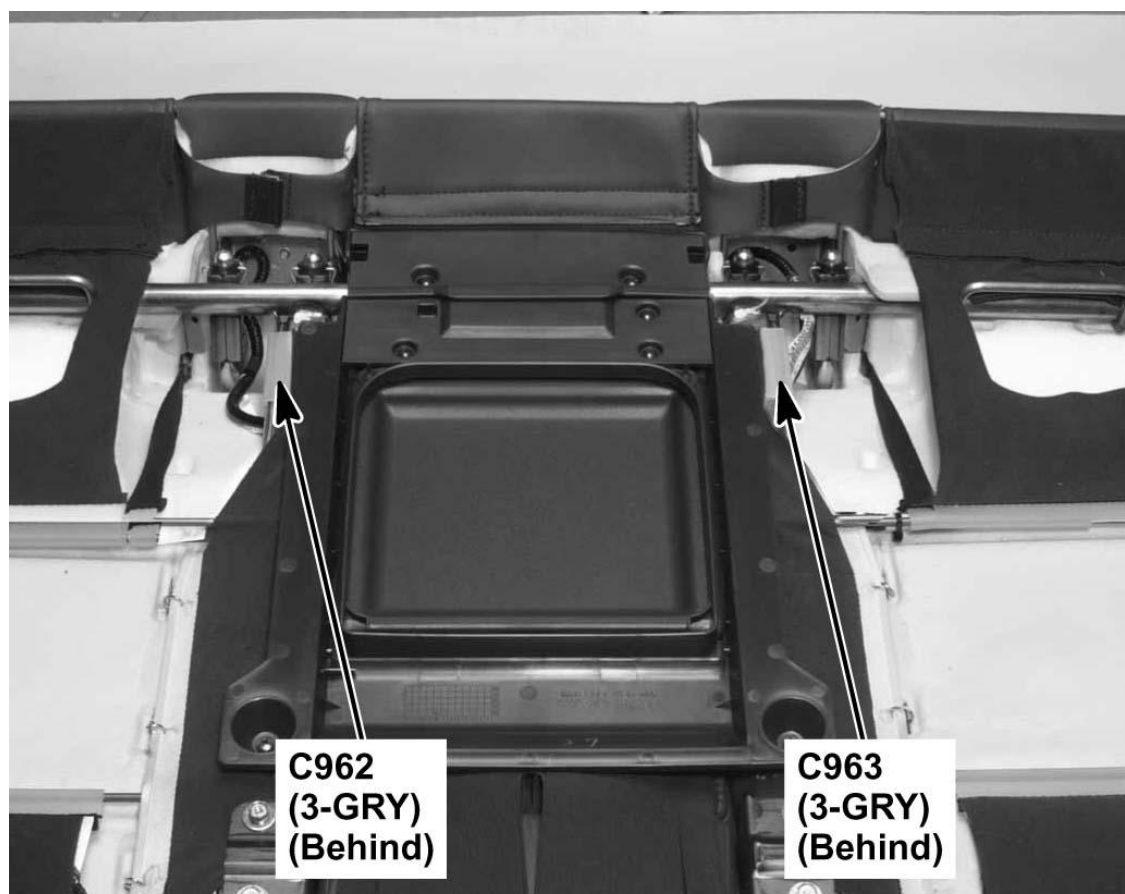


G00363573

Fig. 115: Center Of Rear Seat
Courtesy of AMERICAN HONDA MOTOR CO., INC.

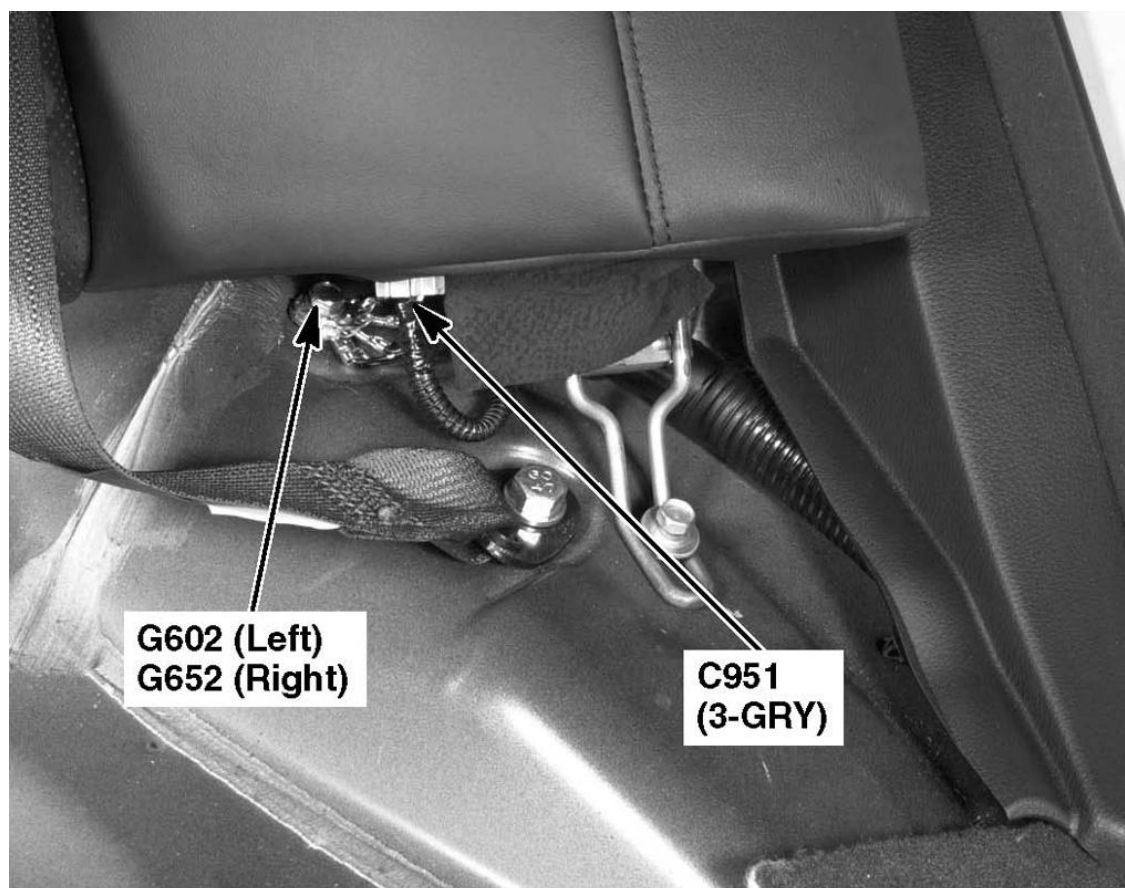

G00447093

Fig. 116: Under Left Side Of Rear Seat (Right Similar)
Courtesy of AMERICAN HONDA MOTOR CO., INC.

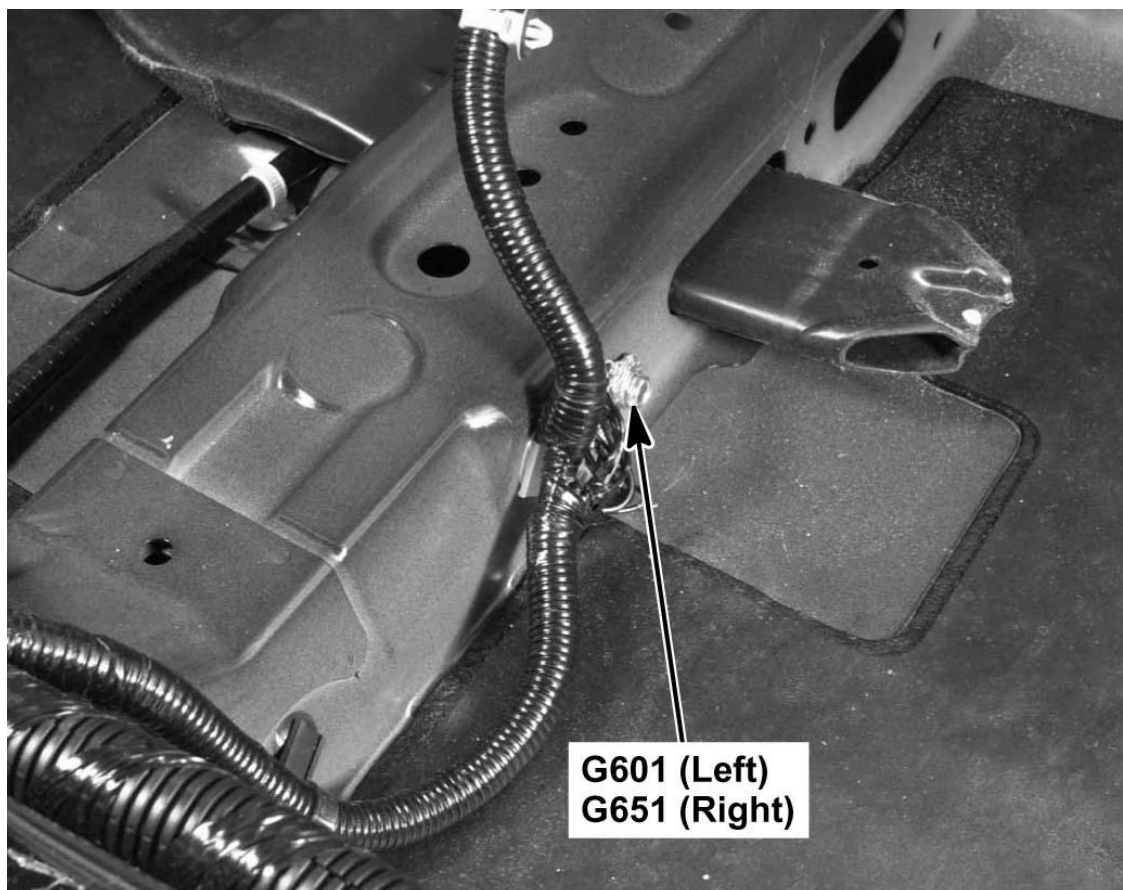

G00363575

Fig. 117: Left Side Of Floor (Right Similar)


Courtesy of AMERICAN HONDA MOTOR CO., INC.



G00363576

Fig. 118: Under Rear Seat


Courtesy of AMERICAN HONDA MOTOR CO., INC.

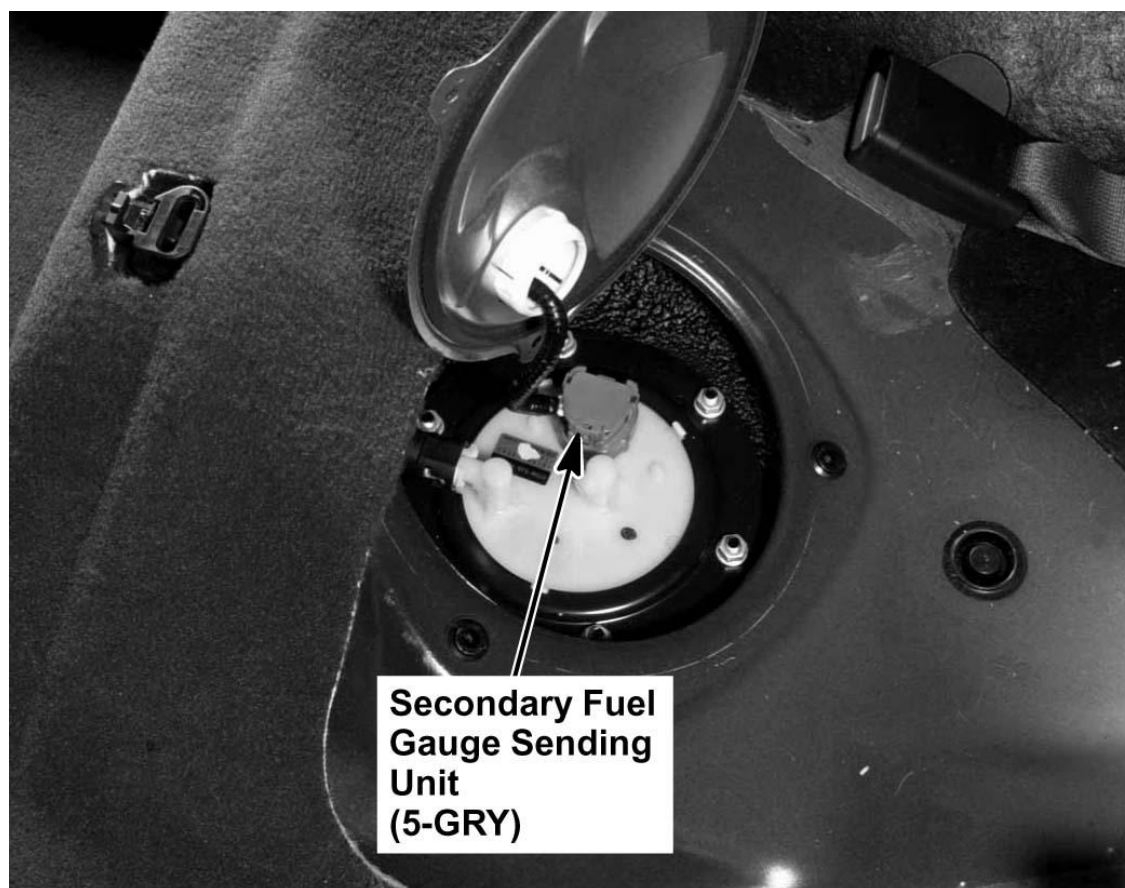

G00363577

Fig. 119: Under Rear Seat


Courtesy of AMERICAN HONDA MOTOR CO., INC.

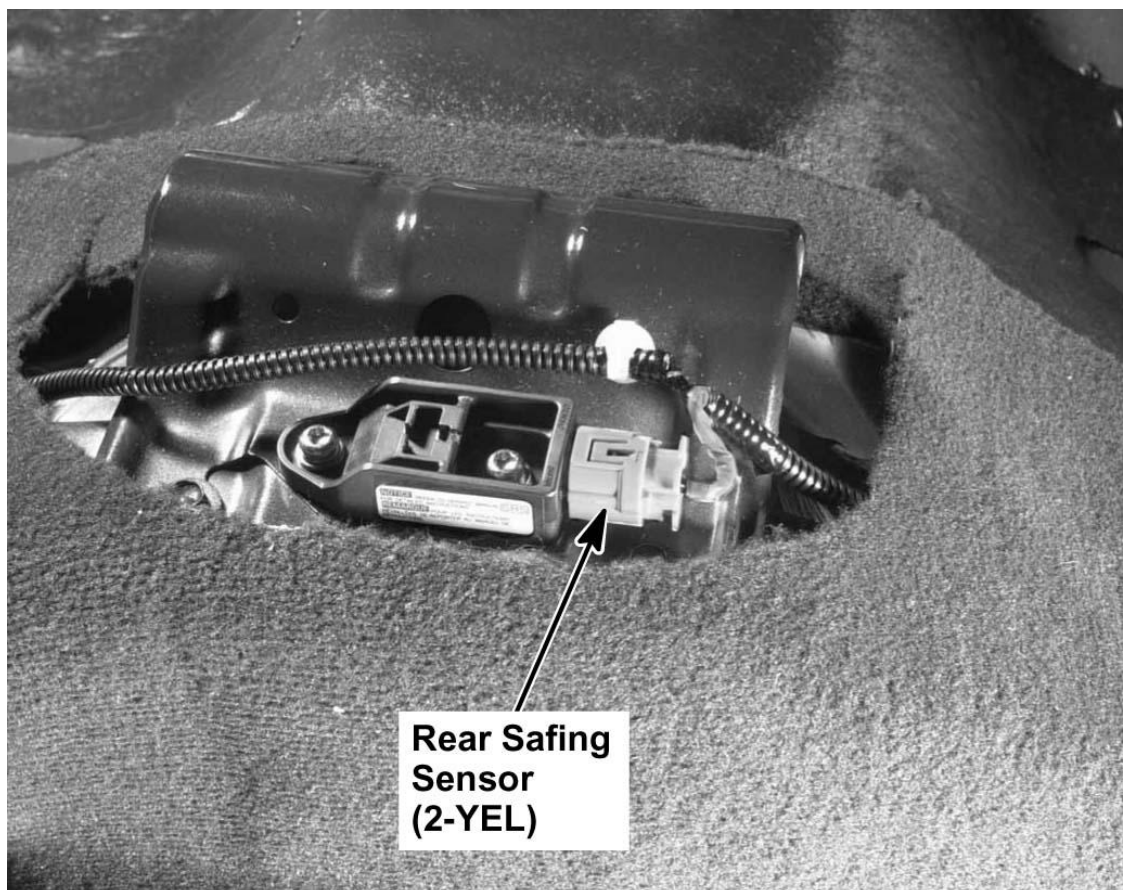

G00363578

Fig. 120: Under Rear Seat


Courtesy of AMERICAN HONDA MOTOR CO., INC.

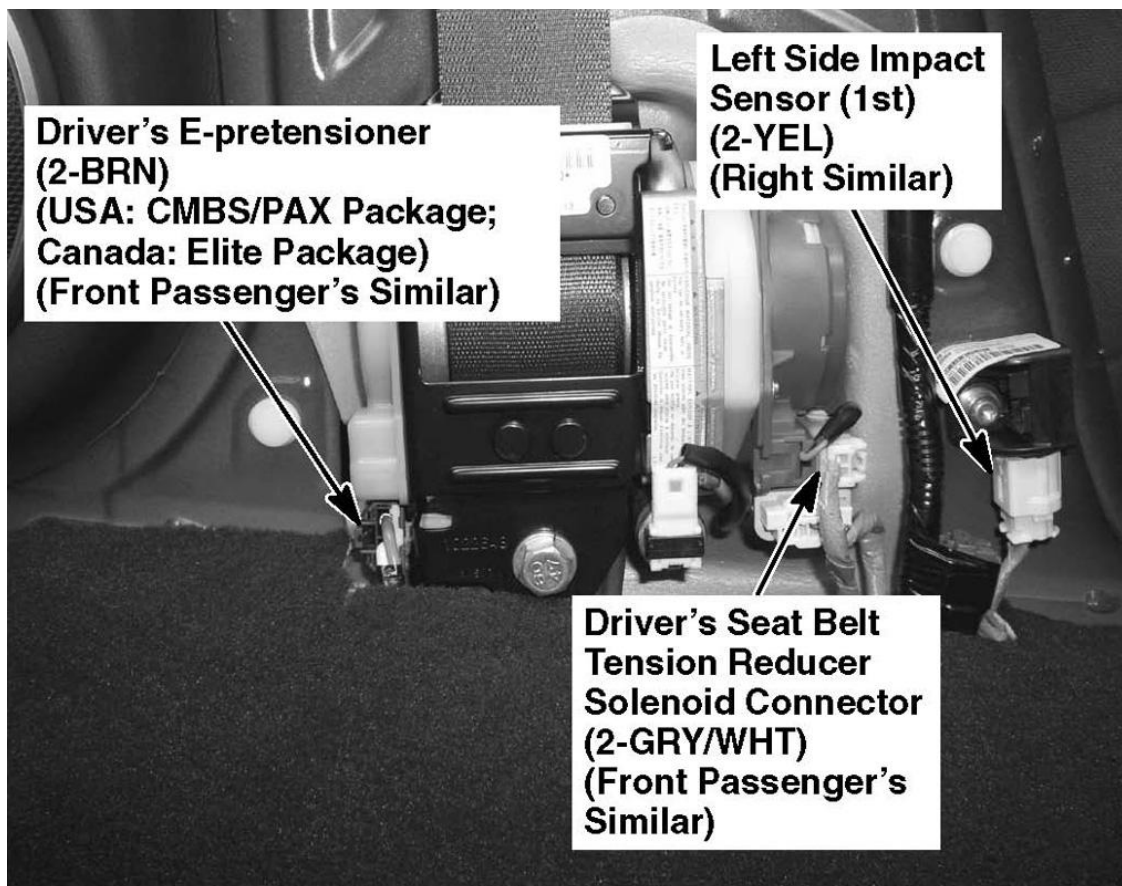

G00447087

Fig. 121: Left "B" Pillar (Right Similar)


Courtesy of AMERICAN HONDA MOTOR CO., INC.

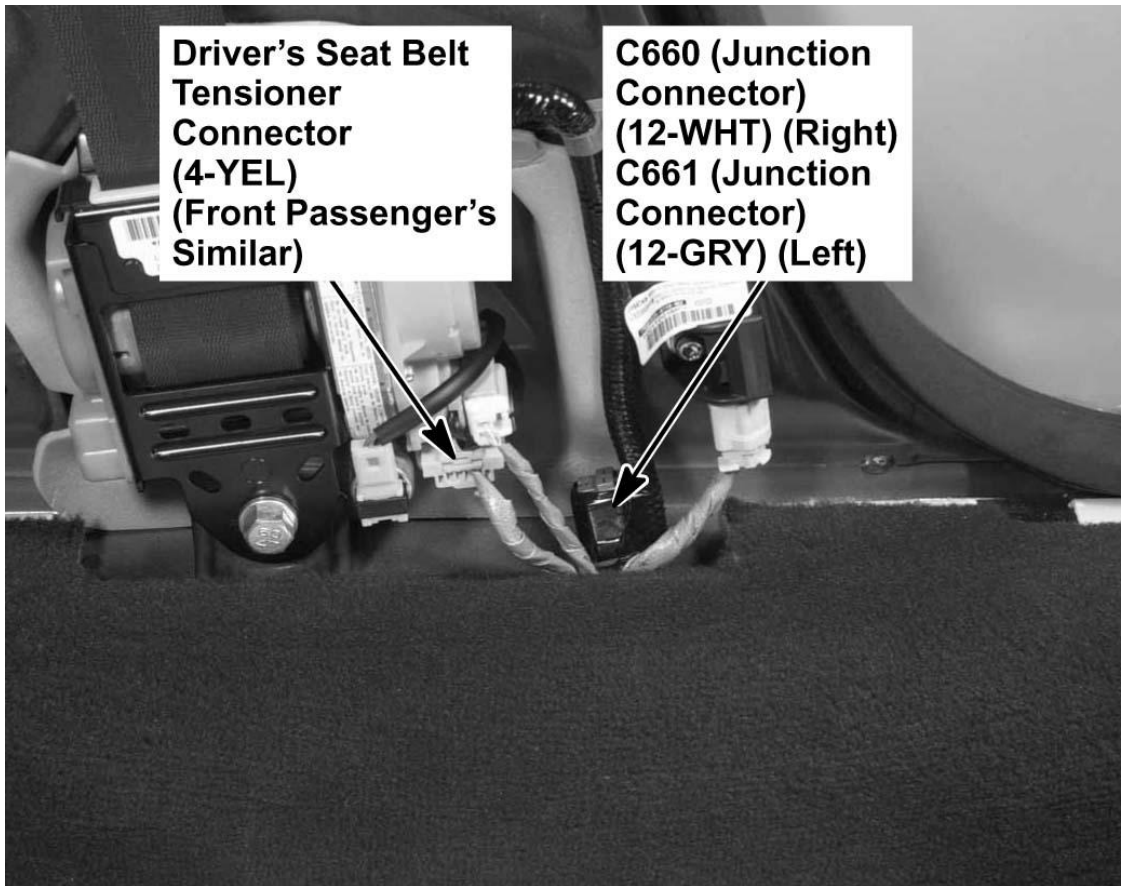

G00363580


Fig. 122: Left "B" Pillar (Right Similar)

Courtesy of AMERICAN HONDA MOTOR CO., INC.

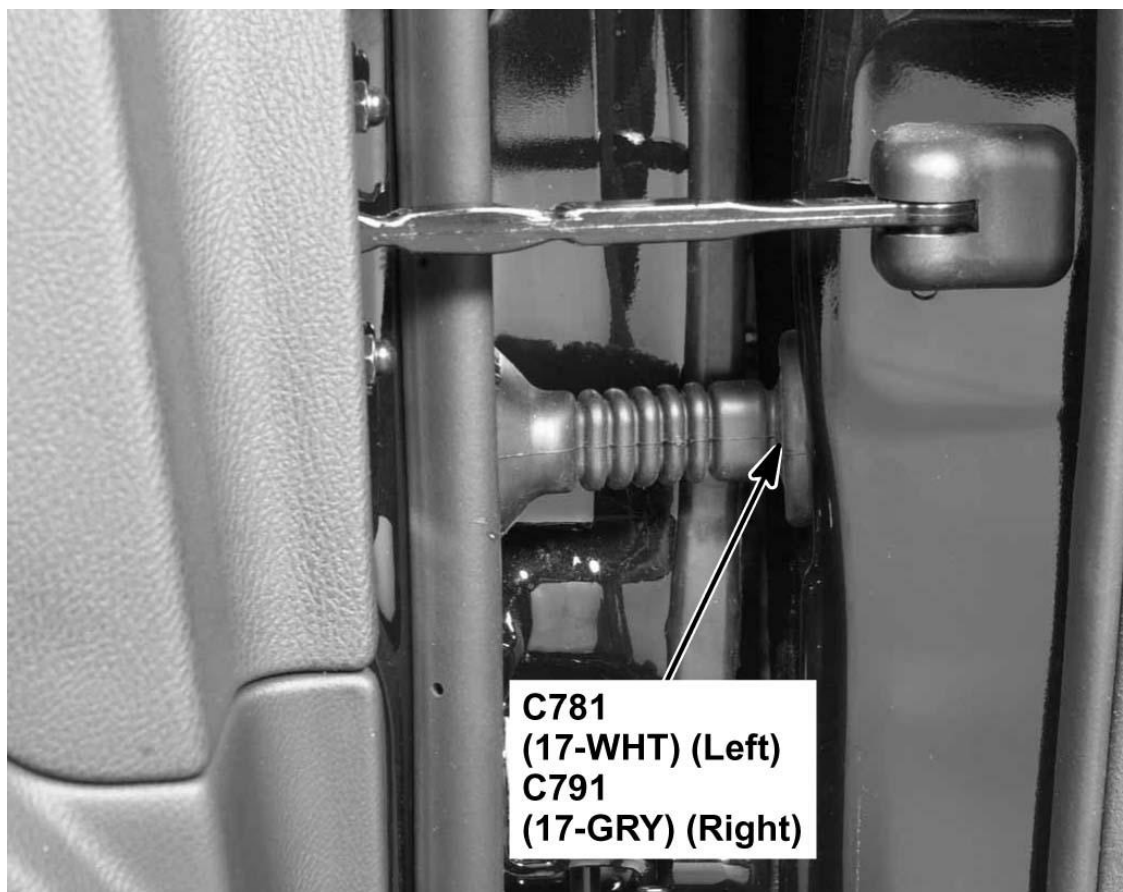

G00363581


Fig. 123: Left "B" Pillar (Right Similar)
Courtesy of AMERICAN HONDA MOTOR CO., INC.

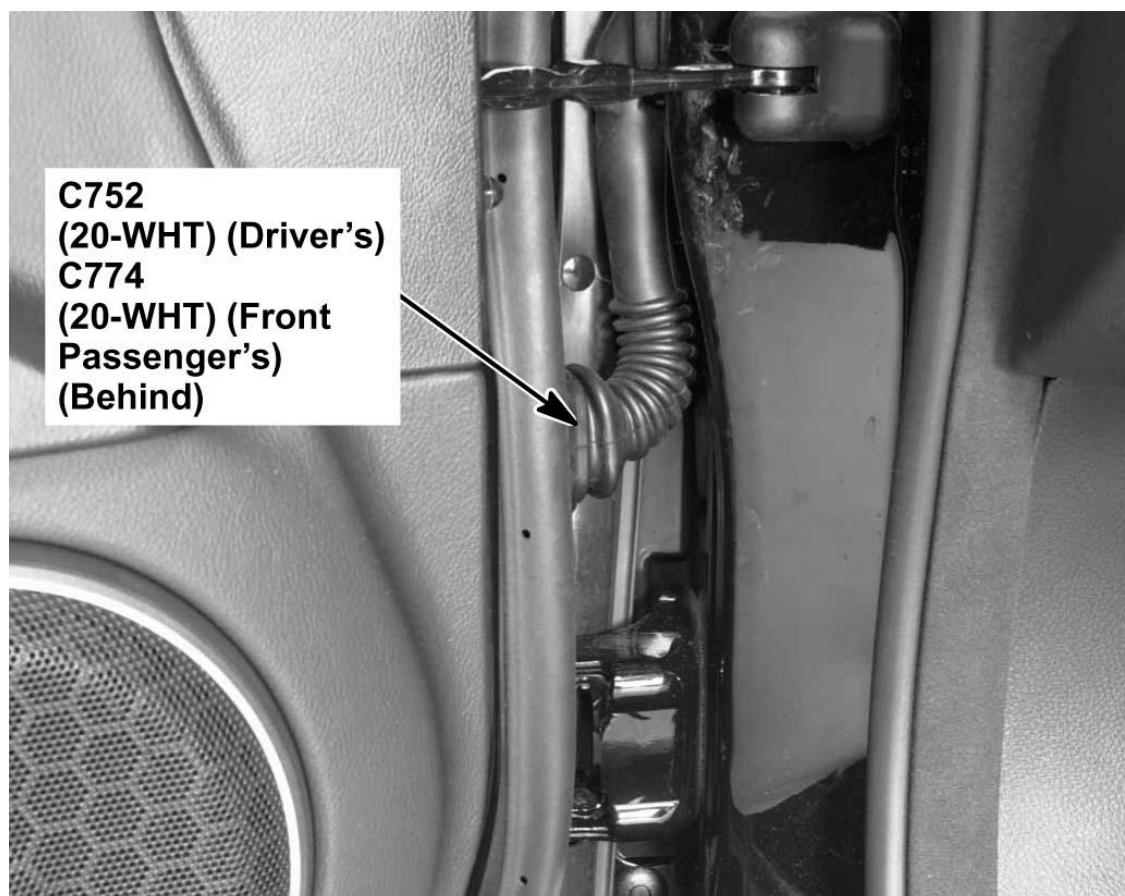

G00363582


Fig. 124: Driver's Door (Front Passenger's Similar)

Courtesy of AMERICAN HONDA MOTOR CO., INC.

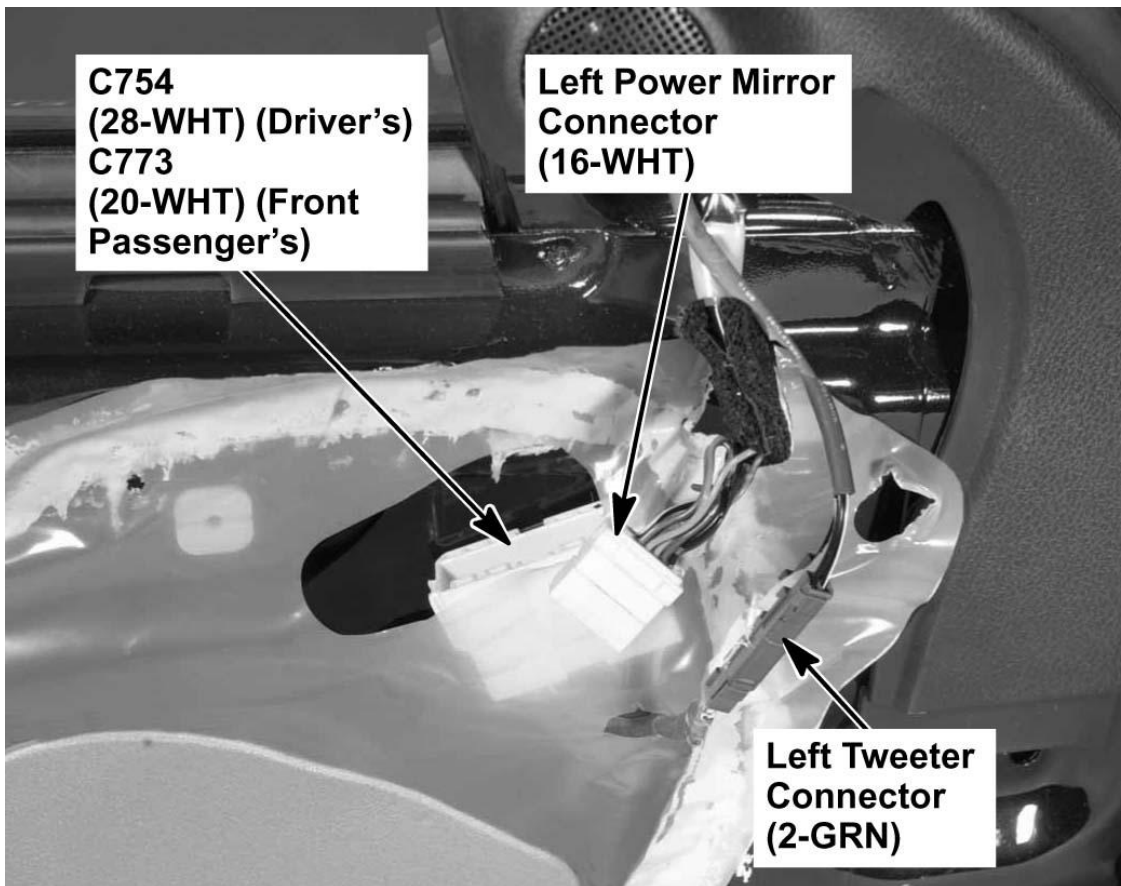


G00363583

Fig. 125: Driver's Door (Front Passenger's Similar)
Courtesy of AMERICAN HONDA MOTOR CO., INC.

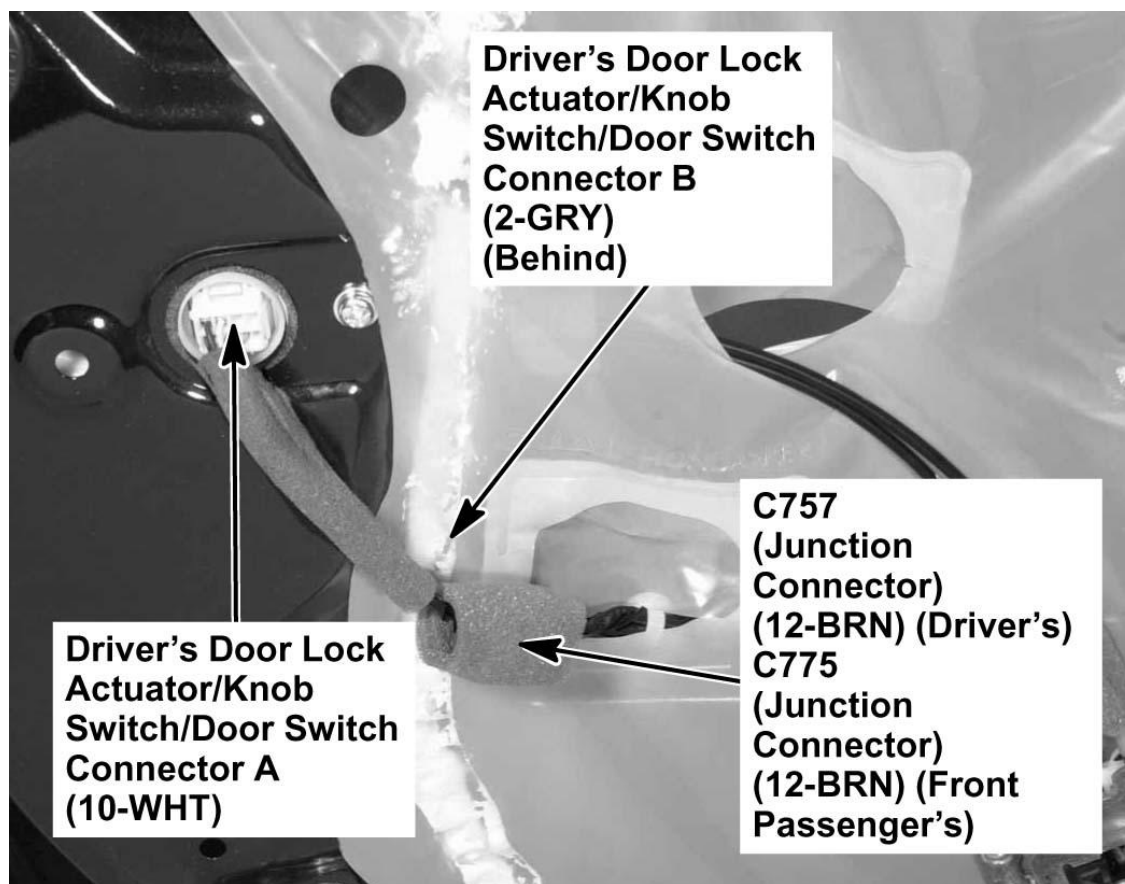


G00363584

Fig. 126: Driver's Door (Front Passenger's Similar)
Courtesy of AMERICAN HONDA MOTOR CO., INC.

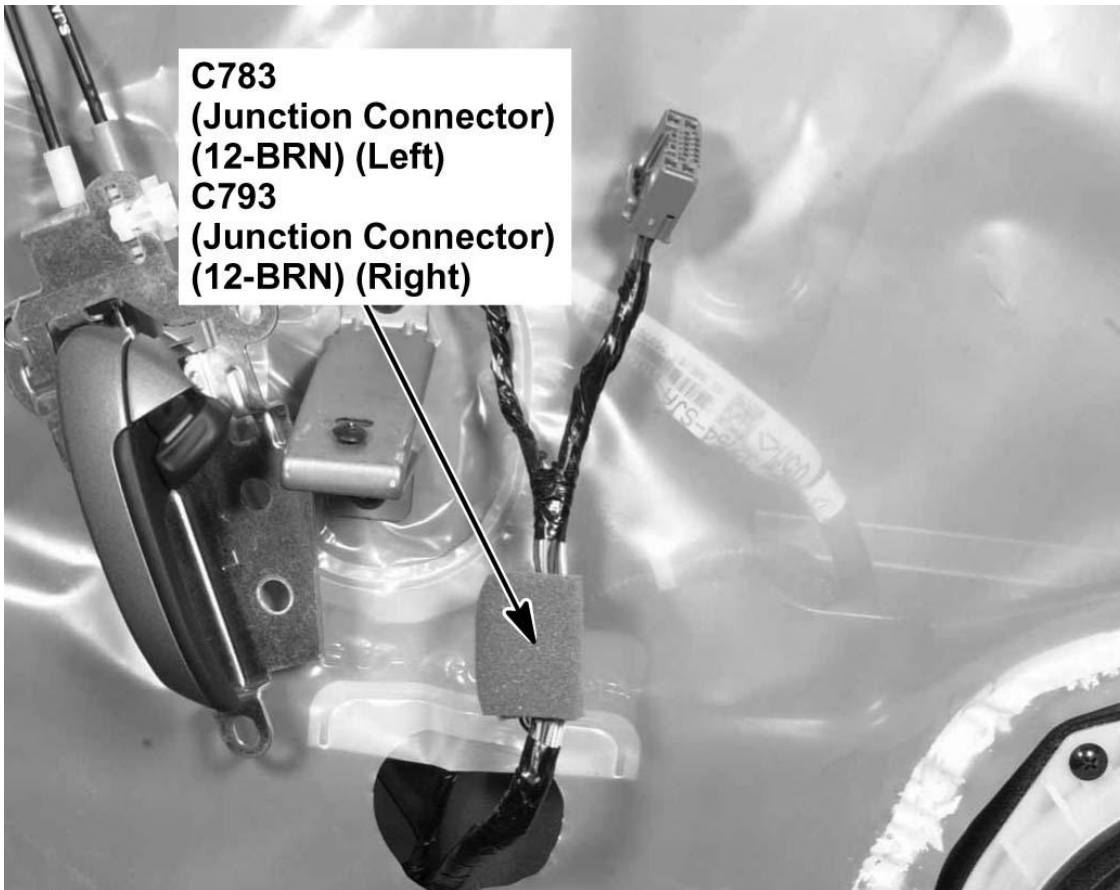

G00363585

Fig. 127: Left Rear Door (Right Similar)
Courtesy of AMERICAN HONDA MOTOR CO., INC.

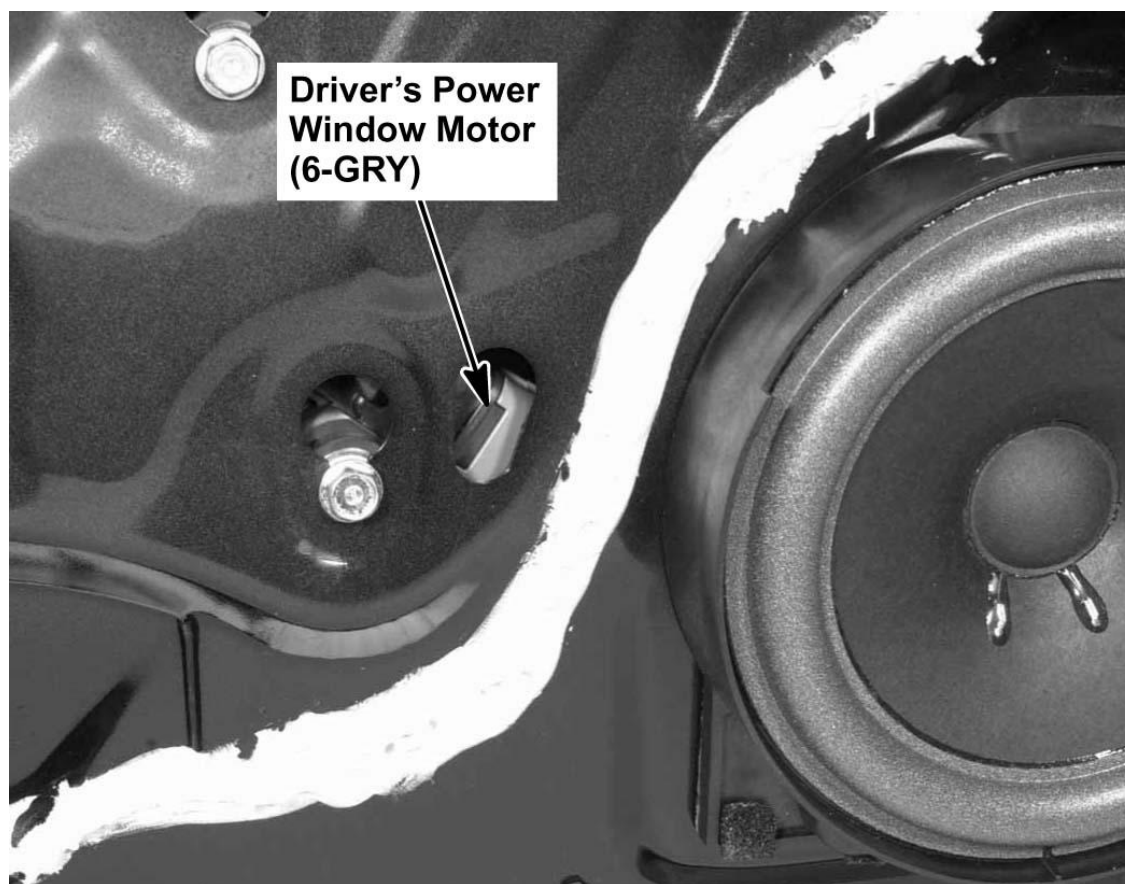

G00363586


Fig. 128: Driver's Door (Front Passenger's Similar)

Courtesy of AMERICAN HONDA MOTOR CO., INC.




G00363587

Fig. 129: Driver's Door (Front Passenger's Similar)
Courtesy of AMERICAN HONDA MOTOR CO., INC.

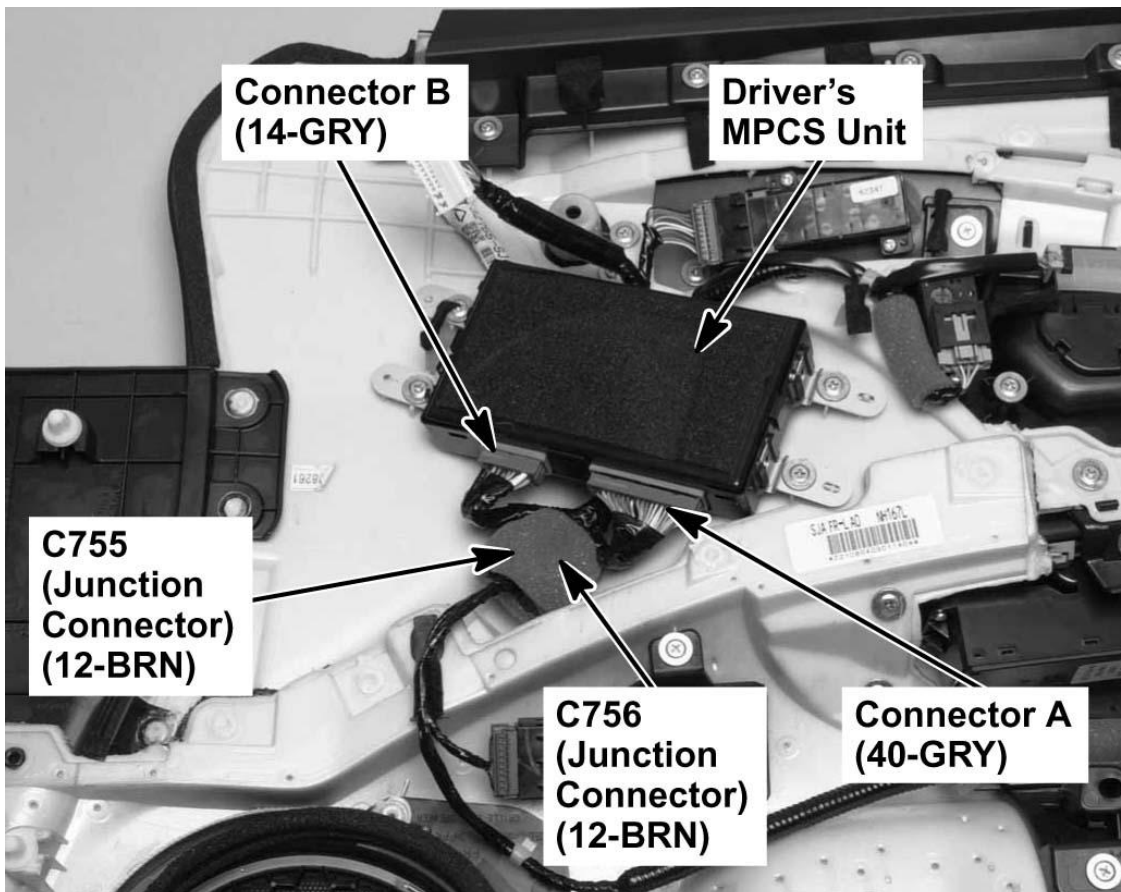


G00363588

Fig. 130: Driver's Door
Courtesy of AMERICAN HONDA MOTOR CO., INC.

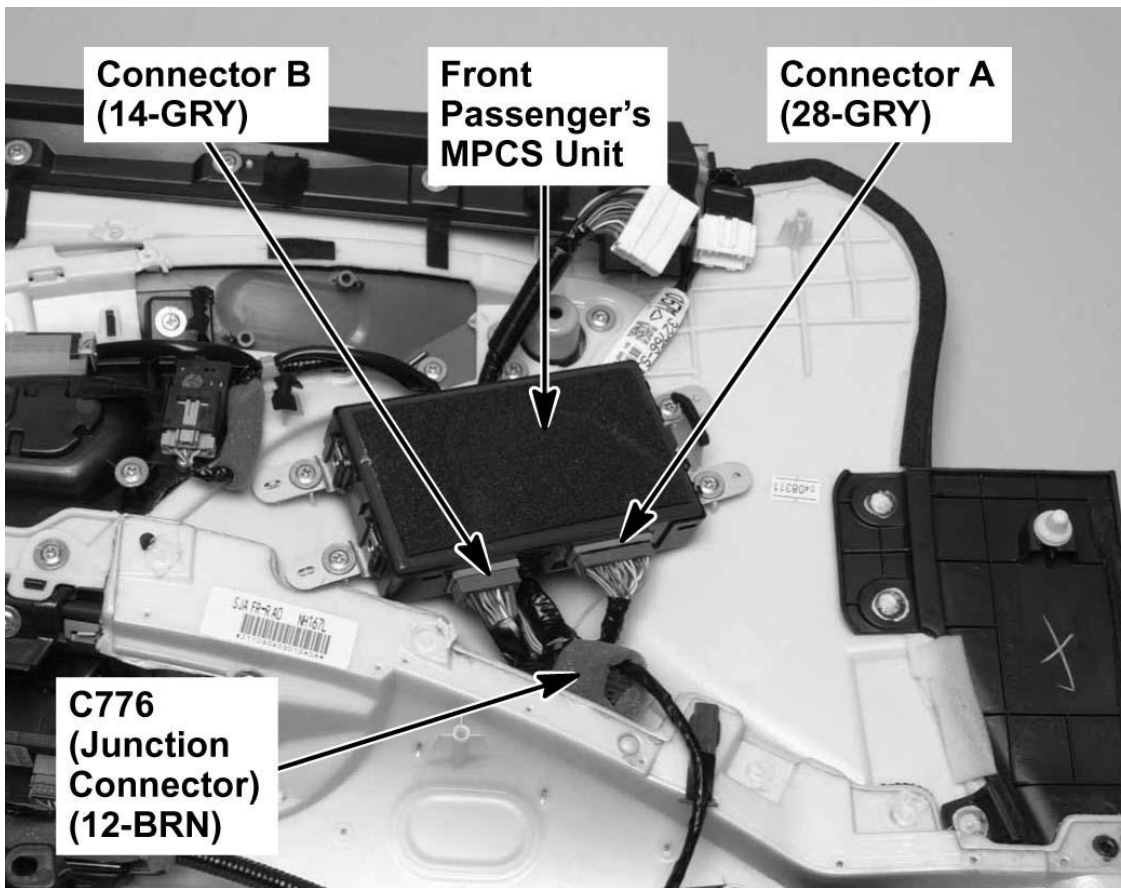


G00363589

Fig. 131: Front Passenger's Door
Courtesy of AMERICAN HONDA MOTOR CO., INC.

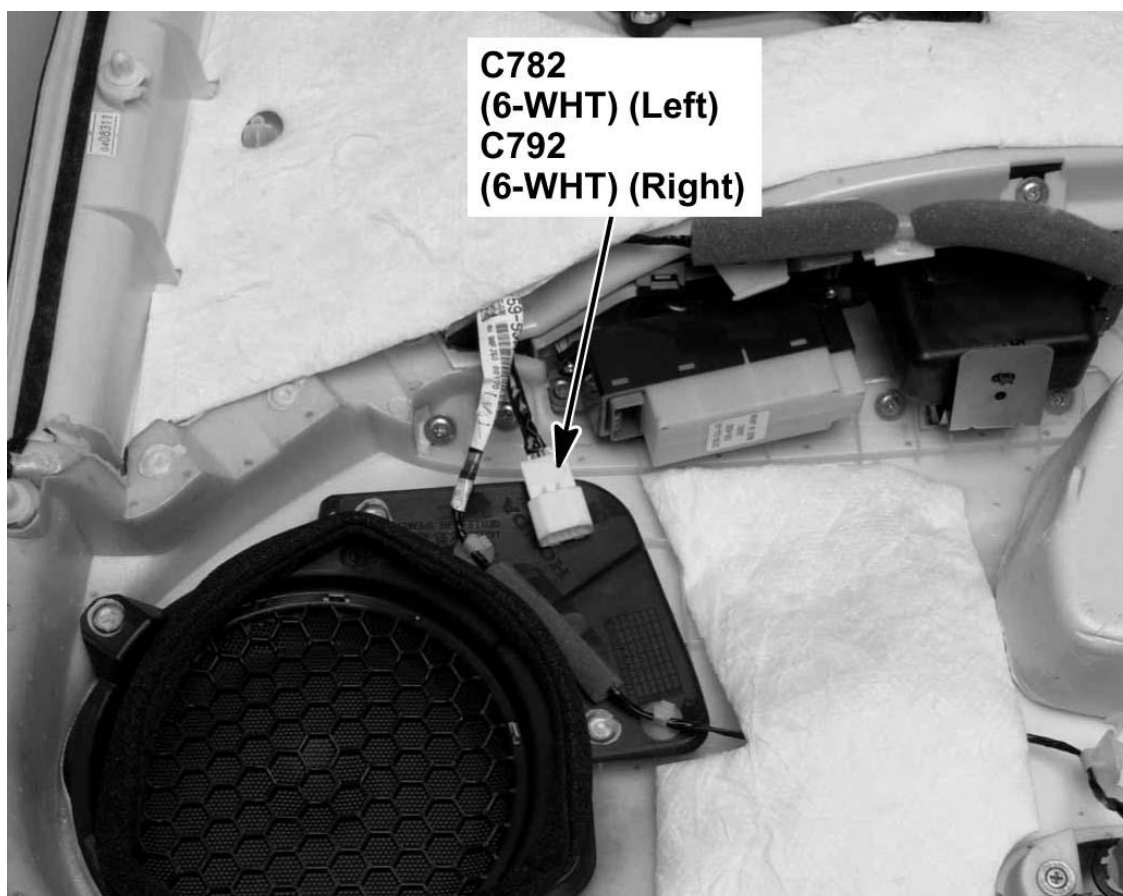

G00363590


Fig. 132: Left Rear Door (Right Similar)
Courtesy of AMERICAN HONDA MOTOR CO., INC.

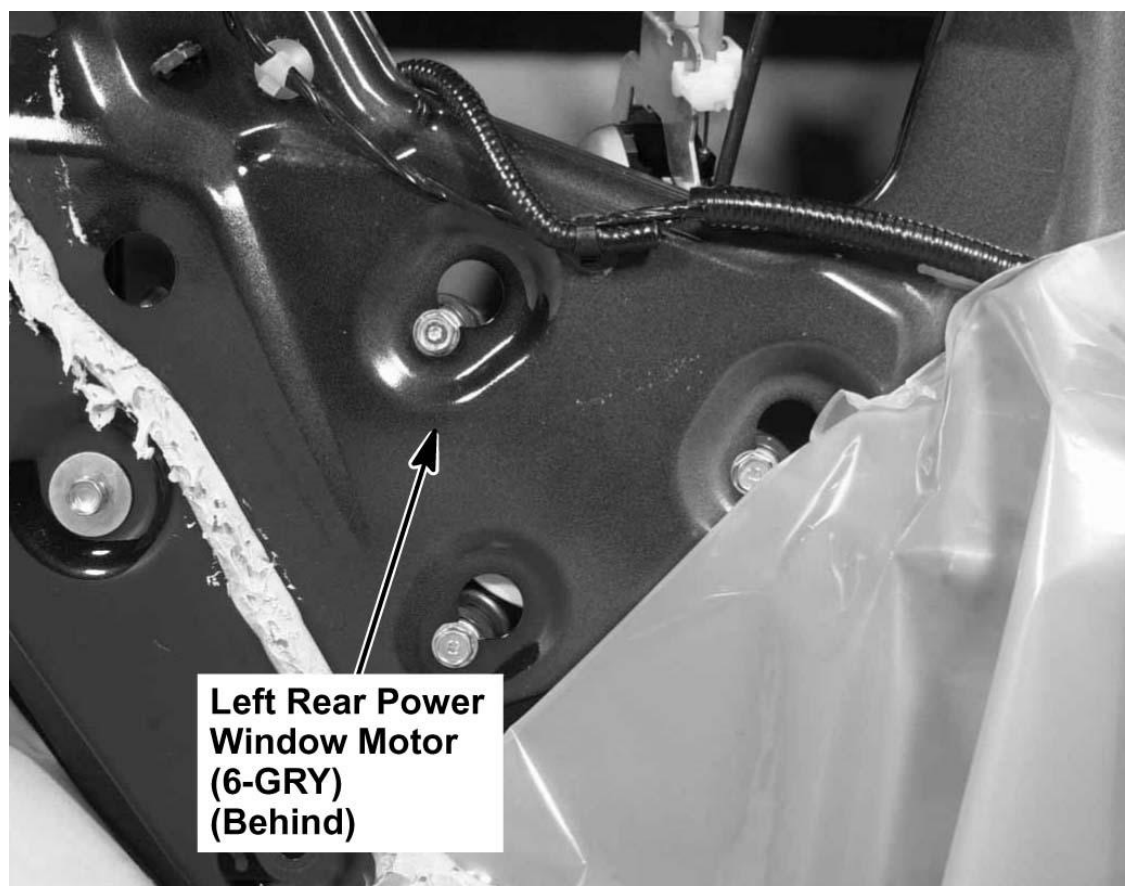

G00363591

Fig. 133: Left Rear Door (Right Similar)


Courtesy of AMERICAN HONDA MOTOR CO., INC.

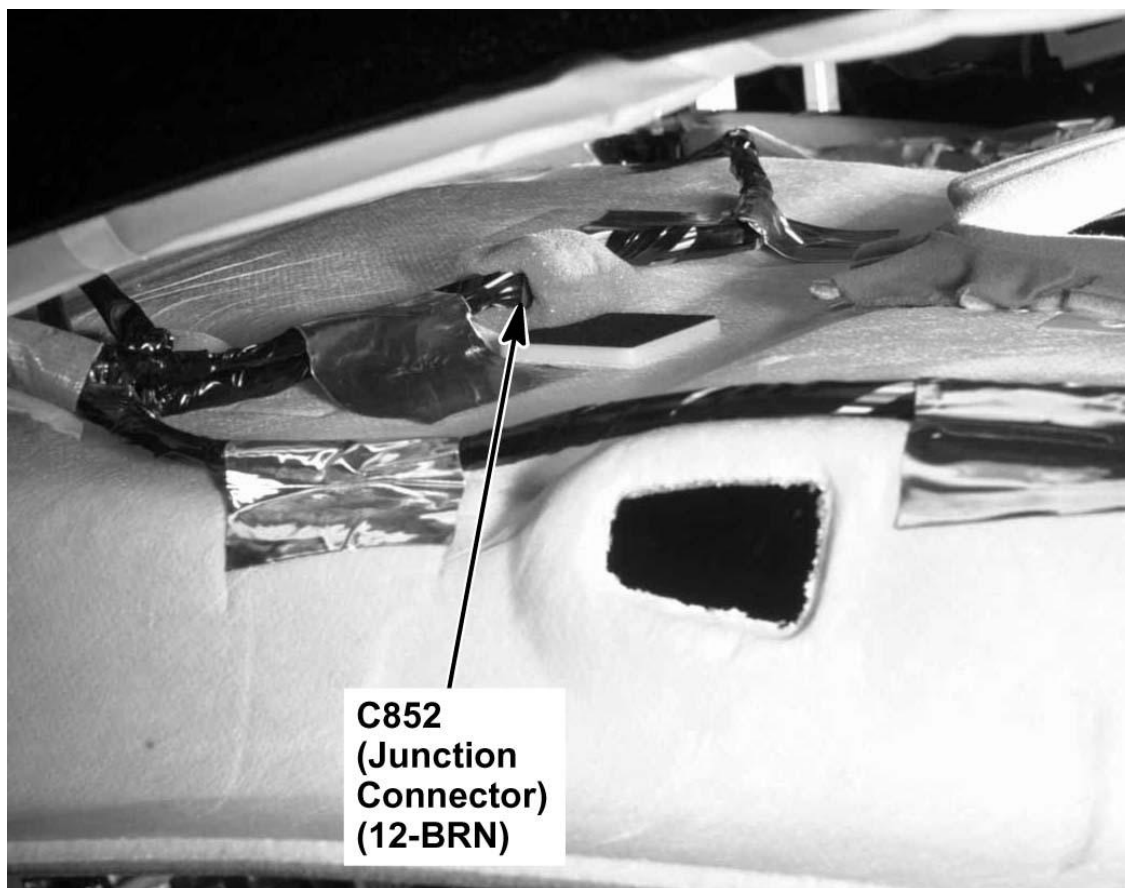

G00363593

Fig. 134: Left Front Of Roof


Courtesy of AMERICAN HONDA MOTOR CO., INC.

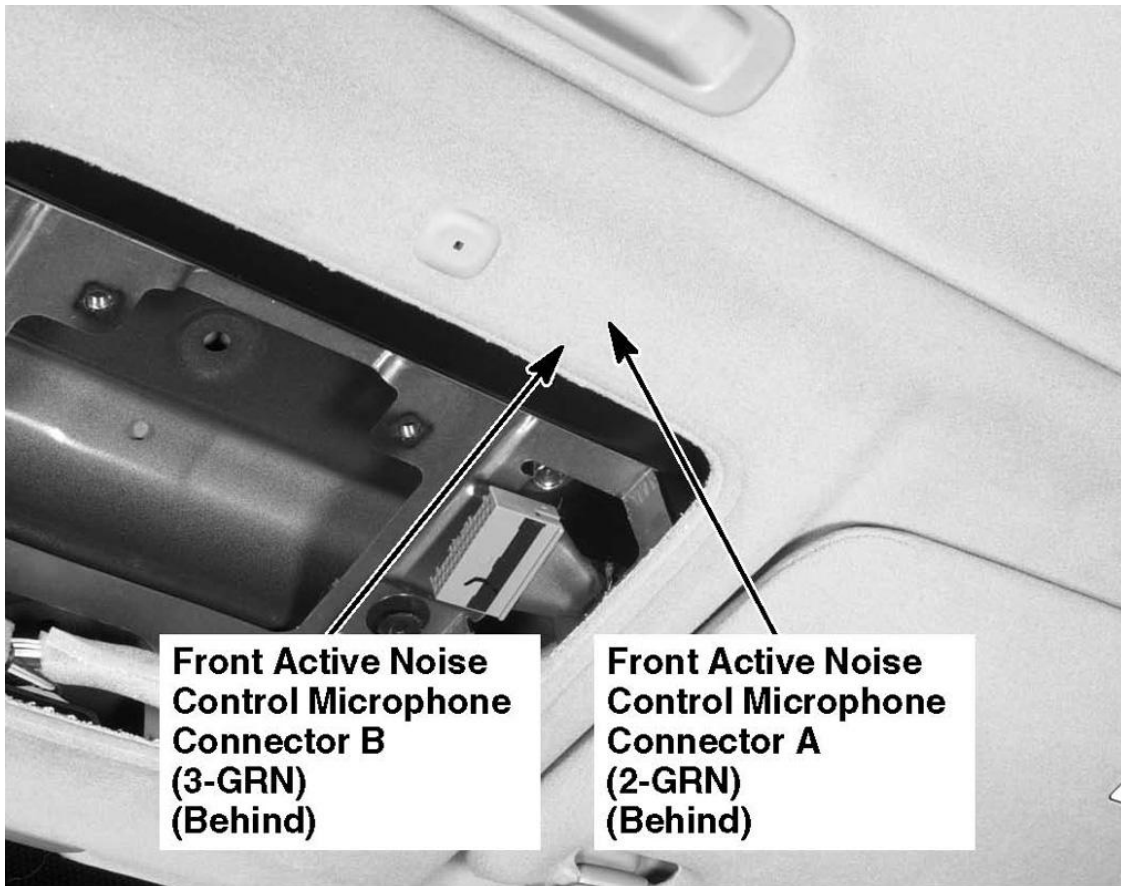

G00447097

Fig. 135: Front Of Roof

Courtesy of AMERICAN HONDA MOTOR CO., INC.

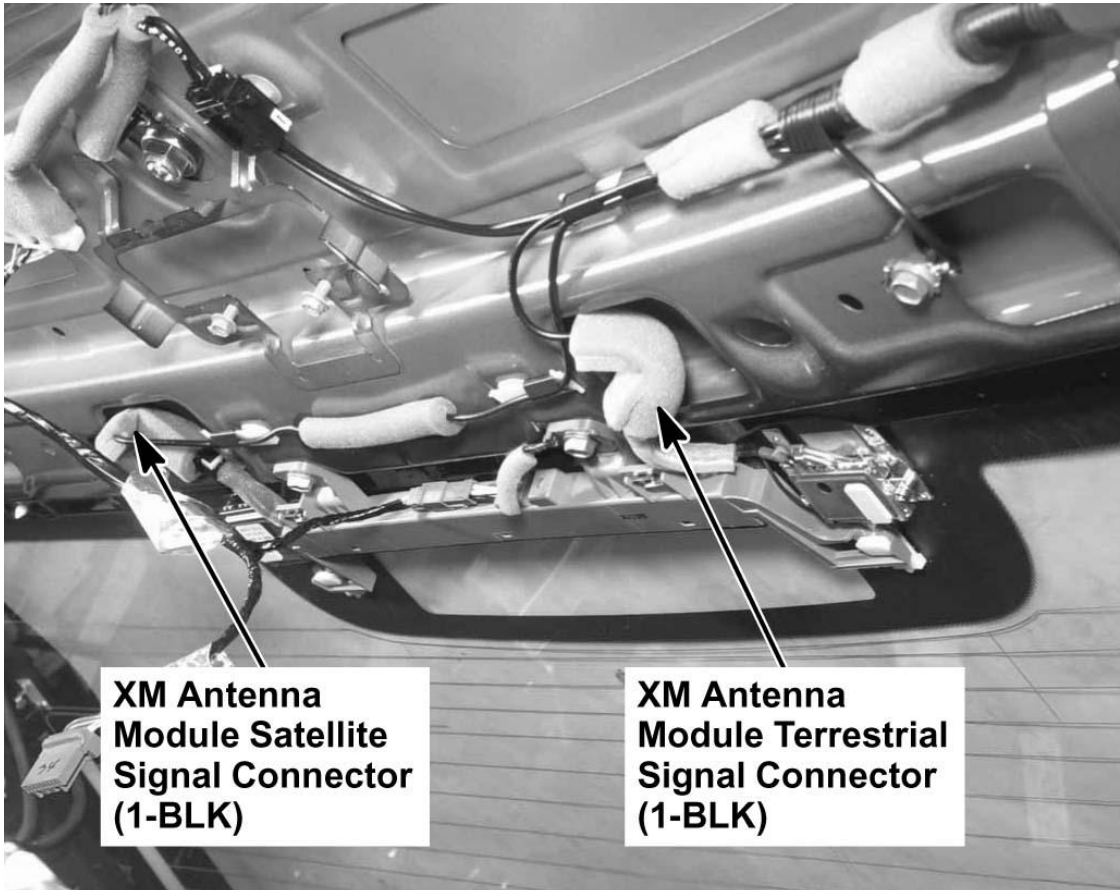

G00363595


Fig. 136: Rear Of Roof (USA: Technology Package)
Courtesy of AMERICAN HONDA MOTOR CO., INC.



G00447098

Fig. 137: Rear Of Roof


Courtesy of AMERICAN HONDA MOTOR CO., INC.

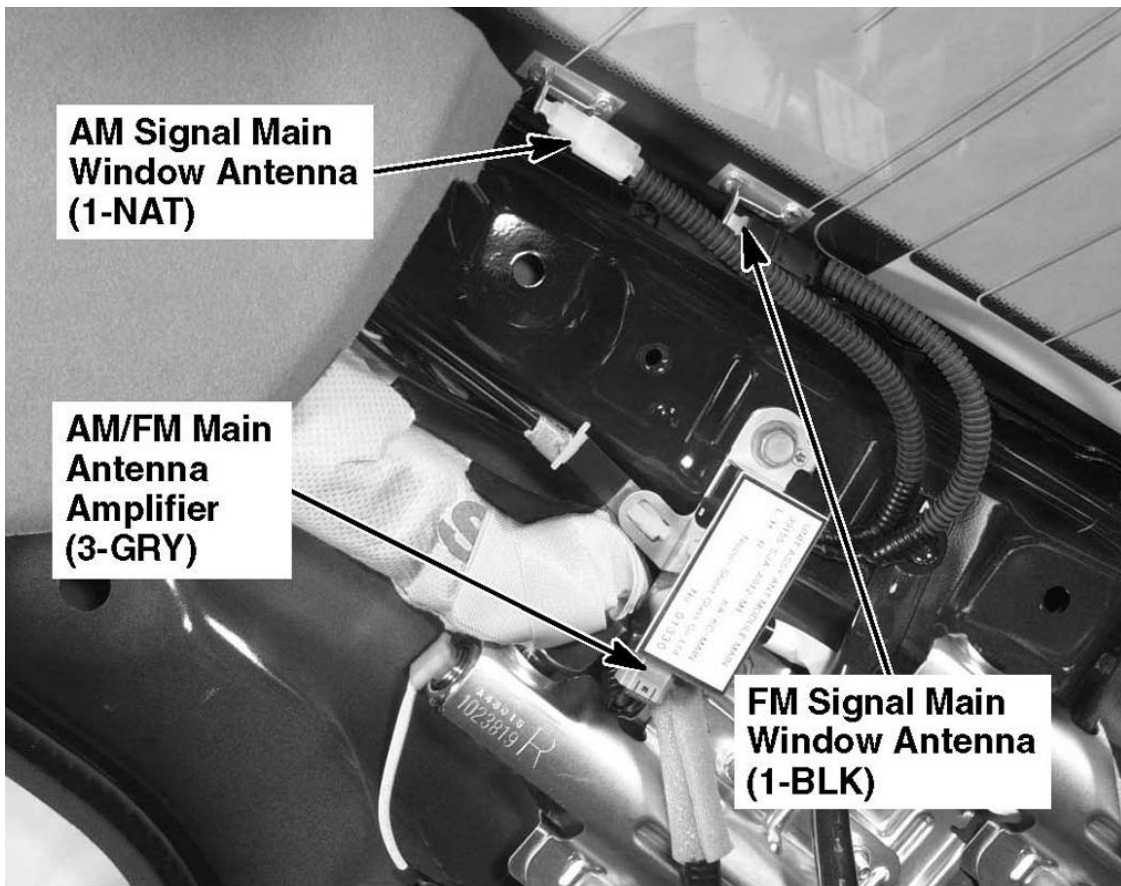

G00447095

Fig. 138: Right "C" Pillar

Courtesy of AMERICAN HONDA MOTOR CO., INC.

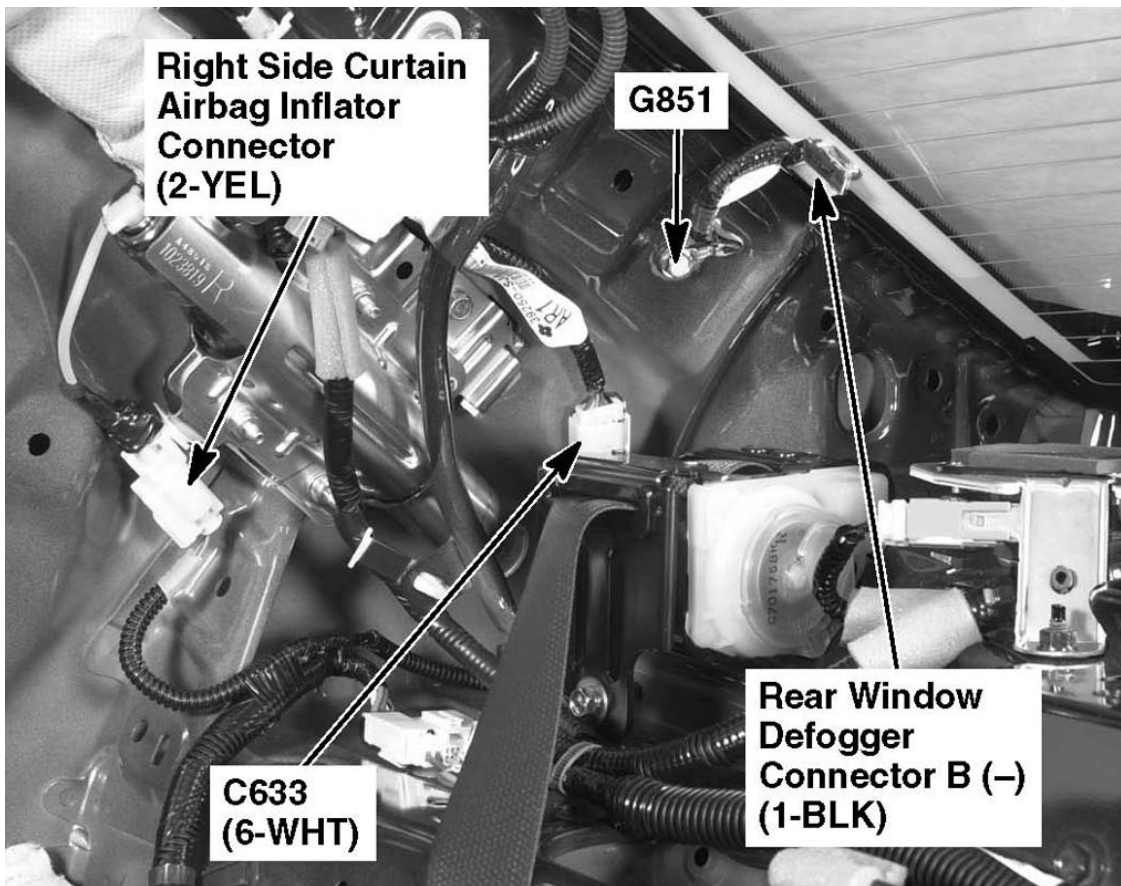

G00447096

Fig. 139: Right "C" Pillar


Courtesy of AMERICAN HONDA MOTOR CO., INC.



G00447100

Fig. 140: Right "C" Pillar


Courtesy of AMERICAN HONDA MOTOR CO., INC.

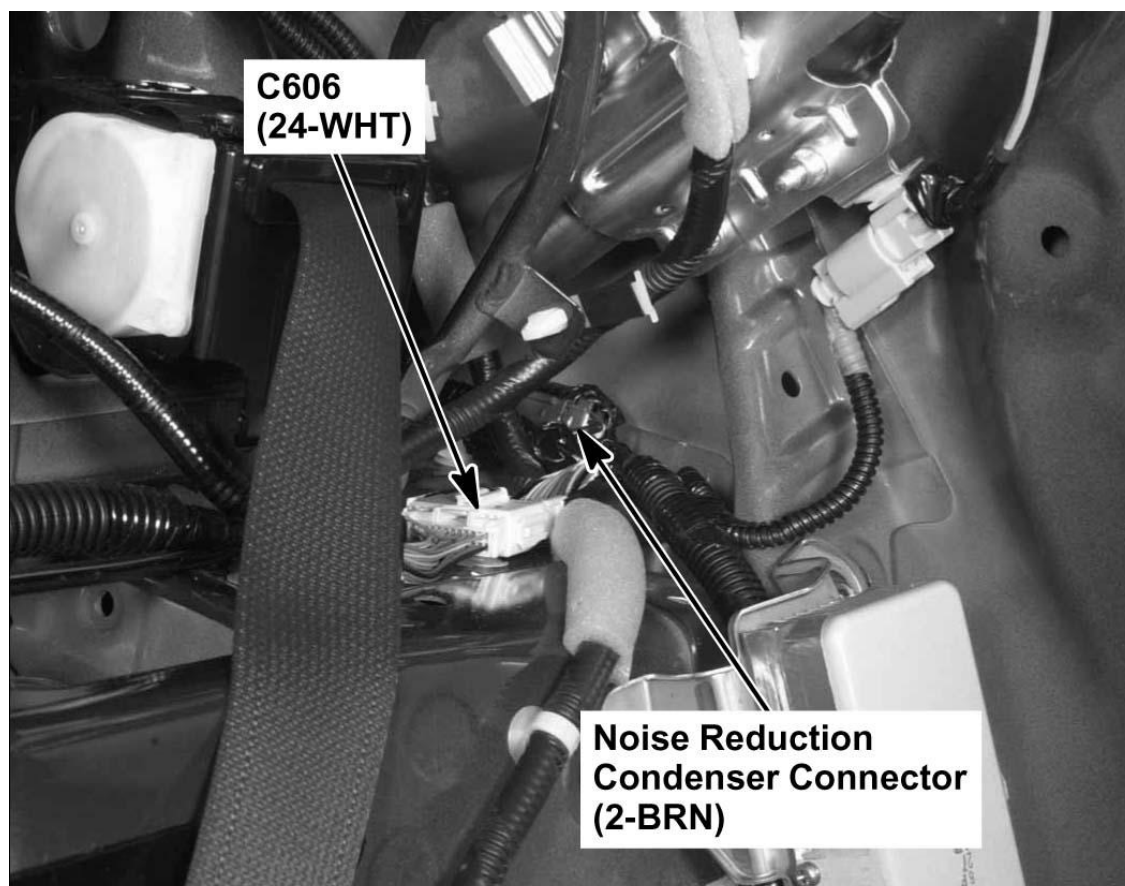

G00363600


Fig. 141: Left "C" Pillar

Courtesy of AMERICAN HONDA MOTOR CO., INC.

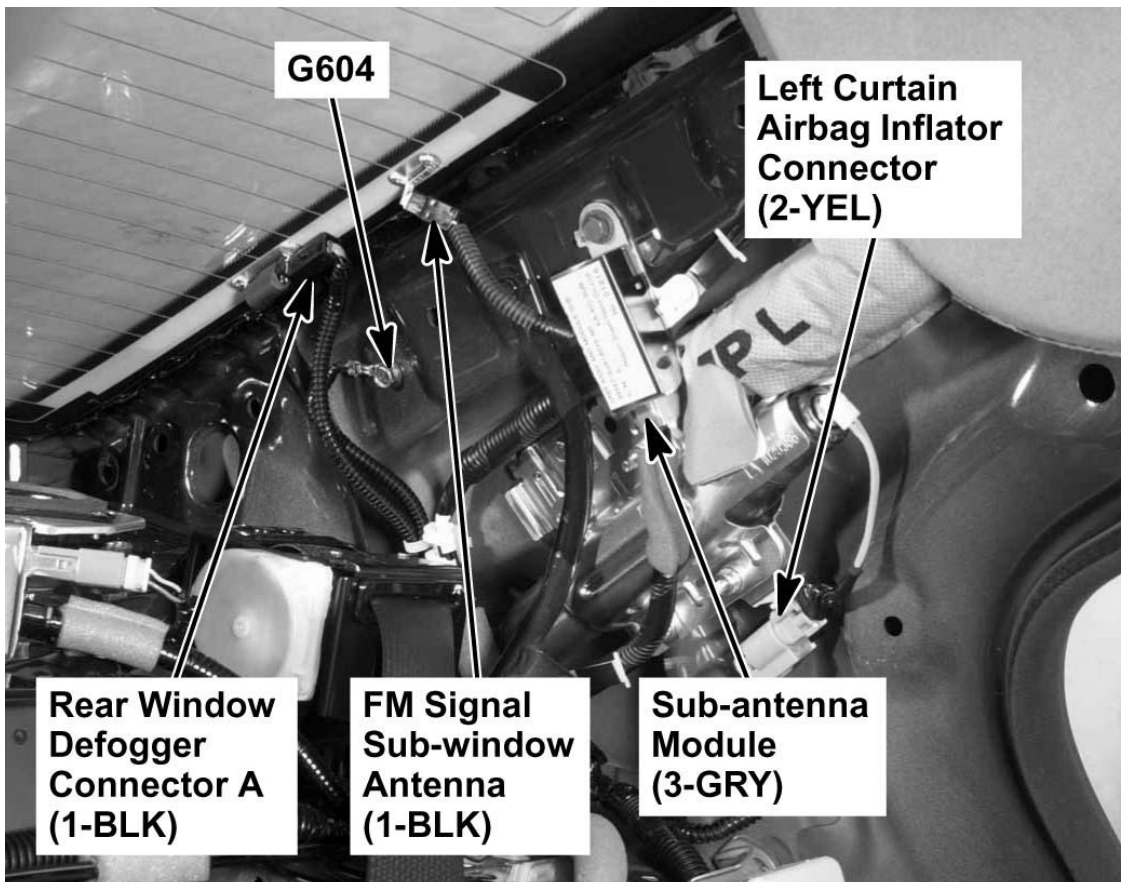

G00363601


Fig. 142: Left "C" Pillar
Courtesy of AMERICAN HONDA MOTOR CO., INC.

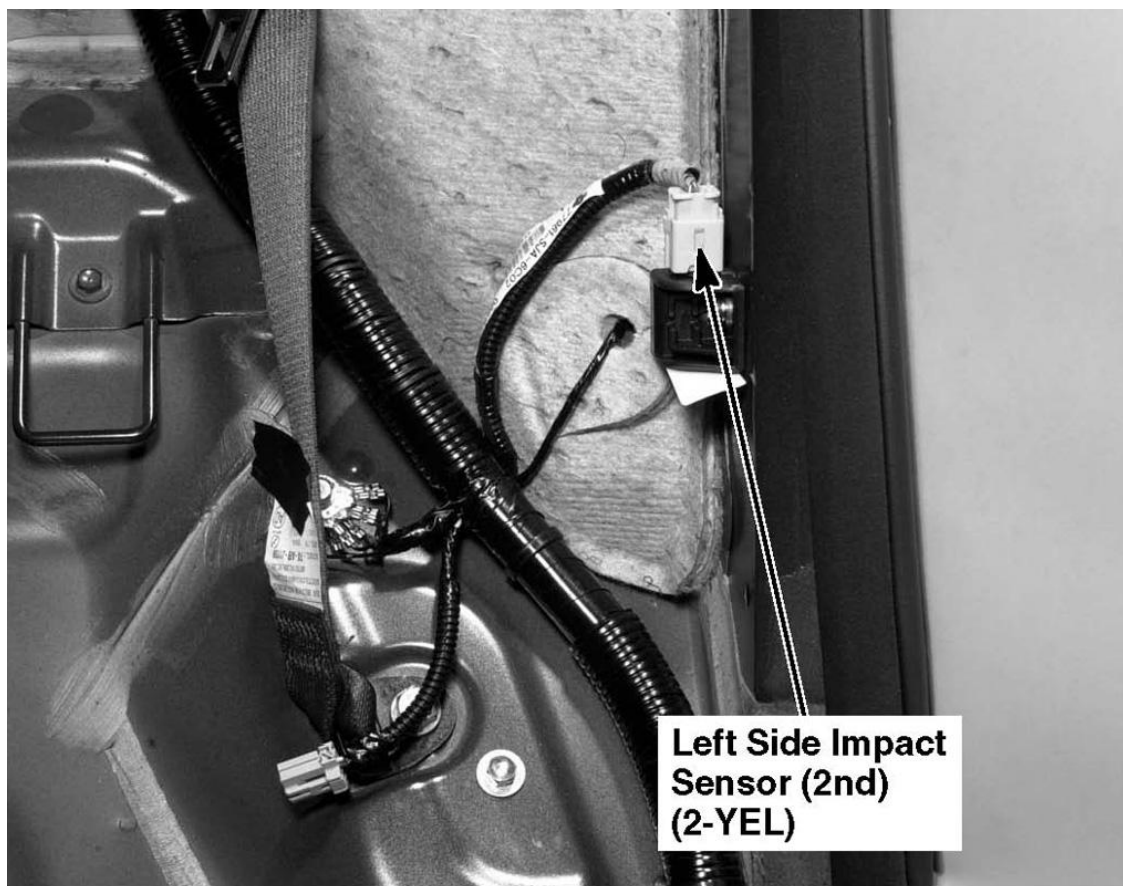

G00447092

Fig. 143: Left "C" Pillar (Right Similar)


Courtesy of AMERICAN HONDA MOTOR CO., INC.

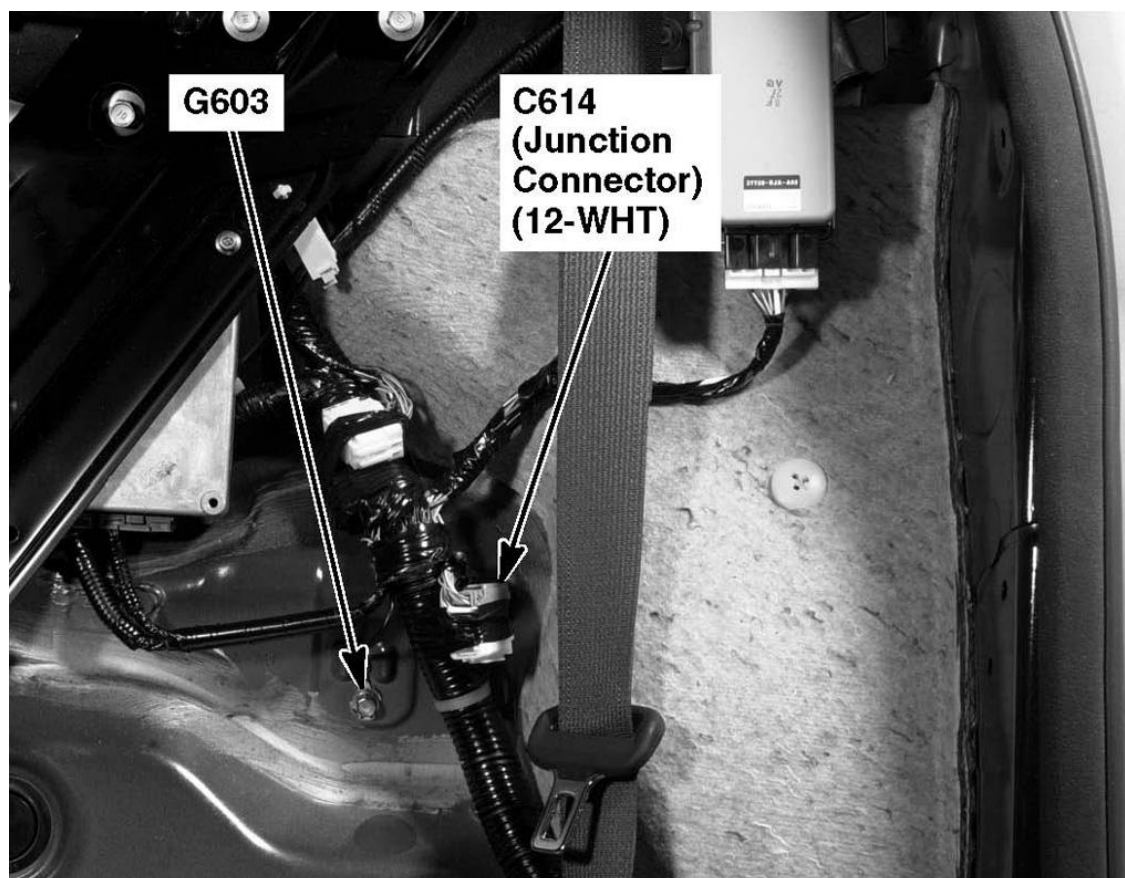

G00447094

Fig. 144: Left "C" Pillar

Courtesy of AMERICAN HONDA MOTOR CO., INC.

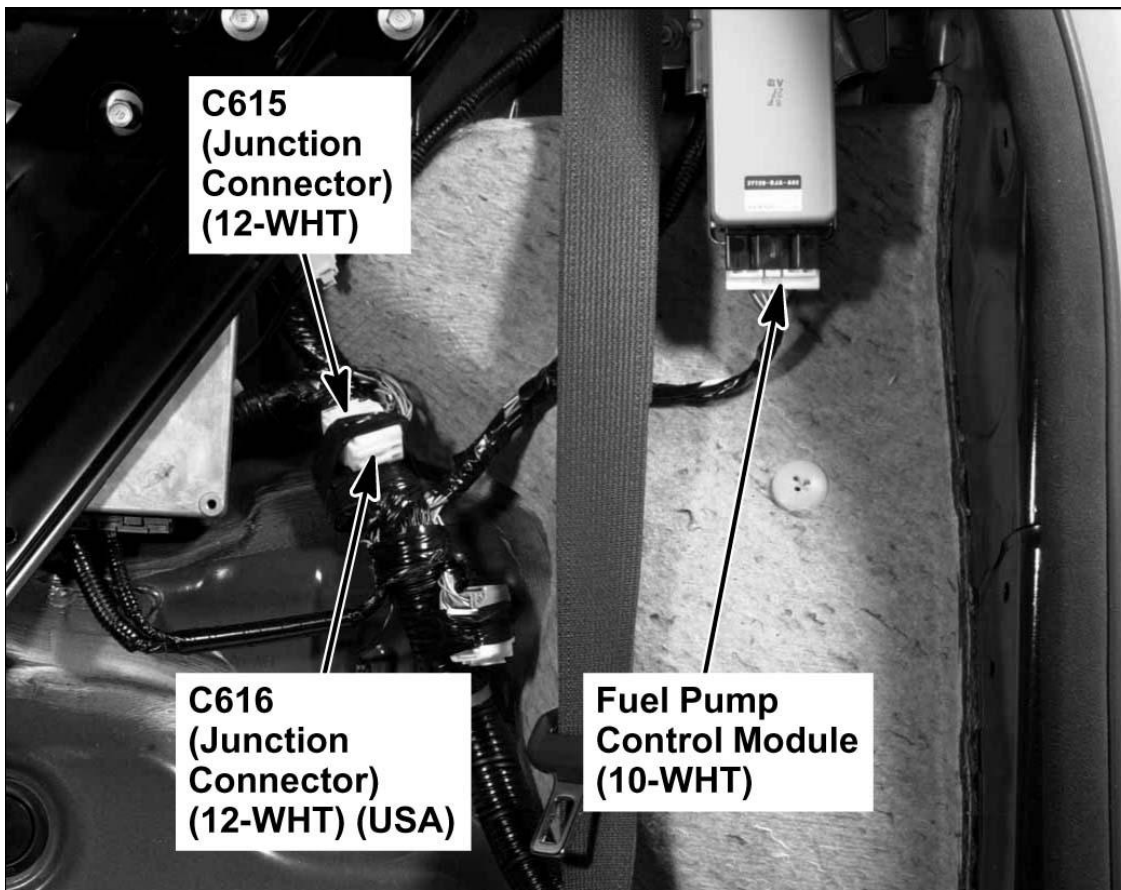

G00363604


Fig. 145: Left "C" Pillar

Courtesy of AMERICAN HONDA MOTOR CO., INC.




G00363605

Fig. 146: Behind Rear Seat
Courtesy of AMERICAN HONDA MOTOR CO., INC.

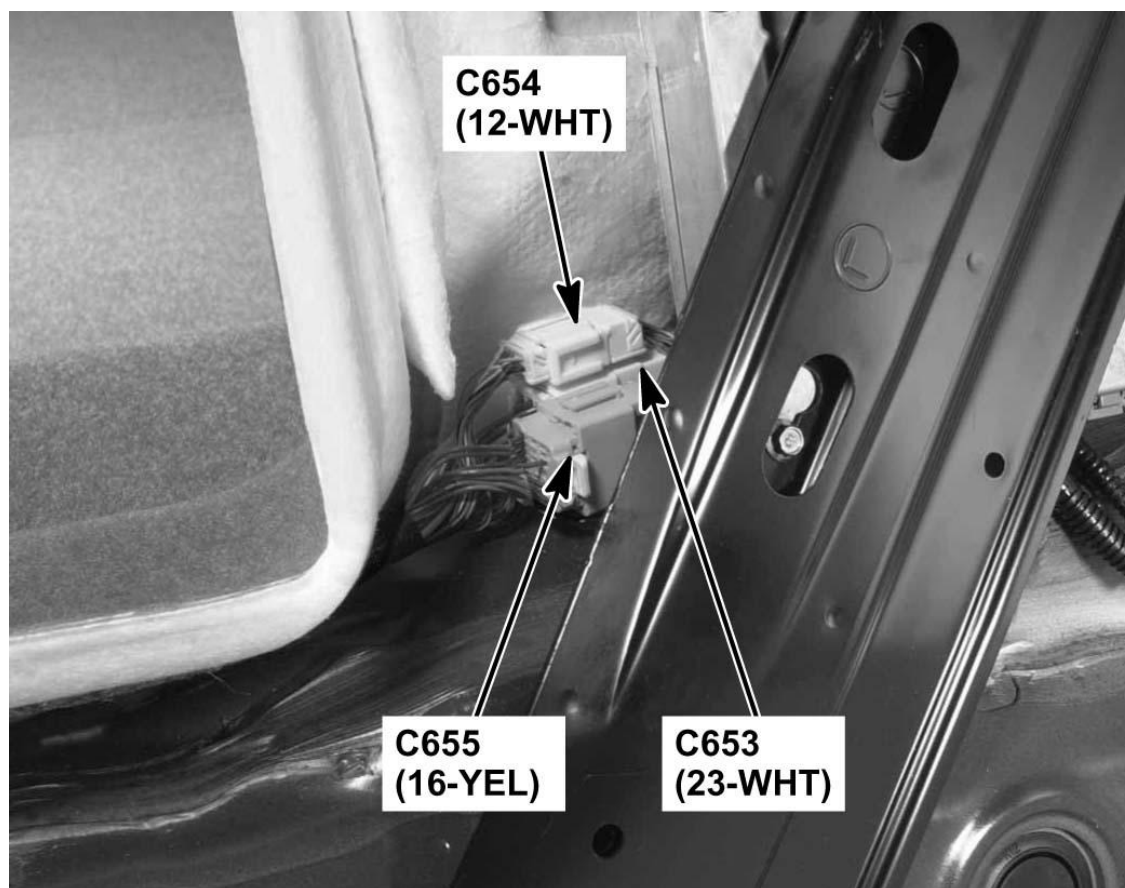


G00363607

Fig. 147: Behind Rear Seat
Courtesy of AMERICAN HONDA MOTOR CO., INC.

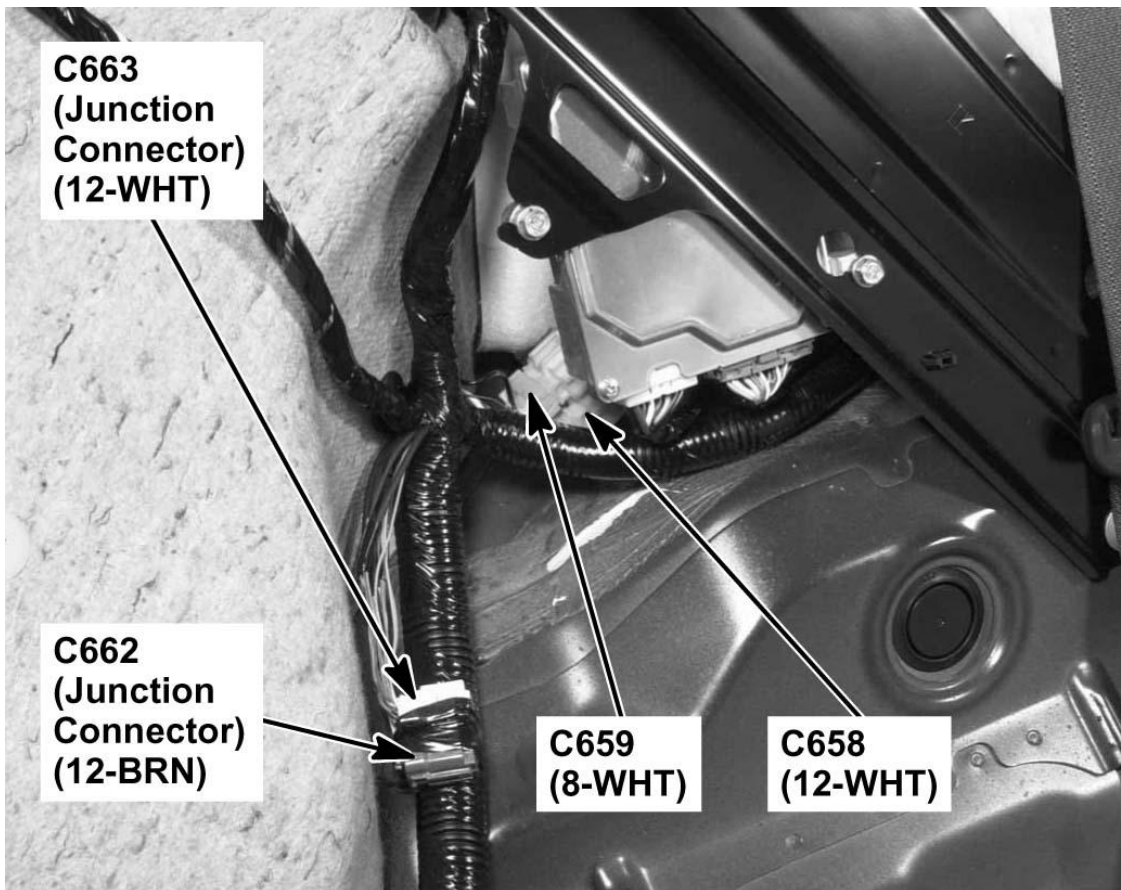


G00363608

Fig. 148: Behind Rear Seat
Courtesy of AMERICAN HONDA MOTOR CO., INC.

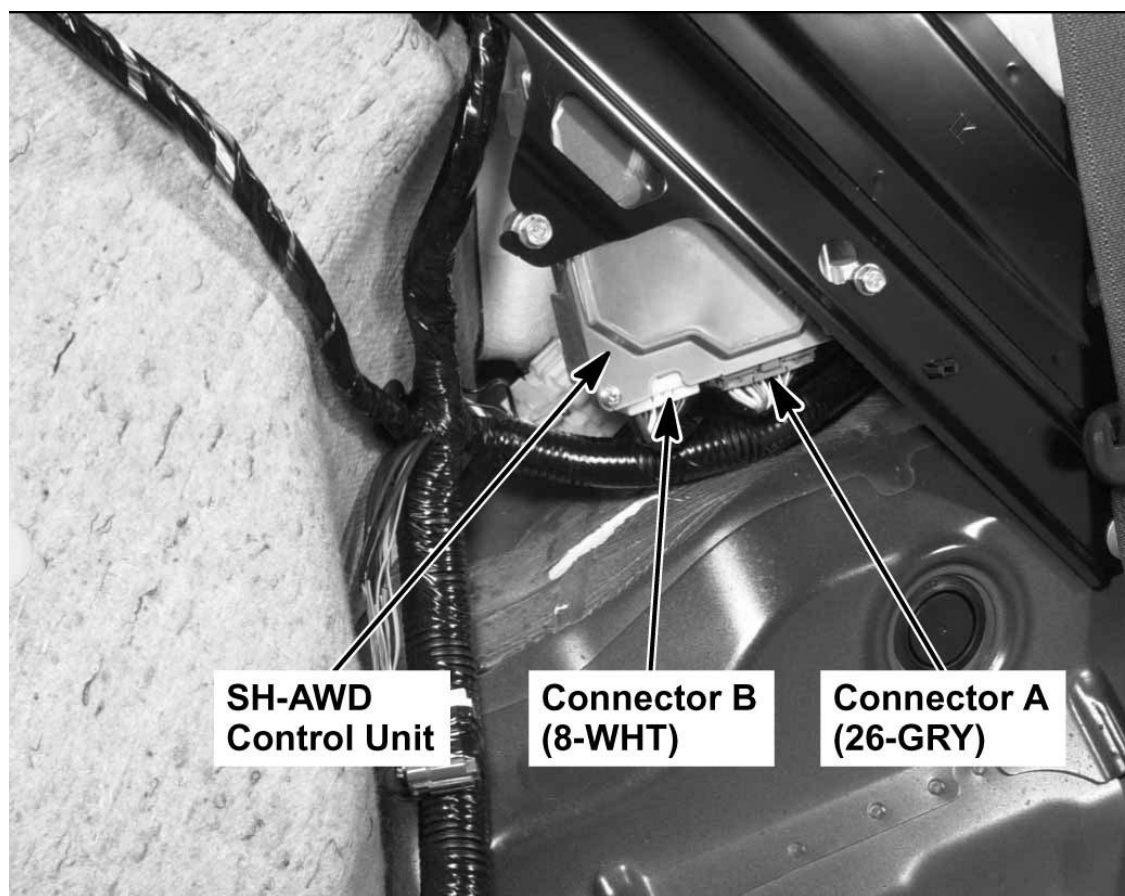

G00363609


Fig. 149: Behind Rear Seat
Courtesy of AMERICAN HONDA MOTOR CO., INC.

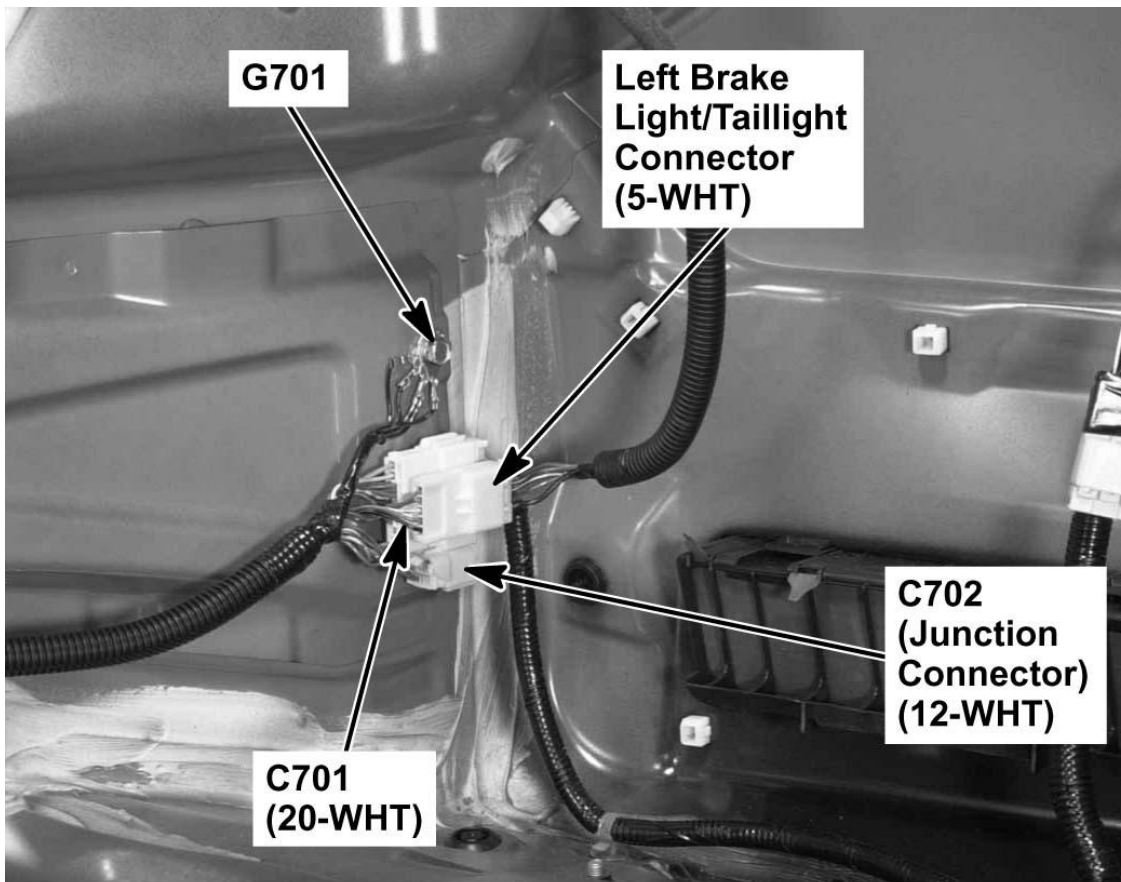

G00363610

Fig. 150: Left Side Of Trunk


Courtesy of AMERICAN HONDA MOTOR CO., INC.

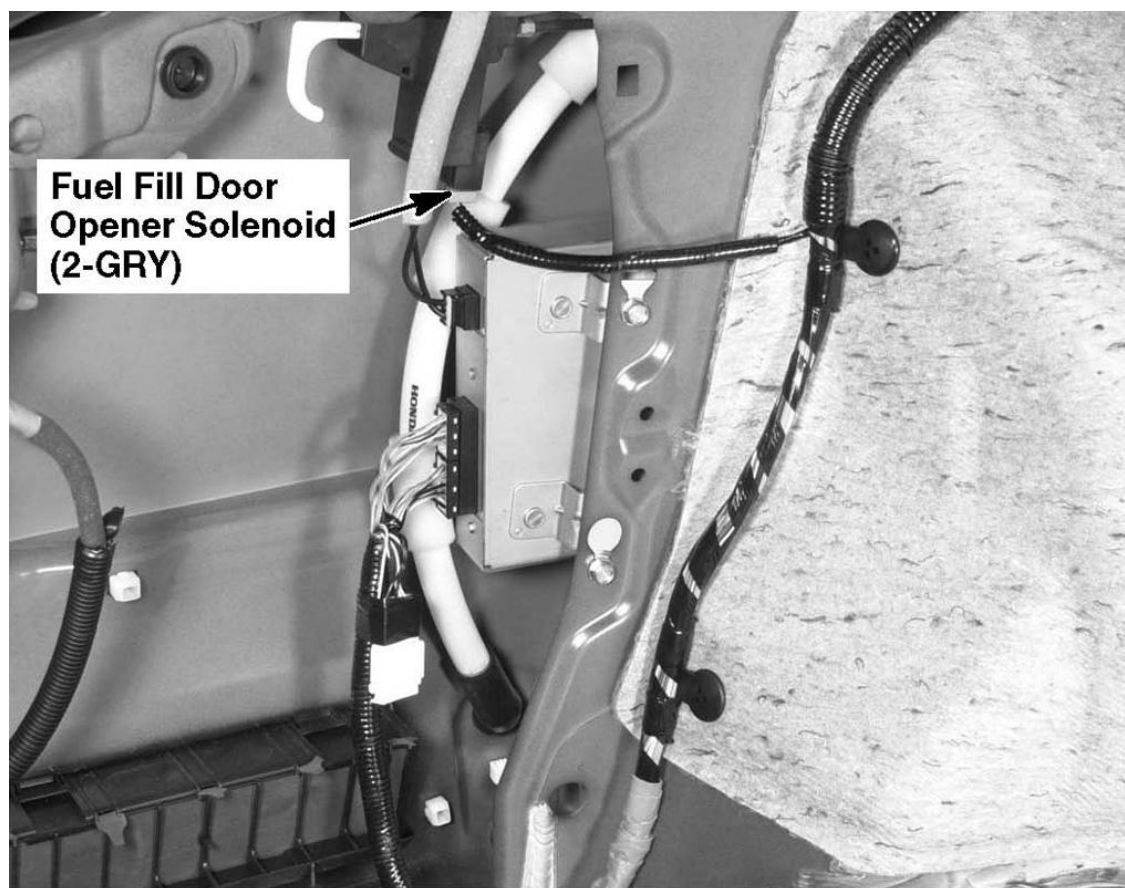

G00447101


Fig. 151: Left Side Of Trunk

Courtesy of AMERICAN HONDA MOTOR CO., INC.

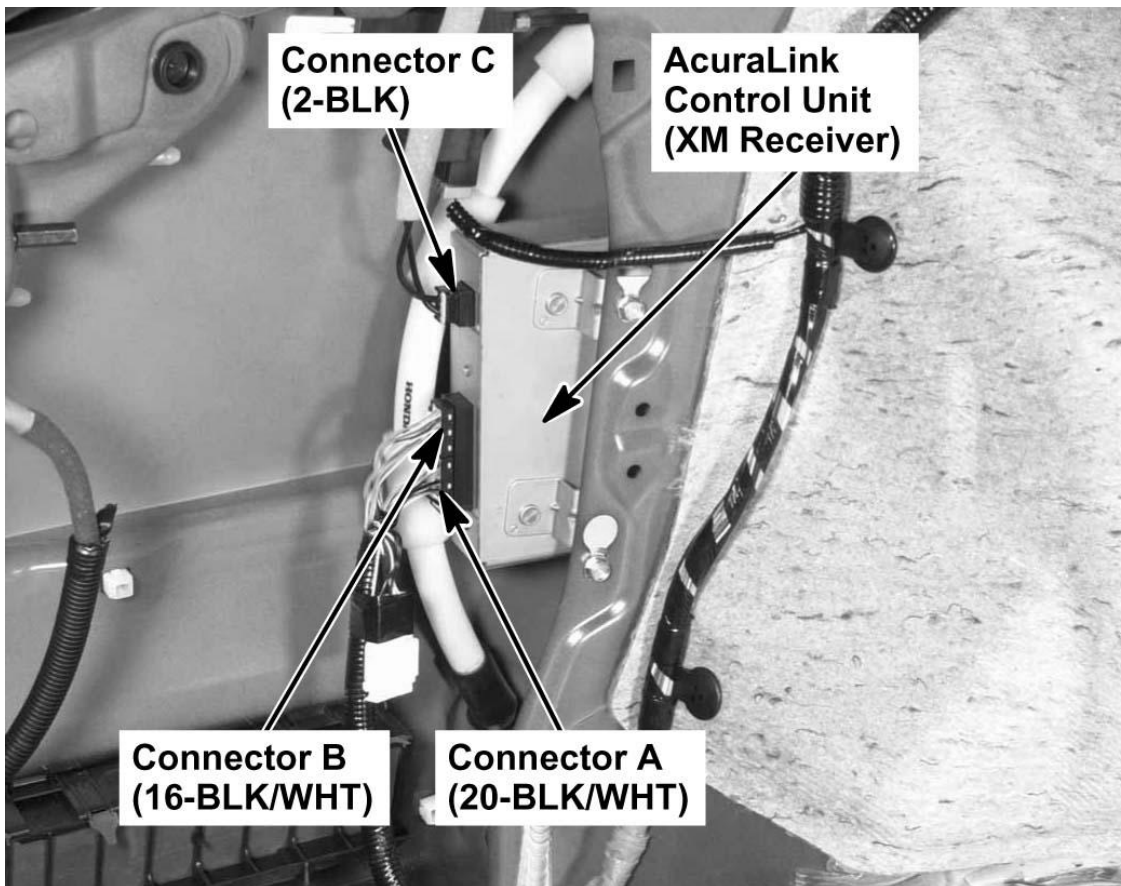

G00363612


Fig. 152: Left Side Of Trunk (USA: Technology Package)
Courtesy of AMERICAN HONDA MOTOR CO., INC.

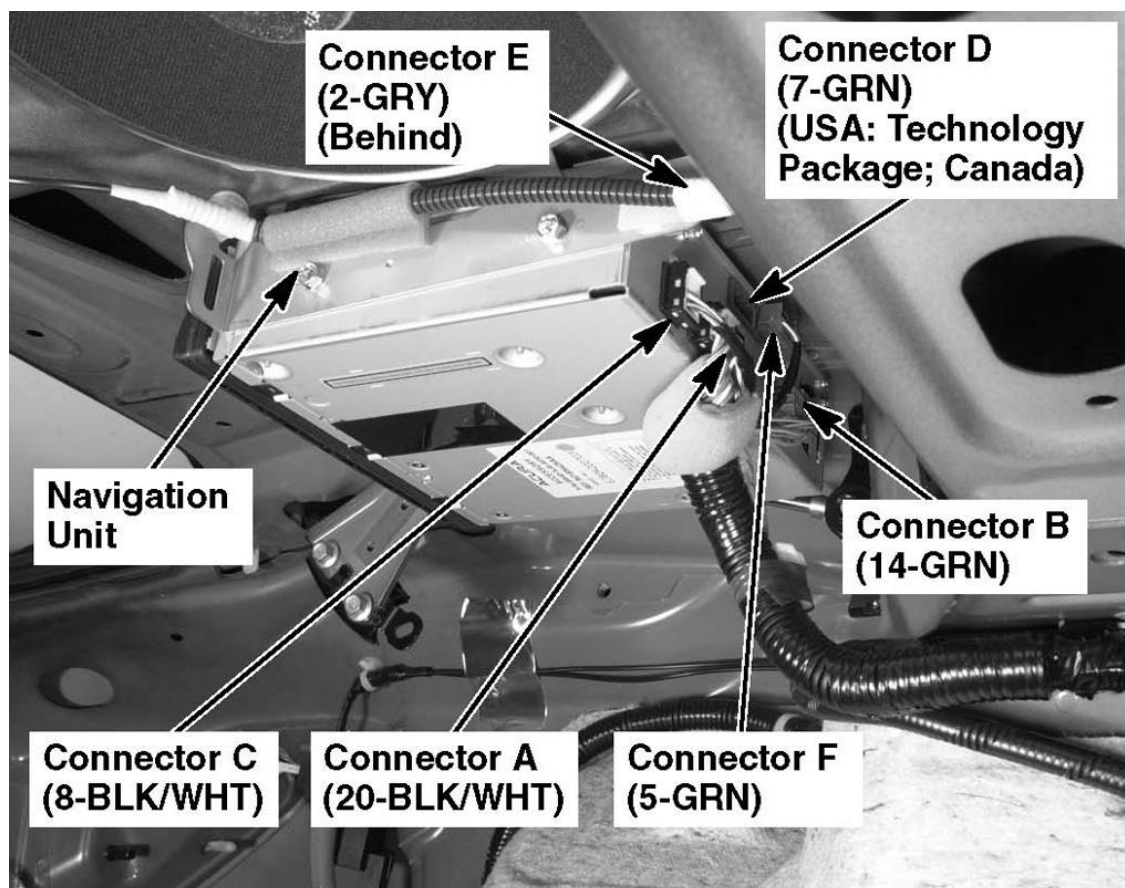

G00447099

Fig. 153: Left Side Of Rear Shelf


Courtesy of AMERICAN HONDA MOTOR CO., INC.

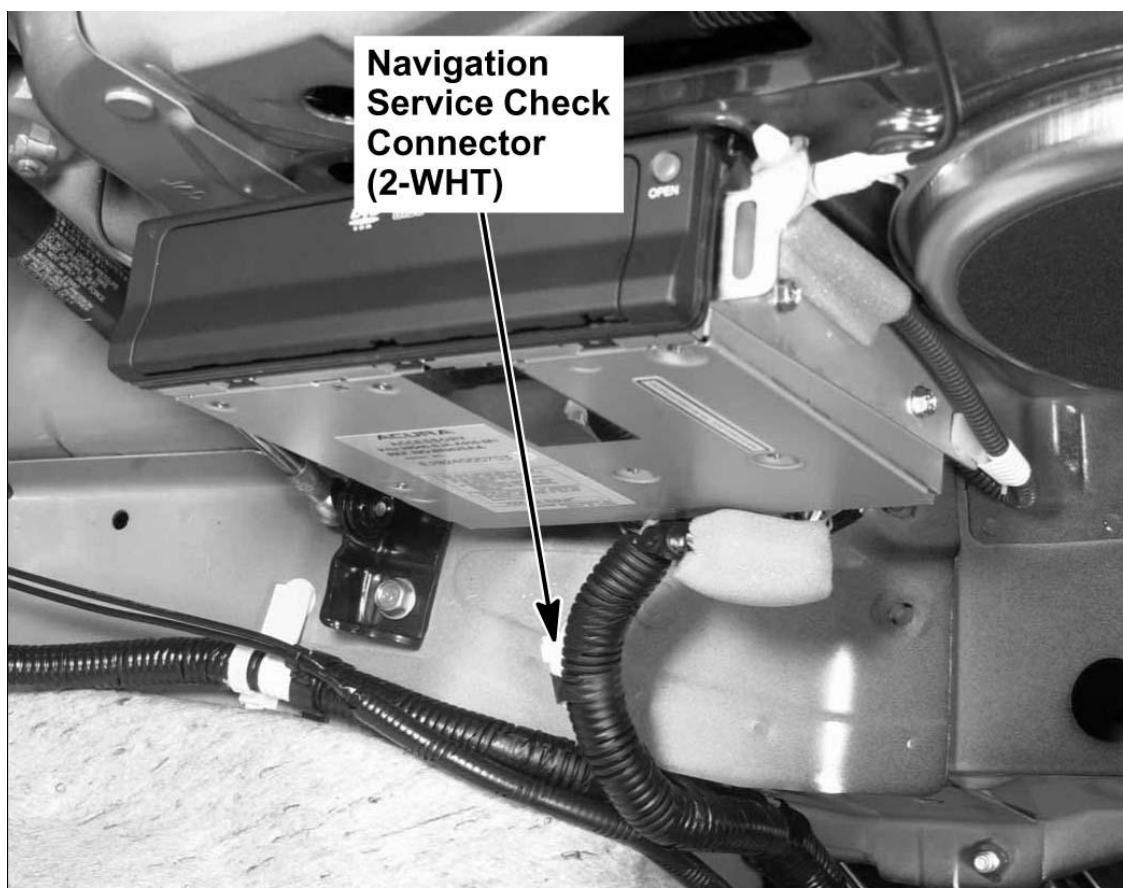

G00363614

Fig. 154: Left Side Of Rear Shelf

Courtesy of AMERICAN HONDA MOTOR CO., INC.

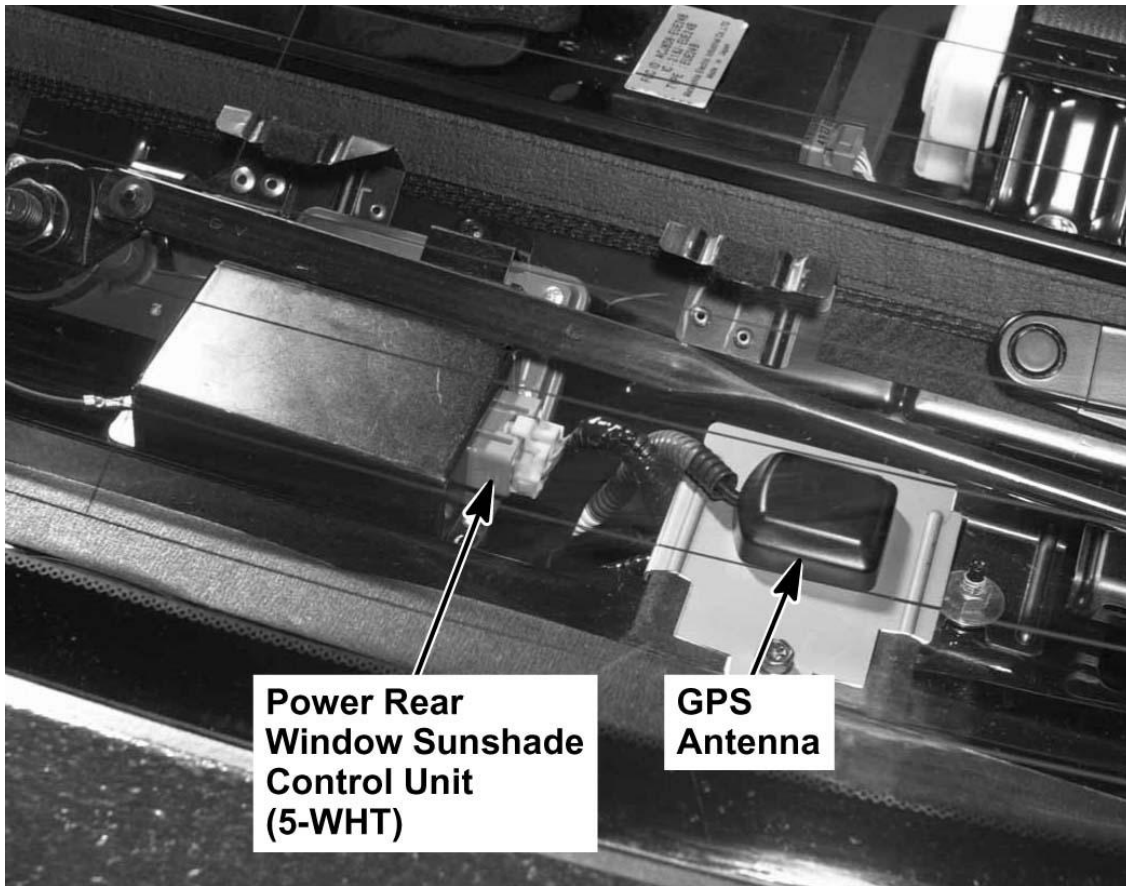

G00363615

Fig. 155: Middle Of Rear Shelf


Courtesy of AMERICAN HONDA MOTOR CO., INC.



G00363616

Fig. 156: Middle Of Rear Shelf


Courtesy of AMERICAN HONDA MOTOR CO., INC.

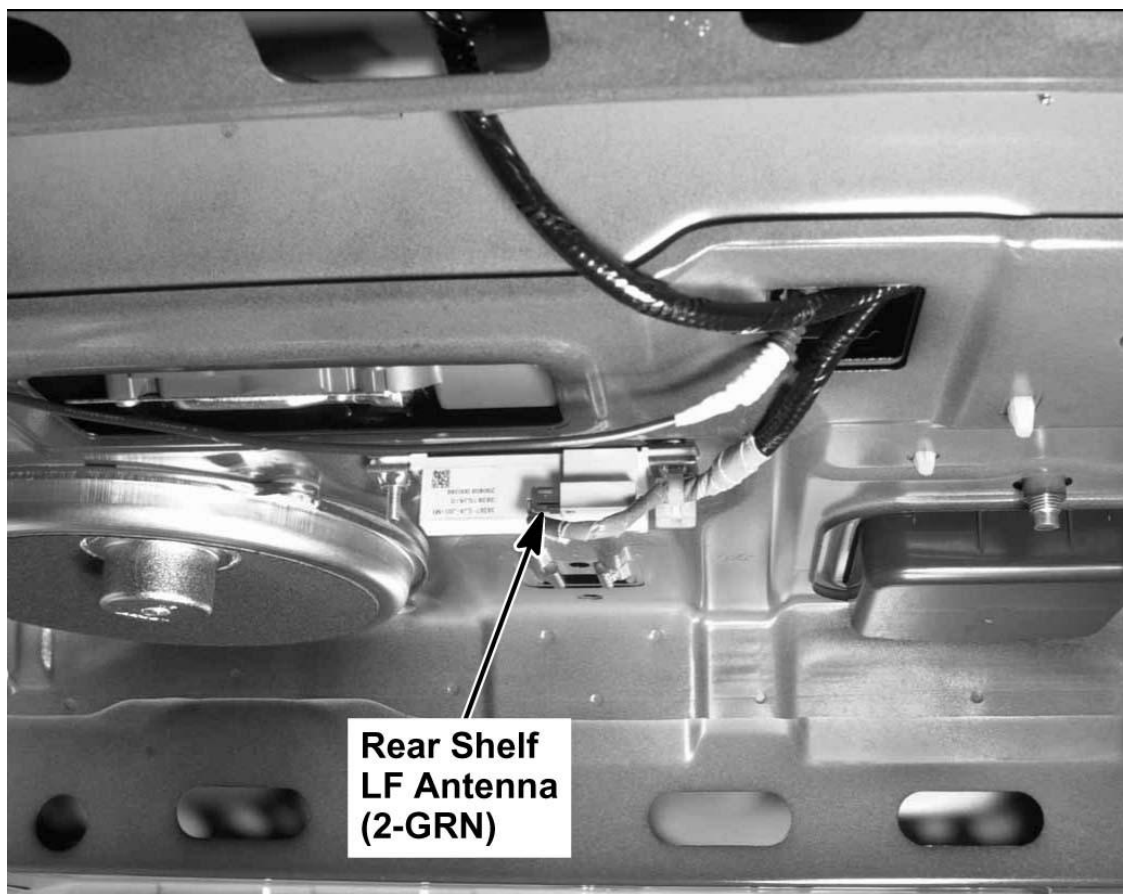

G00363617

Fig. 157: Middle Of Rear Shelf


Courtesy of AMERICAN HONDA MOTOR CO., INC.

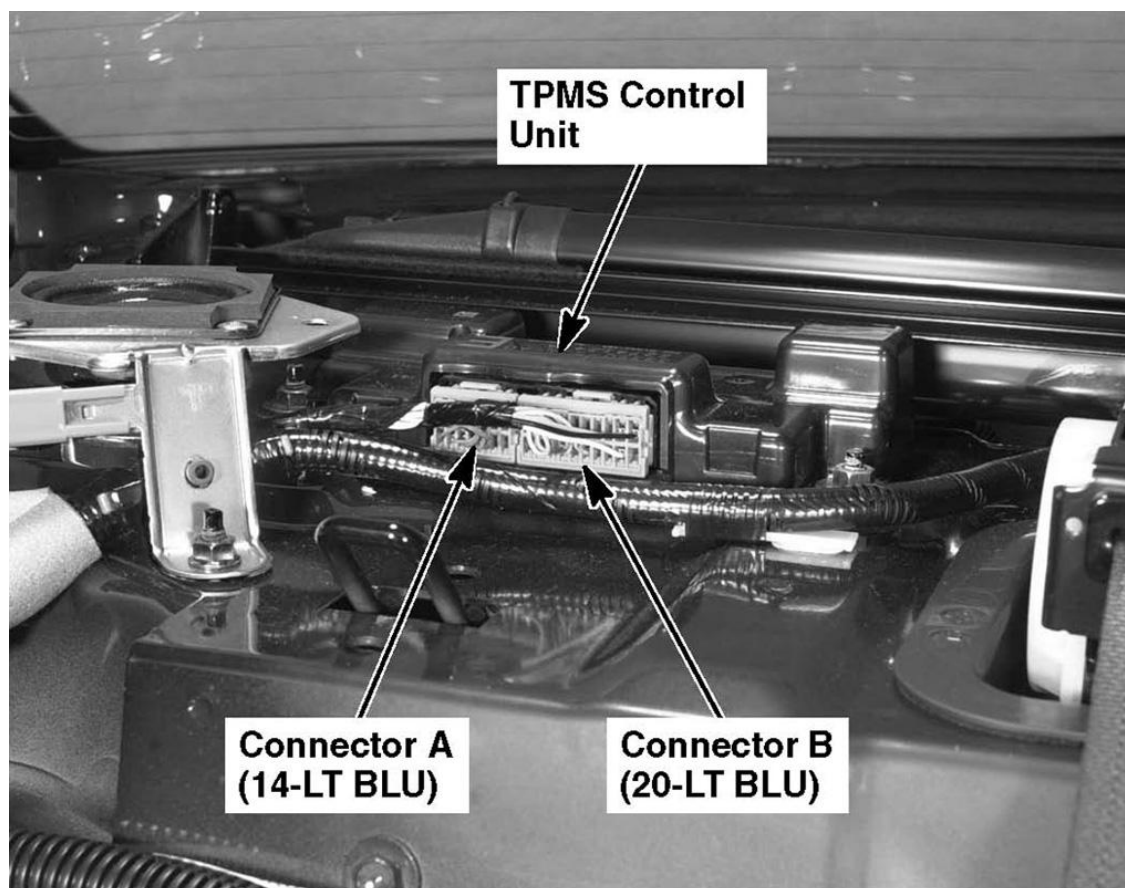

G00447106


Fig. 158: Right Side Of Rear Shelf

Courtesy of AMERICAN HONDA MOTOR CO., INC.

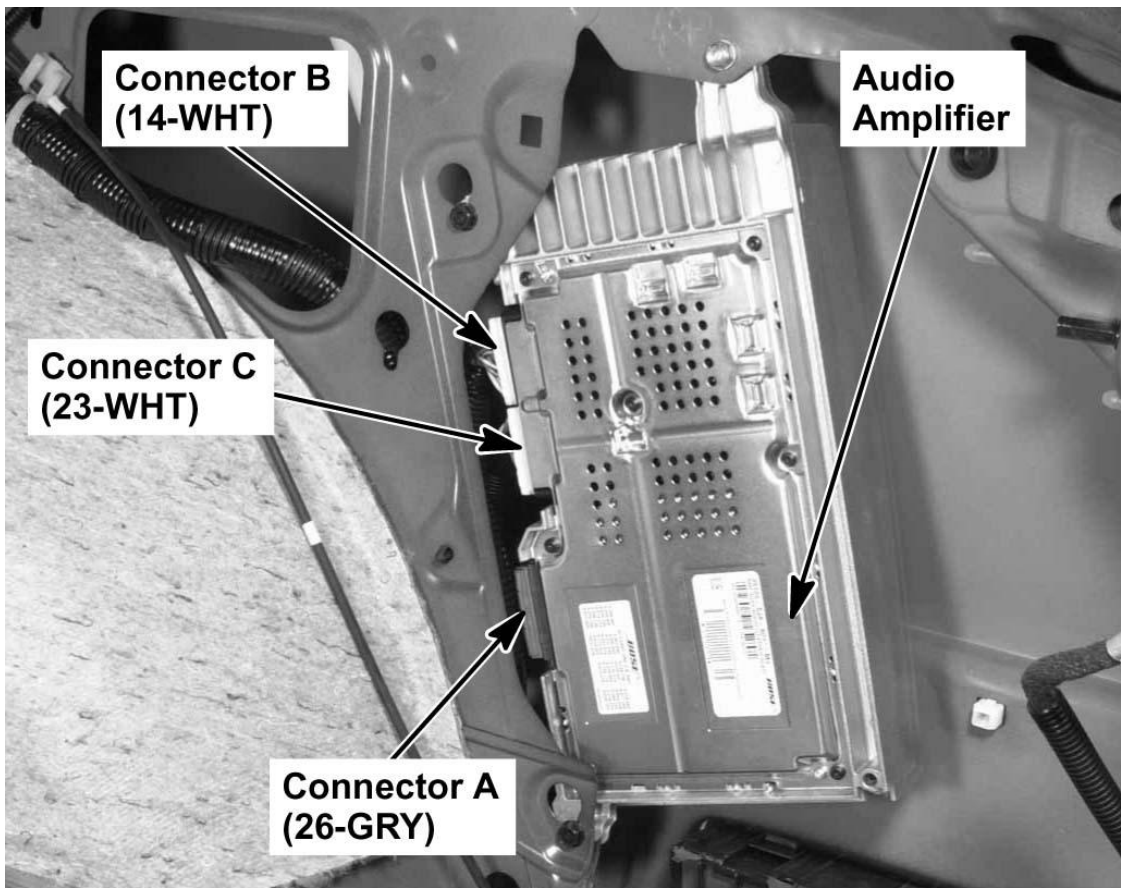

G00363620

Fig. 159: Right Side Of Trunk
Courtesy of AMERICAN HONDA MOTOR CO., INC.

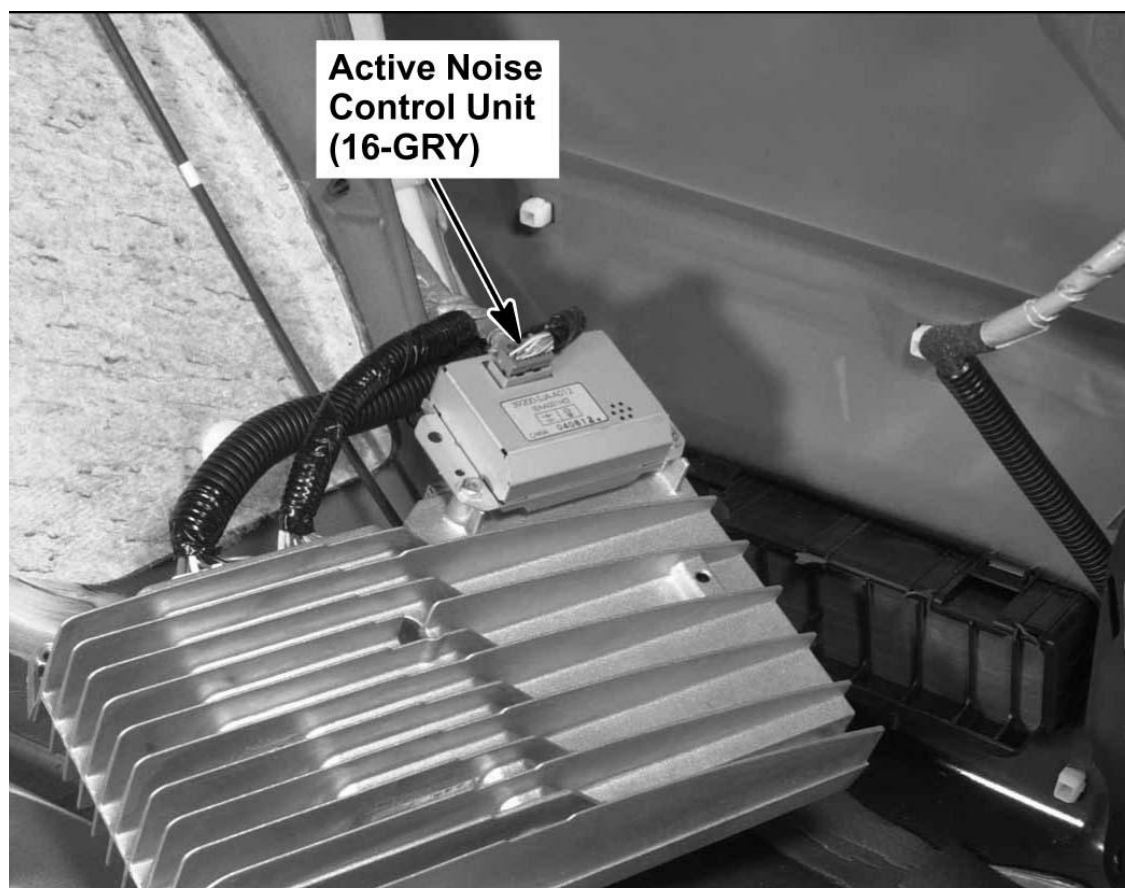

G00363621

Fig. 160: Right Side Of Trunk


Courtesy of AMERICAN HONDA MOTOR CO., INC.



G00447102

Fig. 161: Right Side Of Trunk


Courtesy of AMERICAN HONDA MOTOR CO., INC.

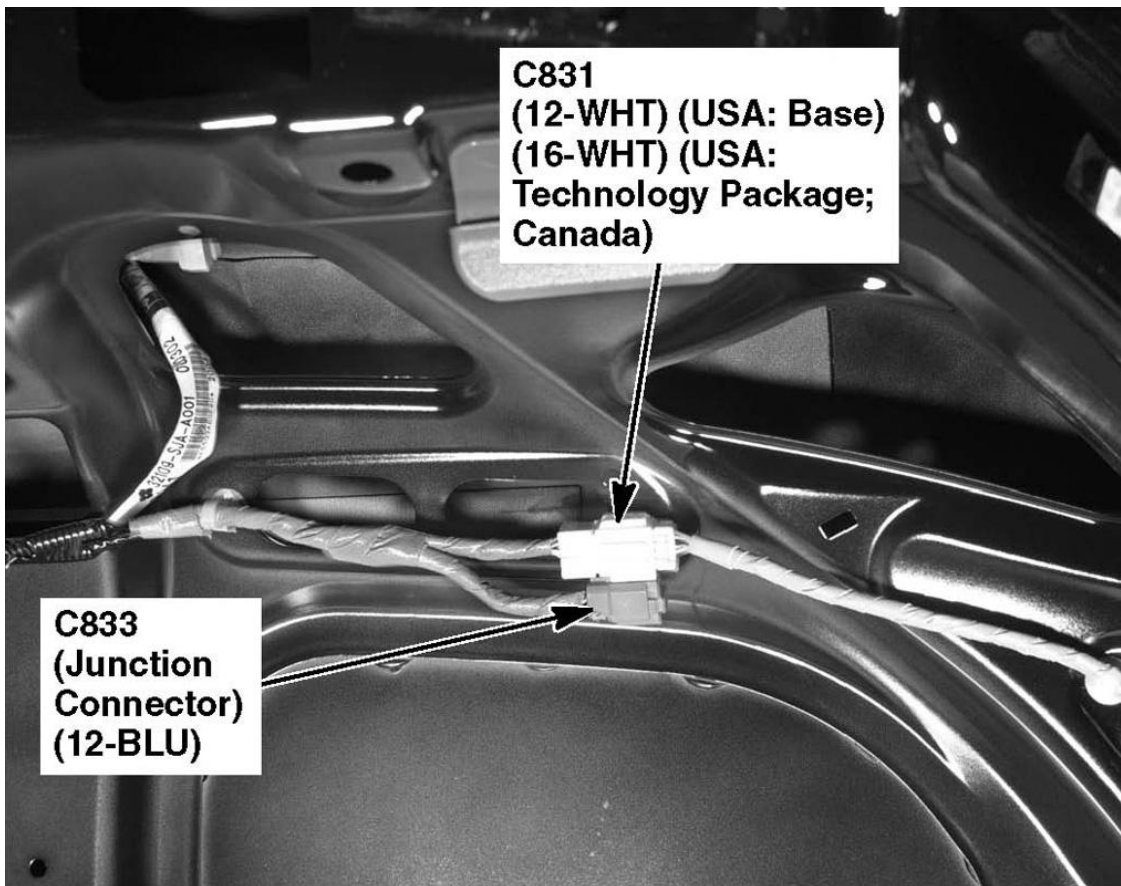

G00447103


Fig. 162: Middle Of Trunk Lid

Courtesy of AMERICAN HONDA MOTOR CO., INC.

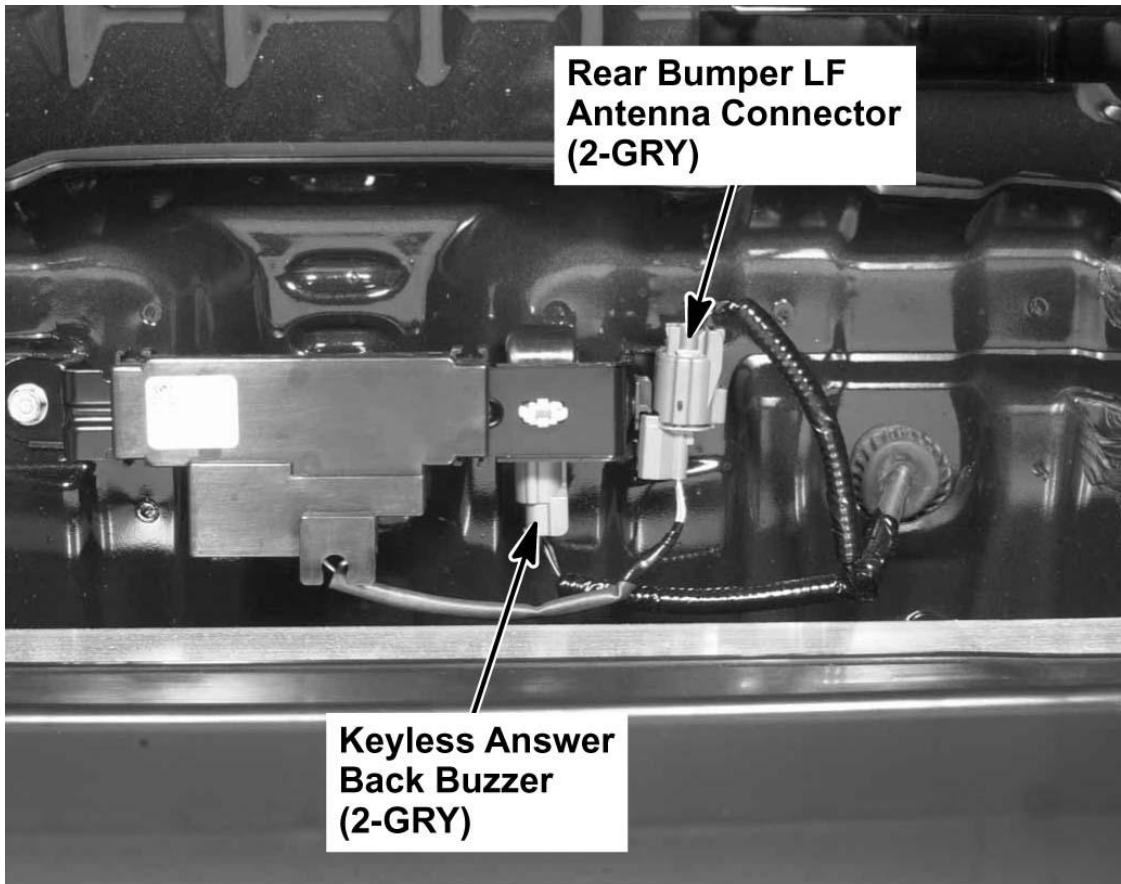

G00363624

Fig. 163: Behind Middle Of Rear Bumper
Courtesy of AMERICAN HONDA MOTOR CO., INC.

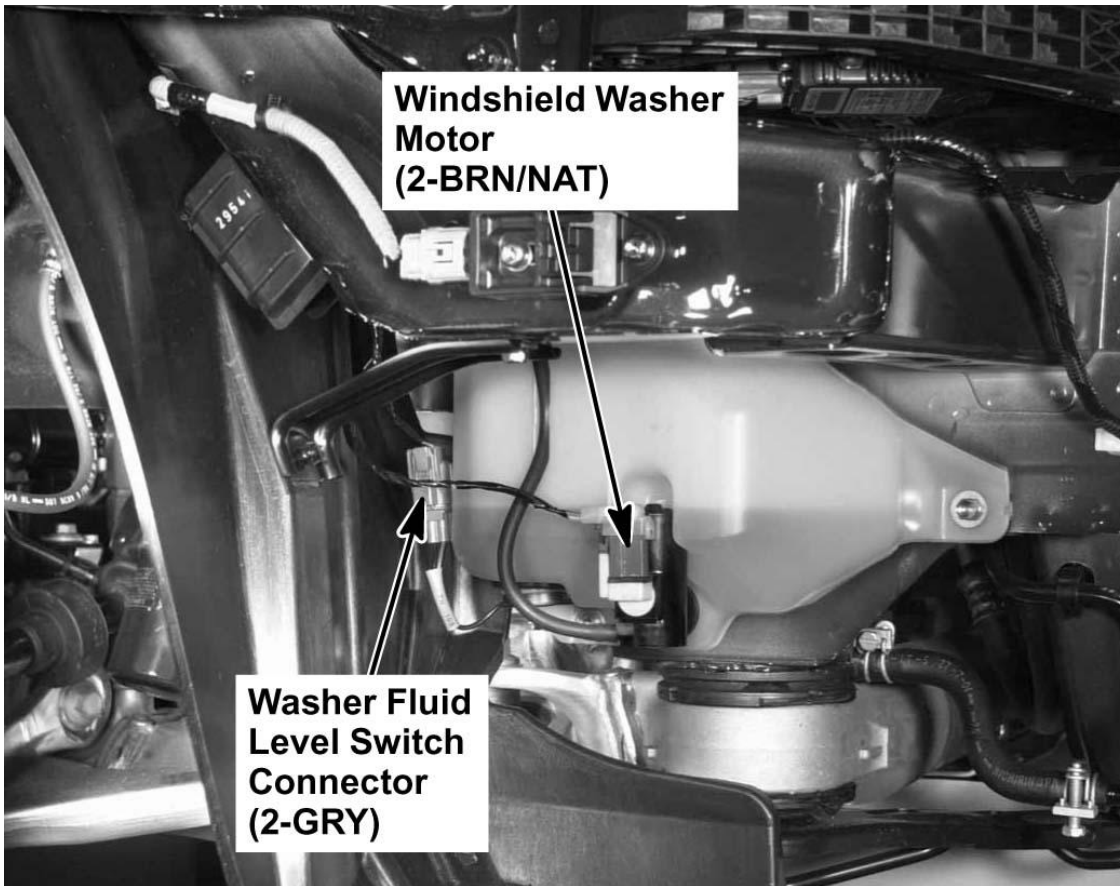


G00363625

Fig. 164: Behind Right Side Of Front Bumper
Courtesy of AMERICAN HONDA MOTOR CO., INC.




G00363626

Fig. 165: Behind Right Side Of Front Bumper
Courtesy of AMERICAN HONDA MOTOR CO., INC.

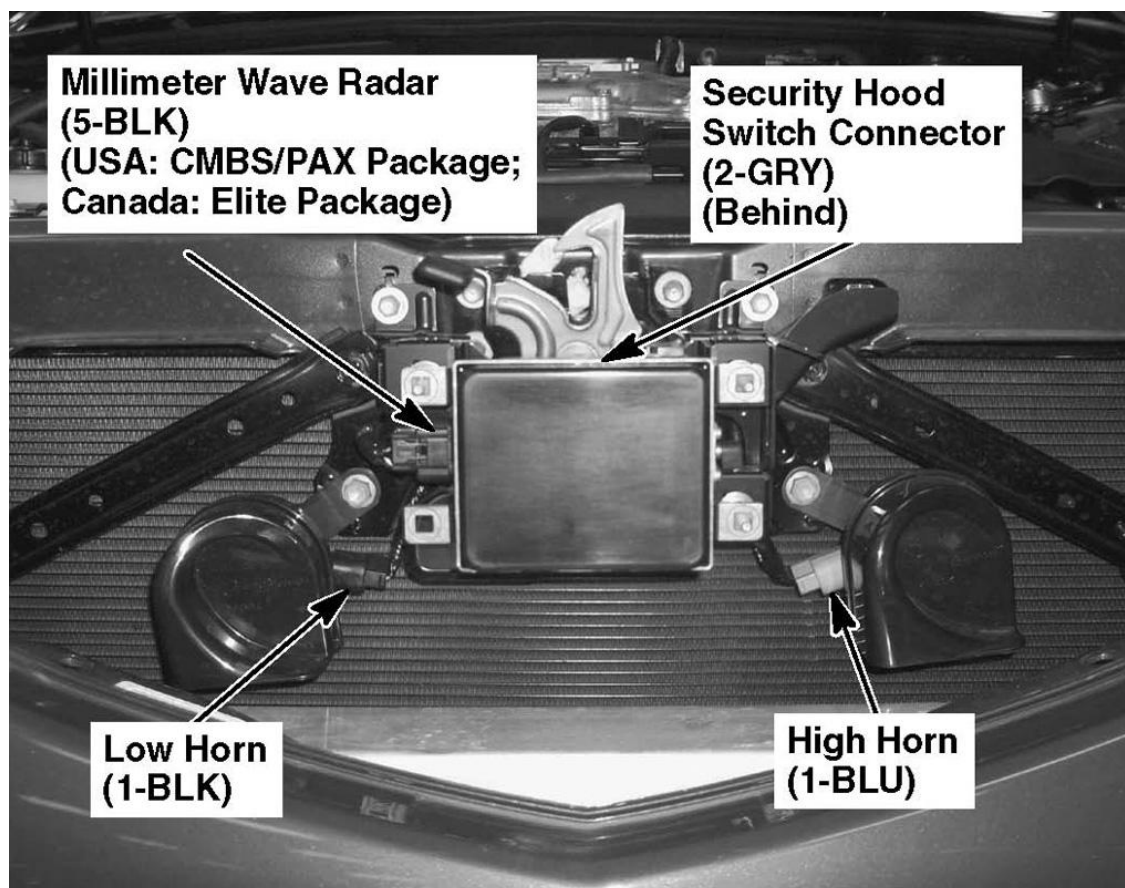


G00447071

Fig. 166: Behind Middle Of Front Bumper
Courtesy of AMERICAN HONDA MOTOR CO., INC.

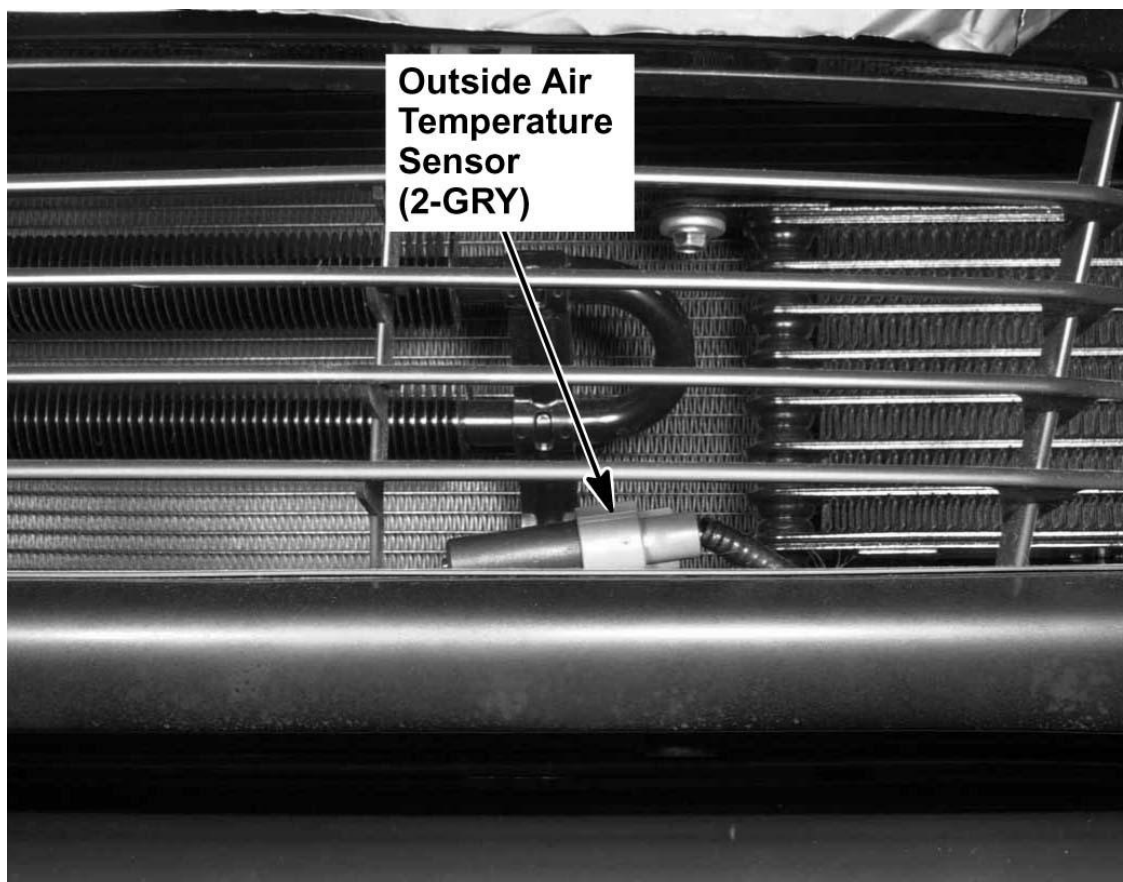


G00363628

Fig. 167: Behind Middle Of Front Bumper
Courtesy of AMERICAN HONDA MOTOR CO., INC.

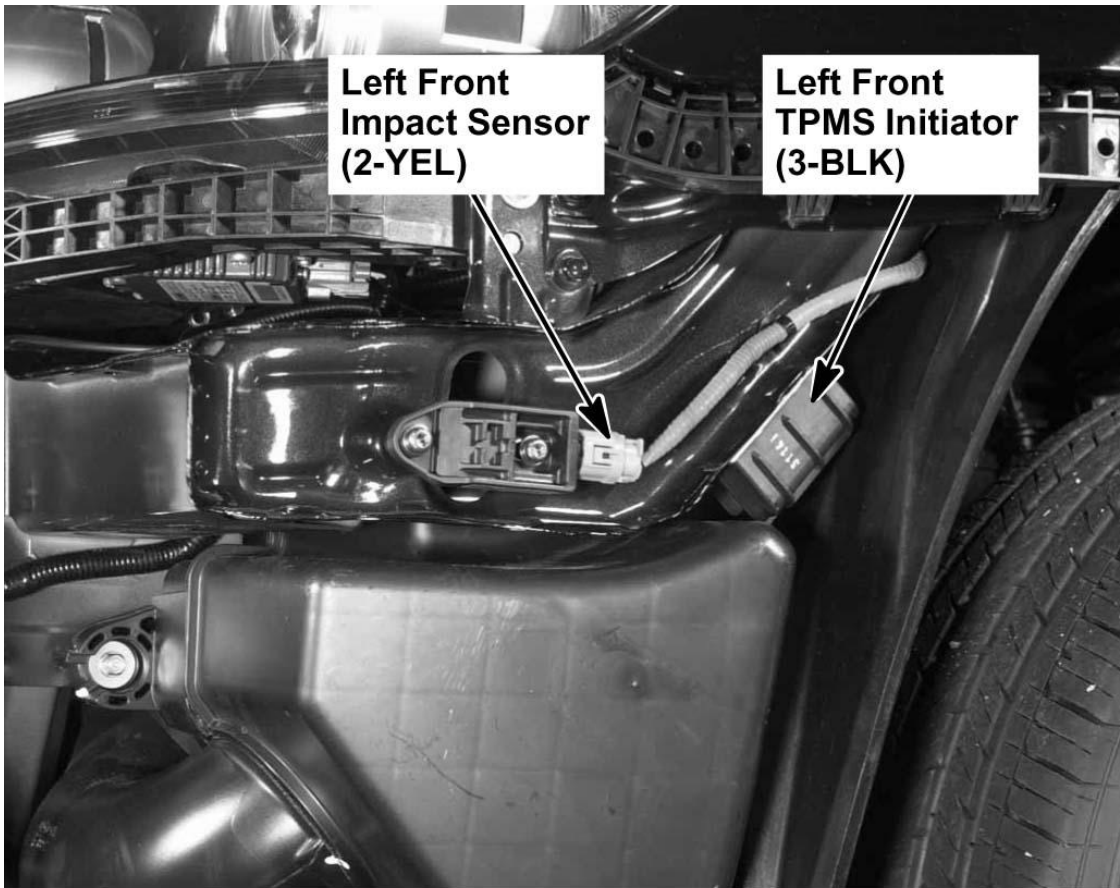


G00363629

Fig. 168: Behind Left Side Of Front Bumper (Right Similar)
Courtesy of AMERICAN HONDA MOTOR CO., INC.

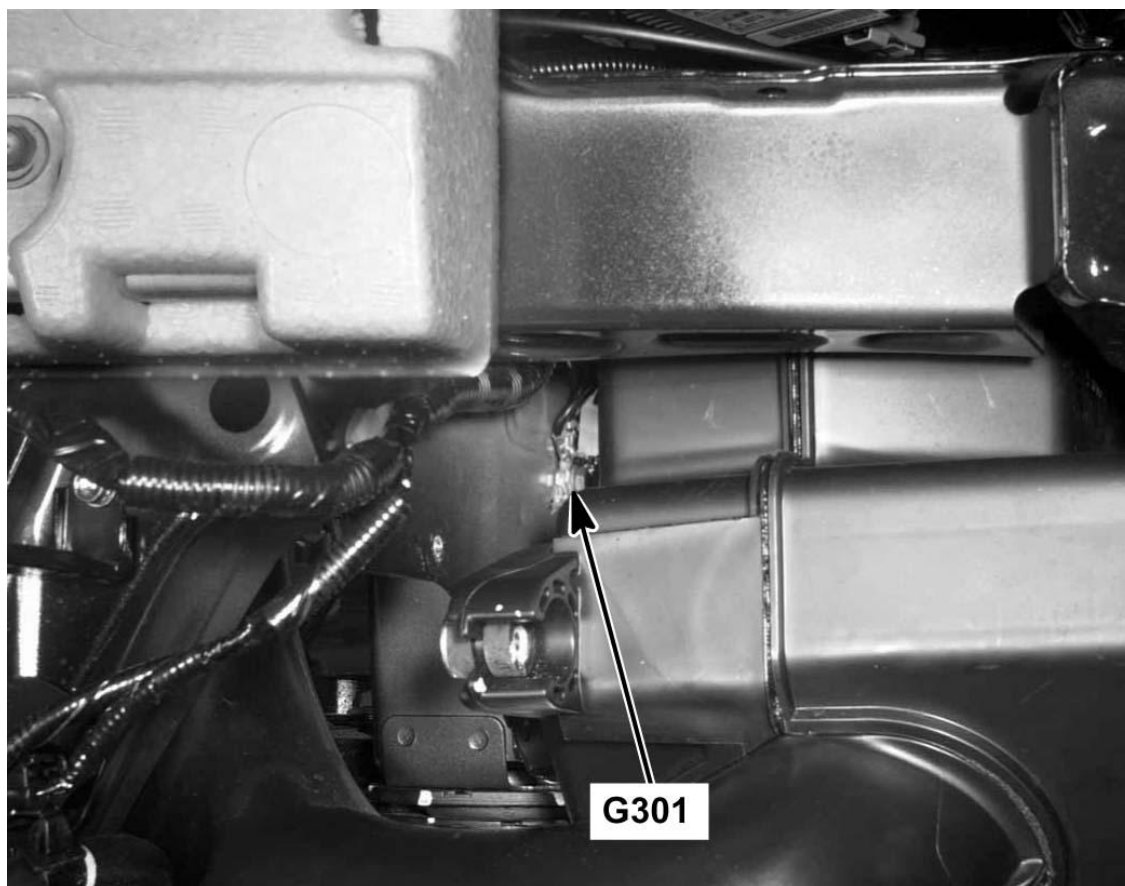

G00363630


Fig. 169: Behind Left Side Of Front Bumper
Courtesy of AMERICAN HONDA MOTOR CO., INC.

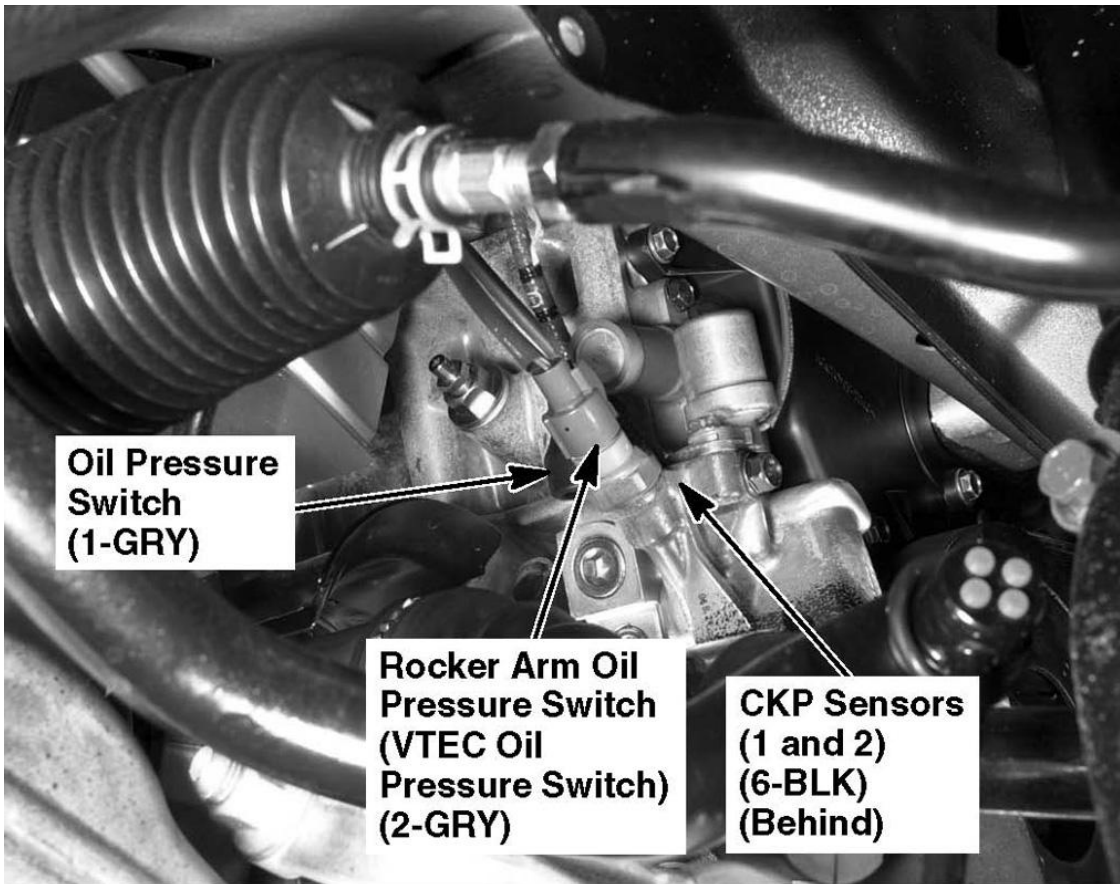

G00447067

Fig. 170: Right Side Of Engine


Courtesy of AMERICAN HONDA MOTOR CO., INC.

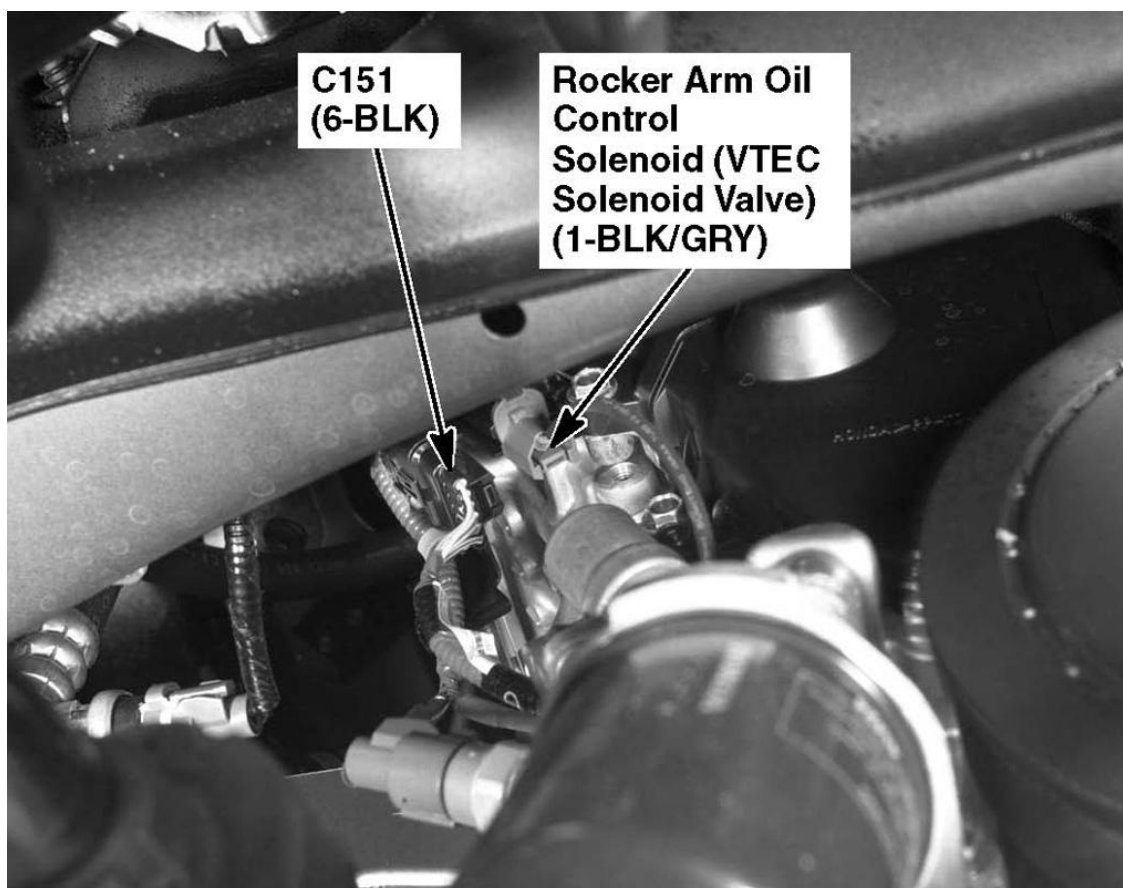

G00447068


Fig. 171: Right Side Of Engine

Courtesy of AMERICAN HONDA MOTOR CO., INC.

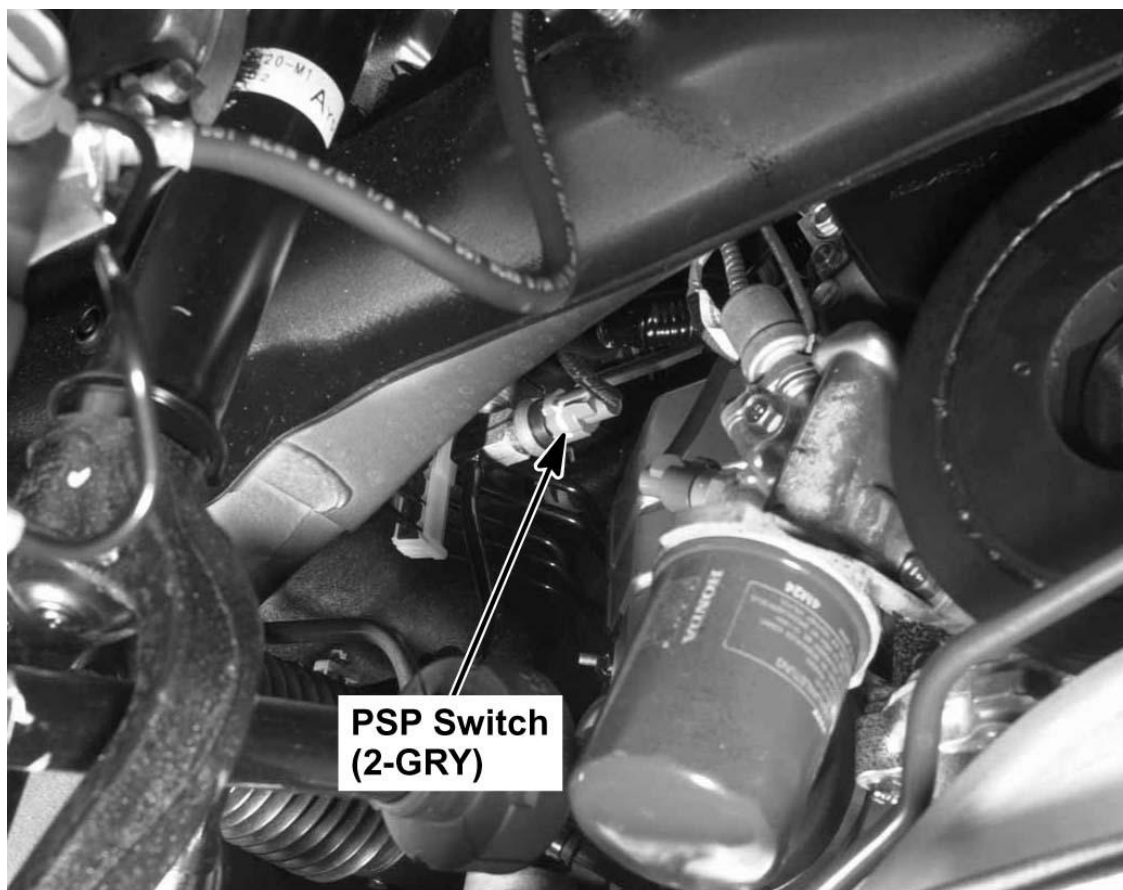


G00363633

Fig. 172: Right Side Of Engine Compartment
Courtesy of AMERICAN HONDA MOTOR CO., INC.

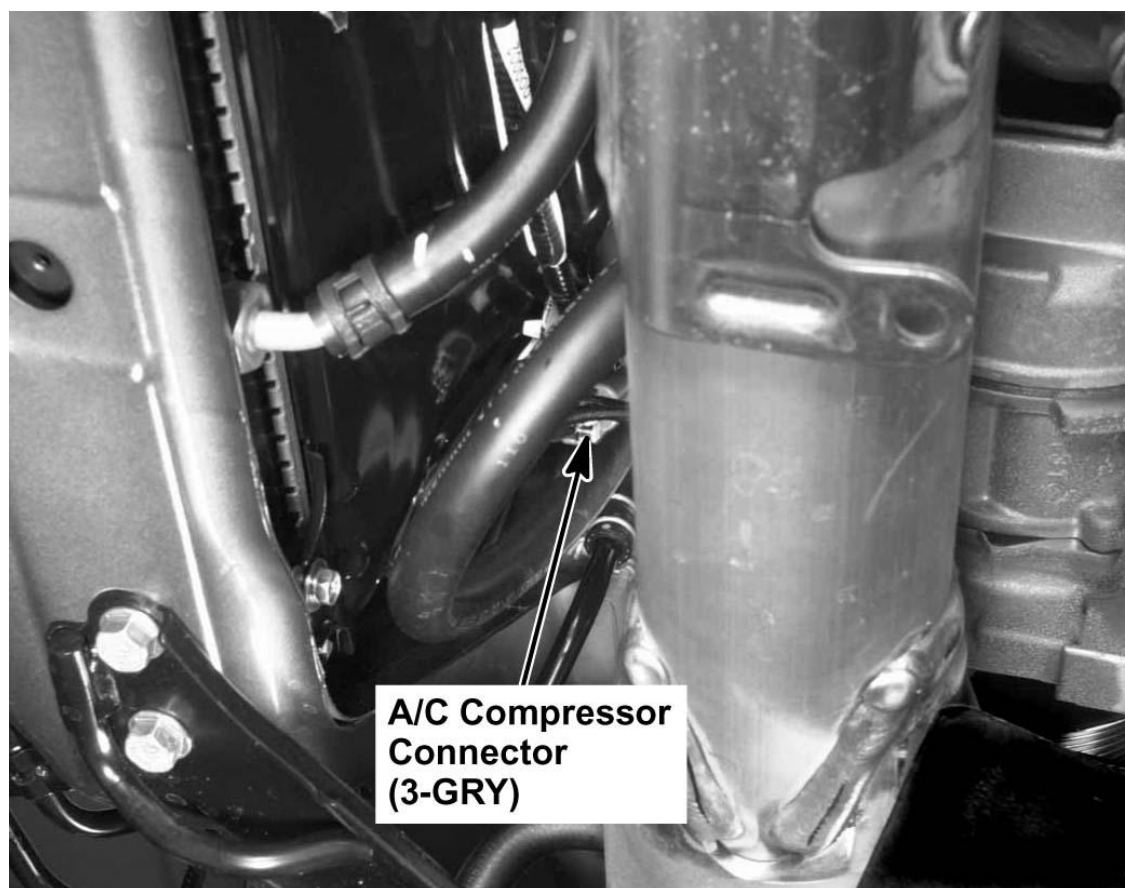


G00363634

Fig. 173: Right Side Of Engine Compartment
Courtesy of AMERICAN HONDA MOTOR CO., INC.

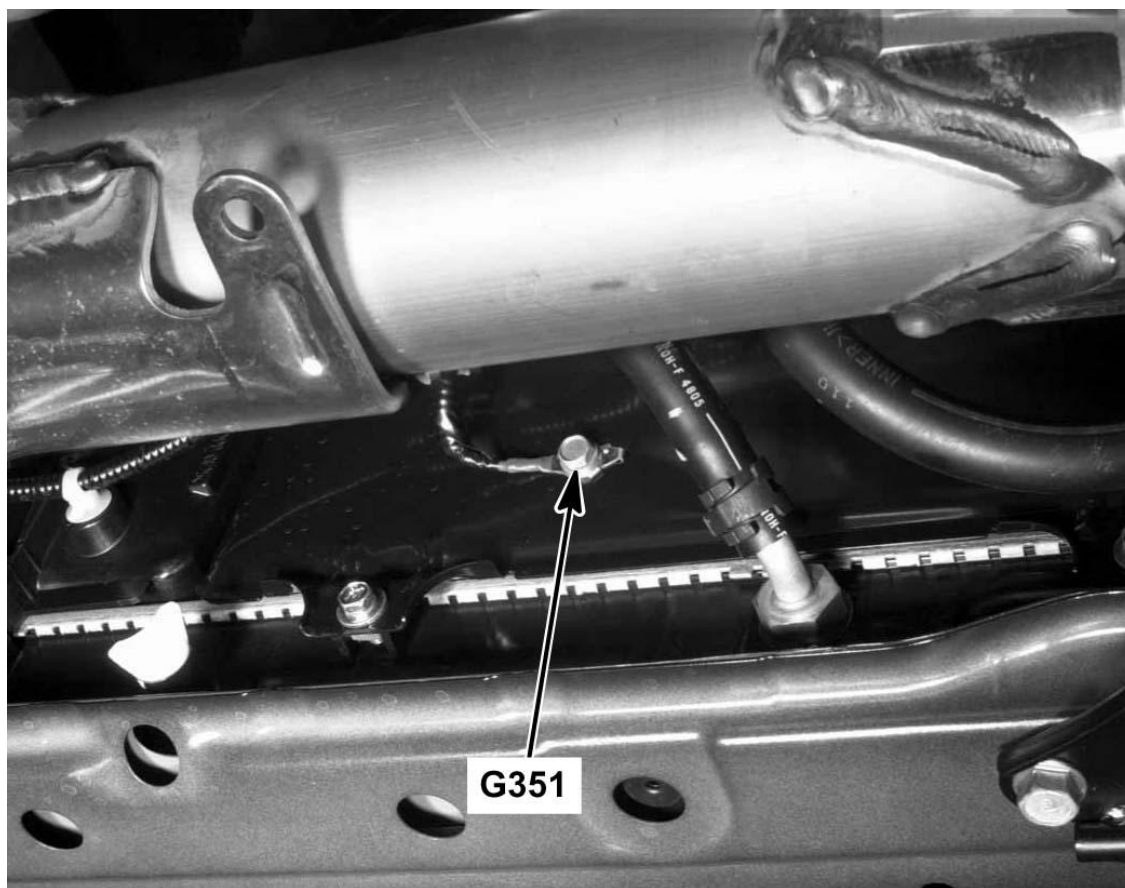


G00363635

Fig. 174: Middle Of Engine Compartment
Courtesy of AMERICAN HONDA MOTOR CO., INC.

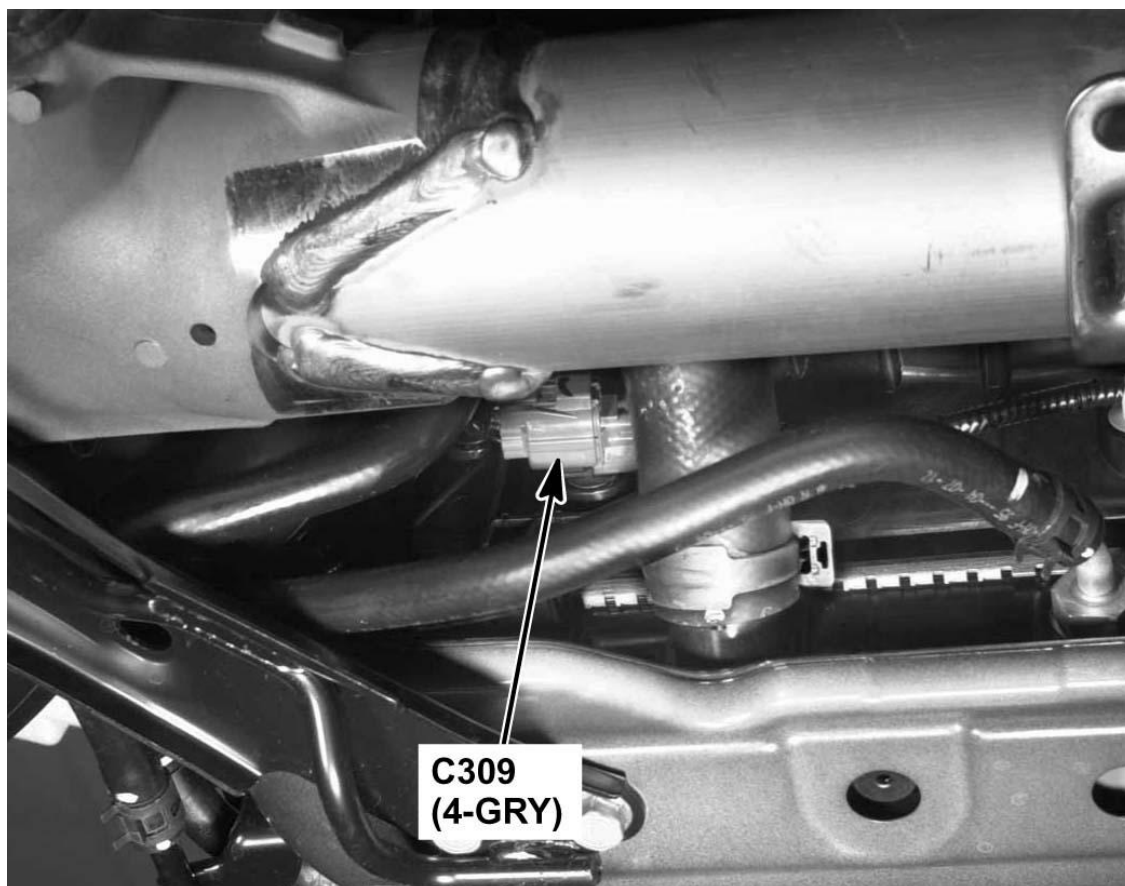


G00363636

Fig. 175: Left Side Of Engine Compartment
Courtesy of AMERICAN HONDA MOTOR CO., INC.

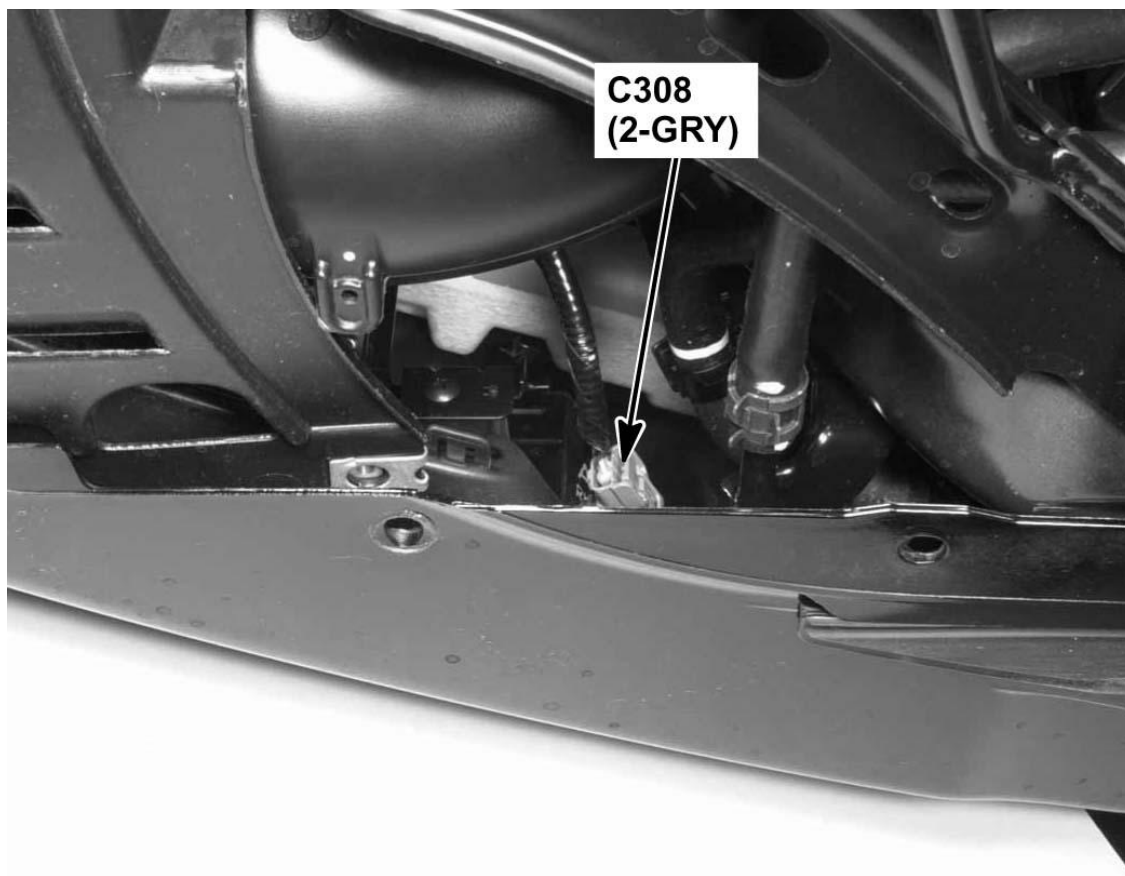

G00363637


Fig. 176: Left Side Of Engine Compartment
Courtesy of AMERICAN HONDA MOTOR CO., INC.

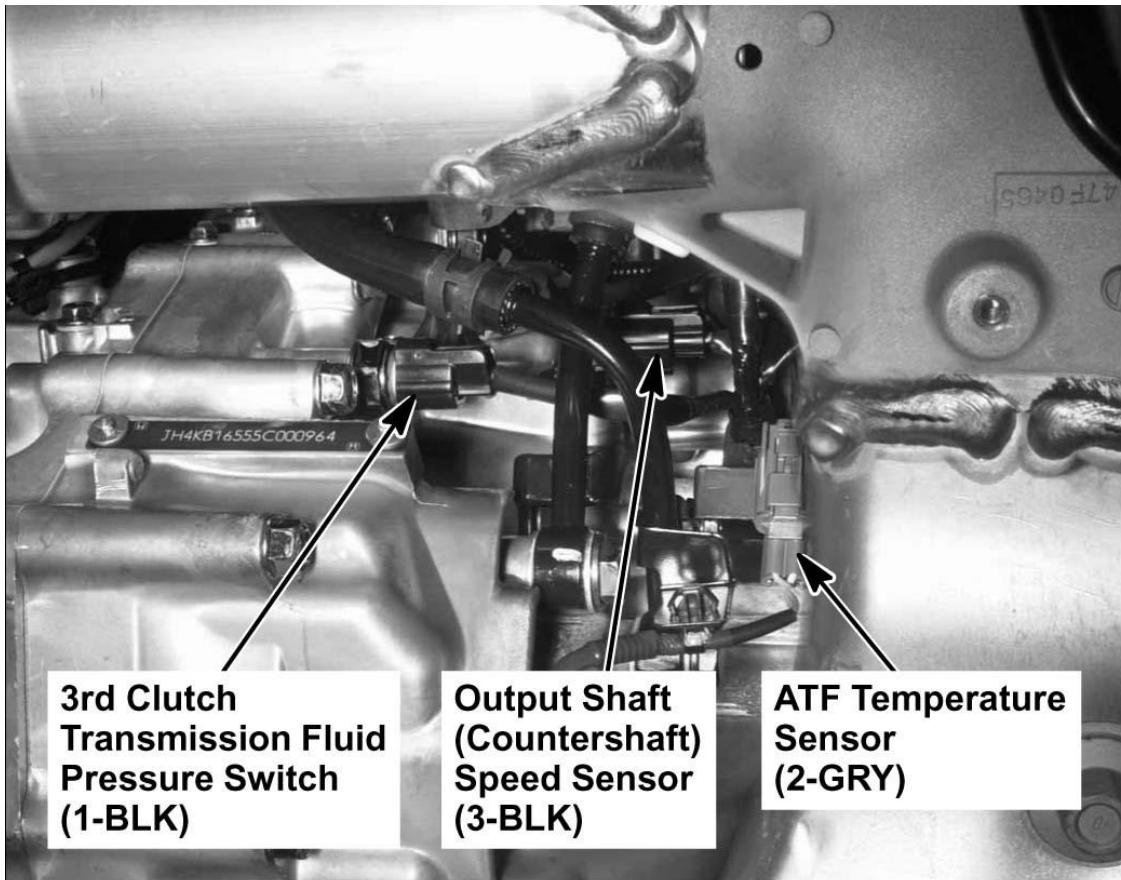

G00363638


Fig. 177: Transmission Housing

Courtesy of AMERICAN HONDA MOTOR CO., INC.

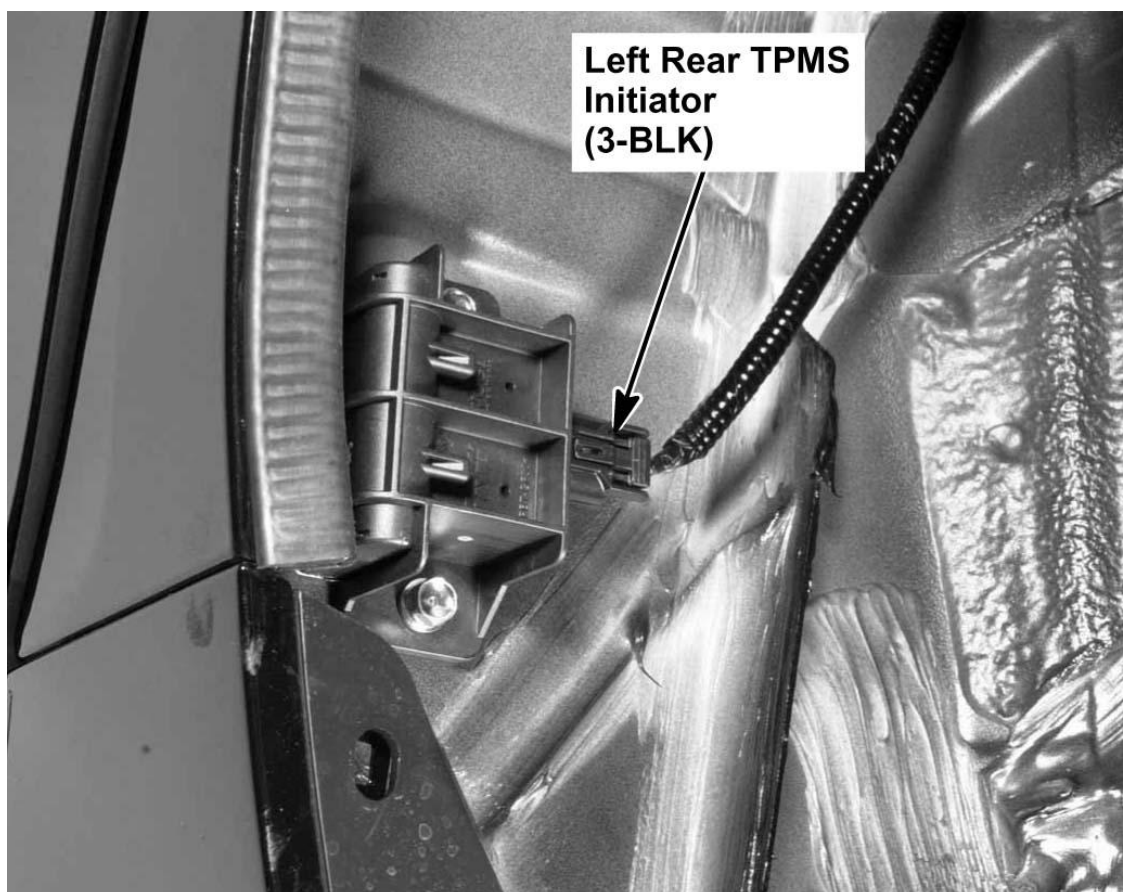

G00363639


Fig. 178: Left Rear Fenderwell (Right Similar)
Courtesy of AMERICAN HONDA MOTOR CO., INC.

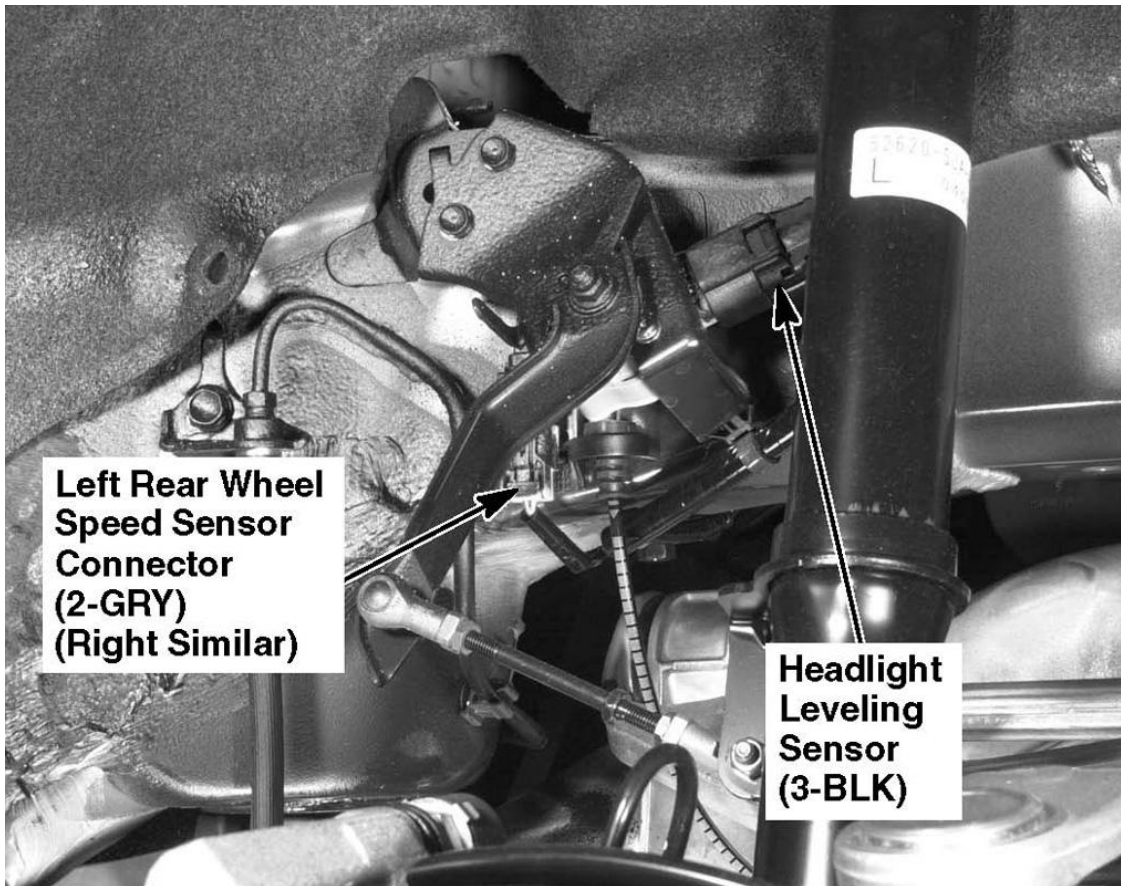

G00447104

Fig. 179: Under Left Rear Of Vehicle


Courtesy of AMERICAN HONDA MOTOR CO., INC.

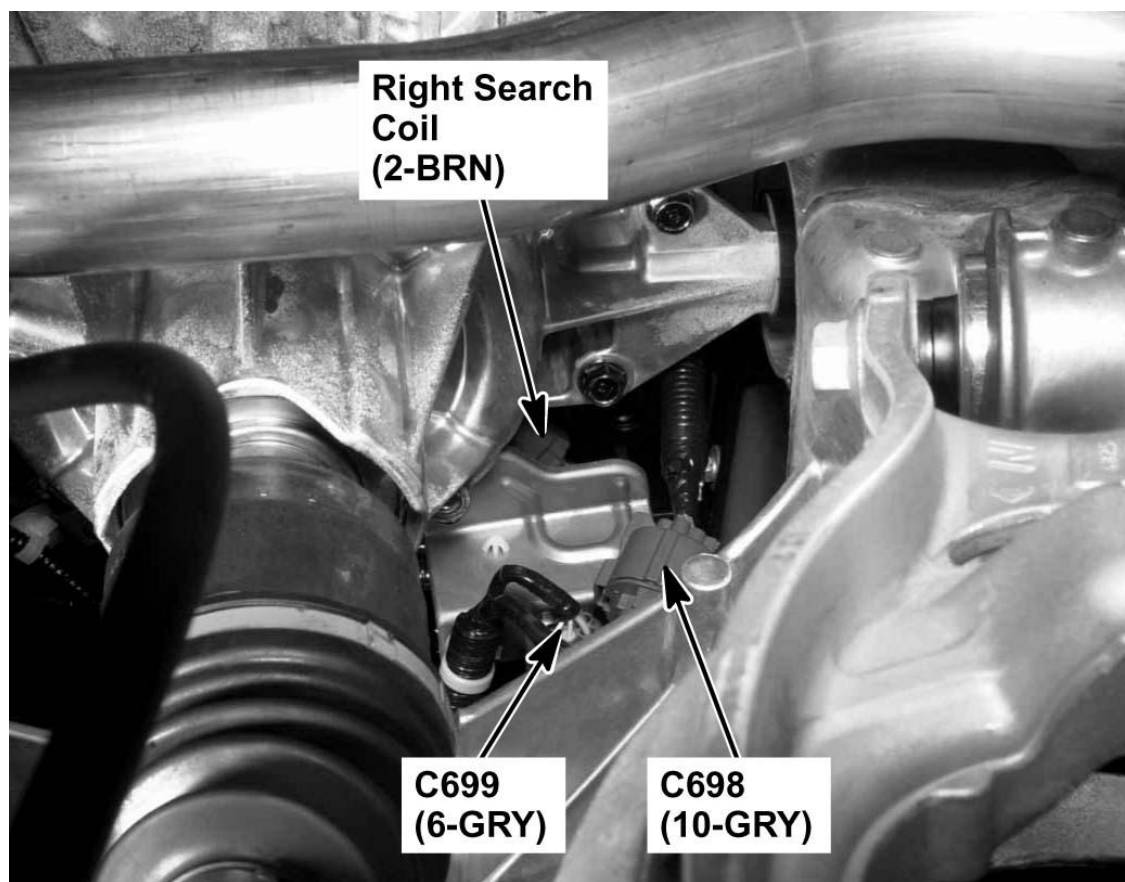

G00363641

Fig. 180: Rear Differential


Courtesy of AMERICAN HONDA MOTOR CO., INC.

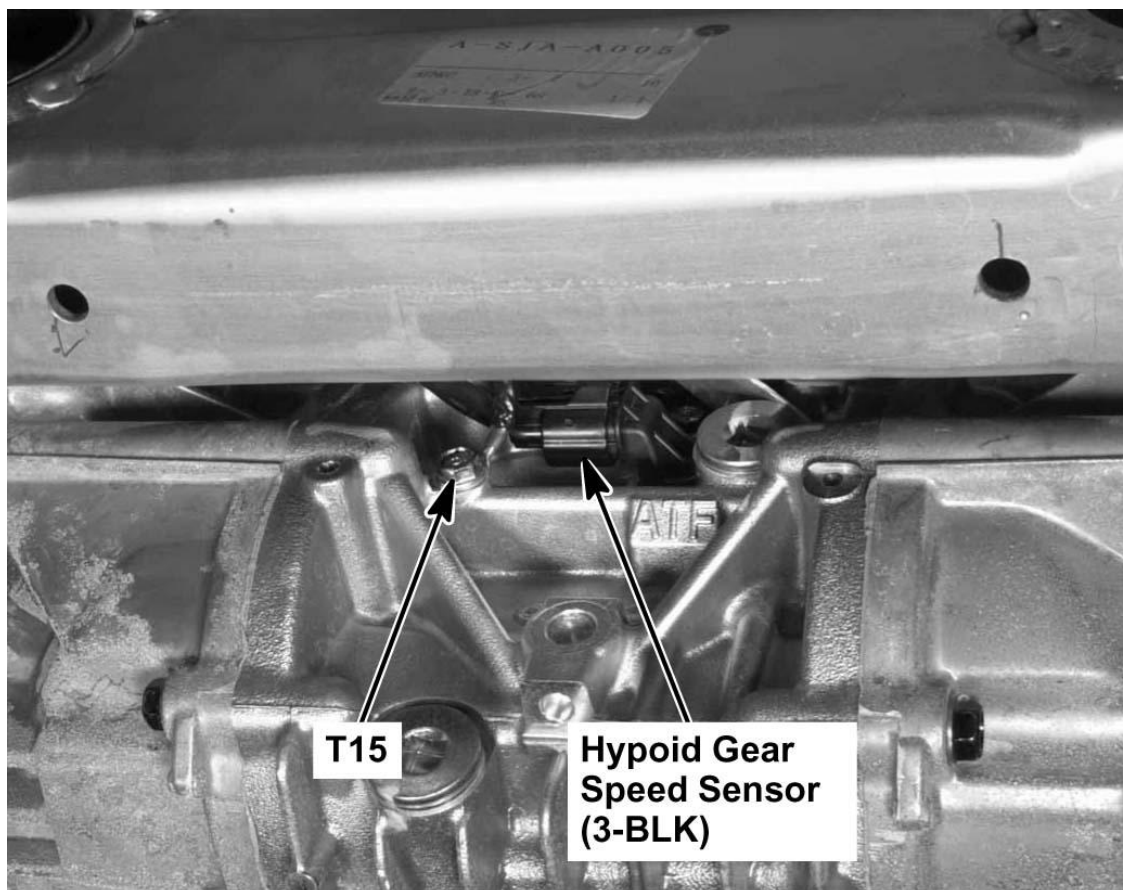

G00363642

Fig. 181: Rear Differential


Courtesy of AMERICAN HONDA MOTOR CO., INC.

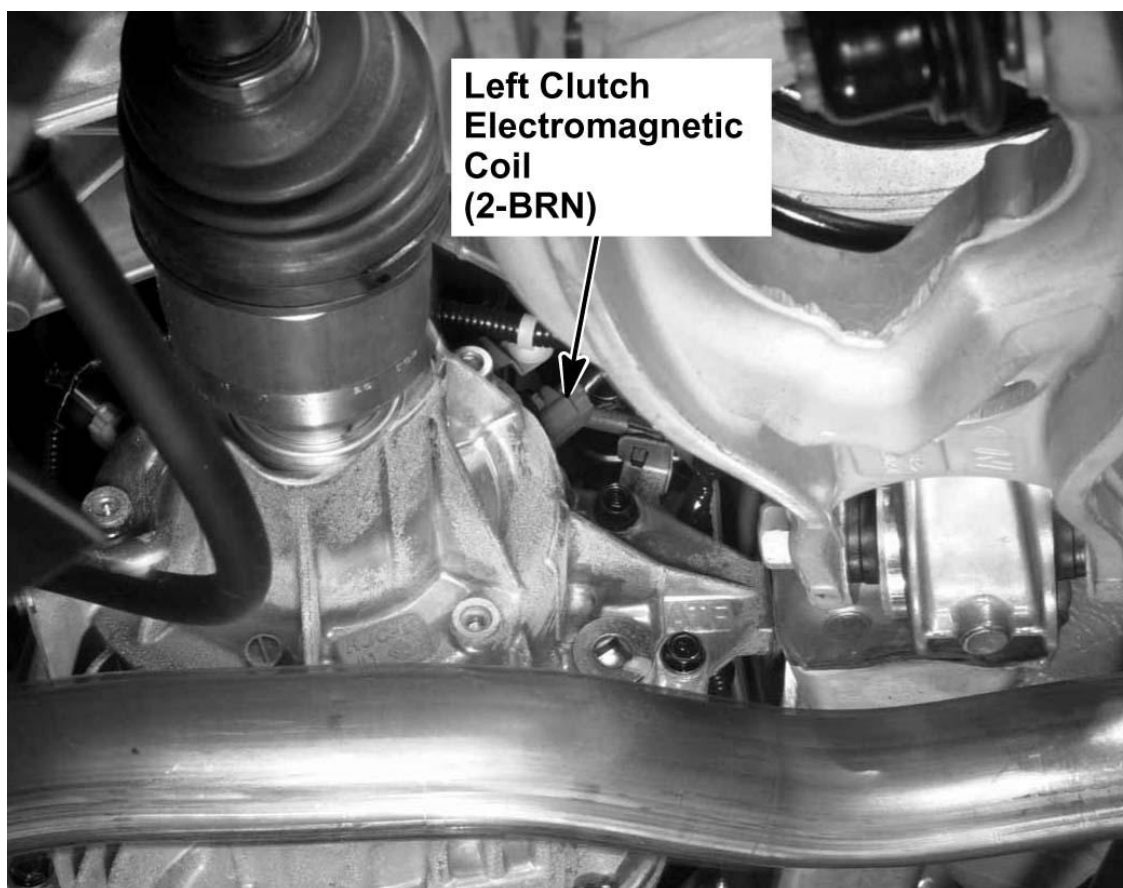

G00363643

Fig. 182: Rear Differential


Courtesy of AMERICAN HONDA MOTOR CO., INC.

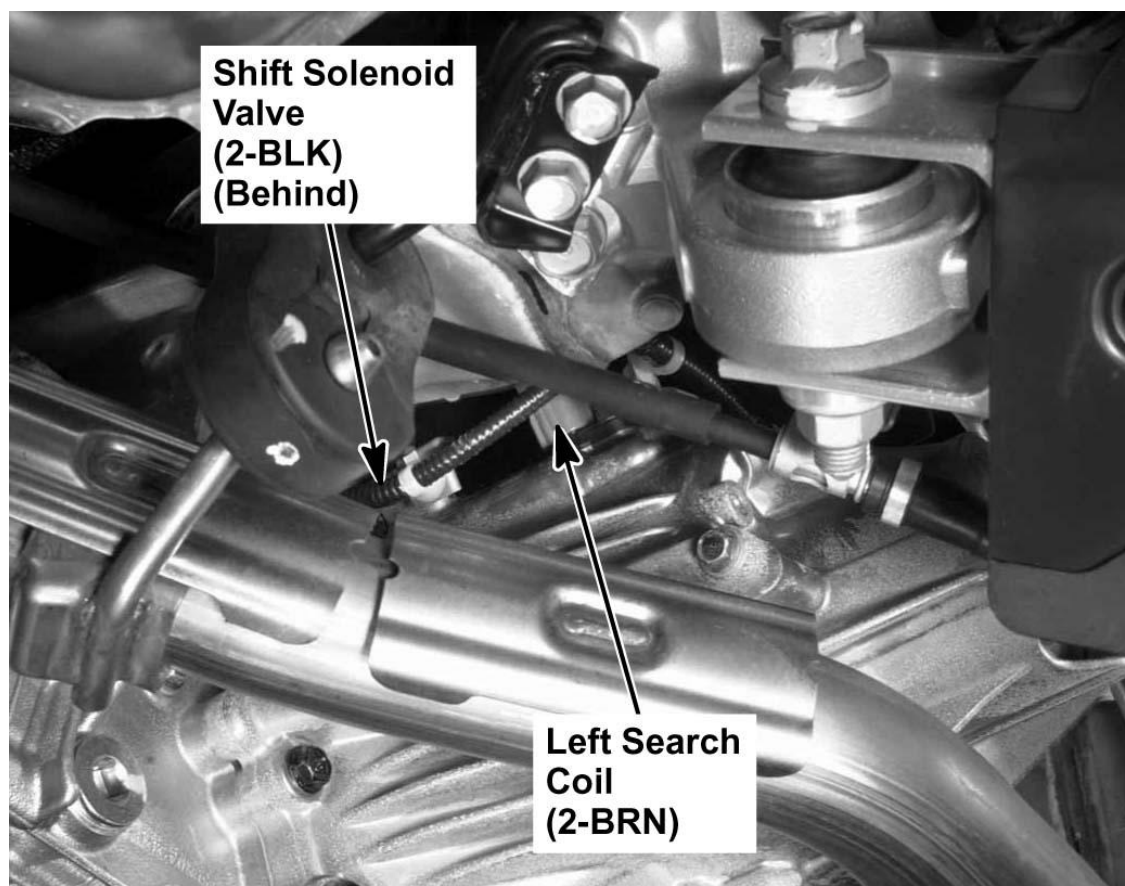

G00363644

Fig. 183: Rear Differential


Courtesy of AMERICAN HONDA MOTOR CO., INC.

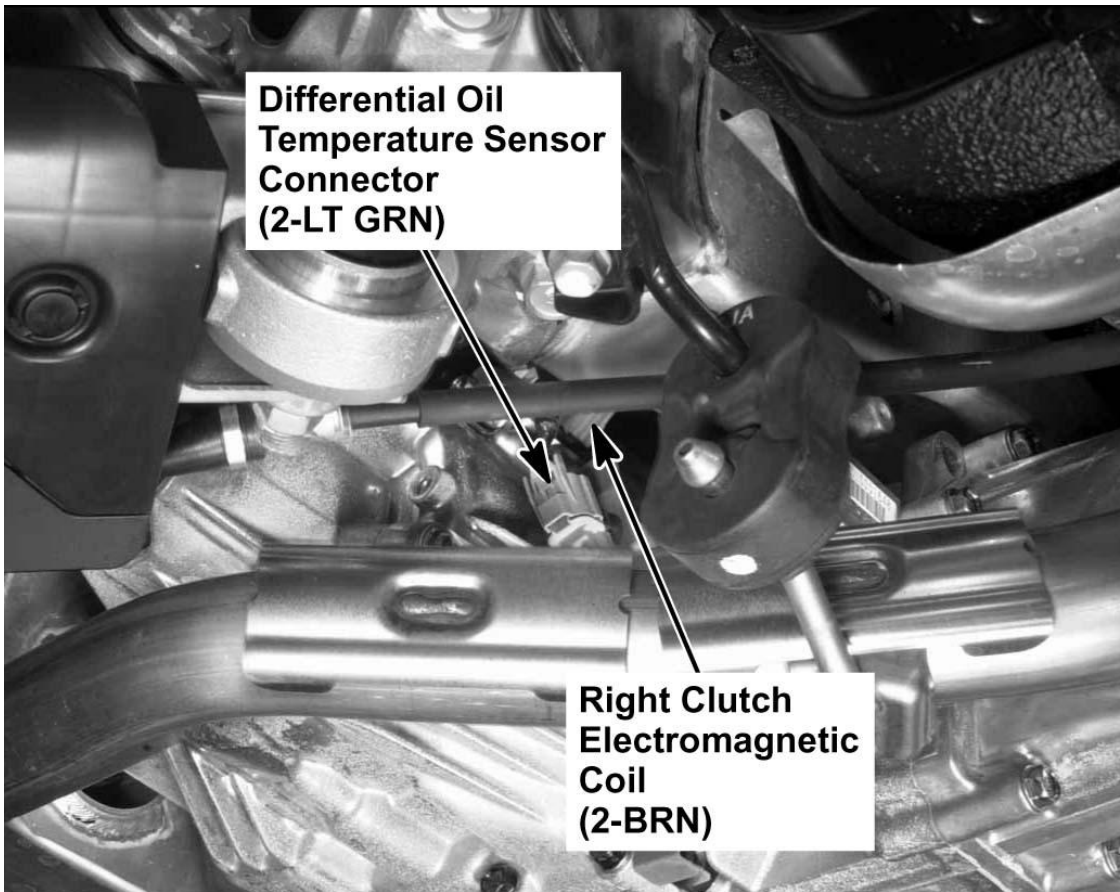

G00363645

Fig. 184: Rear Differential


Courtesy of AMERICAN HONDA MOTOR CO., INC.

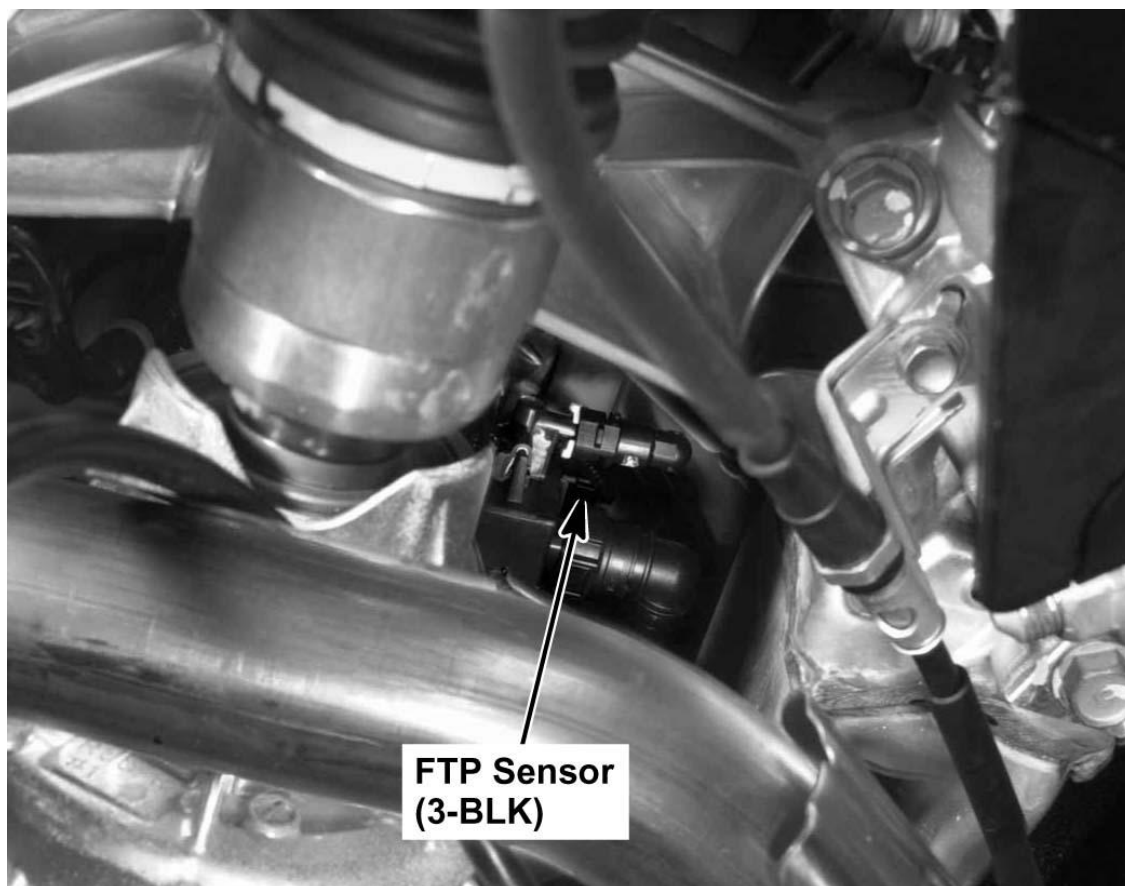

G00363646


Fig. 185: Above Rear Differential

Courtesy of AMERICAN HONDA MOTOR CO., INC.

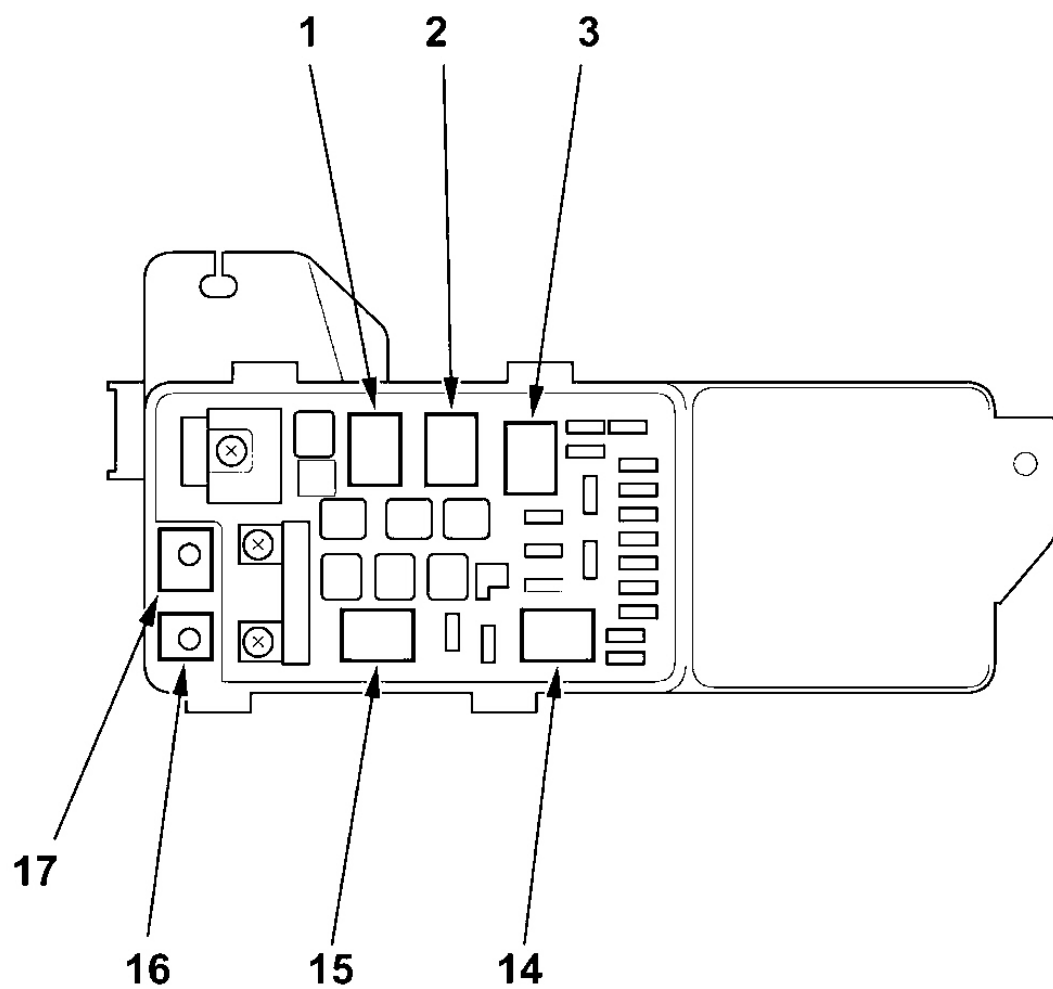

G00363648

Fig. 186: Left Rear Of Engine Compartment
Courtesy of AMERICAN HONDA MOTOR CO., INC.

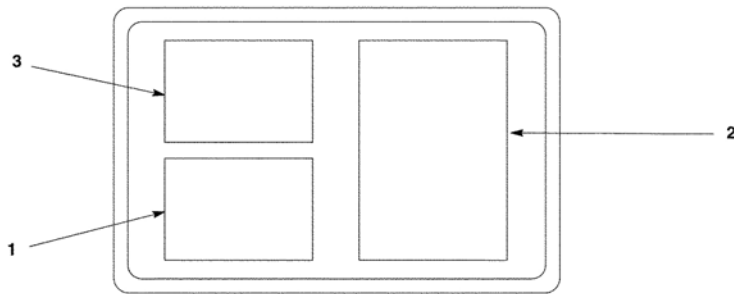Auxiliary Under-hood Relay Box

Ref	Socket	Cavities	Connects to
1	DRL Relay (Canada)	5	Engine Compartment Wire Harness (left branch)
2	Radiator Fan Control (RFC) Unit Relay	4	Engine Compartment Wire Harness (left branch)
3	Adaptive Cruise Control Relay (USA: CMBS/PAX Package; Canada: Elite Package)	5	Engine Compartment Wire Harness (left branch)

G00447107

Fig. 187: Left Rear Of Engine Compartment
Courtesy of AMERICAN HONDA MOTOR CO., INC.


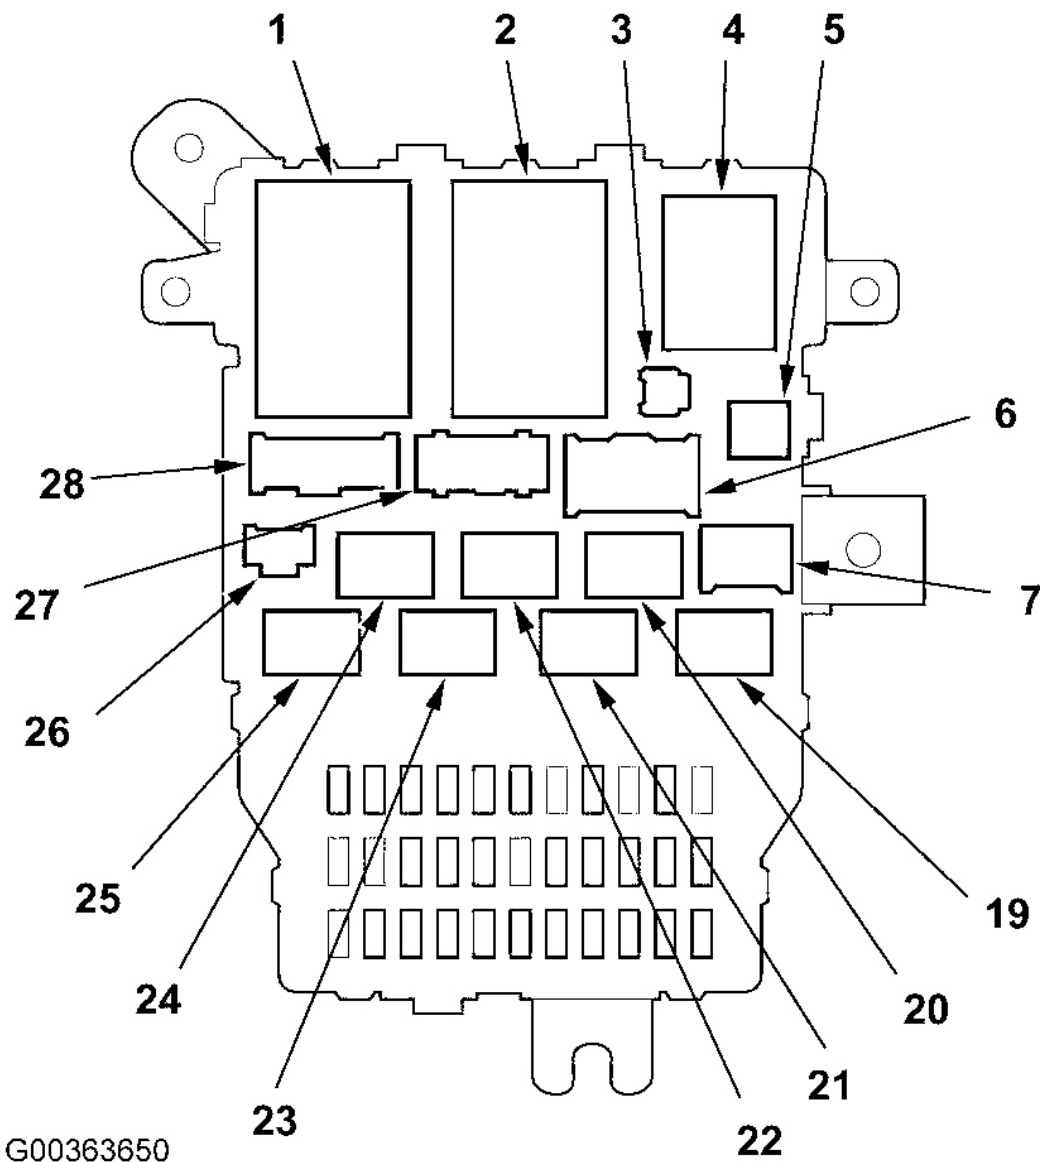



Fig. 188: Behind Left Kick Panel

Courtesy of AMERICAN HONDA MOTOR CO., INC.

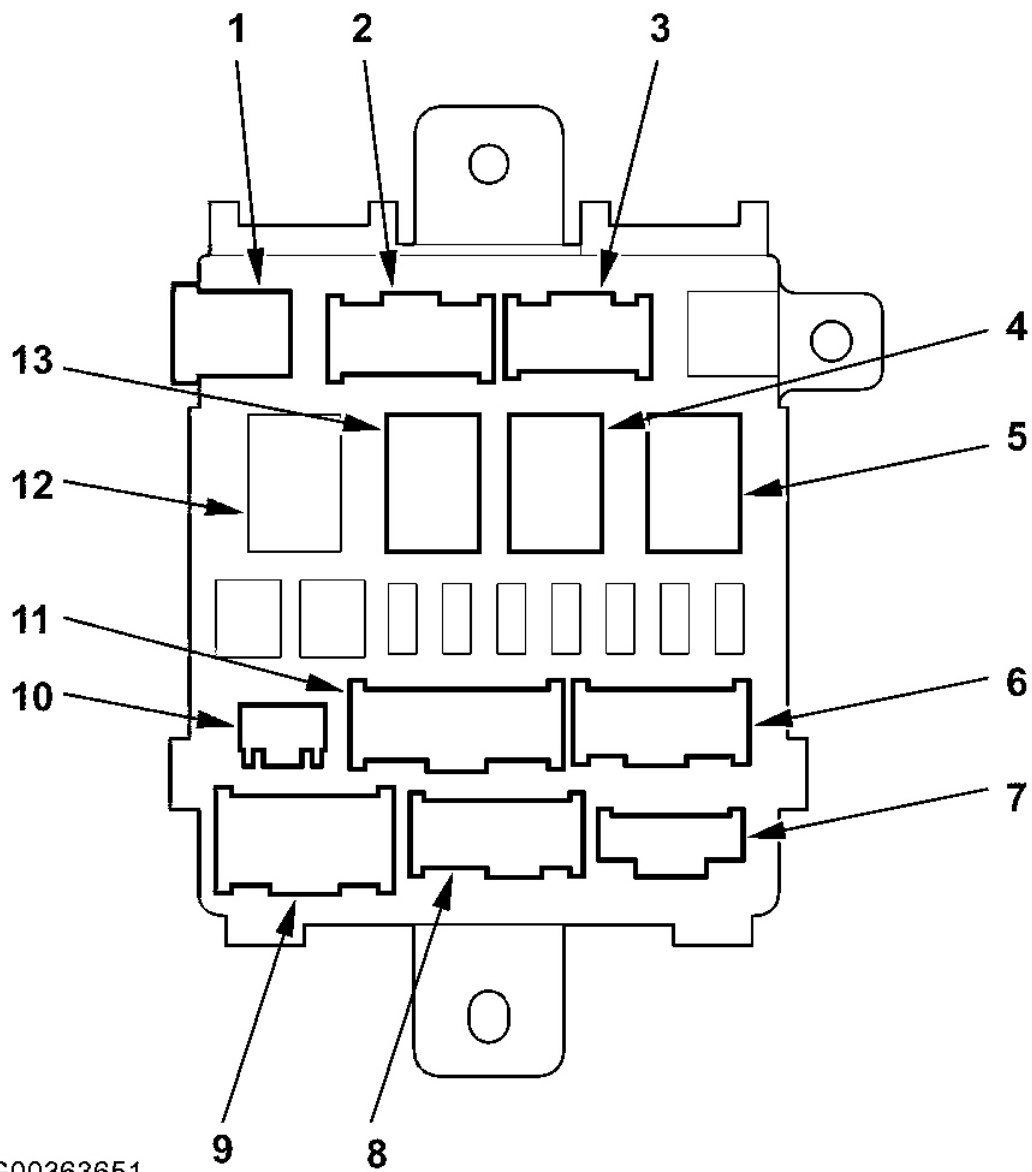


G00363651

Fig. 189: Behind Right Kick Panel
Courtesy of AMERICAN HONDA MOTOR CO., INC.

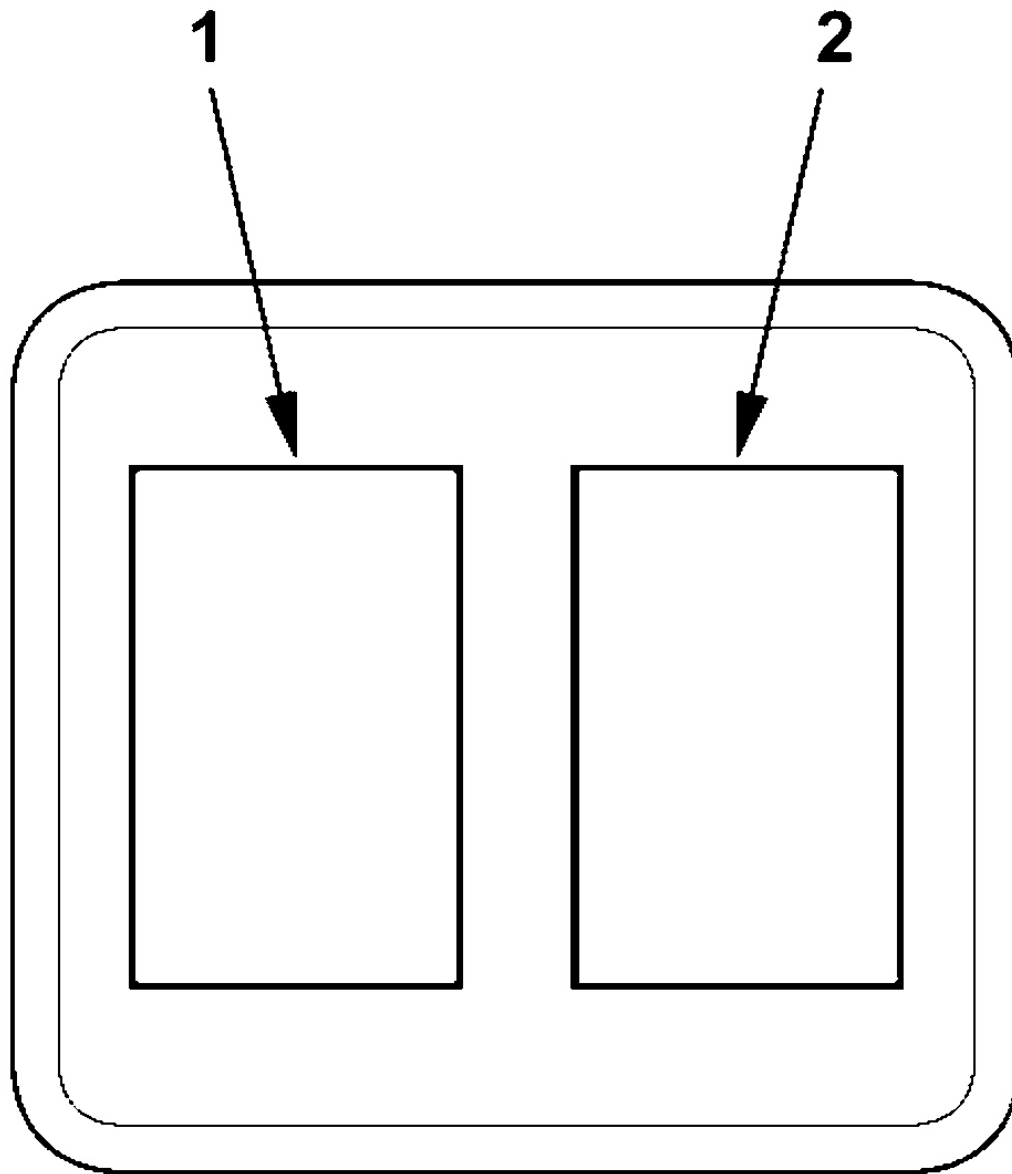

G00363653

Fig. 190: Under Left Side Of Dash
Courtesy of AMERICAN HONDA MOTOR CO., INC.

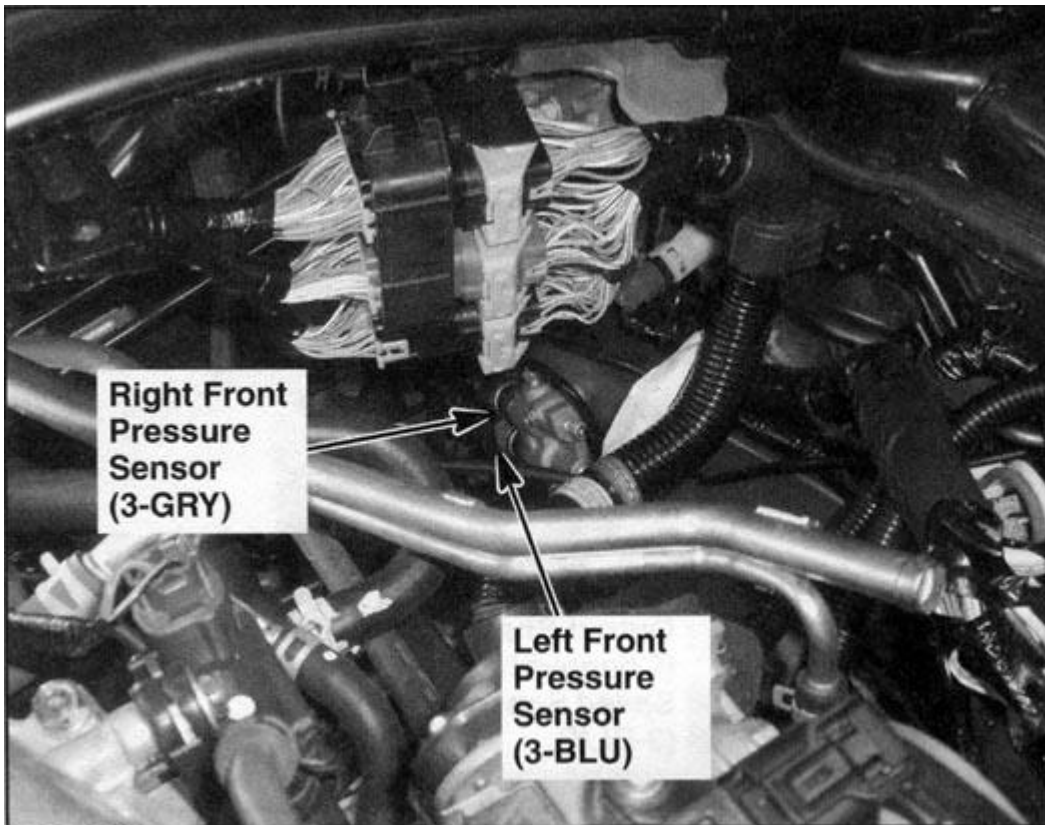

G00430628


Fig. 191: Left Side Of Engine Compartment
Courtesy of AMERICAN HONDA MOTOR CO., INC.



G00430629

Fig. 192: Under Left Side Of Dash


Courtesy of AMERICAN HONDA MOTOR CO., INC.

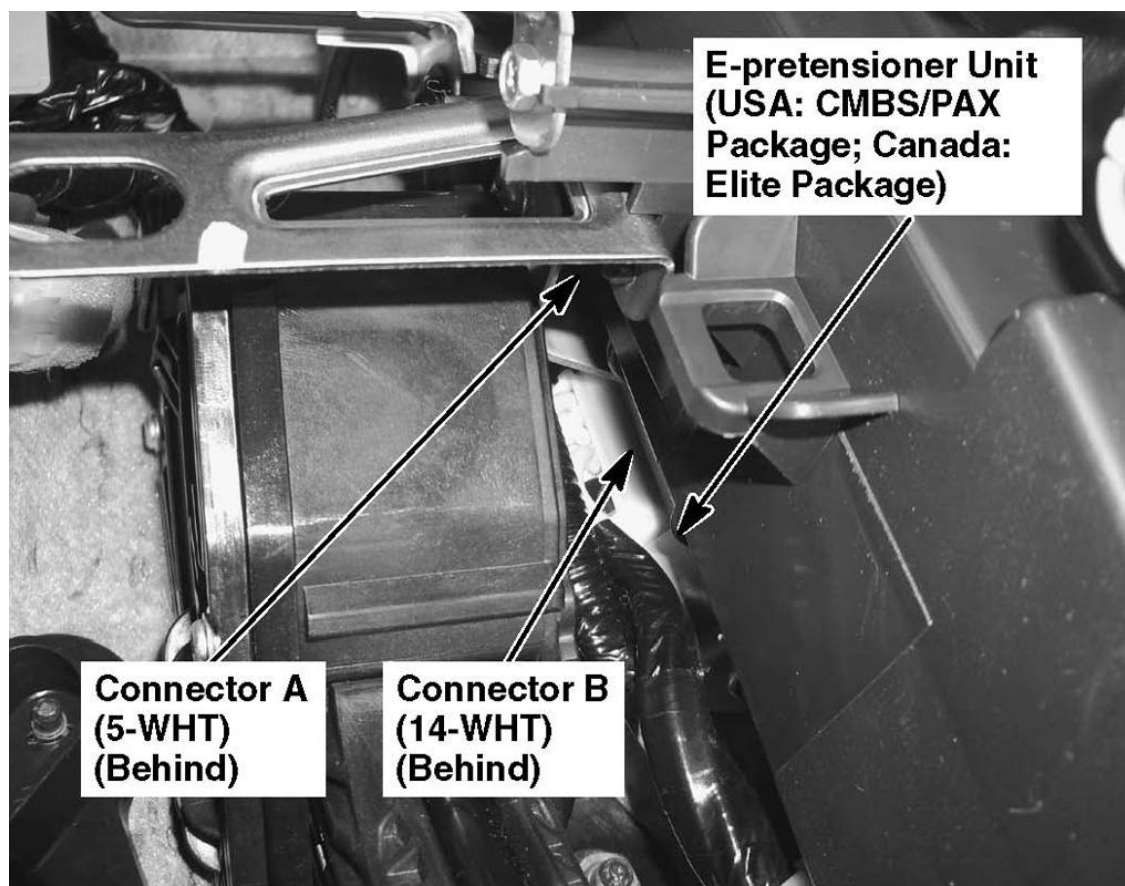

G00447076


Fig. 193: Under Middle Of Dash

Courtesy of AMERICAN HONDA MOTOR CO., INC.

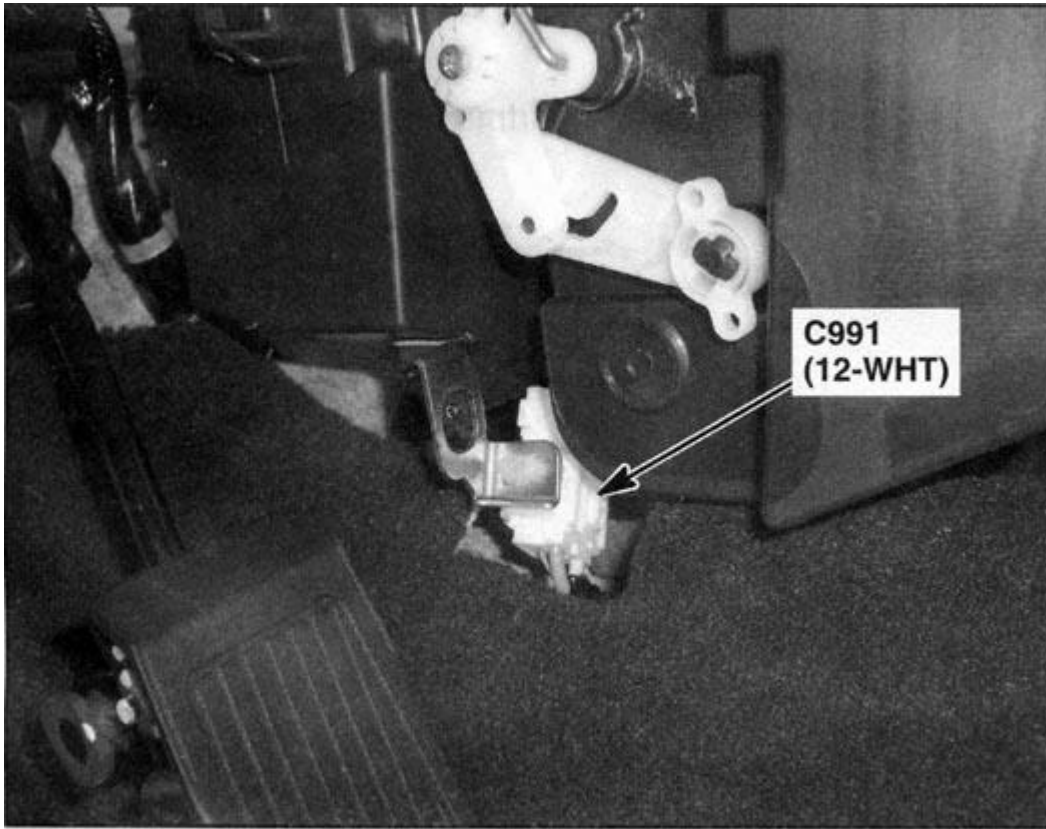


G00430631

Fig. 194: Under Middle Of Dash
Courtesy of AMERICAN HONDA MOTOR CO., INC.

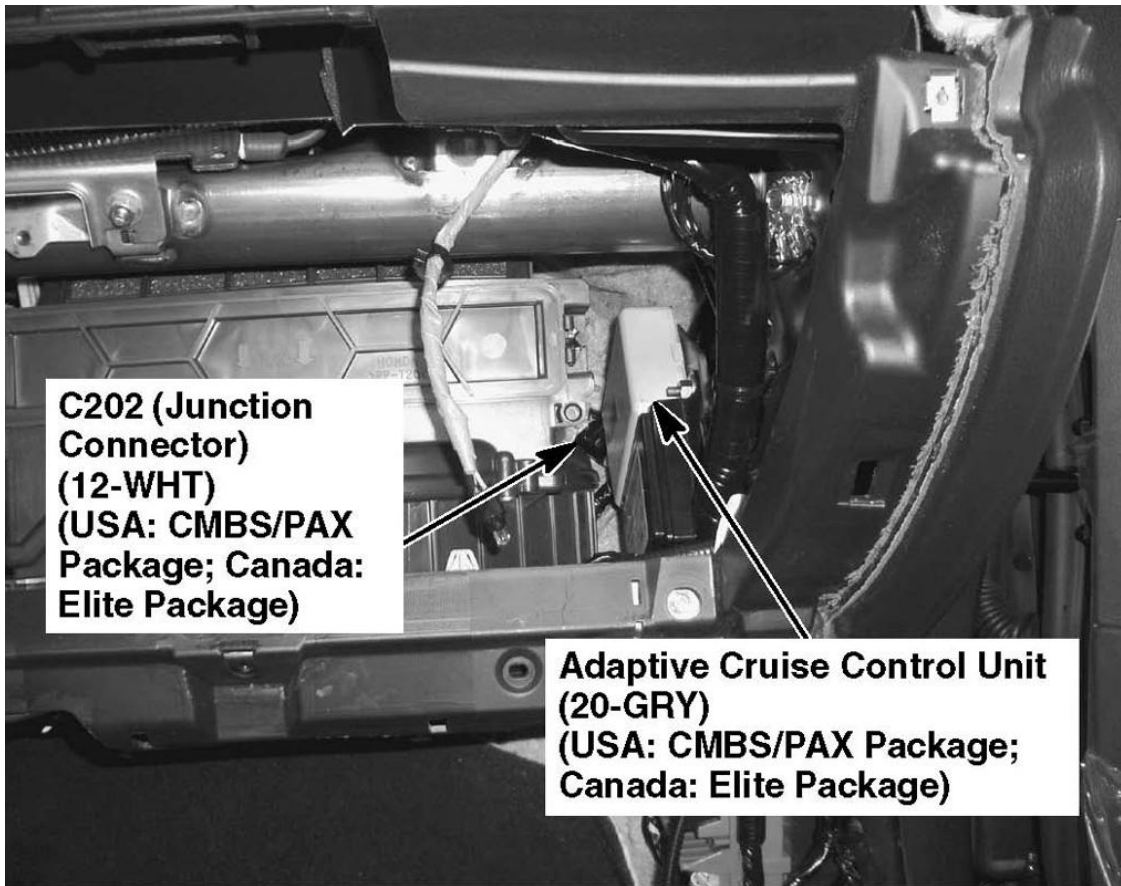


G00447086

Fig. 195: Behind Right Side Of Glove Box
Courtesy of AMERICAN HONDA MOTOR CO., INC.

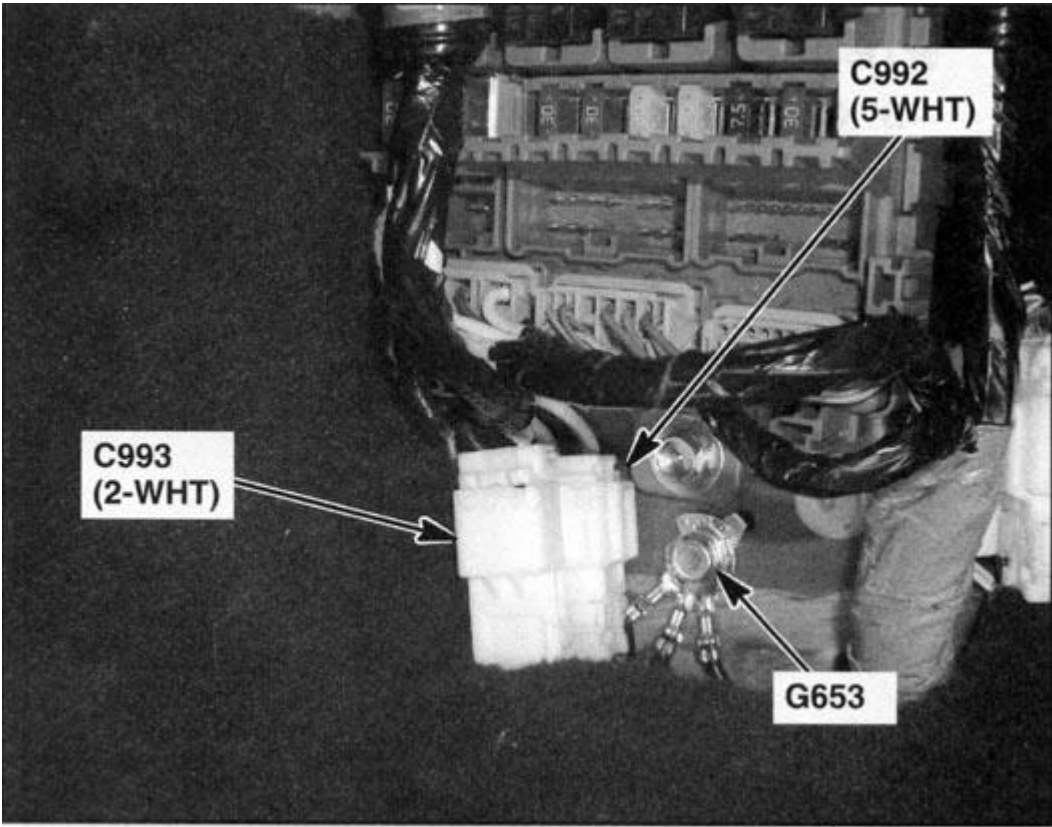

G00430633


Fig. 196: Behind Right Kick Panel
Courtesy of AMERICAN HONDA MOTOR CO., INC.

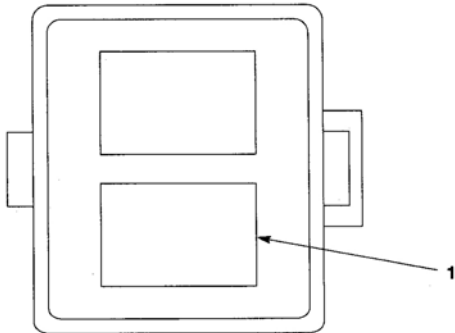

Ref	Socket	Cavities	Connects to
1	Starter Cut Relay 1	5	Engine Compartment Wire Harness (Left Branch)


G00430635

Fig. 197: Under Left Side Of Dash
Courtesy of AMERICAN HONDA MOTOR CO., INC.

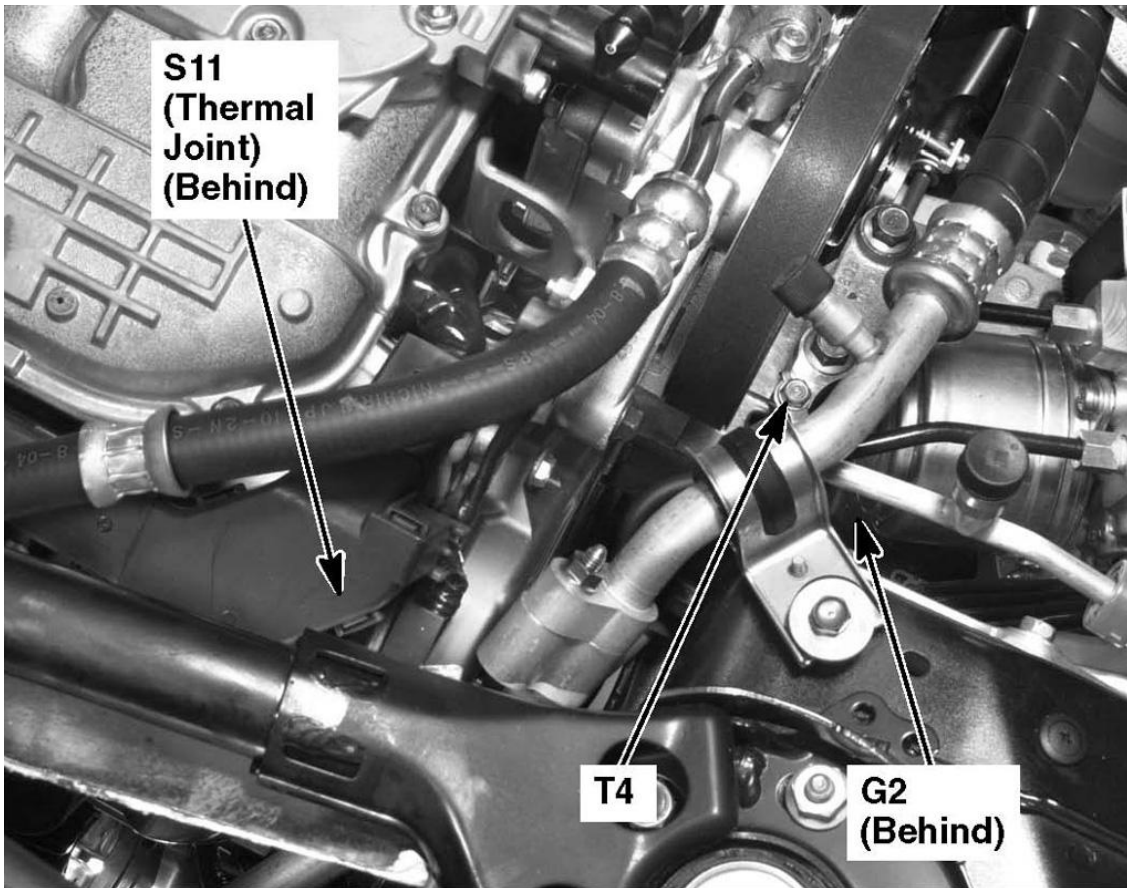

G00447108


Fig. 198: Right Side Of Engine Compartment
Courtesy of AMERICAN HONDA MOTOR CO., INC.

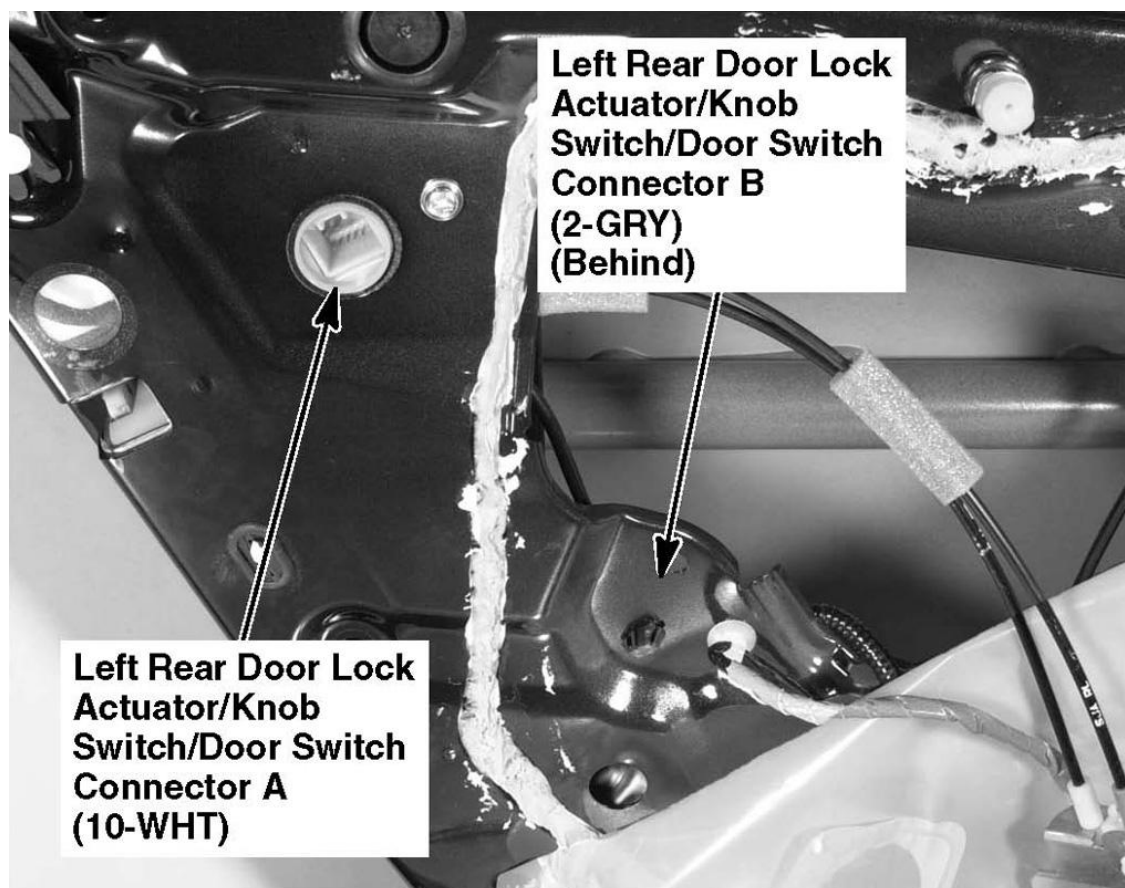

G00447109

Fig. 199: Left Rear Door (Right Similar)

Courtesy of AMERICAN HONDA MOTOR CO., INC.

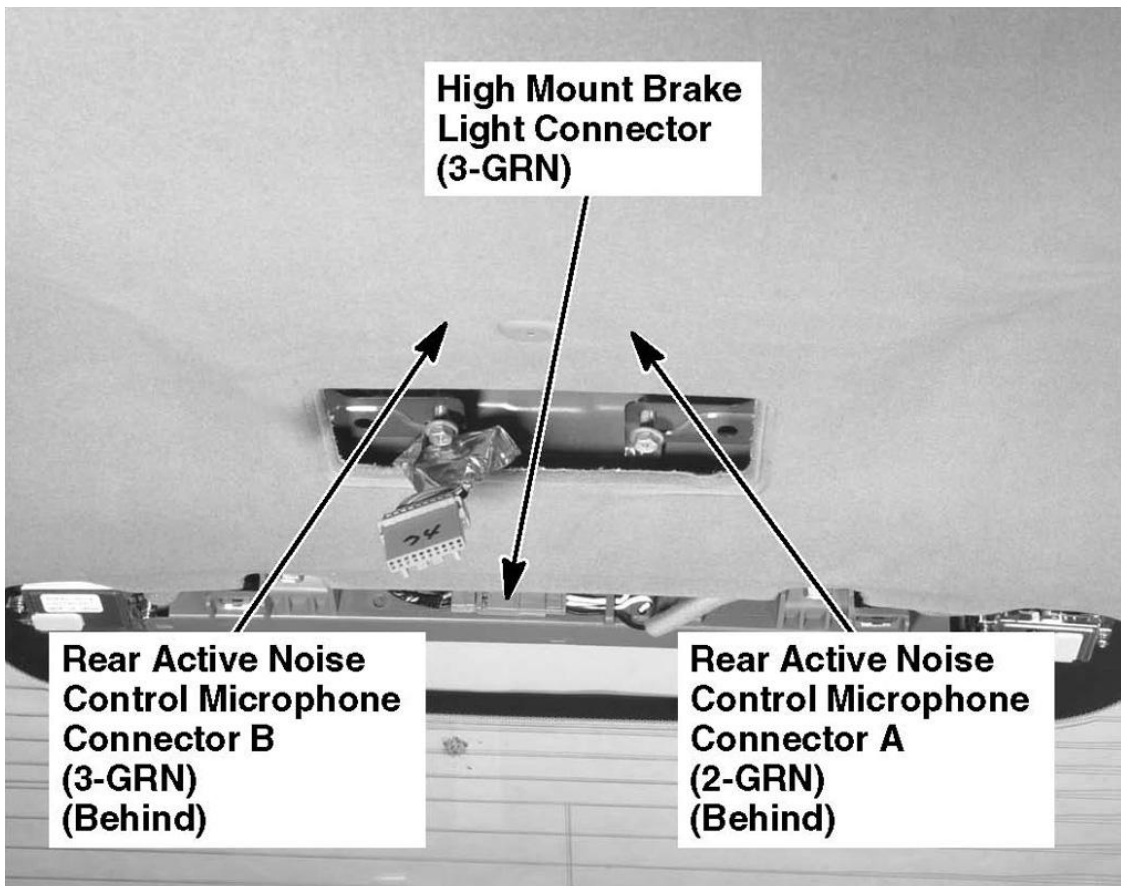

G00446862

Fig. 200: Rear Of Roof

Courtesy of AMERICAN HONDA MOTOR CO., INC.



G00446863

Fig. 201: Rear Of Roof (USA)


Courtesy of AMERICAN HONDA MOTOR CO., INC.



G00446864


Fig. 202: Rear Of Roof (USA: Base)

Courtesy of AMERICAN HONDA MOTOR CO., INC.

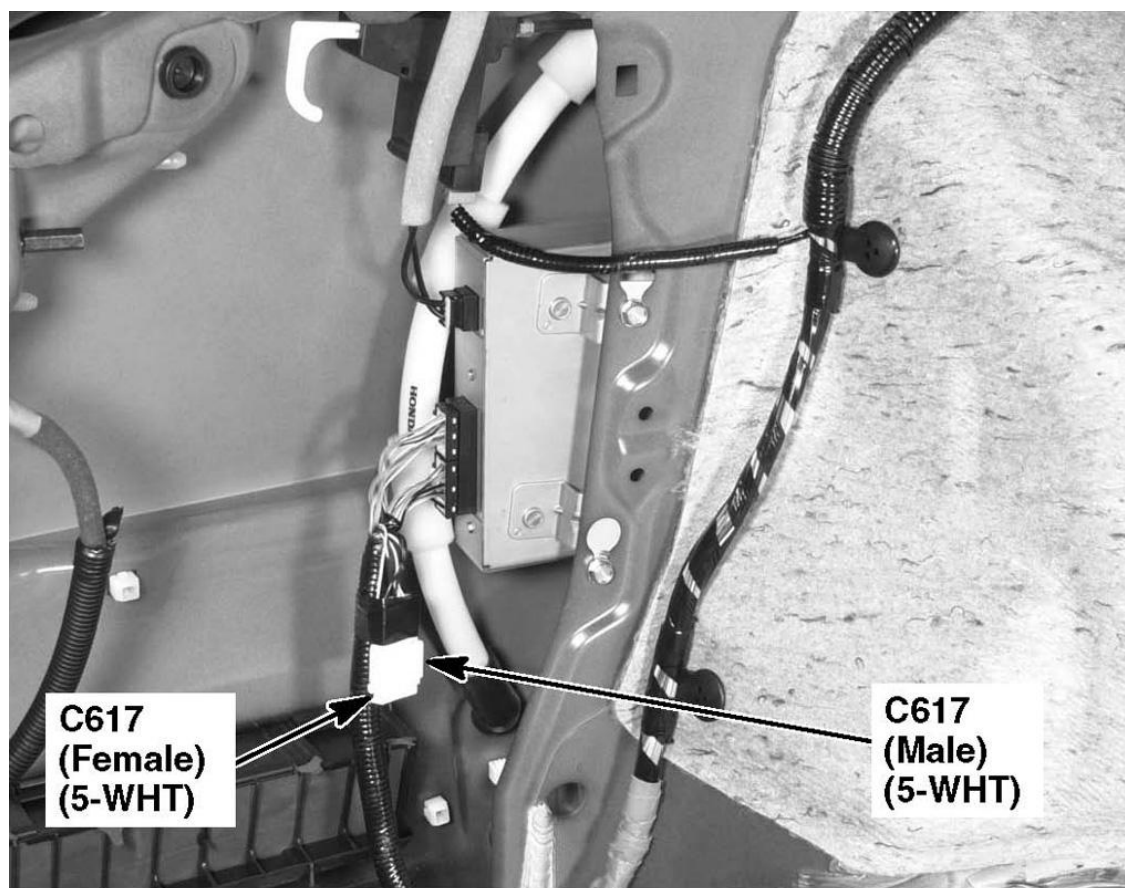

G00446865


Fig. 203: Left Side Of Trunk (USA: Technology Package)
Courtesy of AMERICAN HONDA MOTOR CO., INC.

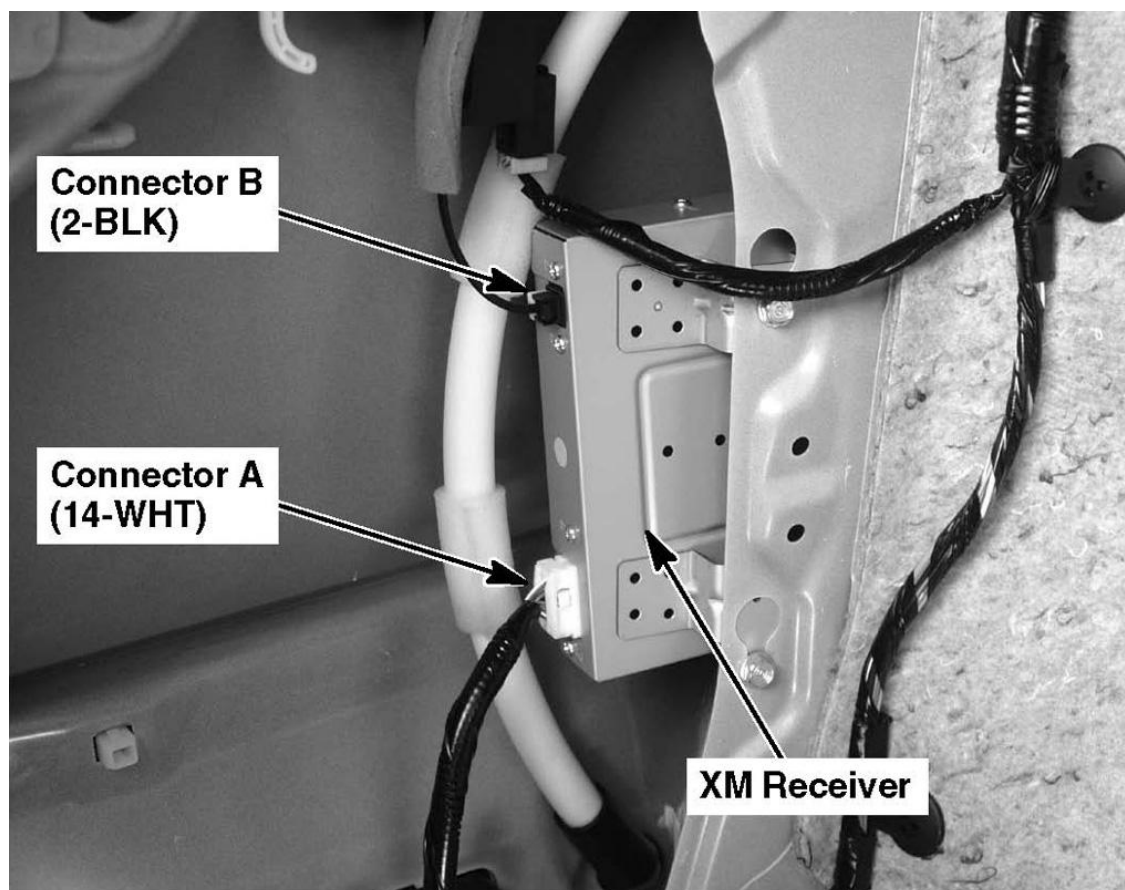

G00446866

Fig. 204: Left Side Of Trunk (USA: Base)

Courtesy of AMERICAN HONDA MOTOR CO., INC.

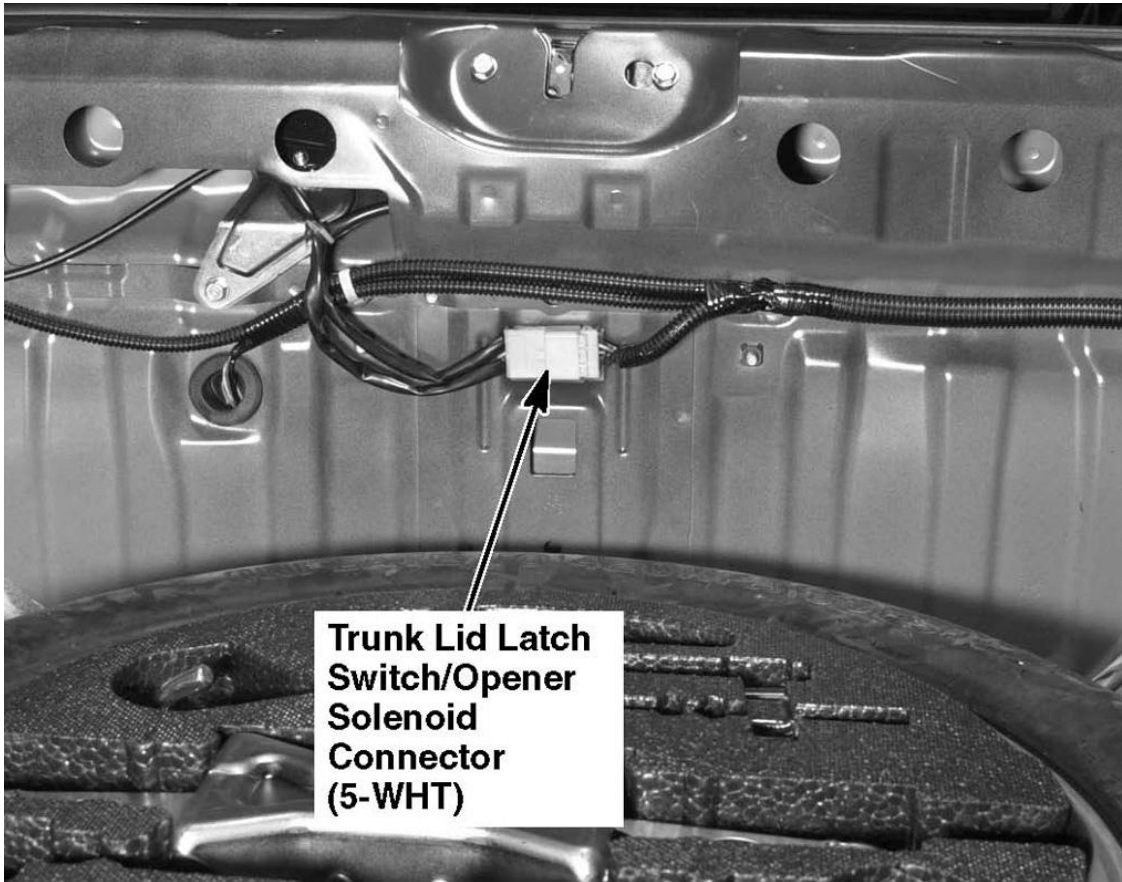

G00446867

Fig. 205: Center Rear Of Trunk

Courtesy of AMERICAN HONDA MOTOR CO., INC.



G00446868

Fig. 206: Middle Of Trunk Lid

Courtesy of AMERICAN HONDA MOTOR CO., INC.