


DAELIM

OWNER' S MANUAL

Roadwin
250R Fi

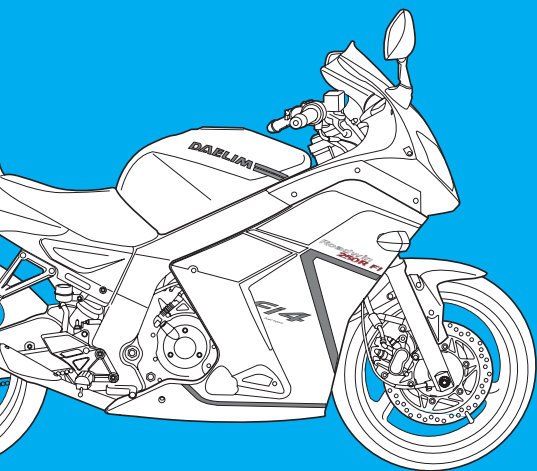


CONTENTS

IDENTIFICATION	3	EQUIPMENT USAGE	17
OPERATION INSTRUCTION	4	STEERING LOCK	17
SAFETY PRECAUTIONS	4	SEAT	17
PRIOR TO STARTING VEHICLE	5	HELMET HOLDER	18
CORRECT ATTIRE	5	STORAGE COMPARTMENT	18
OPERATION	6	BRAKE LEVER ADJUSTER	18
CARGO	7	SELF INSPECTIONS BEFORE OPERATION	19
MODIFICATION	8	BRAKES	19
ATTACHMENT	8	TIRES	21
MUFFLER	8	CLUTCH	23
SEATS LOCATION	9	FUEL	24
INSTRUMENT READING AND USAGE	12	ENGINE OIL	25
SPEEDOMETER	13	LIGHTS AND WINKER	25
TACHOMETER	13	REAR VIEW MIRROR	26
FUEL GAUGE	13	LICENSE PLATE	26
INDICATOR LAMPS	13	OPERATION	26
FAULT INDICATOR LAMPS	13	PRE-RIDE INSPECTION	26
SWITCH OPERATION	14	STARTING THE ENGINE	27
MAIN SWITCH	14	IF ENGINE CANNOT BE STARTED	28
KEYS	15	RUNNING-IN	28
HEADLIGHT	15	RIDING	29
STARTER BUTTON	16	BRAKING	30
WINKER SWITCH	16	PARKING	30
HORN BUTTON	16		



MAINTENANCE	31
MAINTENANCE SCHEDULE	32
TOOL KIT	34
FRAME NUMBER, ENGINE NUMBER	34
VIN PLATE LOCATION	34
MAINTENANCE PRECAUTIONS	35
THROTTLE OPERATION	35
AIR CLEANER	36
ENGINE OIL	37
SPARK PLUG	38
DRIVE CHAIN	39
BRAKE PAD WEAR	41
SIDE STAND	42
BATTERY	42
FUSE REPLACEMENT	44
BULB REPLACEMENT	46
CABLE RUBBER PART	49
CLEANING	49
STORAGE GUIDE	50

SAFE DRIVING	51
PREPARATION BEFORE DRIVING	51
DRIVING METHOD	52
DRIVING POSITION	52
PRECAUTION WHEN DRIVING	53
STARTING	54
TURNING METHOD	55
PRINCIPLE OF TURN	55
EFFECT OF SPEED	55
3 POSITIONS OF TURNING	56
TURNING METHOD	57
PRECAUTION WHEN TURNING	58
BRAKING METHOD	59
BASIC PRINCIPLE OF BRAKE(FRICTION FORCE)	59
RESTRAINT OF BRAKE EFFECT (INERTIA)	59
BRAKING METHOD	60
COMPARISON OF BRAKING DISTANCE	60
IMPACT WHEN COLLISION	60
WIRING DIAGRAM	62

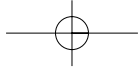

SPECIFICATION

ITEM	DATA	ITEM	DATA
LENGTH × WIDTH × HEIGHT(mm)	2,025 × 778 × 1,180	IGNITION SYSTEM	TRANSISTOR (ECU)
WHEEL BASE(mm)	1,390	BATTERY CAPACITY	12V10AH(MF TYPE)
GROUND CLEARANCE(mm)	139	FUEL CAPACITY(l)	15
SEAT HEIGHT(mm)	780	RESERVE FUEL CAPACITY(l)	4
DRY WEIGHT(kg)	173	TIRE SIZE	FR. 110/70-17 54S
PASSENGER	2		RR. 140/60-17 69S
ENGINE TYPE	WATER COOLED 4 STROKE, DOHC	SUSPENSION	FR. TELESCOPIC
			RR. SWING ARM
PISTON DISPLACEMENT(cc)	247	BRAKE	FR. HYDRAULIC DISK
BORE AND STROKE(mm)	73 × 59		RR. HYDRAULIC DISK
STARTING SYSTEM	START MOTOR	SPARK PLUG	CR9EH-9
TRANSMISSION TYPE	5 STEPS RETURN	FUSE(A)	30 , 15

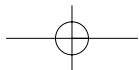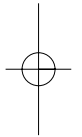

OPERATION INSTRUCTION

This manual describes matters pertaining to correct operation, proper operation and simple maintenance of the vehicle you purchased.

To ensure more comfortable and safer operation, please be sure to read this manual carefully prior to operation. The photographs and drawings shown in this manual may differ from those of actual vehicles due to changes in vehicle specifications and modifications made. This vehicle is designed for 2 riders including the operator.

⚠ CAUTION

Do not use polluted gasoline. Otherwise it causes rust inside the fuel tank, and clogs the supply of fuel to the injector, leading to improper engine starting or may cause serious damage to engine. Do use genuine oil, then it will protect and extend vehicle life. Warranty does not apply to the motorcycles used in competitions or competitive trials. No motorcycle part may be tampered with, altered, or replaced with parts other than original Daelim spare parts during the warranty period. As far as any defect caused by contaminated gasoline or oil, the warranty will be automatically invalidated.

SAFETY PRECAUTIONS

- Careful driving and the wearing of proper attire and safety equipment are the most important factors in the safe operation of the daystar. Please obey traffic regulations and do not be hurried and careless.
- Many new vehicle owners operate their newly purchased vehicles with great care and attention to safety factors. However, after becoming accustomed to the operations are often discarded, which can lead to accidents. Please don't let this happen to you and always approach the operation of your vehicle with the safety considerations needed.

When operating the vehicle, always keep in mind and obey the notes of precaution printed on the "Safety Precaution Label" attached to the vehicle.


- Be sure to wear helmet at all time.
- Be sure to put on gloves at all time.
- Observe the speed regulations.
- Beware of muffler after driving as it is still hot to be burnt. Especially never children touch on it.
- For safety, do not change, alteration or modification the vehicle.
- Regularly conduct specified maintenance inspections.

<Maintenance Inspection Points>

Brakes, Tires, Oil, Lights, Horn, Instruments

HOW TO STARTING VEHICLE

Read user's manual carefully.
 Conduct maintenance checks prior to operation.
 Always maintain vehicle in clean status and carry out specified maintenance checks.
 Make sure to stop engine and stay away from fire when idling.
 Exhaust gas contains harmful substance such as carbon monoxide. Start engine in well-ventilated places.

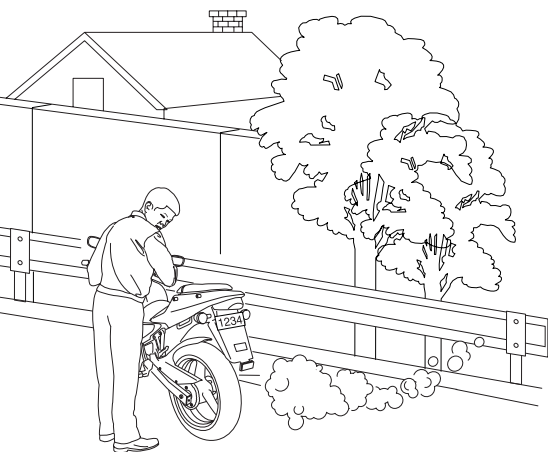

CORRECT ATTIRE

Always make sure to wear helmet for safety. Wear gloves and safety goggles.

Do not wear uniforms which might hinder operation. It is dangerous if the uniform is caught by brake lever or by the rotating part of drive chain.

Do not wear slippers which might obstruct brake operation or transmission gear operation.


Many automobile/motorcycle accidents happen because the automobile driver does not "see" the motorcyclist.

Make yourself conspicuous to help avoid the accident that wasn't your fault :

- Wear bright or reflective clothing.
- Don't ride in another motorist's "blind spot".

⚠ WARNING

- Be sure you and your passenger always wear a helmet, eye protection and other protective apparel when you ride.
- Not wearing a helmet increases the chance of serious injury or death in a crash.

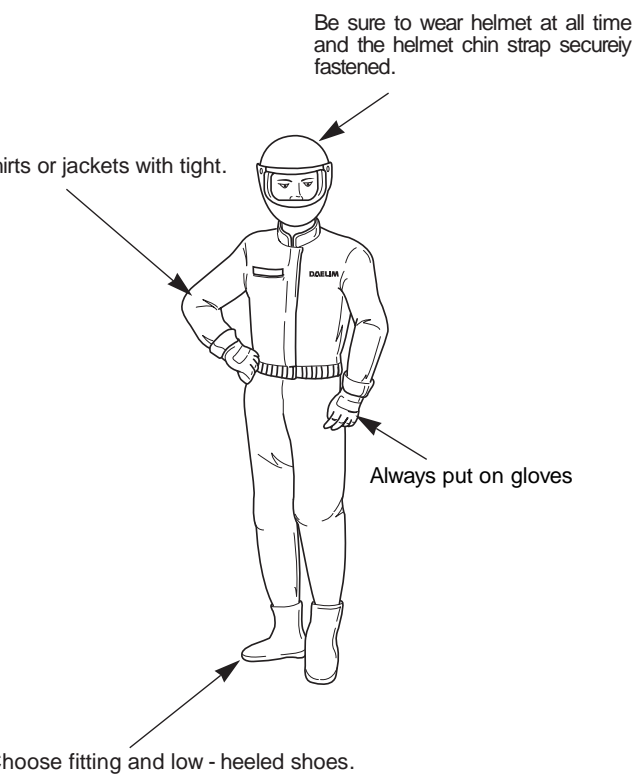

OPERATION

- Operators should naturally fix bodies to keep smooth driving.
- Please check whether or not you are unnaturally strained and strung up.
- Driving pose has a great influence on safe operation.

Please always maintain the center of your body in the middle of seat. Especially do not sit at the rear seat because it may lessen the weight of front wheel and cause trembling steering wheel.


- When wanting to turn, slightly lean to body toward the direction of the turn. It is unsafe if the body is not moved in union with the motorcycle.
- Curvy roads and poor, unpaved roads constantly change in surface quality. Driving on these roads can be unsafe if certain safety precautions are not followed.
- In order to safely drive through these driving conditions, anticipate coming road conditions, slow down to at least half the normal speed, and relax your shoulders and wrists while securely holding the handles.

CAUTION

- Always hold the handle bars firmly with both hands while driving, otherwise, it cause severe injury or death of the driver. The pillion passenger should always hold on to the operator with both hands and keep both feet on the pillion step bar. otherwise, it cause severe injury or death.

CARGO

When carrying cargo, you must keep in mind that operating the motorcycle, especially when turning, will be different. Be sure not to overload the motorcycle with goods as this will make the motorcycle unstable during operation.

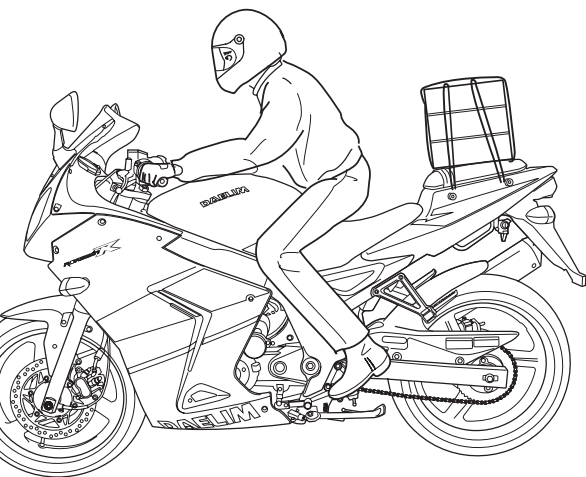

⚠ WARNING

- Overloading or improper loading can cause a crash and you can be seriously hurt.
- Follow all load limits in this manual.

⚠ CAUTION

- Pay attention not to overload goods and fasten it tightly while driving.
- Do not place kind of cloth materials nearby oil tank cap. If the hole in oil tank cap is clogged, oil will not flow freely into the engine which can cause severely engine damage.
- Do not attach large or heavy items (such as a sleeping bag or tent) to the handle bars, fork, or fender. Unstable handling or slow steering response may result.

MODIFICATION

Modification of vehicle structure or function deteriorates manipulability or causes exhaust noise to become louder, shortening the vehicle life. These modifications are not only prohibited by law but also are the acts harmful to other people. Modifications are not covered by warranty.

CAUTION

As far as any defect caused by modifications, the warranty will be automatically invalidated.

ATTACHMENT


Except designated attachment by DAELIM MOTOR CO.LTD., do not attach any extra lighting device, because it may cause an overcharging or discharging of battery. Carefully inspect the accessory to make sure it does not obscure the lights, reduce ground clearance and banking angle, or limit suspension travel, steering travel or control operation. Do not add electrical equipment that will exceed the motorcycle's electrical system capacity. A blown fuse could cause a dangerous loss of lights or engine power. This motorcycle was not designed to pull a sidecar or trailer. Handling may be seriously impaired if so equipped.

WARNING

- Improper accessories or modifications can cause a crash in which you can be seriously hurt or killed.
- Follow all instruction in this owner's manual regarding accessories and modifications.

MUFFLER


- Pay particular attention to fellow passenger so that he/she can prevent getting burnt by the hot muffler during travel.

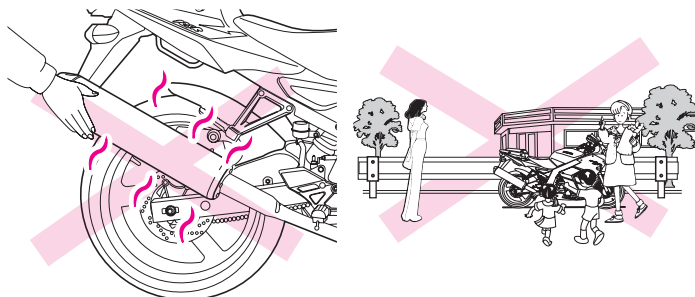


CAUTION

- Beware of muffler after driving as it is still hot to be burnt. Especially never children touch on it. And pay attention to park where pedestrian zone.
- If haystack or vinyl is stuck to the muffler, it might be fired.


CONTROLS LOCATION

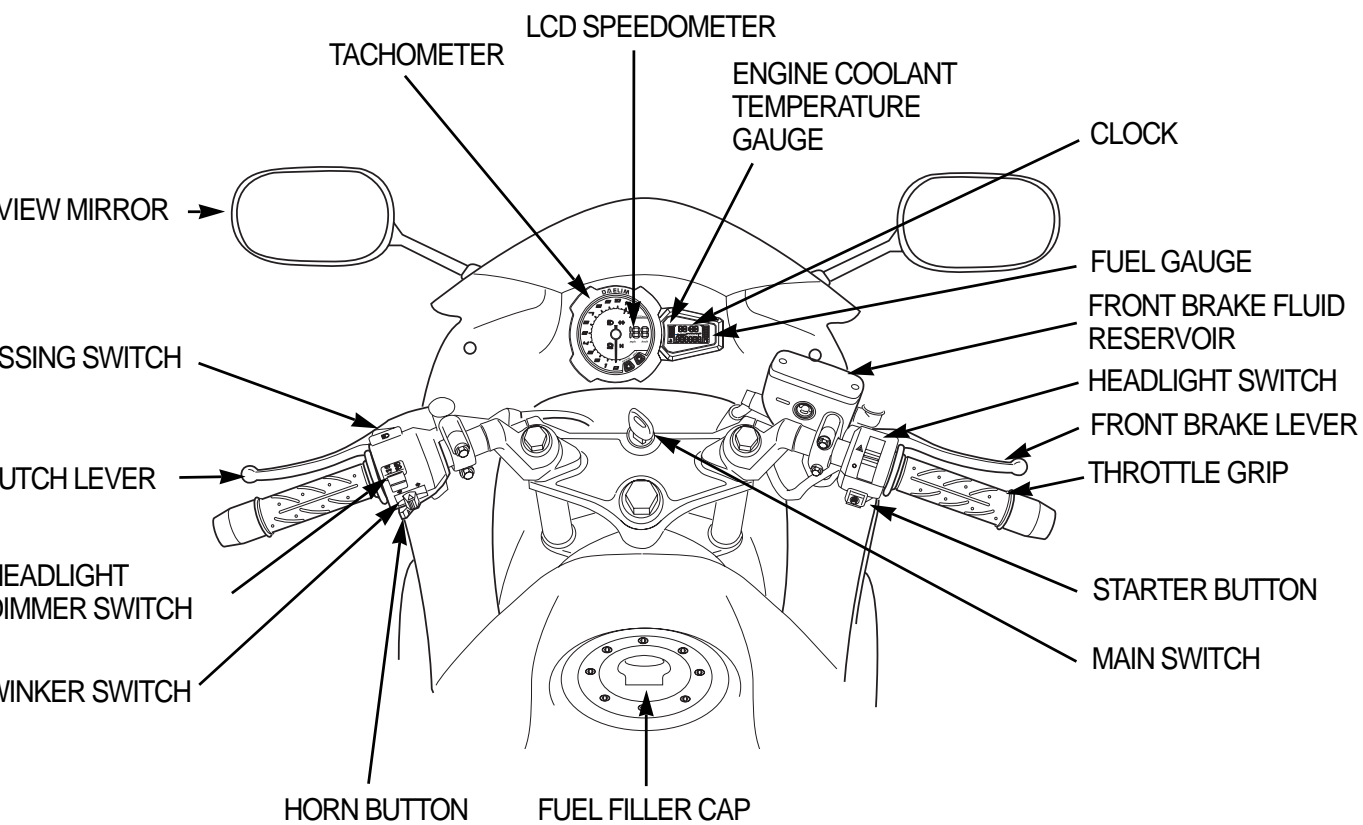


TS LOCATION

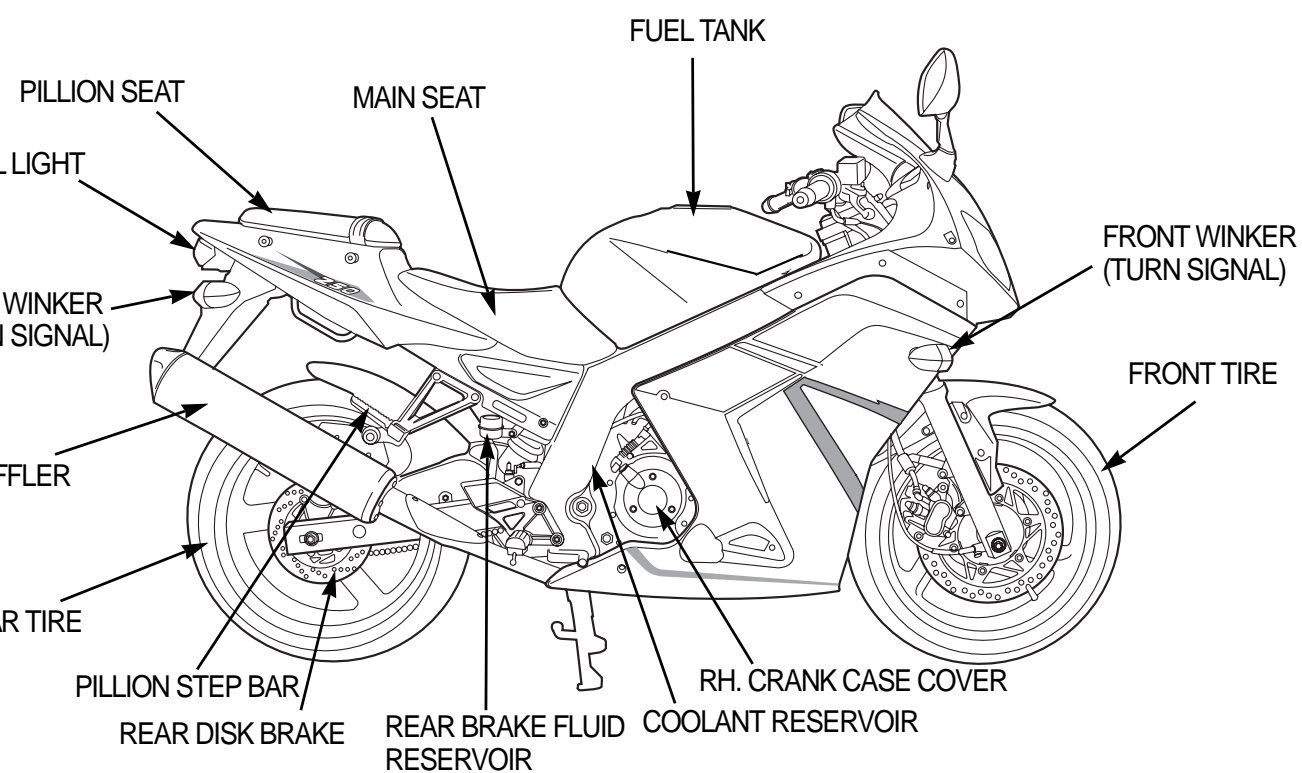

TS LOCATION

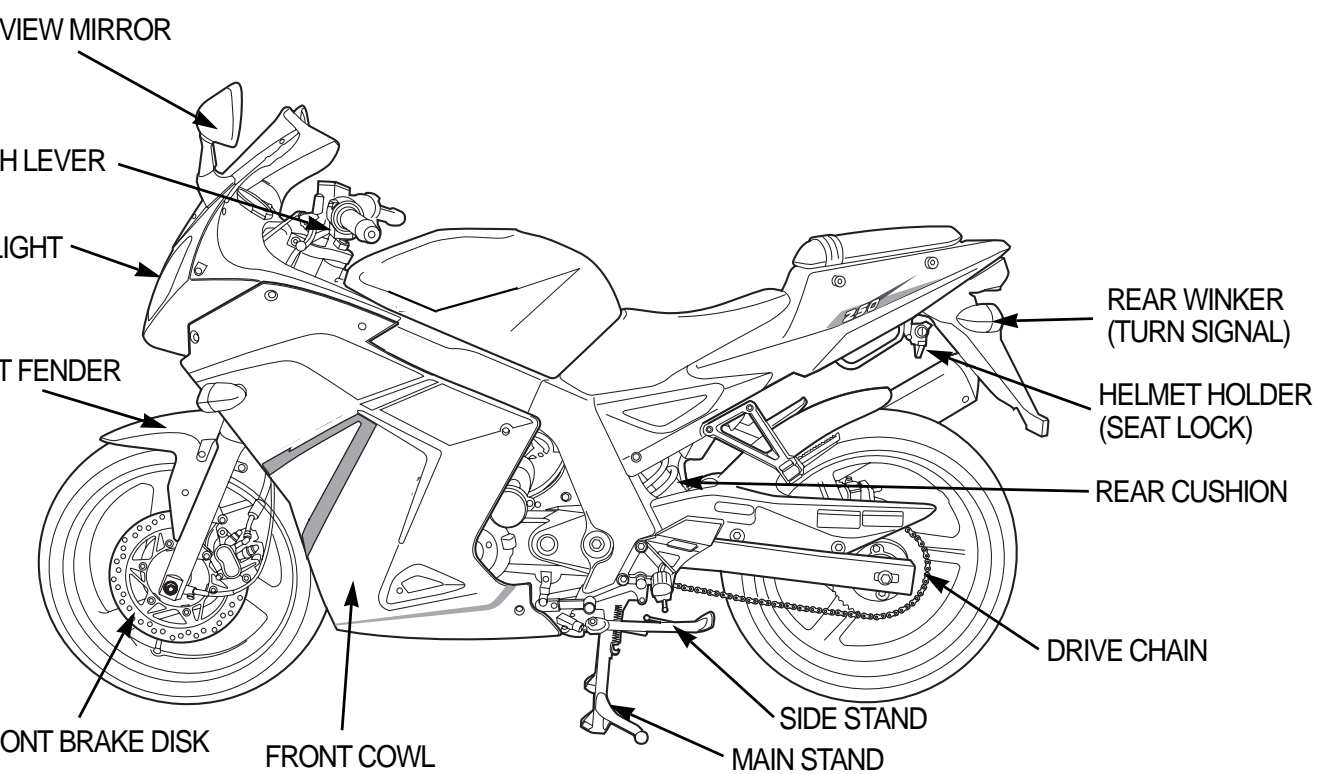

ER READING AND USAGE

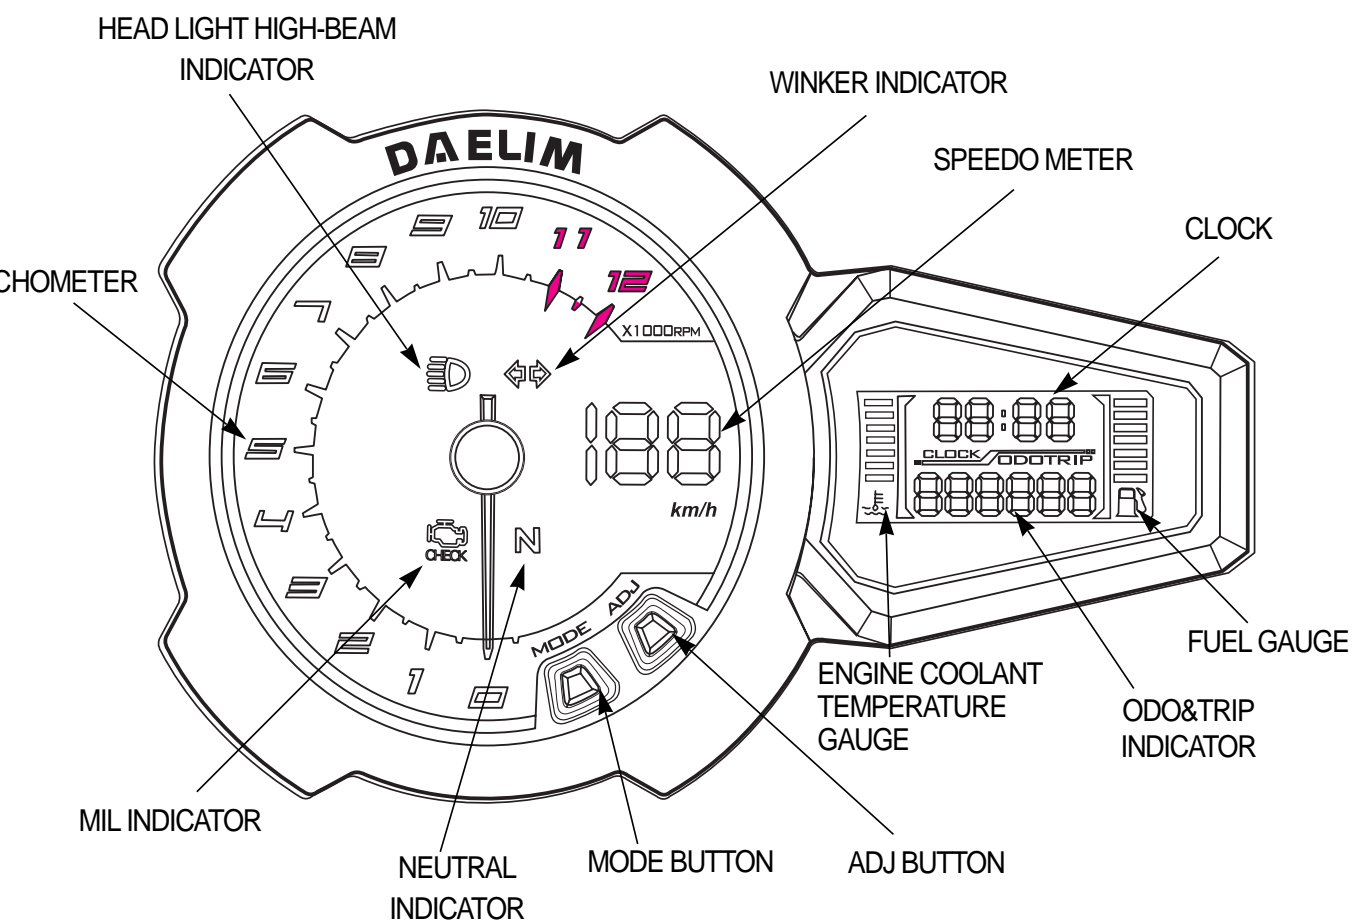

TER

SPEEDOMETER>

Shows riding speed.

ODMETER>

Shows accumulated mileage.

TRIPMETER>

Shows mileage per trip.

To reset the tripmeter, turn the tripmeter to the direction of arrow.

CHOMETER

Shows engine revolutions per minute.

CHOMETER RED ZONE>

Do not allow the tachometer needle to enter the red zone, even after the engine has been broken in.

CAUTION

Running the engine beyond recommended maximum engine speed(the beginning of the tachometer red zone)can damage the engine.

FUEL GAUGE

Indicates amount of gasoline in fuel tank. If needle is within E mark,immediately fill gasoline. Balance at this time is approximately 4.0 litres.

WARNING

- To avoid running out of fuel,it might cause serve injury due to engine abruptly stop.

INDICATOR LAMPS

<HIGH BEAM INDICATOR>

Lights when the headlight is on high beam. (blue)

<NEUTRAL INDICATOR>

Lights when the transmission is in neutral. (green)

<WINKER INDICATOR>

Flashes when the turn signal operates. (green)

<TIME SETTLEMENT>


Press the mode button for 2~3 seconds (flickering) then adjust time using mode button and ADJ button.

MIL<MALFUNCTION INDICATION LAMP>

- EMS(Engine Management System)is equipped with a self-diagnosis function in order to ensure that the engine control system is operation normally.
- If this function detects a malfunction in the system, the malfunction indicator lamp immediately operates. It gives the rider that malfunction has occurred in the system.
- Normally, the malfunction indicator lamp illuminates for 3 seconds when the main key is turned on. If the malfunction indicator lamp does not come on under these conditions, the malfunction indicator lamp may be defective.
- After 3 seconds, the malfunction indicator lamp off automatically. However, the MIL blinks continuously, check the EMS system. If you are not able to check the EMS system, contact your daelim dealers.
- The EMS takes fail-safe function, it enables to drive only temporary by starting even on conditioned.

MAIN SWITCH OPERATION

MAIN SWITCH

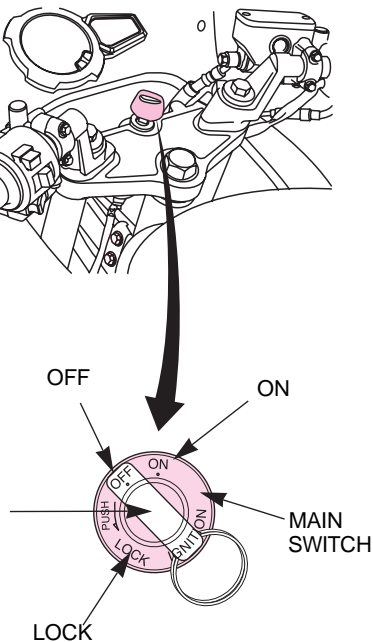

The main switch is used to turn on or turn off engine.
The main switch is below the indicator panel.

Key position	Function	Key Removal
ON	Starts engine. Power is supplied to electrical circuits.	Key cannot be removed
OFF	Stops engine. Cuts off all electrical circuits.	Key can be removed
LOCK	Locks steering wheel. Cuts off all electrical circuits and steering wheel is locked.	Key can be removed


⚠ CAUTION

- Do not operate main switch key during operation.
- If the main switch key is placed on "Off" or "Lock" position, all electrical system will not function.
- Never operate the main switch key during travel as it might cause unexpected accidents.
- If it is necessary to remove the main switch key, stop the vehicle first prior to removing.
- Prior to dismounting from the vehicle, make sure to lock the steering wheel and remove key.
- If the key is left in "ON" position without starting engine, battery is discharged.
- Do not use a number of keys together with a metal key holder.

The keys and the key holder may cause scratches or other damage to the cover while operating the vehicle.(Recommend cloth or leather key holders)

KEYS

The motorcycle has two keys and a key number plate. You will need the key number if you ever need to replace a lost key. Store the plate in a safe place.

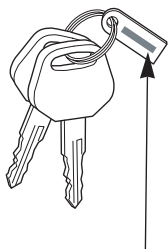

KEY NUMBER PLATE


NOTE

 
Do not drop the keys or set heavy objects on them.
Do not grind, drill or in any way alter the original shape of the keys.
Keep the keys away from magnetic objects.

HEADLIGHT

<HEADLIGHT SWITCH>


The headlight switch has three positions; ,  and OFF marked by a dot to the below of .

 : Headlight, taillight, position light and meter lights on.



 : Position light, taillight and meter lights on.

OFF (dot) : Headlight, taillight, position light and meter lights off.

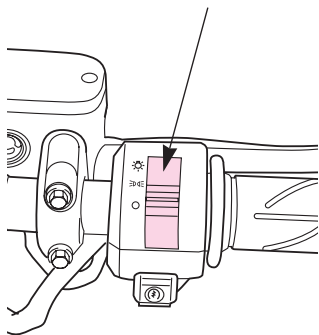HEADLIGHT SWITCH




<HEADLIGHT DIMMER SWITCH>

Push the dimmer switch to  (HI) to select high beam or to  (LO) to select low beam.

<PASSING LIGHT CONTROL SWITCH>

When this switch is pressed, the headlight flashes on to signal approaching cars or when passing.

PASSING LIGHT CONTROL SWITCH

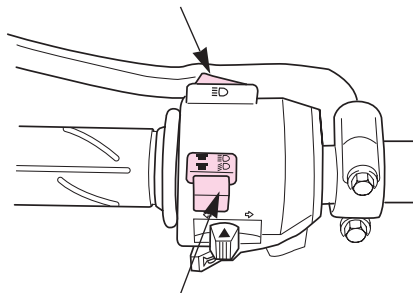

HEADLIGHT DIMMER SWITCH


CAUTION

- Use the high beam only in the suburban road or when the usage of the high beam not hinder the safe driving of the car ahead.

STARTER BUTTON

The starter button is next to the throttle

When the starter button is pressed, the starter motor cranks the engine. See page 15 for the starting procedure.

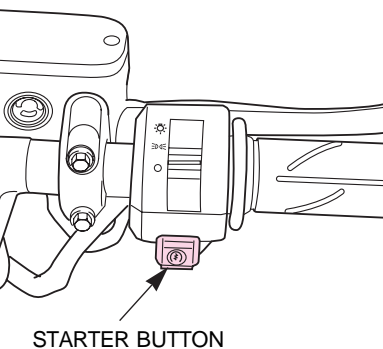


CAUTION

Do not press the starter button repeatedly because it consumes a great amount of power, causing the battery to be exhausted sooner.

WINKER SWITCH

Move the switch to \Leftarrow (L) to signal a left turn, \Rightarrow (R) to signal a right turn. Press the switch to turn the signal off.

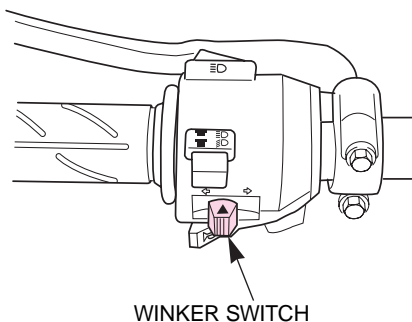


CAUTION

- The winker switch does not automatically turn back to its original position after completing the turn. Please set the switch back to its center position after turning.

HORN BUTTON


Press the button to sound the horn.

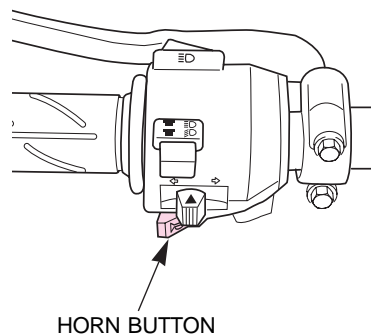

INSTRUMENT USAGE

STEERING LOCK

To lock the steering, turn the handlebars the way to the left or right, turn the key to LOCK while pushing in. To unlock the steering, turn the key to the right while pushing in.

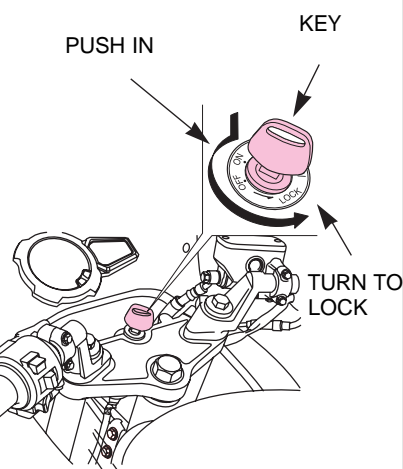


⚠ WARNING

Do not turn the key to LOCK while driving the vehicle.

SEAT


<MAIN SEAT>

To remove the main seat, insert the ignition key into the seat lock. Turn the ignition key counterclockwise, and then pull the seat back and up. To install the main seat, insert the tab into the recess under the frame and push down on the rear of the seat.

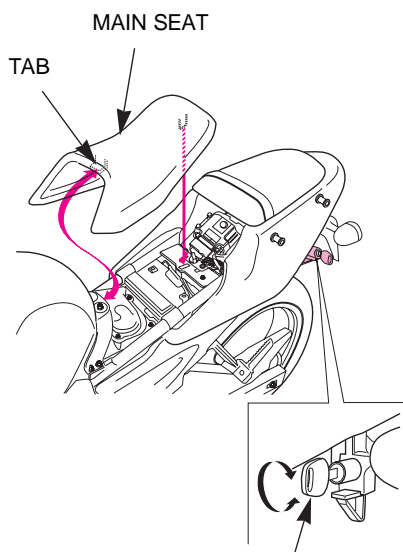

<PILLION SEAT>


To remove the pillionseat, remove both main seat and center cover, remove the seat mounting bolt, and then pull the seat front and up. To install the seat, insert the tab into the recess under the frame and tighten the mount bolt scurely.

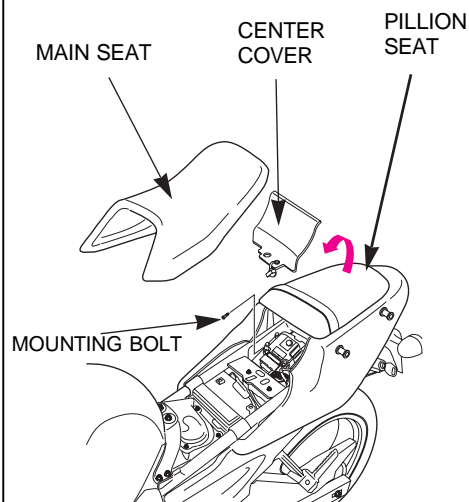

HELMET HOLDER

The helmet holder is on the left side below the seat. Insert the ignition key and turn it clockwise to unlock.

Place your helmet on the holder pin. Turn the key counterclockwise to lock the holder and then remove the key.

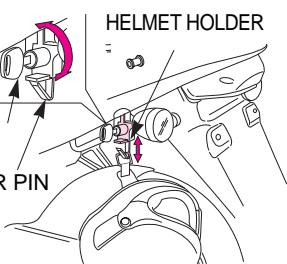

⚠ WARNING


The helmet holder is designed for helmet security while parked. Do not ride with a helmet attached to the holder; the helmet may interfere with safe operation and result in loss of control.

STORAGE COMPARTMENT

The storage compartment is under the seat. The owner's manual and the tool kit should be stored in the compartment. See the main seat (page 17).

Pull out the center cover while turning the lever to the left.

Reinstall the center cover by aligning its tabs and turning the lever to the right.

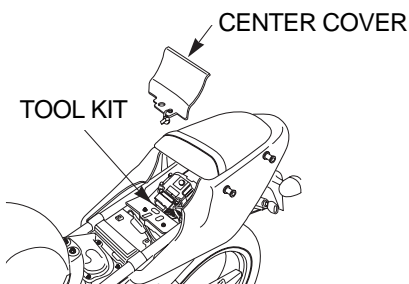

⚠ NOTE


- When washing your motorcycle, be careful not to flood this area with water. This compartment is for light weight items.

BRAKE LEVER ADJUSTER

- The brake lever adjuster is device regulating a space between the handle grip and the brake lever to brake easily.

<How to use adjuster>

1. Push the brake forward.
2. Turn the adjuster and set up the most fitting location among numerals (1 to 4).
3. Be sure that the numeral is align with an arrow, keep your hands off the brake lever, and confirm setting condition.

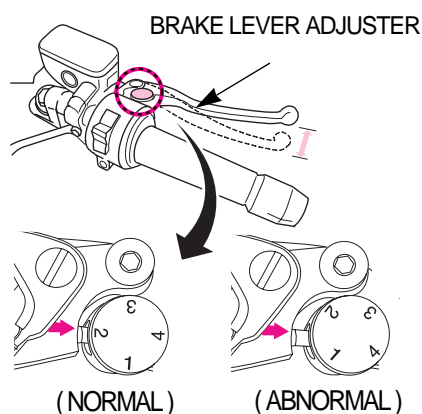

⚠ CAUTION

- If the numeral of the brake lever adjuster and an arrow are not fitting, The brake doesn't work and it is may cause the occurrence of an accident.
- If the free play of the brake lever is big or small, the brake doesn't work normally and it is may cause the occurrence of an accident.

INSPECTIONS BEFORE OPERATION

Inspect the motorcycle and have regular maintenance inspections for increased safety and the prevention of accidents.

Inspections before operation should be performed on a daily basis prior to riding the motorcycle.

BRAKES

The front and rear brake are the hydraulic disk type.

Check the brake pad wear, the brake fluid level, and the brake fluid.

There are no adjustments to perform, but the brake fluid level and pad wear must be inspected regularly. The system must be bled frequently to ensure there are no leaks.


If the control lever or pedal free travel becomes excessive and the brake pads are worn beyond the recommended limit, there is probably air in the brake system and it must be bled. See your authorized dealer for this service.

[FRONT BRAKE]

<BRAKE LEVER FREE PLAY>

Lightly squeeze the brake lever until tension is felt to check for an appropriate amount of free play. No free play in the brake lever or overly loose brake lever is indication of a problem in the brake system.

BRAKE LEVER FREE PLAY : 10~20mm

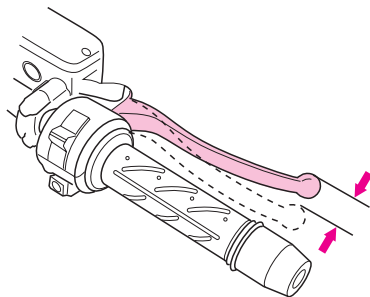

<FRONT BRAKE FLUID LEVEL>

⚠ WARNING

- Brake fluid may cause irritation. Avoid contact with skin or eyes. In case of contact, flush thoroughly with water and call a doctor if your eyes were exposed.
- KEEP OUT OF REACH OF CHILDREN

⚠ CAUTION

- When adding brake fluid, be very careful not to allow foreign materials to enter the reserve tank.
- Do not fill past upper level.
- This can cause brake fluid to leak out of the reserve tank.
- Do not let brake fluid contact vehicle parts as this damages painted areas.
- If oil contacts parts, quickly clean the fluid off using a dry cloth.
- Use recommended brake fluid as other types can undergo chemical changes.

Check that the fluid level is above the UPPER level mark with the motorcycle upright position.

If fluid must be added to the reservoir, never the fluid level begins to reach the LOWER level mark.

Remove the screws and master cylinder cap, diaphragm plate, and diaphragm.

Fill the reservoir with recommended brake fluid from a sealed container up to the UPPER level mark.

COMMENDED BRAKE FLUID DOT3

Install the diaphragm, diaphragm plate, and master cylinder cap.


Tighten the screws securely.

checks :

Make sure there are no fluid leaks.

Check for deterioration or cracks in the hose and fitting.

Check the brake pad for wear when filling with brake fluid.

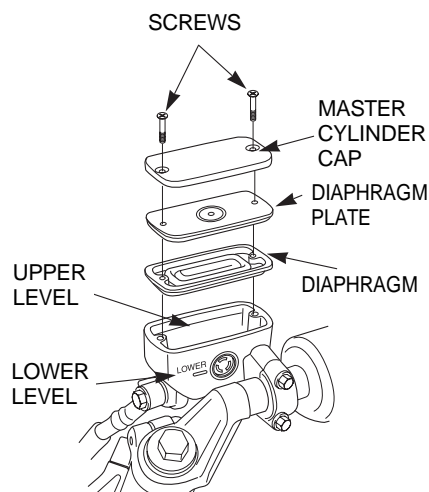


[REAR BRAKE]

<BRAKE PEDAL FREE PLAY>


Lightly squeeze the brake pedal until tension is felt to check for an appropriate amount of free play. No free play in the brake pedal or overly loosen brake pedal is indication of a problem in the brake system.

BRAKE PEDAL FREE PLAY :
10 ~ 20 mm

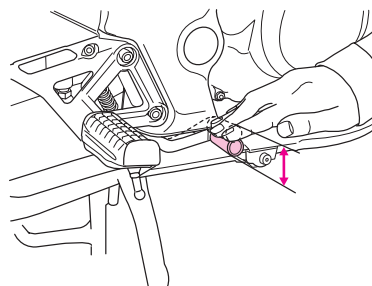

CAUTION

- When adding brake fluid, be very careful not to allow foreign materials to enter the reserve tank.
- Do not fill past upper level. This can cause brake fluid to leak out of the reserve tank.
- Do not let brake fluid contact vehicle parts as this damages painted areas. If oil contacts parts, quickly clean the fluid off using a dry cloth.
- Use recommended brake fluid as other types can undergo chemical changes.

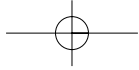

⚠ WARNING

Brake fluid may cause irritation.
Avoid contact with skin or eyes. In
case of contact, flush thoroughly with
water and call a doctor if your eyes
were exposed.
KEEP OUT OF REACH OF CHILDREN

Check the brake fluid level with the
cycle in an upright position.
Fluid must be added to the reservoir
before the fluid level begins to reach
the LOWER level mark.


Remove the reservoir cap, reservoir cap
plate, and diaphragm.
Fill the reservoir with recommended
brake fluid from a sealed container up
to the UPPER level mark.

RECOMMENDED BRAKE FLUID is DOT 3

Install the diaphragm, reservoir cap
plate and cap securely.

Other checks :

Make sure there are no fluid leaks.
Check for deterioration or cracks in the
hose and fitting.
Check the brake pad for wear when
refilling with brake fluid.

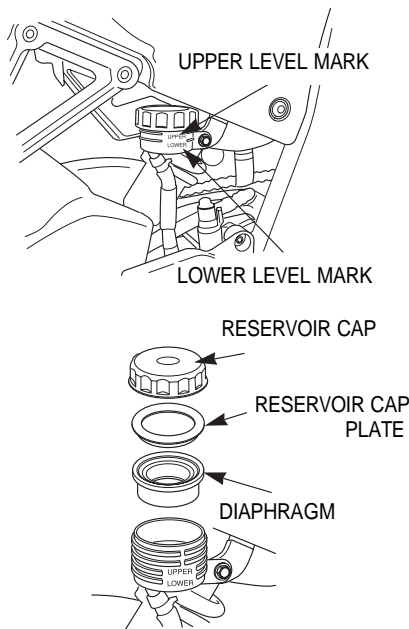



TIRES

<TIRE PRESSURE CHECK>

Check for an appropriate level of air
pressure by examining how the tire sits on
the ground. If you notice any abnormali-
ties in the shape of the tire with regard to
the area contacting the ground, use a tire
gauge to check tire pressure and adjust the
tire pressure to the appropriate level.


<TIRE PRESSURE>

SIZE	FRONT	110/70-17 54S	
	REAR	140/60-17 69S	
TIRE PRESSURE (kgf/cmf)	WITH ONE PERSON	FRONT	2.00
		REAR	2.00
	WITH TWO PERSON	FRONT	2.00
		REAR	2.25

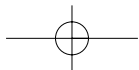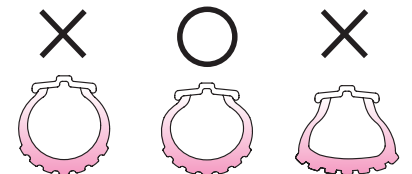


<CRACKS/DAMAGE>

Check tire tread and sides for cracks and damage.

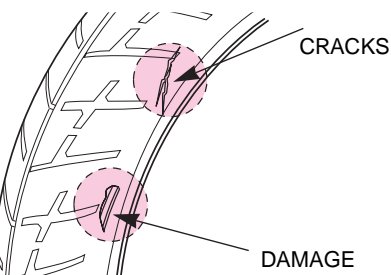


<NORMAL WEAR>

Check tire tread for signs of abnormal wear.

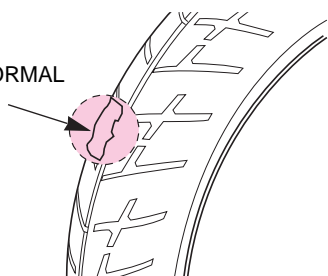

<FOREIGN MATERIALS>


Check tire tread and sides for nails, rocks, etc. That might have become wedged in the tire.

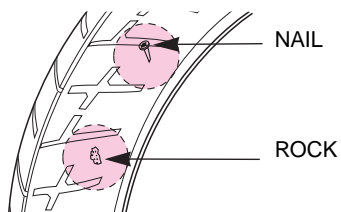

<TREAD DEPTH>

Check the wear indicator (wear limit marking) to see if there is an insufficient amount of tread remaining.

If the indicators are visible, replace tire with a new one.

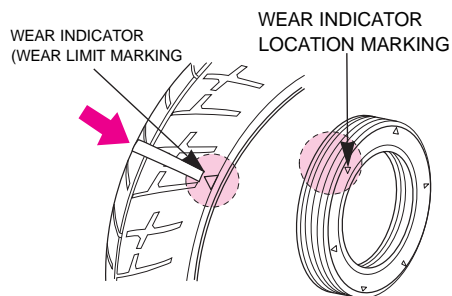

⚠ CAUTION


- If air pressure is inadequate or if there are cracks, damage or abnormal wear on tires, it may cause trembling steering wheel and flat tire.
- Insufficient air pressure may cause the heavy steering wheel making handling difficult, fuel over consumption and the excessive wear of tire outer area and excessive air pressure may cause easier wheel handling and lower fuel consumption. But it may also cause the excessive wear of tire center area.
- This motorcycle is equipped with tubeless tires. If you have flat tires, please contact authorised maintenance shops for inspection.

CLUTCH

An adjustment may be required if the motorcycle stalls when shifting into gear or if the clutch slips, or if the acceleration to lag behind engine speed.


Adjustments can be made with the cable adjuster at the lever.

CLUTCH LEVER FREE PLAY: 10~20mm

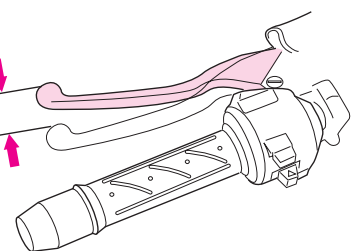


<CLUTCH LEVER ADJUSTMENT>

1. Loosen the lock nut and turn the adjuster. Tighten the lock nut and check the adjustment.
2. If the adjuster is threaded out near its limit or if the correct free play cannot be obtained, loosen the lock nut and turn in the cable adjuster completely. Tighten the lock nut.

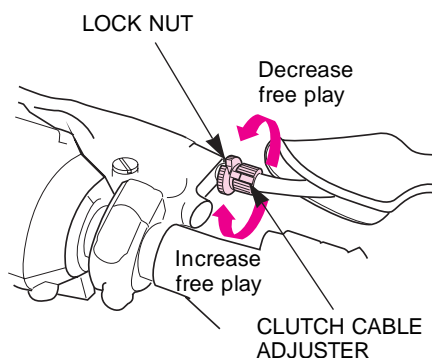

3. Loosen the lock nut at the lower end of the cable. Turn the adjusting nut to obtain the specified free play. Tighten the lock nut and check the adjustment.

4. Start the engine, pull in the clutch lever and shift into gear. Make sure the engine does not stall and the motorcycle does not creep. Gradually release the clutch lever and open the throttle. The motorcycle should begin to move smoothly and accelerate gradually.

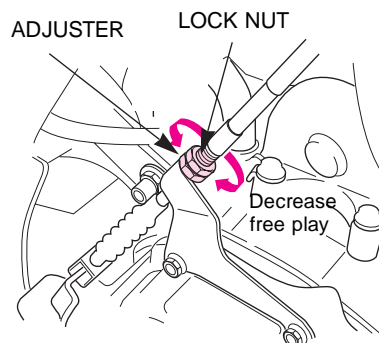


NOTE

- If proper adjustment cannot be obtained or the clutch does not work correctly, see your Daelim dealer.

EL

FUEL TANK

fuel tank capacity including the
ve supply is : **150**
open the fuel fill cap;
insert the ignition key and turn it
clockwise.
the cap is hinged and will lift up.
not overfill the tank. There should
no fuel in the filler neck.
After refueling, to close the fuel fill
cap, push the cap into the filler neck
until it snaps closed and locks.
Remove the key.

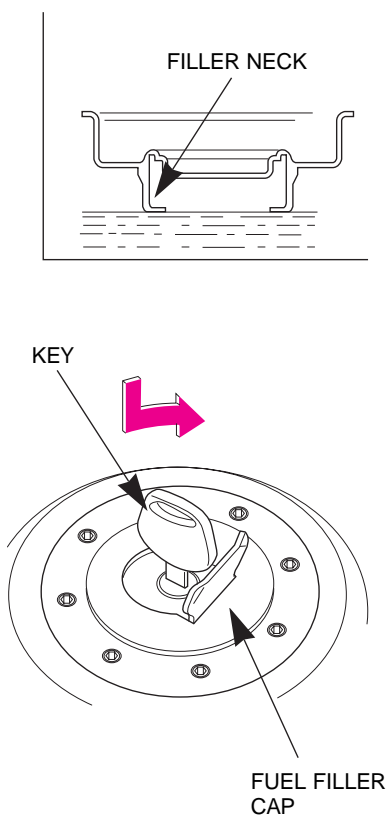

⚠ WARNING

- Gasoline is extremely flammable and is explosive under certain conditions. Refuel in a well-ventilated area with the engine stopped. Do not smoke or allow flames or sparks in the area where gasoline is stored or where the fuel tank is refueled.
- Do not overfill the tank. After refueling, make sure the fuel fill cap is closed securely.
- Avoid repeated or prolonged contact with skin or breathing of vapor.
KEEP OUT OF REACH OF CHILDREN.

ENGINE OIL

ENGINE OIL LEVEL CHECK>

Check the engine oil level each day before starting the motorcycle.

The oil level must be maintained between the upper and lower level marks on the oil level gauge.

Start the engine and let it idle for a few minutes.

Stop the engine and put the motorcycle on its main stand on level ground.

After a few minutes, remove the oil level gauge, wipe it clean, and reinsert the gauge without screwing it in.

Remove the gauge. The oil level should be between the upper and lower marks on the oil level gauge.

If required, add the specified oil up to the upper level mark.


Do not overfill.

Reinstall the oil level gauge.

Check for oil leaks.

CAUTION

- Running the engine with insufficient oil pressure may cause serious engine damage.

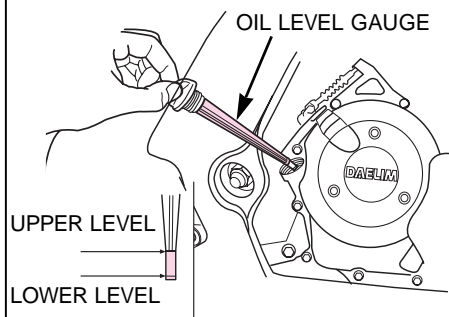

LIGHTS AND WINKER

<HEADLIGHT, TAILLIGHT>

Start the engine and make sure the lights turn on. Also check to see if the lights are damaged or if there is dirt on them.

<BRAKE LIGHT CHECK>


Turn the main switch to ON.

While separately operating the front and rear brakes, check to see if the brake light turns on. Also check to see if there is any damage to the lens or if there is dirt on the brake light.

<WINKER CHECK>

Turn the main switch to ON.

Check to see if all the winker in the front and rear of the vehicle (including left and right sides) are flashing properly. At the same time, check to make sure that the automatic sound signal of the winker is working. Check also to see if any of the lens are damaged or dirty.

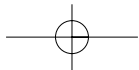

OPERATION

REAR VIEW MIRROR

Squarely on the seat and check to see if you have a good view behind the vehicle by looking at the rear view mirrors. Also check for dirt and damage on the rear view mirrors.

LICENSE PLATE

Check to see if there is any dirt or damage on the license plate. Also check to see if the license plate is properly secured to the vehicle.

PRE-RIDE INSPECTION

⚠ WARNING

- If the pre-ride inspection is not performed, severe personal injury or motorcycle damage may result.

Inspect your motorcycle every day before you ride it. The items listed here will only take a few minutes to inspect, and in the long run they can save time, expense, and possibly your life.



- Check for signs of abnormality which might have occurred on the previous day.
- Engine oil level - add engine oil if required (page 25). Check for leaks.
- Fuel level - fill fuel tank when necessary (page 24). Check for leaks.
- Front and rear brakes - check operation; make sure that there is no brake fluid leakage (page 19~21).
- Tires - check condition and pressure (page 21~22).
- Drive chain - check condition and slack (page 39~40). Adjust and lubricate if necessary.

- Throttle - check for smooth opening and full closing in all steering positions.
- Lights and horn - check that headlight, tail/brake light, turn signals, indicators and horn function properly.
- Side stand switch ignition cut-off system - check for proper function (page 42).
- Angle rear view mirror.

⚠ CAUTION

- Observe safety rules when conducting inspections. Conduct inspections on a flat, solid ground with the main stand erected.

If you are unable to correct trouble even after you make adjustment or correction, contact authorized maintenance shops, dealers or designated repair shops for necessary inspection and repairs.

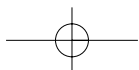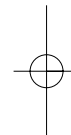

STARTING THE ENGINE

Always follow the proper starting procedure described below.

This motorcycle is equipped with a side stand and ignition cut-off system. The engine cannot be started if the side stand is down, unless the transmission is in neutral. If the side stand is up, the engine can be started in neutral or in gear with the clutch lever pulled in. After starting with the side stand down, the engine will shut off if the transmission is put in gear before pulling the side stand.

⚠ WARNING

Never run the engine in an enclosed area. The exhaust contains poisonous carbon monoxide gas that can cause loss of consciousness and lead to death.

⚠ CAUTION

Do not keep the starter button pressed for more than 5 seconds at a time. Release the starter button for approximately 10 seconds before pressing it again.

<PREPARATION>

Before starting, insert the key, turn the ignition switch ON and confirm the following:


- The transmission is in NEUTRAL (neutral indicator light ON)
- Check to see if the MIL is illuminating for 3 second.
- Check to see if the side stand is in pulled back.

<NORMAL>

1. Close throttle grip, and press starter button.
2. If engine is not started, Repeat "1".

<WHEN ENGINE IS COLD>

1. Close throttle grip and press starter button.
2. If engine is not started with 1-2 times trial, open throttle grip approximately 1/8 to 1/4 and press starter button.

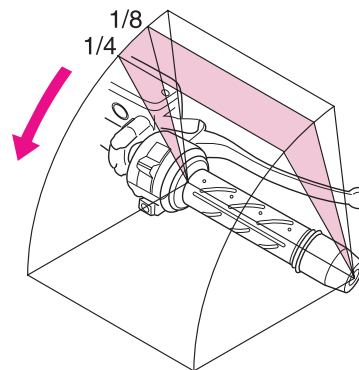

3. Once engine is started, pull and release throttle grip repeatedly to run engine idle until engine is heated.

It is possible that starting will be more difficult if the vehicle has not been used for a long period of time or if the fuel filter is plugged up (starting problems occur even when there is sufficient fuel in the fuel tank may be an indication of a clogged fuel hole).
When this happens, do not rotate the starter button grip and try the starter button a few times.

▲ NOTE

Do not run engine idle unreasonably. This not only wastes fuel but also adversely affects engine.

When the starter button is pressed in gear position, vehicle may bring out to stall. Make sure gear is in neutral position prior to starting engine.

IF ENGINE CANNOT BE STARTED

If engine cannot be started or vehicle does not move, check the followings.

- Is there fuel in fuel tank?
- Are you operating in accordance with the instructions given in user's manual?
- Is fuse not cut?
- Is starter motor running?
- If starter motor is not running due to battery consumption, charge the battery.
- If the MIL blinks continuously when the main key is on, inquiry to the daelim dealer.

RUNNING-IN

During initial running-in newly machined surfaces will be in contact with each other and these surfaces will wear in quickly. Running-in maintenance at 1,000km is designed to compensate for this initial minor wear.

Timely performance of the running-in maintenance will ensure optimum service life and performance from the engine.

The general rules as follows:

1. Never labour the engine with full throttle at low engine speeds. This rule is applicable not only during running-in but at all times.
2. Maximum continuous engine speed during the first 1,000km must not exceed 5,000 rpm.

▲ CAUTION

- Running the engine beyond recommended maximum engine speed (the beginning of the tachometer red zone) can damage the engine.

ING

After the engine has been warmed up, the motorcycle is ready for riding.

While the engine is idling, pull in the clutch lever and depress the gearshift pedal to shift into 1st (low) gear.

Slowly release the clutch lever and at the same time gradually increase engine speed by opening the throttle. Coordination of the throttle and clutch lever will assure a smooth positive start.

When the motorcycle attains a moderate speed, close the throttle, pull in the clutch lever and shift to 2nd gear by depressing the gearshift pedal.


This sequence is repeated to progressively shift to 3rd, 4th, 5th (top) gear.

Coordinate the throttle and brakes for both deceleration.

Both front and rear brakes should be applied at the same time and should not be applied strongly enough to lock the wheels, or braking effectiveness will be reduced and control of the motorcycle will be difficult.

<GEAR DOWN OPERATION>

If you gear down when you need to drastically accelerate speed such as when you are passing another motorcycle, speed can be accelerated. If you ride too fast, it adversely affects engine because engine revolution is excessive.

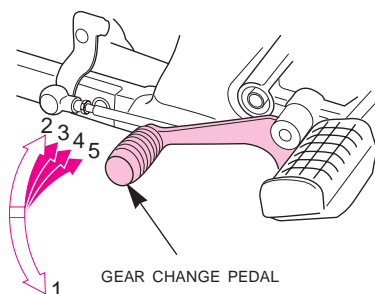

CAUTION

- Touch pedal lightly with foot and shift gear perfectly until you hear "Click" at the pedal. If you apply excessive force when shifting gear, transmission may be damaged.

NOTE

- Make sure side stand is in original position prior to starting motorcycle. If side stand moves unsatisfactorily, check lubrication state on side stand joint.
- Shift gear adequately according to vehicle speed.
- To save fuel and maintain optimum vehicle life, do not accelerate or decelerate speed abruptly.
- Always start in the 1st gear, and start carefully as slow as possible.
- If you hear abnormal noise during travel, contact authorized maintenance shop immediately for inspection and necessary action.
- Maintain legal speed limits.

BRAKING

For normal braking, gradually apply both the front and rear brakes while downshifting to suit your road speed. For maximum deceleration, close the throttle and apply the front and rear brakes firmly.


⚠ WARNING

If you apply brakes only on front wheel or rear wheel, vehicle may slide off sideways and fall.

If you apply brakes abruptly during travel in rain or on wet road, tires slide off and may cause accidents. Reduce speed and apply brake cautiously.

Avoid repeated brake operation as it may cause brake temperature to rise, leading to braking effect deterioration.

When possible, reduce speed or brake before entering a turn; closing the throttle or braking in mid-turn may cause wheel slip. Wheel slip will reduce control of the motorcycle.

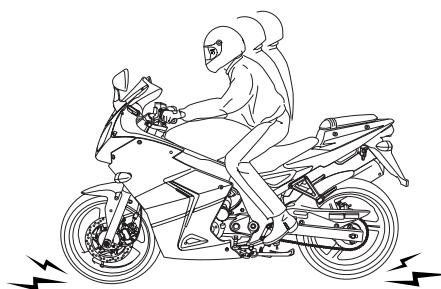

<ENGINE BRAKE>

If you turn throttle grip in reverse, engine brake functions and, if you need stronger braking, shift gear down from 4th to 3rd and so forth. When you travel on a long descent or on a sharp descent, use intermittent braking technique and engine brake simultaneously.

⚠ CAUTION


- Do not shift to lower gear while traveling at an excessive speed as it may suddenly increase the engine speed, adversely affect the engine and transmission, and cause the rear part of the vehicle to be shaken.

PARKING

1. After stopping the vehicle, shift the transmission into neutral, turn the fuel cock OFF, turn the ignition switch OFF and remove the key.
2. Put the vehicle on main stand and park on level ground in places free of traffic.
3. Use the side stand to support the vehicle while parked.
4. Turn the handlebar fully to the left and lock the steering to help prevent theft.

⚠ CAUTION

- Park the vehicle on firm, level ground to prevent it from falling over.
- Park in a safe area that will not block traffic. When you parked the vehicle after driving, make sure foot the vehicle beyond man's reach because engine and muffler are still hot.
- If you must park on a slight incline, aim the front of the vehicle uphill to reduce the possibility of rolling off the side stand or overturning.


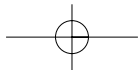



MAINTENANCE

The Required Maintenance Schedule specifies how often you should have your motorcycle served, and what things need attention. It is essential that your motorcycle be served as scheduled to retain its high level of safety, dependability, and emission control performance.

These instructions are based on the assumption that the motorcycle will be used exclusively for its designed purpose. Sustained high speed operation, or operation in unusually wet or dusty conditions, will require more frequent service than specified in the MAINTENANCE SCHEDULE.

Consult your authorized Daelim dealer for recommendations applicable to your individual needs and use.

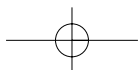
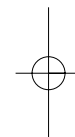


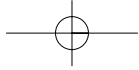

MAINTENANCE SCHEDULE

Perform the Self Inspections Before Operation at each scheduled maintenance period.
INSPECT AND, CLEAN, ADJUST, LUBRICATE OR REPLACE IF NECESSARY
R: REPLACE L: LUBRICATE C: CLEAN

ITEM		FREQUENCY	ODOMETER READING(NOTE1)						REMARK
			1,000Km	1	4	8	12	16	
			MONTH	1	6	12	18	24	
★	FUEL LINE				I	I	I	I	
★	THROTTLE OPERATION			I	I	I	I	I	
	AIR CLEANER ELEMENT				R	R	R	R	NOTE(2)
	SPARK PLUG				I	R	I	R	
★	VALVE CLEARANCE				I	I	I	R	
★	ENGINE OIL			R	R	R	R	R	
★	ENGINE OIL FILTER			R	R	R	R	R	
★	DRIVE CHAIN			Every 1,000Km : I and L					
★	COOLANT CHECK			I	I	R	I	R	

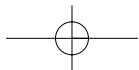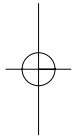

ITEM	FREQUENCY	ODOMETER READING(NOTE 1)						REMARK
		1,000Km	1	4	8	12	16	
		MONTH	1	6	12	18	24	
✓	BRAKE FLUID		I	I	I	I	R	NOTE(3)
✓	BRAKE SHOE / PAD WEAR		I	I	I	I	I	
	BRAKE SYSTEM		I	I	I	I	I	
✓	BRAKE STOP SWITCH		I	I	I	I	I	
✓	HEADLIGHT ADJUSTMENT		I	I	I	I	I	
✓	SUSPENSION				I		I	
	CLUTCH		I	I	I	I	I	
	SIDE STAND			I	I	I	I	
✓	BOLTS, NUTS, FASTENERS		I		I		I	
★	WHEELS / TIRES		I	I	I	I	I	
★	STEERING HANDLE BEARING		I	I	I	I	I	

If you do not have the appropriate tools or information to conduct maintenance, or if you feel you are not capable to perform maintenance on this vehicle, inquiry to the authorized dealers or repair shops for maintenance and repairs.

To ensure safety, inspections and maintenance of these parts must be carried out by dealers, or repair centers.

NOTES : (1) At higher odometer readings, repeat at the frequency interval established here.

(2) Service more frequently when riding in unusually wet or dusty areas.


(3) Replace every 2 years, or at indicated odometer interval, whichever comes first. Replacement requires mechanical skill.

TOOL KIT

Tool kit is under the seat (page 17).


For roadside repairs, minor adjustments and parts replacement can be performed with the tools contained in the kit.

- 2 screwdriver
- Screwdriver grip
- 12mm Box wrench
- 12mm Spanner
- 12mm Hex wrench
- Tool bag

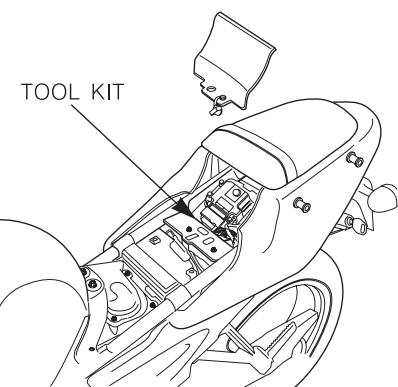


FRAME NUMBER, ENGINE NUMBER

- The frame number, engine number are needed when registering your motorcycle.
- They may also be required by your dealer when ordering replacement parts.
- Record the numbers here for your reference.

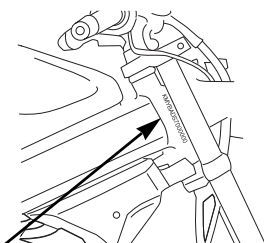

FRAME NUMBER


- The frame number is stamped on the left side of the steering head.
- The engine number is stamped on under of the left crankcase.

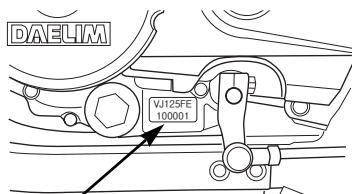

ENGINE NUMBER

VIN PLATE LOCATION

Vin Plate is located on the pipe of RH. engine hanger under the radiator.

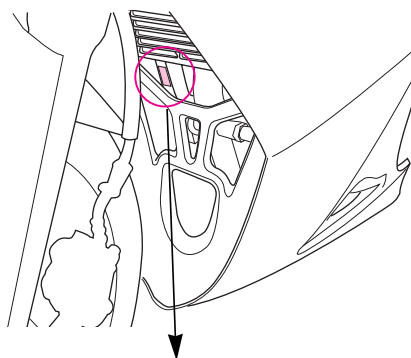

DAELIM MOTOR CO., LTD.

e9*2002/24*0355

* KMYBZ1BLS ?C000001 *

86 db(A) - 4,500 rpm

MAINTENANCE PRECAUTIONS

Following is an explanation of correct section methods, cleaning and parts being. Please always refer to this when wanting to inspect or repair motorcycle.

⚠ WARNING


If your motorcycle is overturned or involved in a collision, inspect control levers, cables, brake hoses, calipers, accessories, and other vital parts for damage.
Do not ride the vehicle if damage impairs safe operation. Have your authorized dealer inspect the major components, including frame, suspension and damage that you may not be able to detect.
Use new, genuine Daelim parts or their equivalent for maintenance and repair. Parts which are not of equivalent quality may impair the safety of your motorcycle and the effective operation of the emission control systems.

⚠ CAUTION

- Always observe safety rules when performing maintenance on the vehicle.
- Choose a flat surface and make sure the main stand is in a secure down position.
- Use correct tools.
- Conduct engine maintenance with the engine key out of the ignition.
- Be careful around the engine and muffler when performing maintenance as these areas can become extremely hot.
- After self maintenance, the waste material must be packed in the specified container and entrusted disposal to the authorized disposal company.
- Exhaust gas contains harmful substance such as carbon monoxide. Do not carry out inspections on vehicle in closed places, or in poorly ventilated places, with engine running.

THROTTLE OPERATION

- Check for smooth rotation of the throttle grip from the fully open to the fully closed position at both full steering positions.
- Measure the throttle grip free play at the throttle grip flange. The standard free play should be approx : **2~6mm**
- To adjust the free play, loosen the lock nut and turn the adjuster.

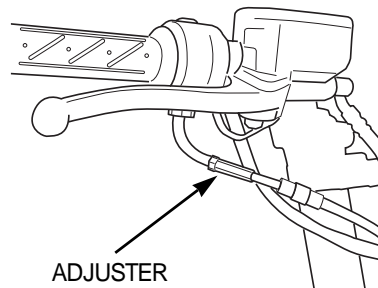

⚠ WARNING

- Operating the motorcycle with an inadequate throttle grip free play can be hazardous. Inadequate throttle grip free play can cause engine speed to rise suddenly when you turn the handlebars.

AIR CLEANER

If the element becomes dirty, there is greater intake resistance, resulting in decreased power output and increased fuel consumption.

The air cleaner should be serviced at regular intervals (page 32).

Service more frequently when riding in dusty areas.


CAUTION

Do not operate the engine without the air cleaner element in place or severe engine damage may result.

If you usually ride in dusty areas or regularly operate in vehicle in wet, muddy conditions, you must inspect the air cleaner element more frequently than shown in the maintenance schedule.


At any time, the air cleaner element is submerged in water, immediately clean the element and the inside of the air cleaner cover.

1. Remove the main seat. (page 17)
2. Loosen the screws and remove the air cleaner element cover.
3. Remove the air cleaner element.
4. Replace the air cleaner element by new one if it is excessively dirty, torn or damaged.
5. Install the removed parts in reverse order of removal.

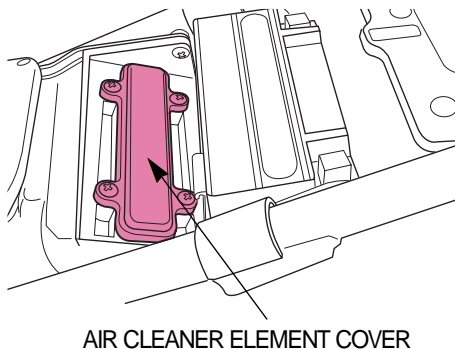

AIR CLEANER CASE COVER

AIR CLEANER ELEMENT

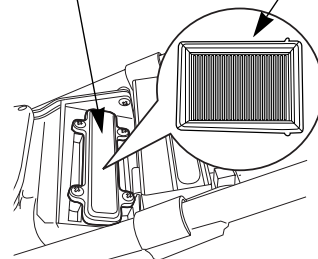

CAUTION

- If air cleaner element is inadequately assembled, dust and other waste materials are absorbed directly inducing cylinder wear and output deterioration, and adversely affecting engine durability. Assemble correctly.

ENGINE OIL

If engine oil is polluted, it seriously affects the engine life span. Maintain appropriate level of oil, use correct type of oil and observe oil exchange period.

Place vehicle on the main stand on level ground and run engine idle (warm up) for approximately 2-3 minutes. Stop engine and place a container under the oil drain bolt. Remove oil level gauge and oil drain bolt, and drain the oil. Tighten the oil drain bolt.

OIL DRAIN BOLT TORQUE: 1.5 kgf · m

Fill the crankcase with the recommended grade oil.

OIL CAPACITY :

-FULL : 1.5ℓ

-EXCHANGE: 1.3ℓ



-FILTER EXCHANGE: 1.35ℓ

Start the engine and keep it idle for a few minutes.

Stop the engine and check the oil level. If the oil level is low, add the recommended engine oil. Check on oil leaks.

⚠ WARNING

- Be sure to keep oil away from children and pets. Dispose of used oil properly

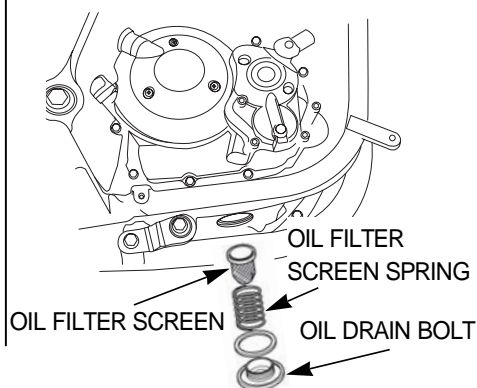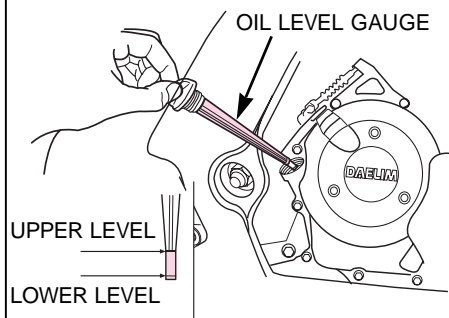

<RECOMMENDED OIL>

If oil sold on markets or privately-manufactured oil (low-grade) is used, engine life is adversely affected, and the privilege of warranty repairs cannot be guaranteed.

GRADE (SE, SF, SH)

⚠ CAUTION

- If you change engine oil immediately after engine is stopped, be careful of burns because the engine, muffler and engine oil are still hot.
- Exercise caution not to allow dust or other foreign matter to flow in when refilling engine oil.
- If oil level is lower or higher than prescribed level, engine is adversely affected.
- Do not mix oil with those of different manufacturers or grade, or do not use low-quality oil as it may cause deterioration of oil, leading to accidents.

SPARK PLUG

Electrode is stained or plug gap is not satisfactory spark is not produced.

Recommended plug :
Standard : **CR9EH-9**


Remove the spark plug cover to remove spark plug.

Disconnect the spark plug cap from the spark plug.

Remove any dirt from around the spark plug base.

Remove the spark plug using the spark plug wrench furnished in the tool kit.

SPARK PLUG WRENCH

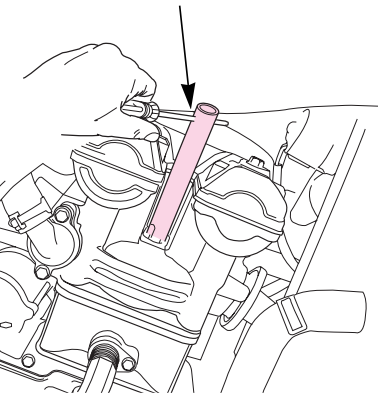


4. Inspect the electrode and center porcelain for deposits, erosion or carbon fouling. If the erosion or deposit is heavy, replace the plug. Clean a carbon or wet-fouled plug with a plug cleaner, otherwise use a wire brush.

5. Check the spark plug gap using a wire-type feeler gauge. If adjustment is necessary, bend the side electrode carefully.

The gap should be : **0.8~0.9mm**

SIDE ELECTRODE

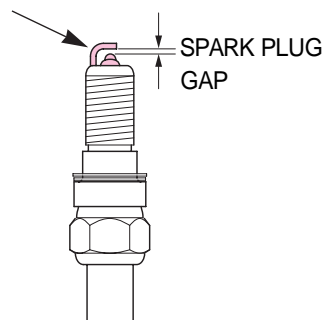

6. With the plug washer attached, thread the spark plug in by hand to prevent cross-threading.

7. Tighten the spark plug 1/2 turn with a spark plug wrench to compress the washer.

8. Reinstall the spark plug cap and the spark plug cover.

CAUTION

- If plug of different maker or different heat value is used, it causes unsatisfactory engine starting, inadequate engine revolution and output deterioration.

- The spark plug must be securely tightened. An improperly tightened plug can become very hot and possibly damage the engine.

- To install a spark plug, turn it in as far as possible with your fingers, then tighten it with a wrench.

Do not overtighten or cross thread the spark plug or the aluminum threads of the cylinder head will be damaged. Do not allow contaminants to enter the engine through the spark plug hole when the plug is removed.

DRIVE CHAIN

The service life of drive chain is dependent upon proper lubrication and adjustment. Poor maintenance can cause premature wear or damage to the drive chain and sprocket.

The drive chain should be checked and lubricated as part of the Pre-ride inspection.


Under severe usage, or when the vehicle is ridden in unusually dusty or bumpy areas, more frequent maintenance will be necessary.

⚠ WARNING

For your safety, drive chain condition and adjustment should be checked prior to each use of the vehicle. Always follow the manufacturer's recommendations for proper lubrication and replacement of the chain.

<INSPECTION>

1. Turn the engine off, put motorcycle in upright position on the main stand and shift the transmission into neutral.
2. Check slack in the lower drive chain run midway between the sprockets. Drive chain slack should be adjusted to allow the following vertical movement by hand: **25~35 mm**
3. Roll the motorcycle forward. Stop check drive chain slack. Repeat this procedure several times. Drive chain slack should remain constant. If the chain is slack only in certain sections, some links are kinked and binding. Binding and kinking can frequently be eliminated by lubrication.

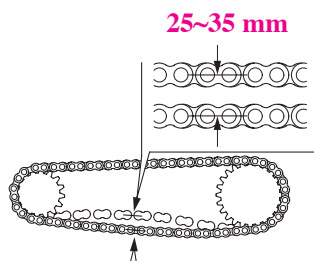

4. Rotate the rear wheel slowly and inspect the drive chain and sprockets for any of the following conditions:

■ DRIVE CHAIN

- ① Damaged rollers
- ② Loose Pins
- ③ Dry or Rusted Link
- ④ Kinked or Binding Link
- ⑤ Excessive Wear
- ⑥ Improper Adjustment
- ⑦ Missing O-ring

■ SPROCKETS

- ⑧ Excessively Worn Teeth
- ⑨ Broken or Damaged Teeth

- A drive chain with damaged rollers, loose pins or missing O-ring must be replaced.
- A chain which appears dry or shows signs of rust, requires supplementary lubrication.

ADJUSTMENT>

Drive chain slack should be checked and adjusted, if necessary, every 1,000km.

When operated at sustained high speeds under conditions of frequent rapid acceleration, the chain may require more frequent adjustment.

Place the motorcycle on its main stand with the transmission in neutral and the ignition switch off.


Loosen the axle nut.

Loosen the lock nuts on both sides of the swingarm.

Turn both adjusting nuts an equal number of turns until the correct drive chain slack is obtained. Turn the adjusting nuts clockwise to tighten the chain or counterclockwise to provide more slack. Adjust the chain slack at a point midway between the drive sprocket and the rear wheel sprocket.

Rotate the rear wheel and recheck slack on other section of the chain.

Chain slack should be : **10~20mm**

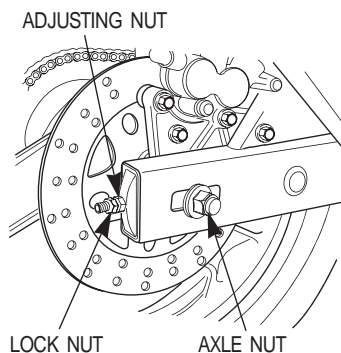

5. Tighten the axle nut to specified torque.

AXLE NUT TORQUE : 6.0~8.0kgf.m

6. Tighten the adjusting nuts lightly, then tighten the lock nuts by holding the adjusting nuts with a spanner.
7. Recheck drive chain slack.

⚠ WARNING

- If a torque wrench is not used for this installation, see your authorized dealer as soon as possible to verify proper assembly.

⚠ CAUTION

- Excessive chain slack could cause the chain to come off the sprockets, resulting in loss of control or serious engine damage.
- Make sure the right and left chain adjuster graduations are set in the same position.

<LUBRICATION AND CLEANING>

Lubricate every 1,000km or sooner if chain appears dry.

The O-rings in this chain can be damaged by steam cleaning, high pressure washers, and certain solvents. Clean the side surfaces of the chain with a dry cloth. Do not brush the rubber O-rings. Brushing will damage them.

Wipe dry and lubricate only with SAE 80 or 90 gear oil. Commercial chain lubricants may contain solvents which could damage the rubber O-rings.

BRAKE PAD WEAR

The pad wear depends upon the severity of riding, the type of riding, and road conditions. (Generally, the pads will wear faster on wet and dirty roads.)

Inspect the pads at each regular maintenance interval. (page 33)


FRONT/REAR BRAKE

Check the cutout in each pad.


If either pad is worn to the cutout, replace both pads as a set.

Consult your authorized Daelim dealer for service.

<FRONT BRAKE>

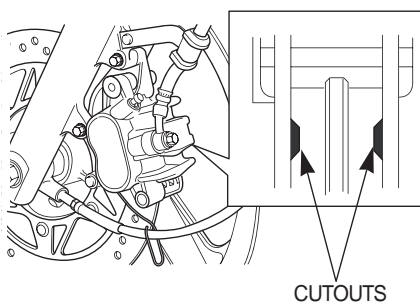


<REAR BRAKE>

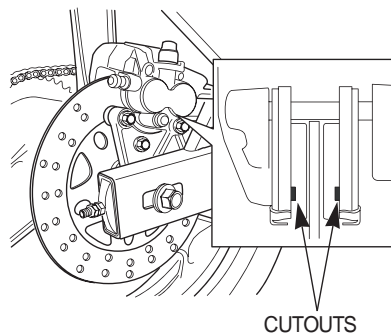

SIDE STAND

1. Put the main stand and place motorcycle
 upright position on level ground.
 2. Check the spring for damage or loss of
 tension and the side stand assembly for
 freedom of movement.
 3. Check the side stand ignition cut-off
 system;
 4. Put the side stand up.
 5. Start the engine.
 6. Lower the side stand.
 When changing gear to first the engine
 should stop.

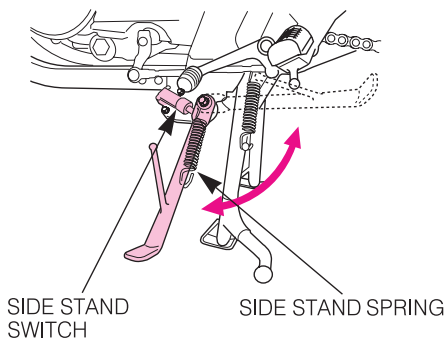

BATTERY

It is not necessary to check the battery
 electrolyte level or add distilled water as
 the battery is a maintenance-free (sealed)
 type. If your battery seems weak and/or is
 leaking electrolyte (causing hard starting
 or other electrical troubles), contact your
 authorized Daelim dealer.

CAUTION

- Removing the battery cap strip can damage the cap strip and result in leaks and eventual battery damage.
- When the vehicle is to be stored for an extended period of time, remove the battery from the vehicle and charge it fully. Then store it in a cool, dry place. If the battery is to be left in the vehicle, disconnect the negative cable from the battery terminal.

WARNING


- The battery gives off explosive gases; keep sparks, flames, and cigarettes away. Provide adequate ventilation when charging or using the battery in an enclosed space.

⚠ WARNING

Battery acid is poisonous and corrosive. Avoid contact with eyes, skin, clothing, and painted surfaces. If battery acid comes in contact with any of these, flush immediately with large amounts of water. If acid contacts the eyes or skin, get medical attention. KEEP OUT OF REACH OF CHILDREN. Even though the battery is sealed, it will vent explosive gases. Do not allow open flames or sparks near the battery.

<BATTERY REMOVAL>

1. Turn the ignition switch OFF.
2. Remove the front seat (page 17).
3. Remove the battery band.
4. Disconnect the negative \ominus terminal lead from the battery first, then disconnect the positive \oplus terminal lead.
5. Pull out the battery from the battery box.

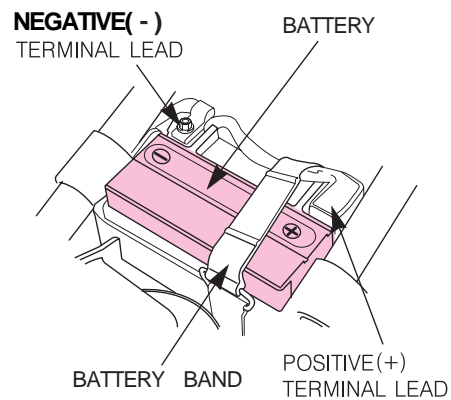

⚠ CAUTION

- Make sure that terminals do not contact with other adjacent parts when handling \oplus/\ominus terminals.

CLEANING BATTERY TERMINALS>

If the battery terminal is polluted, or in case of rust, separate battery and clean it. If the battery terminal is in rust with white powder, it should be cleaned with warm water. In case of serious rust of battery terminal, disassemble the battery cord and clean it with wirebrush or sandpaper.

FUSE REPLACEMENT


Turn off the main switch to see if the fuse is severed. If the fuse is severed, exchange the fuse into a fuse with same capacity.

- Fuse is installed in fuse box under the pillion seat.

[REMOVE ORDER] :


Main seat Setting grommet Center cover
 cover Flange bolt Pillion seat.

- To change a fuse, first take off fuse cover. Then, remove the disconnected fuse, and insert the reserved fuse with same capacity.

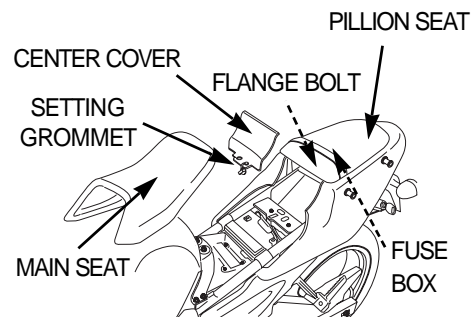


If the fuse immediately becomes severed after being changed with the new one, there may be another problem of the electric system. Contact to Daelim service center.

<ASSEMBLY> <ASSEMBLY>

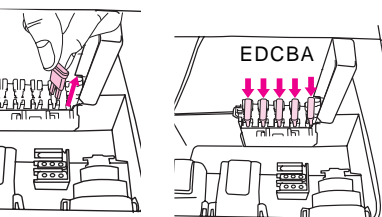


Fuse A	30A	Charging, combi S/W, regulator, ECU
Fuse B	15A	Winker relay, meter lighting, horn, headlight (LO/HI), front/rear stop switch, taillight, fuel meter heater control, water meter
Fuse C	15A	Ignition coil O2 Sensor, Stater
Fuse D	15A	Fuel pump, ECU
Fuse E	15A	Fan motor

<NORMAL>

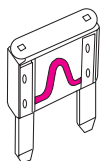

<DISCONNECT>

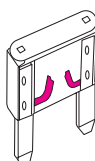

⚠ CAUTION

- Do not use screw driver or other metal parts to remove the fuse, as short circuit can be occurred to cause damage to electric system.
- Do not use a fuse having a larger voltage, as the wire can become overheated and damaged.
- When replacing any of the electrical parts (lights and gauges), be sure to replace them with the recommended parts. Using different parts can lead to the fuses burning out or damage to the battery.
- When washing the vehicle, take special care not to allow to be splashed in the area of the fuses.

B REPLACEMENT

Be sure to turn the ignition switch OFF when replacing the bulb.

Do not use bulbs other than that specified.

After installing a new bulb, check that the light operates properly.

⚠ WARNING

- The light bulb becomes very hot while the light is ON, and remain hot for a while after it is turned OFF. Be sure to let it cool down before servicing.

⚠ CAUTION

- Do not put finger prints on the headlight bulb, as they may create hot spots on the bulb and cause it to break. Wear clean gloves while replacing the bulb.
If you touch the bulb with your bare hands, clean it with a cloth moistened with alcohol to prevent its early failure.


[HEADLIGHT BULB]

- Before replacing the bulb, be sure to check the switches for loose connection of the connector.

1. Loosen the washer screws and remove the headlight.
2. Pull off the socket without turning.
3. Loosen the pin and remove the bulb.
4. Install a new bulb in the reverse order of removal.

HEADLIGHT BULB : 12V 55W × 2

BULB

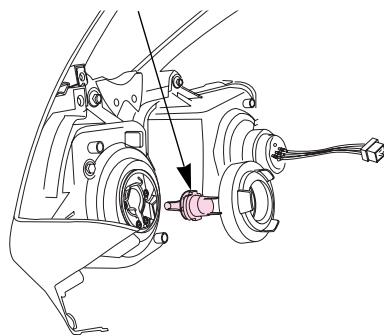

[POSITION LIGHT BULB]


1. Remove the position light socket and
remove it.
2. Pull out the bulb without turning
3. Install a new bulb in the reverse order
of removal.

POSITION LIGHT BULB : 12V 5W

[STOP/TAILLIGHT BULB]

1. Loosen the screws and remove the
taillight lens.
2. Slightly press down on the bulb and
turn it counterclockwise.
3. Install a new bulb in the reverse order
of removal.


STOP/TAILLIGHT BULB : 12V 21/5W

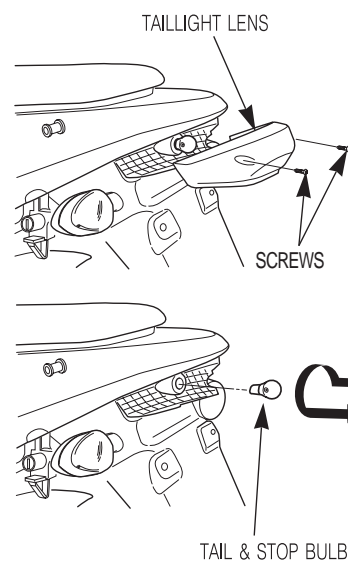

FRONT WINKER BULB] **Front winker bulb>**

Loosen the screw and remove the winker lens.
 Slightly press down on the bulb and turn it counterclockwise.
 Install a new bulb in the reverse order of removal.


FRONT WINKER BULB : 12V10Wx2

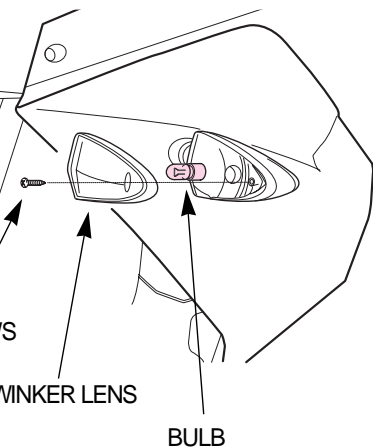

<Rear winker bulb>

1. Loosen the screw and remove the winker lens.
2. Slightly press down on the bulb and turn it counterclockwise.
3. Install a new bulb in the reverse order of removal.


REAR WINKER BULB : 12V10Wx2

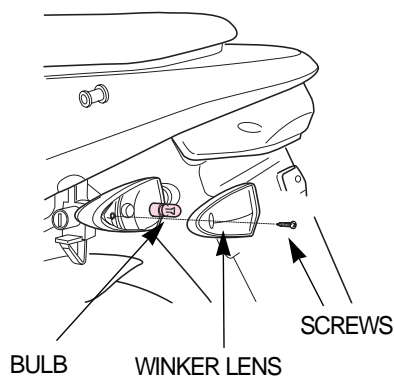


BLE RUBBER PART

ber part is assembled on the cable to
t the inner cable.

sure that this part is placed firmly
d the correct part of the cable.
washing the car, do not directly
water on to the rubber part is dirty,
dry cloth to clean this area.

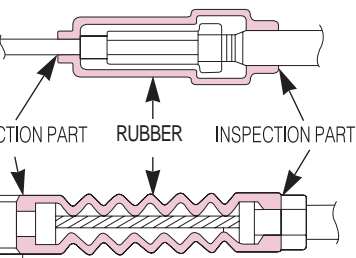

- Check the installing condition of rubber boots daily. After adjusting the free play of throttle grip never forget to place the rubber boots to the original position.

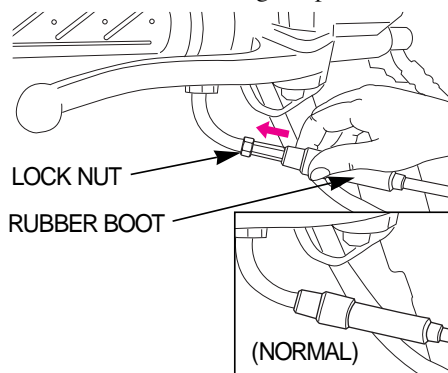

⚠ WARNING


- Infiltration of the foreign materials or water caused by damage of rubber boots (disengagement, tearing, etc.) may cause freezing in winter season resulting in faulty operation. It may lead death or serious injury by decreasing of sudden acceleration and braking force due to engine rpm.
- If any damage is found, replace with the new one immediately.

CLEANING

- Make sure to stop the engine prior to car washing.
- Be careful not to allow water to enter the muffler during the washing. Water inside the muffler may cause an improper engine starting or rust occurrence.
- Do not let water get inside the braking system during the washing, as water inside the brake system may weaken the braking power. Upon completion of washing, select a safe place where there is no traffic obstruction, and start the vehicle.

Lightly apply the brake while driving at a slow speed and check the braking power. If the braking power has been weak-ened, apply brake lightly while driving at a slow speed to dry up the brake system.



- Take precautions when waxing the vehicle. Excessive polish of the painted section and/or the resin part with compound wax might damage the painted section causing discoloration of the affected area.

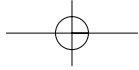

ORAGE GUIDE

ended storage, such as for winter,
es that you take certain steps to reduce
fects of deterioration from non-use of
motorcycle.
dition, necessary repairs should be
BEFORE storing the motorcycle;
vise, these repairs may be forgotten by
me the motorcycle is removed from
e.

- <STORAGE>**
- Empty the fuel tank into an approved gasoline container using a commercially available hand siphon or an equivalent method.
 - If storage will last more than one month, carburetor draining is very important, to assure proper performance after storage.

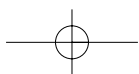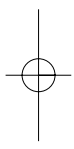

SAFE DRIVING


PREPARATION BEFORE DRIVING

Performing daily inspection

Putting on the protective gears (Helmet, glove, goggles, etc.)

Checking the driver's licence

Determining the path to the desired destination

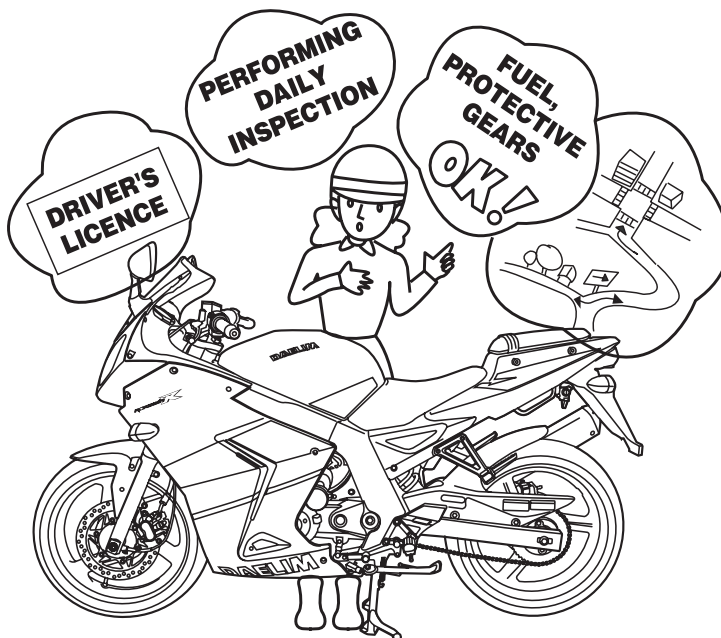

DRIVING METHOD

DRIVING POSITION

The appropriate driving position is most important thing to riding safely.

Eyes : Look at the front direction widely.

Shoulders : Relieve the tension.


Arms : Relieve the tension and bend arms to inside and let them act as the spring.


Hands : Grip the handle the position away from the inside end of the handle with distance of one finger to facilitate the operation of the switch and lever.

Wrist : Keep the state to act freely without applying excessive force to the shoulder and arms.

Knees : Press the fuel tank slightly.

Feet : Place the feet to face the front parallel and make the step bar be placed in the center of feet.


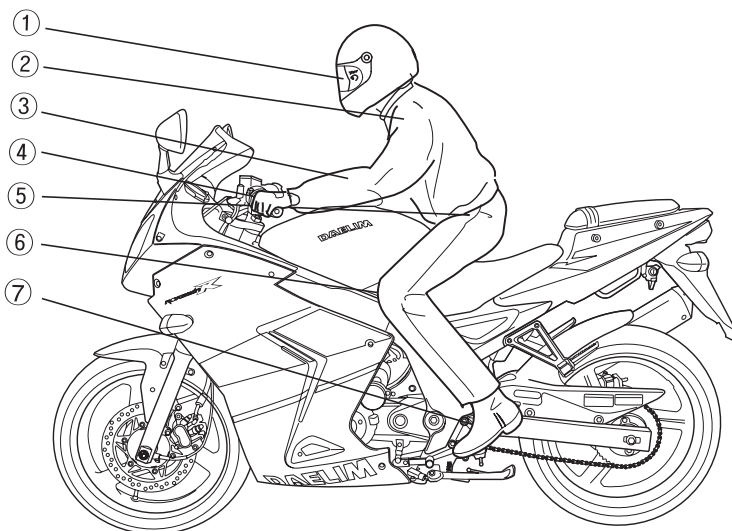


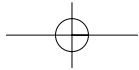

CAUTION WHEN DRIVING

Secure the safe distance.
Drive protectively.
Do not obstruct the traffic.
Do not drive on the pedestrian way or walkway.
Drive on the left driveway when passing away.
Make sure that you can apply the brake anytime.
Always apply the brake when stopping temporarily.
Do not drive excessively long distance and take enough break.

- If any abnormality is found, stop driving and contact service center to inspect the vehicle.
- Restart the vehicle after 2~3 min when it is turned over.
- Always turn on the headlight at night.

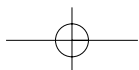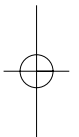

STARTING

Before starting always look around to avoid accident.

Get on the vehicle after pulling back the stand.

Start driving slowly after turning on the winker and releasing the brake while ensuring the safety around the vehicle.

CAUTION

Return the side stand to its original position. Keep driving without doing this may cause turnover accident.




Drive the vehicle only on the driveway. Driving on the walkway can cause accident. Also, if the wheel is transformed when advancing directly to the walkway, the vehicle can be overturned resulting in injury of the driver due to the driving instability.

Overspeed driving on the unpaved road can cause the vehicle to be overturned resulting in injury of the driver due to the driving instability.

Do not drive in the gravel road. If any gravel enters the wheel or engine case, the vehicle can be overturned resulting in injury of the driver.


If possible, do not drive close to the sea or on the road where calcium chloride is treated.

The muffler, external parts and welded parts can be corroded rapidly, and also in case of damage of the frame, the vehicle can be overturned resulting in injury of the driver.

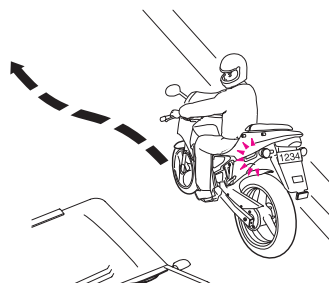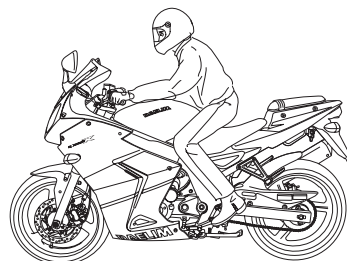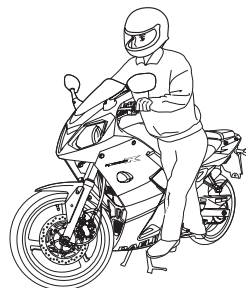


TURNING METHOD

PRINCIPLE OF TURN

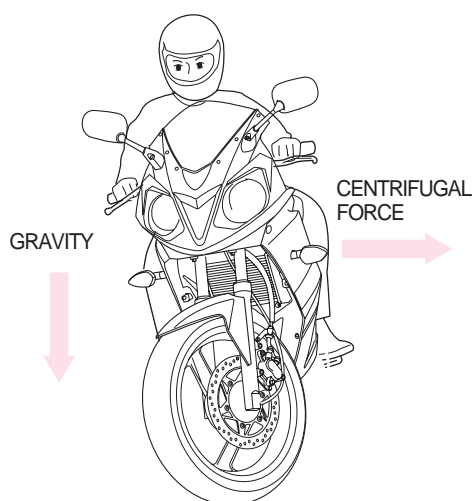

The basic principle of turn is balancing using the centrifugal force which makes vehicle go outside and the gravity which makes vehicle fall inside.

EFFECT OF SPEED

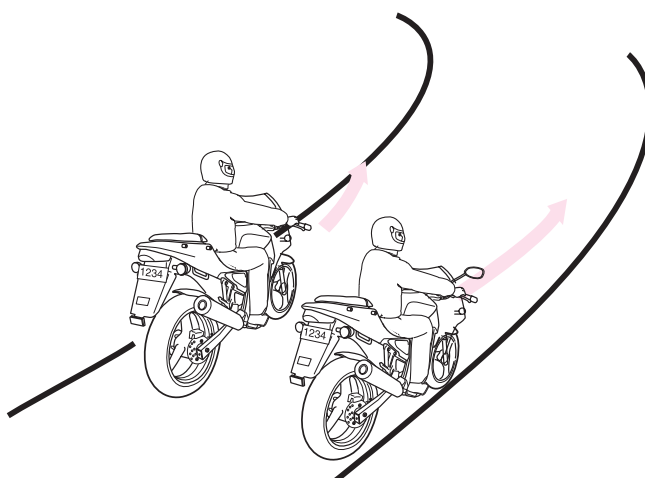

The centrifugal force increases in inverse proportion to the radius of a curve and in proportion to the square speed. Decelerate prior to entering the curved way to reduce the centrifugal force.

POSITIONS OF TURNING


The basic principle of turn is balancing using combined force of centrifugal force and the gravity.

3 positions require straightening the head and keeping the motorcycle horizontally.

LEAN-WITH >

This is a turning position with motorcycle and driver in a line.


This position is the most natural and exact, so driver must learn thoroughly.

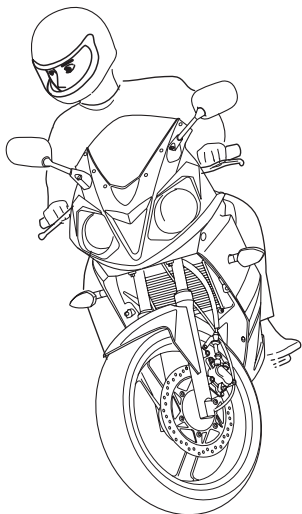

< LEAN-IN >


This is a turning position with driver leaned inside more than motorcycle. This position is adequate to drive on the rained or slippery road because it has best road holding.

However, special attention is required because front visual field is poor when driver leans inside more than motorcycle.

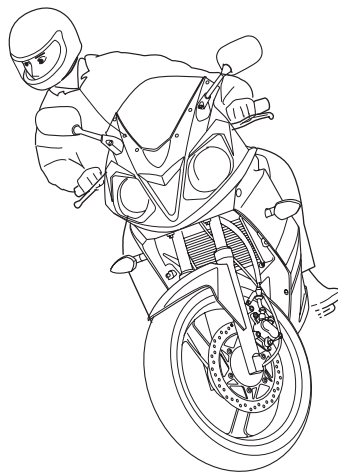


LEAN-OUT >

is a turning position with motorcycle leaned inside more than driver, which is opposite to the lean-in position. In this position, quick turn is well performed and driver can gain wide front visual field adequate to drive on the rained or icy road because it has best road holding. However, special attention is required because there is danger of slipping on the holding road.

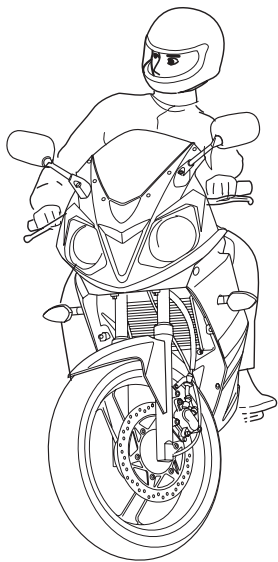

TURNING METHOD

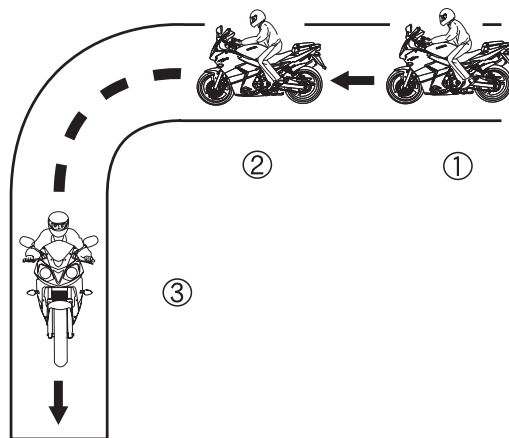

Turn the throttle grip to its original position and decelerate using both front and rear brakes.

Lean the vehicle toward inside of turn circle while driving slowly at constant speed.


Accelerate gradually.

CAUTION WHEN TURNING

Do not drive inside of large truck's turn circle.


<DEAD ANGLE ZONE>

Dead angle zone is the sight range which cannot be identified by driver and increases in proportion to the width of the vehicle.

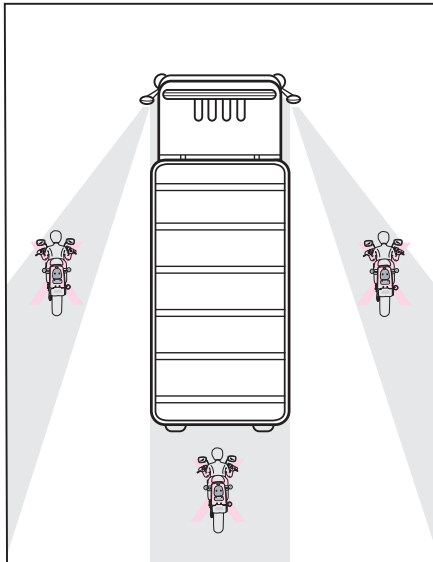

<DISTANCE BETWEEN THE FRONT AND REAR WHEEL TURN>


It is distance between path of the front and rear wheel and increases in proportion to the length of the vehicle.

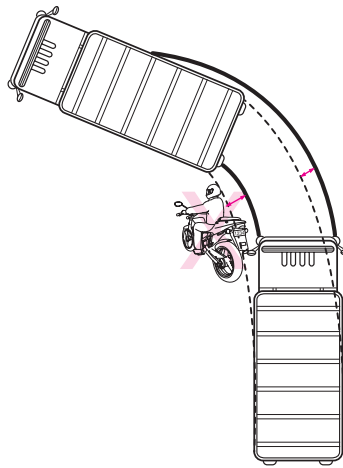


BRAKING METHOD

BASIC PRINCIPLE OF BRAKE (FRICTION FORCE)

Vehicle is braked using friction between road surface and tires.
Braking distance increases 1.5 times on wet road and 3 times on icy road because friction force of road surface is decreased.

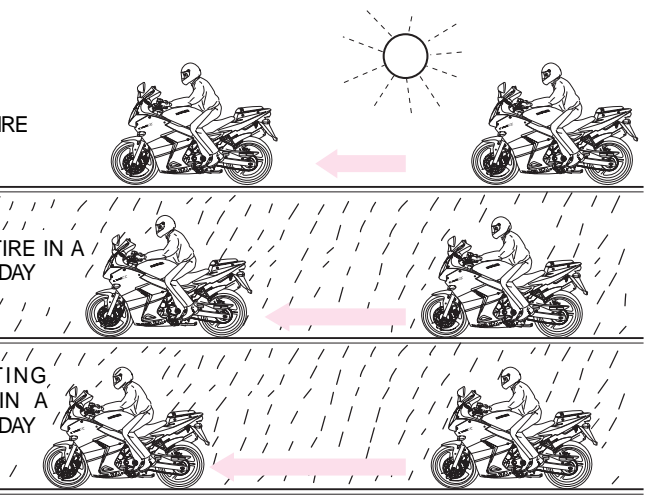

RESTRAINT OF BRAKE EFFECT (INERTIA)

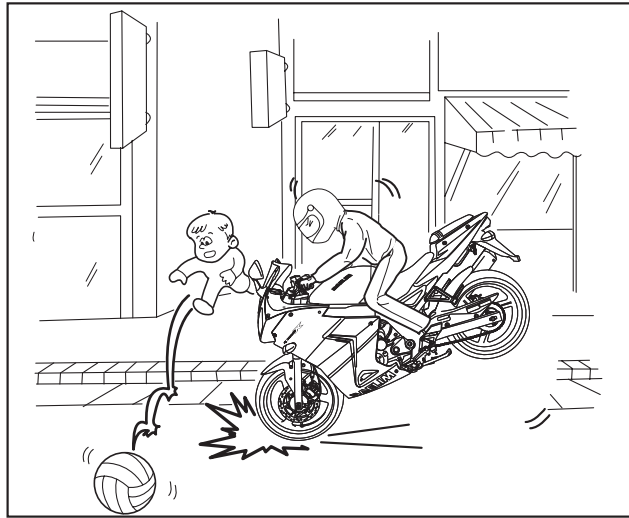




Due to the inertia, vehicle does not stop immediately after applying the brake.

BRAKING METHOD

Turn the throttle grip to its original position and decelerate using the engine brake.
 Correct the vehicle straight.
 Brake using both front and rear brakes.


COMPARISON OF BRAKING DISTANCE

Vehicle speed : 50 km/h

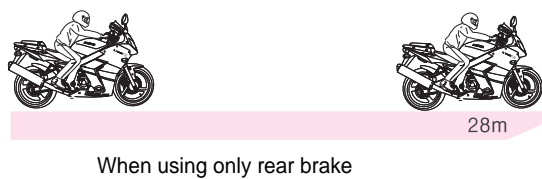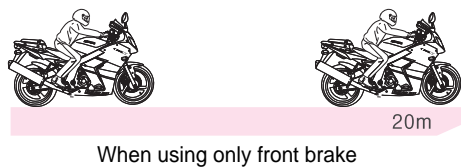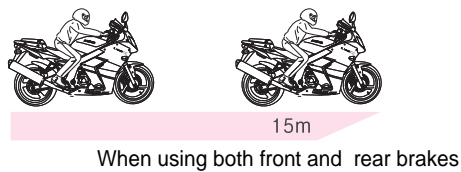

IMPACT WHEN COLLISION

Learn the proper braking method to prevent accident.

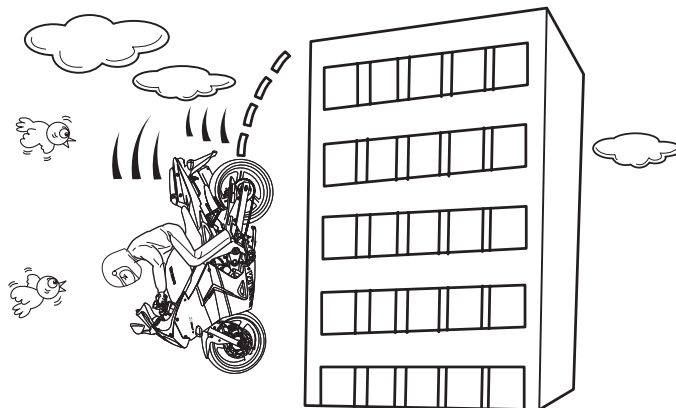


Impact increases in proportion to the speed and weight. The impact when collision to concrete wall at 50 km/h is same as one when falling from the height of 10m.


WIRING DIAGRAM


FUSE SPECIFICATION

FUSEA	30A	CHARGING COMB. REG. RECTIFIER
FUSEB	15	WINKER RELAY, HORN, HEAD LIGHT (LOW/HIGH), FR. RR. STOP, STOP LIGHT/TAIL, SPEED/TAO/FUEL METER
FUSEC	15	IGN COIL, BULB, O2 SENSOR
FUSE	15	ECU, FUEL PUMP RELAY, LIGHT RELAY
FUSE	10	FAN MOTOR

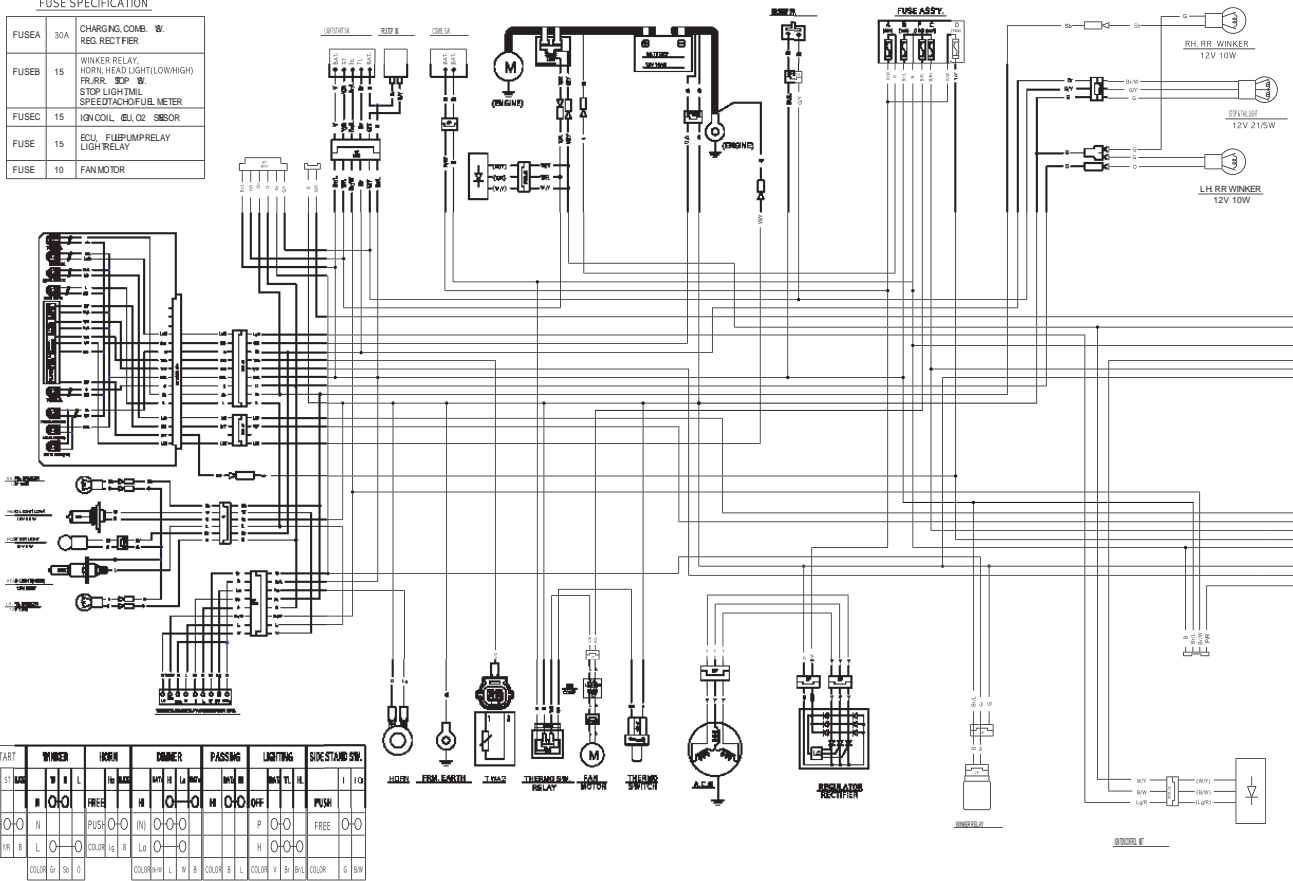

START	WINKER	HORN	CHARGE	PASSING	LIGHTING	SIDE STAND SW.
START	WINKER	HORN	CHARGE	PASSING	LIGHTING	SIDE STAND SW.
WINKER	WINKER	HORN	CHARGE	PASSING	LIGHTING	SIDE STAND SW.
HORN	WINKER	HORN	CHARGE	PASSING	LIGHTING	SIDE STAND SW.
CHARGE	WINKER	HORN	CHARGE	PASSING	LIGHTING	SIDE STAND SW.
PASSING	WINKER	HORN	CHARGE	PASSING	LIGHTING	SIDE STAND SW.
LIGHTING	WINKER	HORN	CHARGE	PASSING	LIGHTING	SIDE STAND SW.
SIDE STAND SW.	WINKER	HORN	CHARGE	PASSING	LIGHTING	SIDE STAND SW.

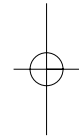

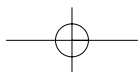

***Roadwin
250R FI***

OWNER' S MANUAL

2009. 09 PRINTED
2009. 09 PUBLICATION

NO COPY

 **DAELIM MOTOR**

