



Rear Wheel Opening Molding Replacement

Removal Procedure

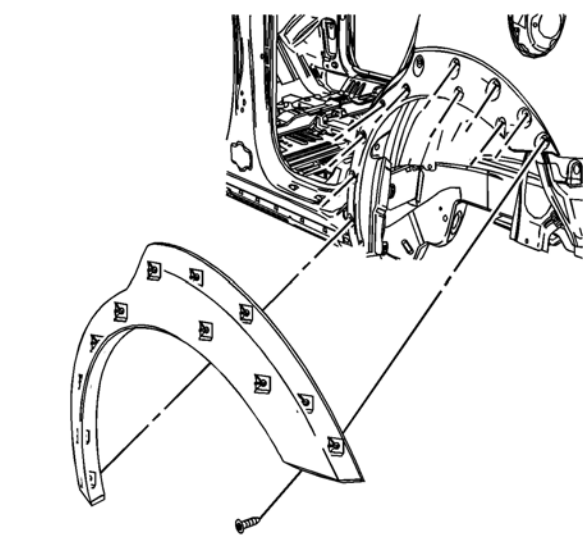

Remove the rear wheel opening molding.

Installation Procedure

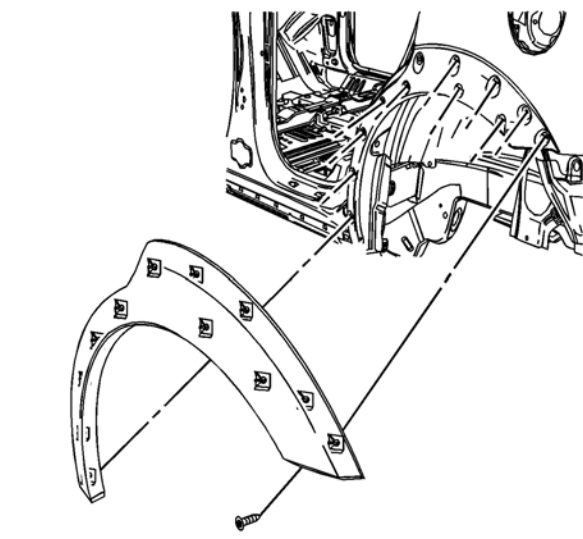

Install the rear wheel opening molding.