



Front Fender Insulator Replacement

Removal Procedure

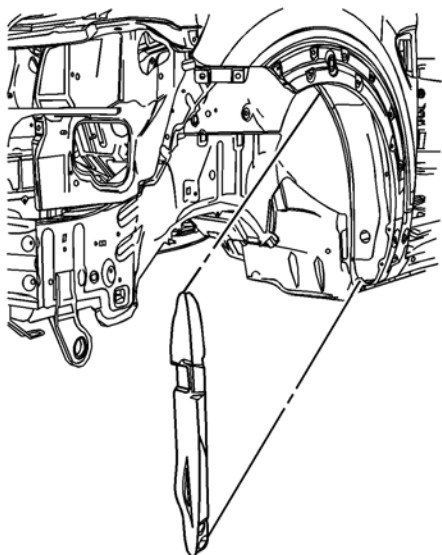

1. Raise and suitably support the vehicle. Refer to [Lifting and Jacking the Vehicle](#) .
2. Remove the front wheel. Refer to [Tire and Wheel Removal and Installation](#) .
3. Remove the front fender liner. Refer to [Fender Liner Replacement](#) .
4. Remove the front fender insulator.

Installation Procedure

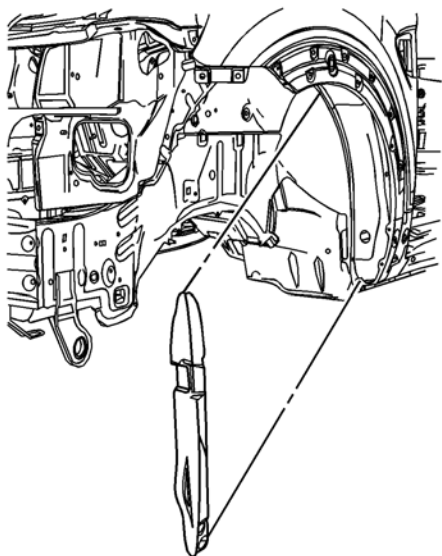

1. Install the front fender insulator.
2. Install the front fender liner. Refer to [Fender Liner Replacement](#) .
3. Install the front wheel. Refer to [Tire and Wheel Removal and Installation](#) .
4. Lower the vehicle.