


Liftgate Lock Striker Replacement


Removal Procedure

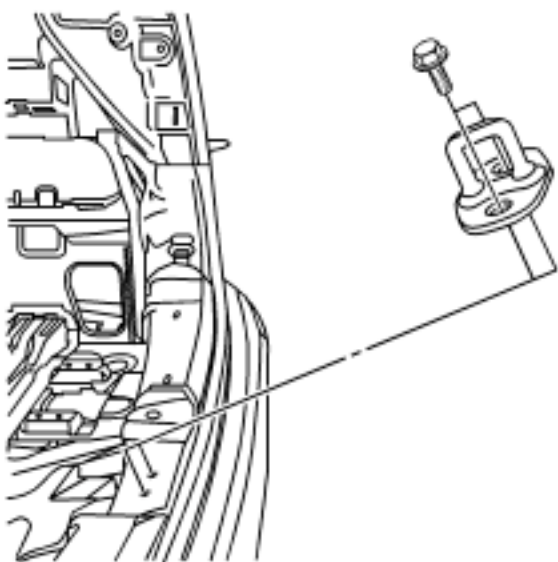

1. Open the liftgate.
2. Remove the floor panel rear extension.
3. Remove the bolts securing the latch striker.
4. Pull the lock striker out.

Installation Procedure

Notice: Refer to [Fastener Notice](#) in Cautions and Notices.

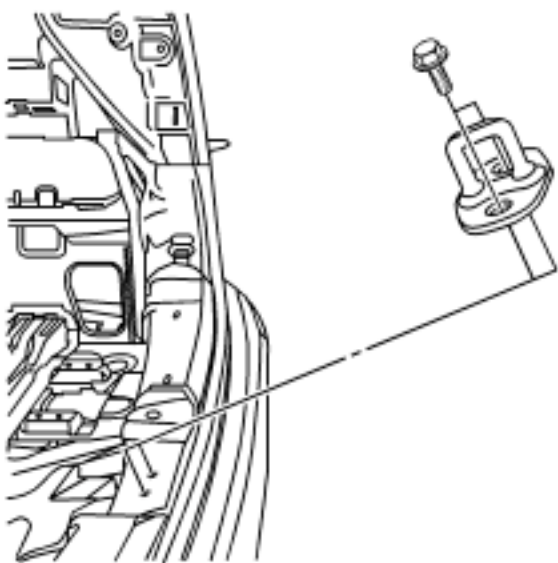

1. Install the latch striker with the bolts.

Tighten

Tighten the liftgate latch striker bolt to 10 N·m (89 lb in).

2. Install the floor panel rear extension.
3. Close the liftgate.