



# Seat Belt Retractor Replacement - No. 2 Rear


## Removal Procedure

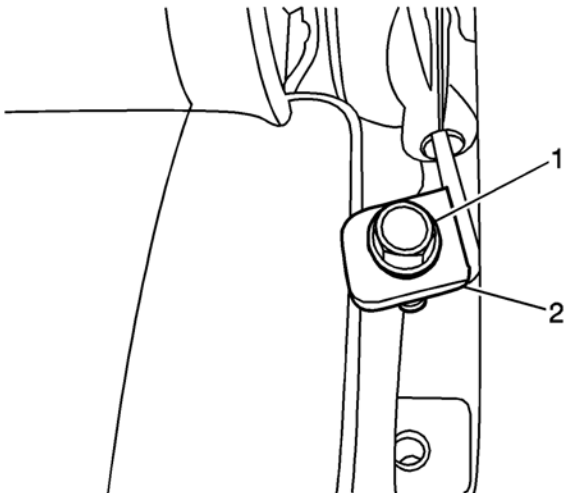

1. Remove the bolt (1) and the seat belt anchor (2) on the floor.
2. Remove the quarter window trim panel.
3. Remove the wheelhouse trim panel.

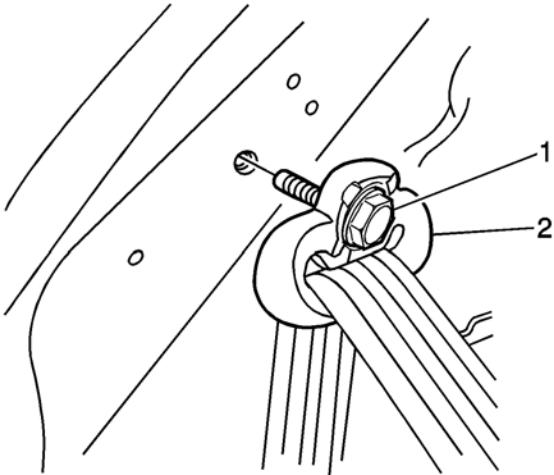

4. Remove the bolt (1) and the seat belt anchor (2).

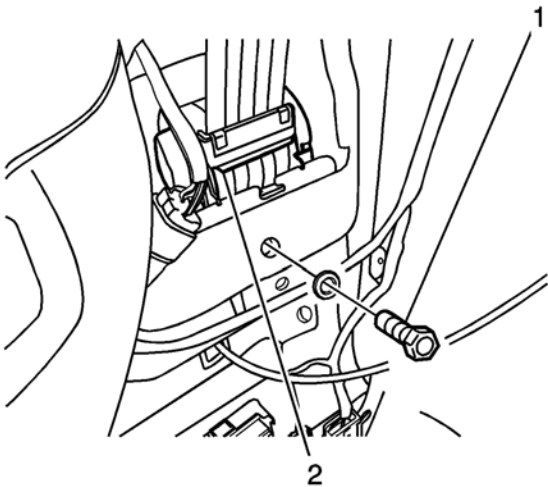

5. Remove the bolt (1) and the seat belt retractor (2).

## Installation Procedure

**Notice:** Refer to [Fastener Notice](#) in Cautions and Notices.