



Liftgate Trim Panel Replacement

Removal Procedure

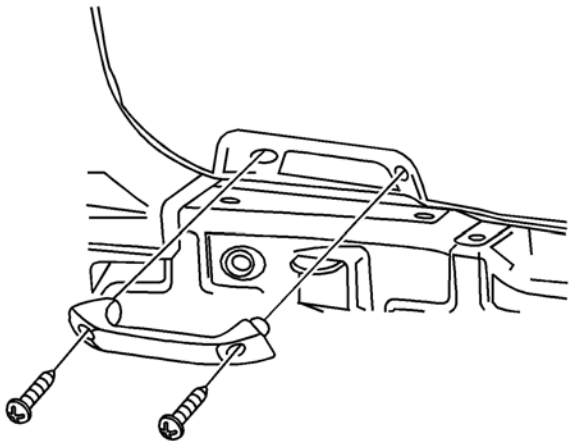


1. Remove the screws and the liftgate inside pull handle.

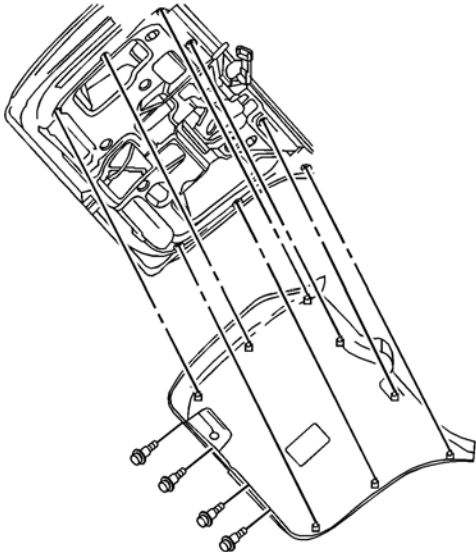

2. Remove the retainers from liftgate trim.
3. Remove the liftgate trim from the vehicle.

Installation Procedure

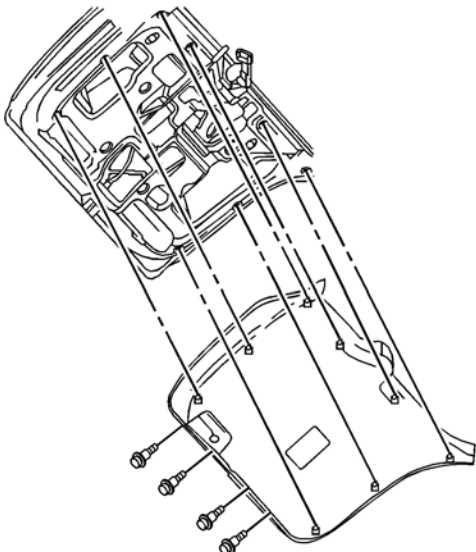

1. Install the liftgate trim with the retainers.