



Outside Rearview Mirror Replacement

Removal Procedure

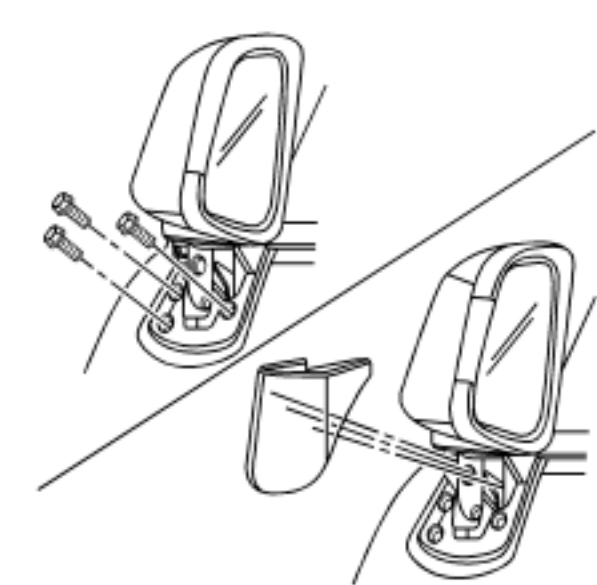

1. Disconnect the negative battery cable. Refer to [Battery Negative Cable Disconnection and Connection](#) .
2. Remove the outside rearview mirror cover.
3. Remove the bolts and the outside rearview mirror assembly from the door.
4. Disconnect the mirror electrical connector if the mirror is electronically controlled.

Installation Procedure

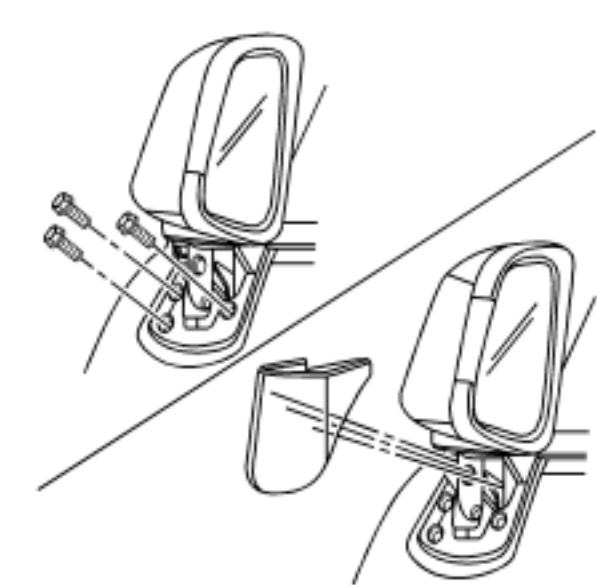

1. Connect the mirror electrical connector if the mirror is electrically controlled.

Notice: Refer to [Fastener Notice](#) in the Preface section.

2. Install the outside rearview mirror assembly to the door with the screws.

Tighten

Tighten the outside rearview mirror assembly screws to 10 N·m (85 lb in).

3. Install the outside rearview mirror cover.
4. Connect the negative battery cable. Refer to [Battery Negative Cable Disconnection and Connection](#) .