



Rear Seat Replacement

Removal Procedure

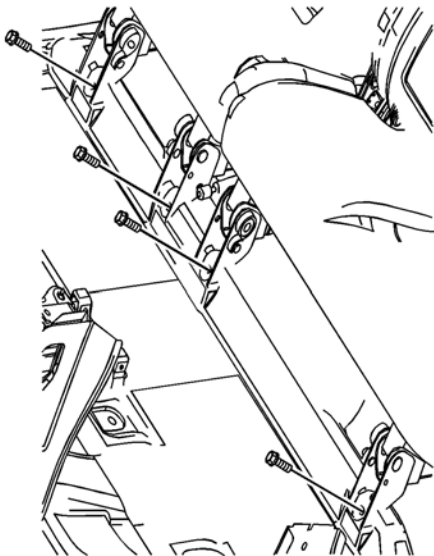


1. Remove the bolts securing the rear portion of the rear seat to the floor.

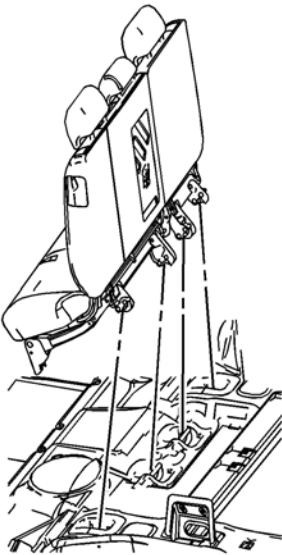

2. Remove the seat.

Installation Procedure

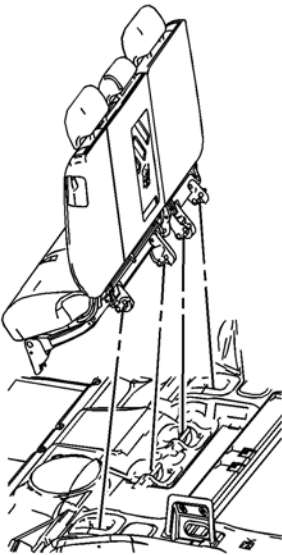

1. Install the rear seat cushion by inserting the metal loops into the rear retaining brackets and pressing the front of the seat cushion down.

Notice: Refer to [Fastener Notice](#) in Cautions and Notices.