



Assist Handle Replacement

Removal Procedure

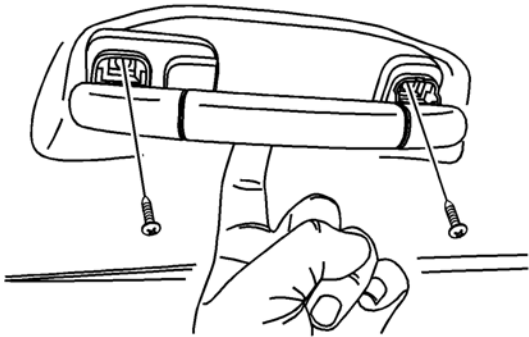

1. Reveal the assist handle screws.
2. Remove the screws and the assist handle from the headliner.

Installation Procedure

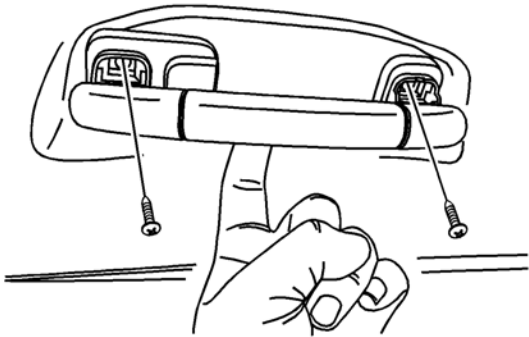

1. Position the assist handle to the headliner .

Notice: Refer to [Fastener Notice](#) in Cautions and Notices.

2. Install the screws.

Tighten

Tighten the passenger assist handle screws 3 N·m (27 lb in).