


Windshield Washer Nozzle Replacement


Removal Procedure

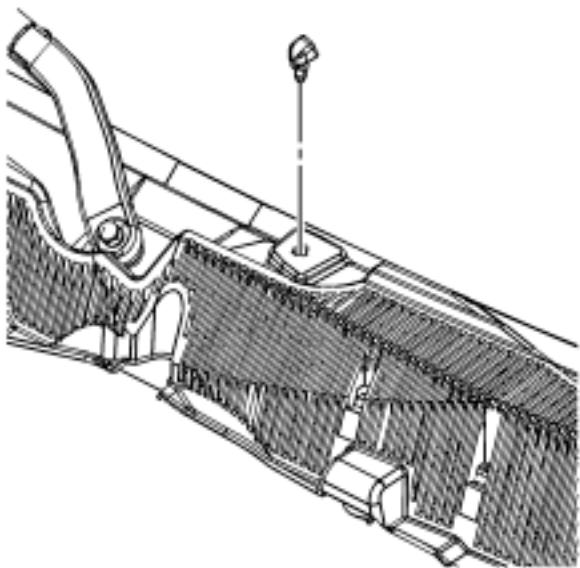

Important: The left-hand drive is shown. The right-hand drive is similar.

1. Remove the air inlet grille panel. Refer to [Air Inlet Grille Panel Replacement](#) .
2. Depress the washer nozzle tabs to disengage the nozzle from the air inlet grille.
3. Remove the nozzle.

Installation Procedure

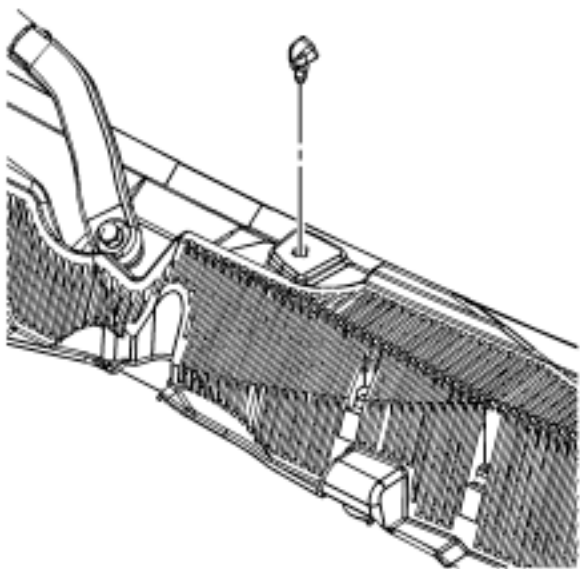

1. Push the washer nozzles into the air inlet grille panel until the tabs engage with the panel.
2. Install the air inlet grille panel. Refer to [Air Inlet Grille Panel Replacement](#) .