


Hood Primary Latch Release Cable Replacement


Removal Procedure

Important: Left - Hand Drive Shown, Right - Hand Drive Similar.

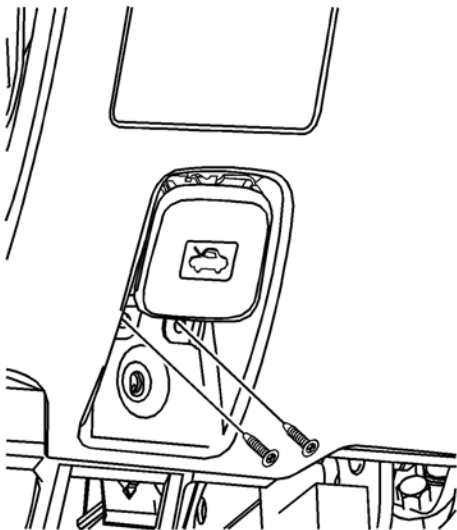

1. Remove the hood release handle screws.
2. Remove the knee bolster and the hood release handle.
3. Remove the cable from the hood release handle.
4. Remove the hood secondary latch. Refer to [Hood Primary Latch Replacement](#) .
5. Remove the cable from the engine compartment.

Installation Procedure

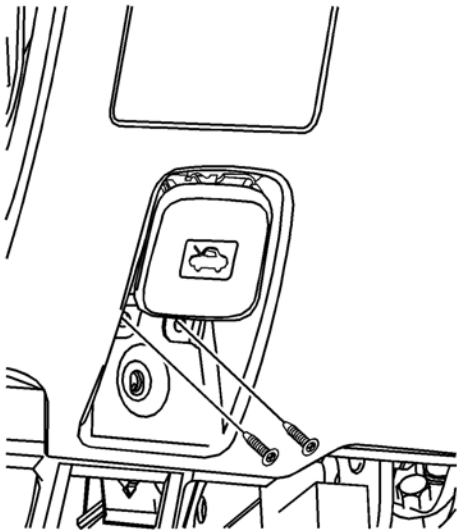

1. Install the cable through the engine compartment.
2. Install the hood secondary latch. Refer to [Hood Primary Latch Replacement](#) .
3. Install the cable to the hood release handle.

Notice: Refer to [Fastener Notice](#) in Cautions and Notices.

4. Install the hood release handle and the knee bolster with the screw.

Tighten

Tighten the hood release handle screw to 2 N·m (18 lb in).