



Heated Seat Switch Replacement

Removal Procedure


Caution: Refer to [Battery Disconnect Caution](#) in Cautions and Notices.

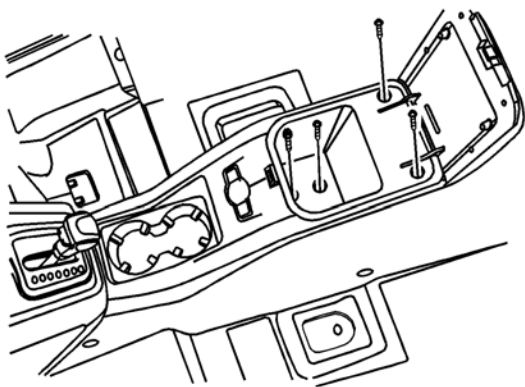

1. Disconnect the negative battery cable.
2. Remove the screws and the rear console box.

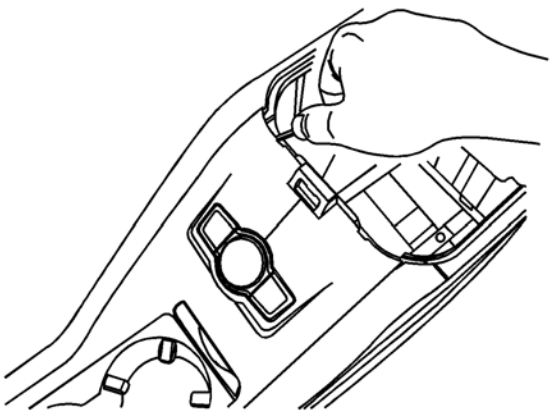

3. Remove the rear console cover and disconnect the connector.

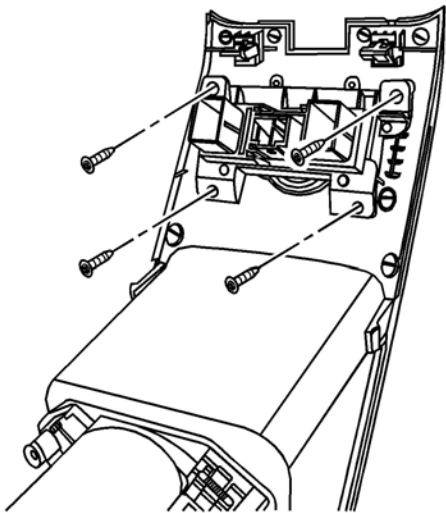

4. Remove the screws and heating mat switch.

Installation Procedure

Notice: Refer to [Fastener Notice](#) in Cautions and Notices.