


Front Seat Adjuster Replacement


Removal Procedure

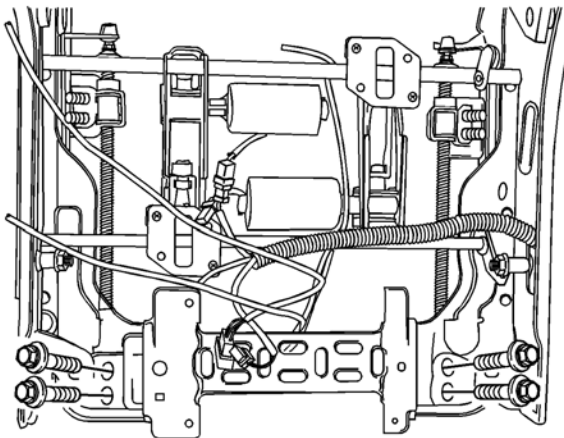

1. Remove the driver seat. Refer to [Bucket Seat Replacement](#) .
2. Remove the front seat cushion. Refer to [Front Seat Cushion Replacement](#) .
3. Disconnect the electrical connector.
4. Remove the bolts the screws, and the slide assembly.

Installation Procedure

Notice: Refer to [Fastener Notice](#) in Cautions and Notices.

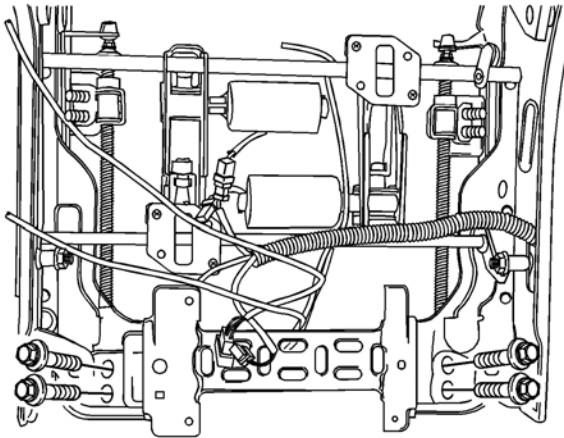

1. Install the slide assembly with the bolts and the screws.

Tighten

- Tighten the slide assembly bolts to 25 N·m (18 lb ft).
 - Tighten the slide assembly screws to 10 N·m (89 lb in).
2. Connect the electrical connector.
 3. Install the front seat cushion. Refer to [Front Seat Cushion Replacement](#) .
 4. Install the driver seat. Refer to [Bucket Seat Replacement](#) .