


Hood Replacement


Removal Procedure

Important: Install protective coverings over the fenders and the windshield to prevent damage to the paint, the glass, and the moldings when removing and installing the hood.

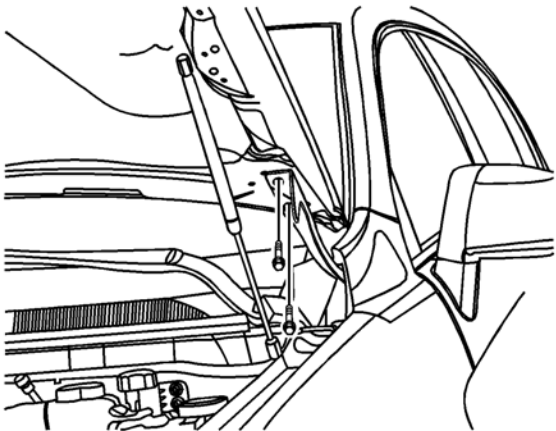

1. Raise and support the hood.
2. Mark the position of the hinge to the hood to aid in alignment during installation.
3. Remove the washer hoses from the hood.
4. Remove the hood struts. Refer to [Hood Strut Replacement](#) .
5. Remove the bolts retaining the hood to both of the hinges.
6. With the aid of another technician, remove the hood from the hinges.

Installation Procedure

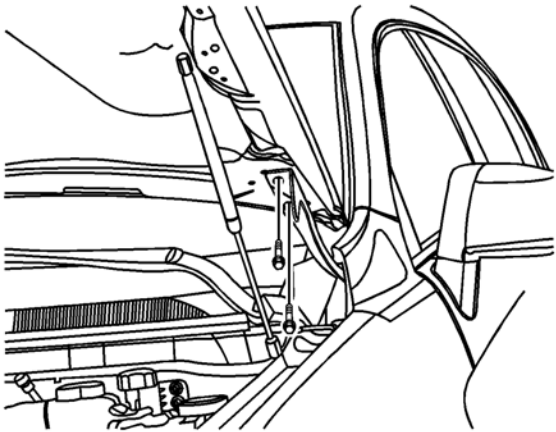

1. With the aid of another technician, position the hood in the location marked during removal.

Notice: Refer to [Fastener Notice](#) in Cautions and Notices.

2. Install the two bolts securing the hood to each hinge.

Tighten

Tighten the hood-to-hinge bolts to 24 N·m (18 lb ft).

3. Install the hood struts. Refer to [Hood Strut Replacement](#) .
4. Inspect the hood for proper alignment.
5. Install the washer hoses to the hood.