


Door Window Regulator Replacement


Removal Procedure

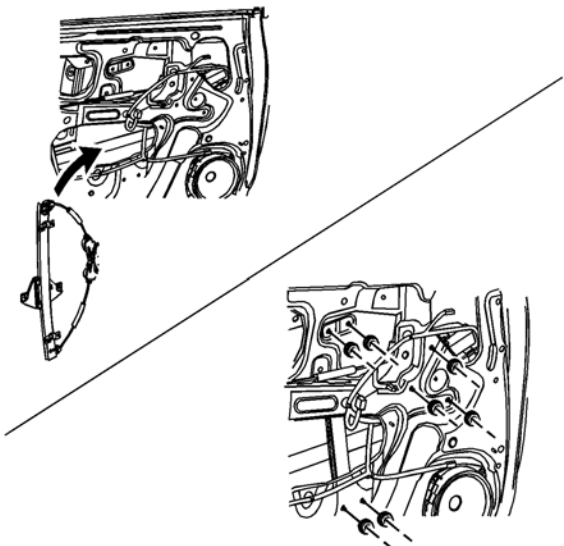

1. Disconnect the negative battery cable. Refer to [Battery Negative Cable Disconnection and Connection](#) .
2. Remove the door glass. Refer to [Front Side Door Window Replacement](#) or [Rear Side Door Window Replacement](#) .
3. Disconnect the electrical connector.
4. Remove the nuts and the window regulator.

Installation Procedure

Notice: Refer to [Fastener Notice](#) in Cautions and Notices.

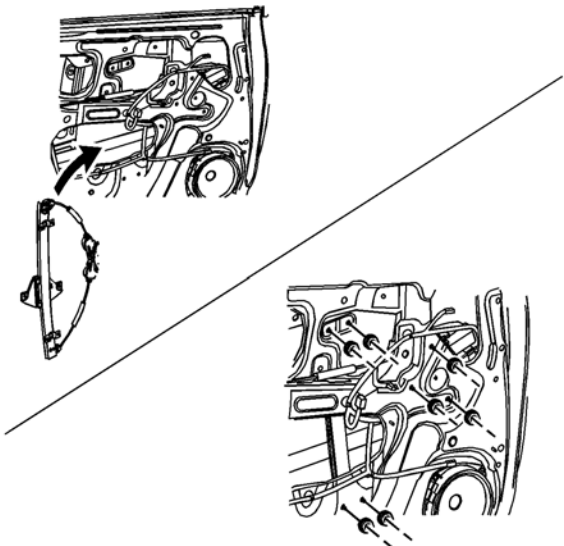

1. Install the window regulator with the nuts.

Tighten

Tighten the window regulator nuts to 10 N·m (89 lb in).

2. Connect the electrical connector.
3. Install the door glass. Refer to [Front Side Door Window Replacement](#) or [Rear Side Door Window Replacement](#) .
4. Connect the negative battery cable. Refer to [Battery Negative Cable Disconnection and Connection](#) .