


Liftgate Latch Replacement


Removal Procedure

1. Remove the liftgate lower trim. Refer to [Liftgate Trim Panel Replacement](#) .

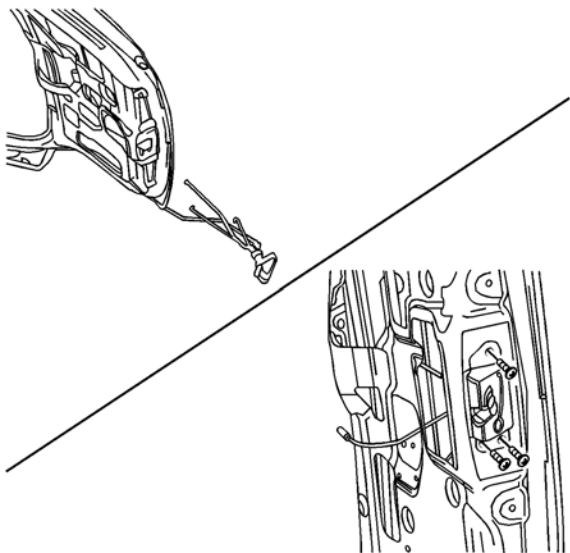

2. Disconnect the lock rod.
3. Disconnect the electrical connector.
4. Remove the bolts and the liftgate latch.

Installation Procedure

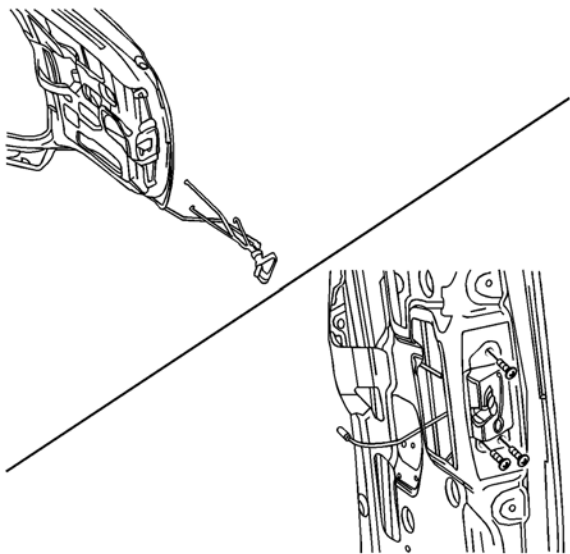

1. Connect the electrical connector.
2. Connect the lock rod.

Notice: Refer to [Fastener Notice](#) in Cautions and Notices.

3. Secure the liftgate latch with the bolts.

Tighten

Tighten the liftgate latch bolt to 10 N·m (89 lb in).

4. Install the liftgate lower trim. Refer to [Liftgate Trim Panel Replacement](#) .