



# Liftgate Garnish Molding Replacement (Upper)

## Removal Procedure

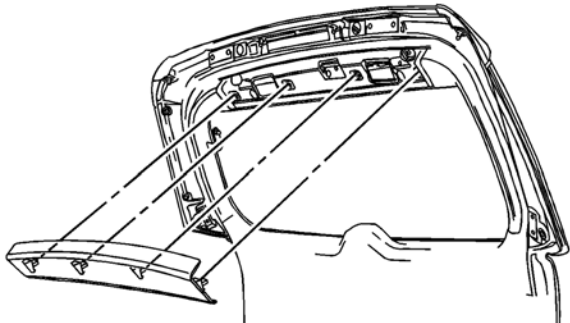

1. Open the liftgate.
2. Remove the liftgate window upper garnish molding.

## Installation Procedure

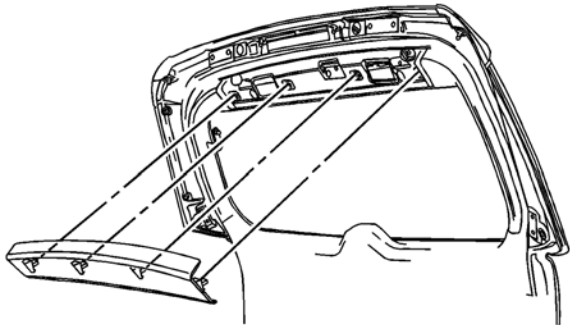

1. Install the liftgate window upper garnish molding.
2. Close the liftgate.