


# Engine Protection Shield Replacement


## Removal Procedure

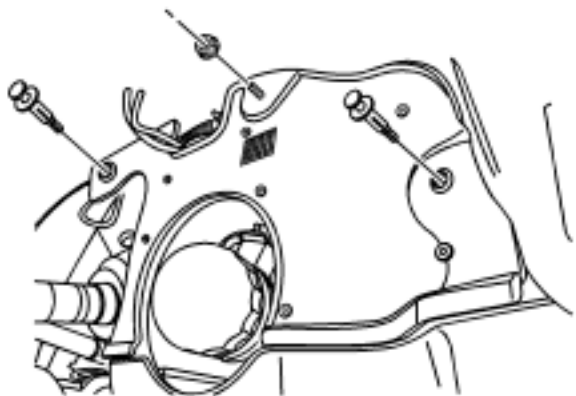

1. Raise and suitably support the vehicle. Refer to [Lifting and Jacking the Vehicle](#) .
2. Remove the front wheel. Refer to [Tire and Wheel Removal and Installation](#) .
3. Remove the nut and clips.
4. Remove the engine protection shield.

## Installation Procedure

**Notice:** Refer to [Fastener Notice](#) in Cautions and Notices.

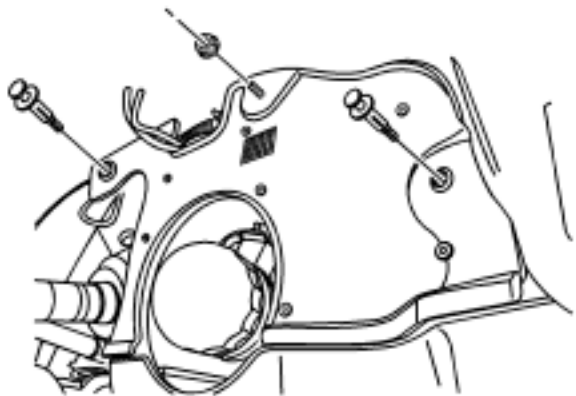

1. Install the engine protection shield with the nut and clips.

**Tighten**  
Tighten the engine front shield nut to 10 N·m (89 lb in).

2. Install the front wheel. Refer to [Tire and Wheel Removal and Installation](#) .
3. Lower the vehicle.