


Frame Replacement


Removal Procedure

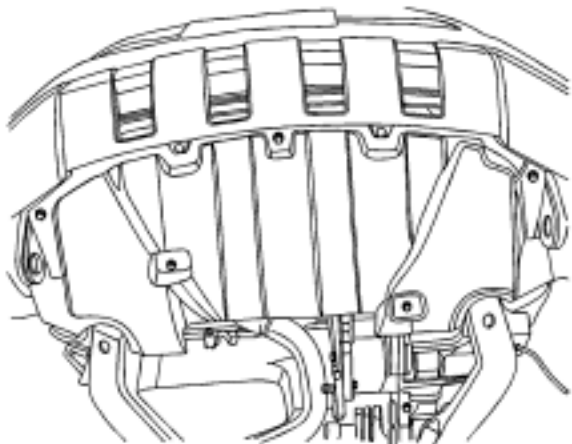

1. Raise and suitably support the vehicle and remove the wheels. Refer to [Lifting and Jacking the Vehicle](#) and [Tire and Wheel Removal and Installation](#) .
2. Remove the engine shield from the under body of the vehicle. Refer to [Engine Shield Replacement](#) .



3. Remove the front control arm ball joint to knuckle nut and pin.
4. Remove the front exhaust muffler and catalytic converter. Refer to [Muffler Replacement](#) and [Resonator Replacement](#) .
5. Incase of 4-wheel drive vehicle, Remove the propeller shaft.

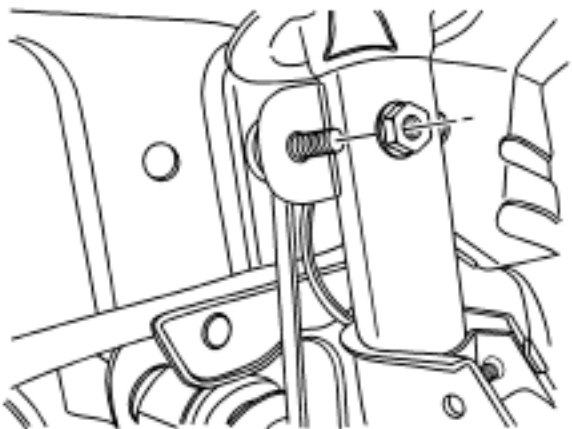

6. Remove the outer tie rod to knuckle nut.

Important: Do not allow the radiator to swing after removing the front suspension crossmember. The upper part of the radiator should be fixed using strings.

7. Remove the stabilizer shaft link to strut nut.