


Fuel Tank Filler Door Replacement


Removal Procedure

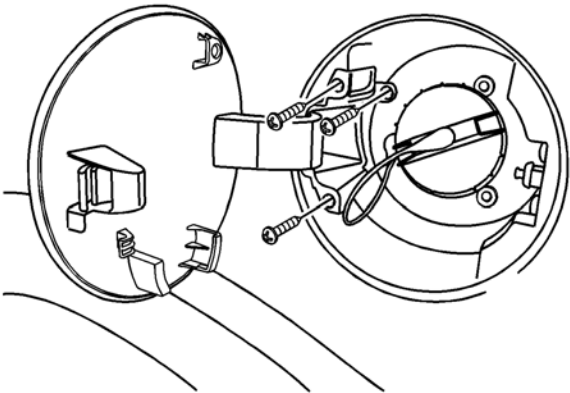

Remove the screws and the fuel filler door.

Installation Procedure

Notice: Refer to [Fastener Notice](#) in Cautions and Notices.

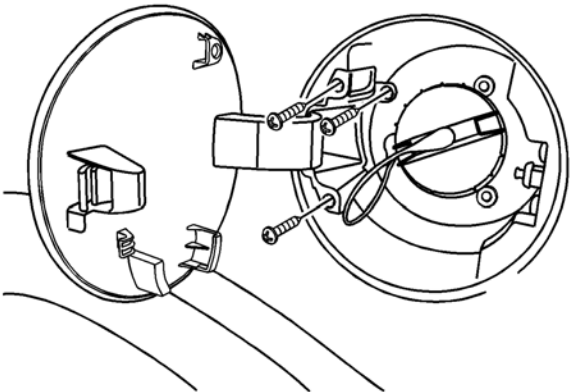

Install the fuel filler door with the screws.

Tighten
Tighten the fuel filler door screws to 4 N·m (35 lb in).