


Windshield Wiper System Module Replacement


Removal Procedure

Caution: Refer to [Battery Disconnect Caution](#) in the Preface section.

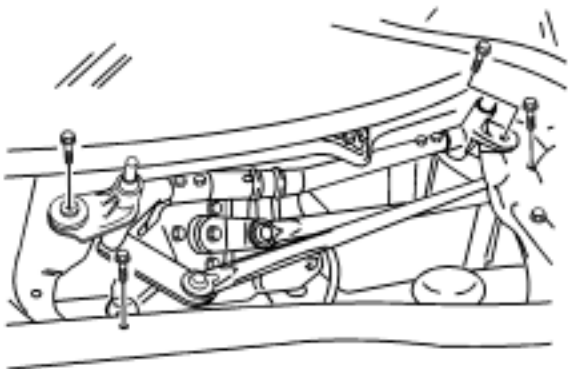

Important: The left-hand drive model is shown. The right-hand drive is similar.


1. Disconnect the negative battery cable. Refer to [Battery Negative Cable Disconnection and Connection](#) .
2. Remove the air inlet grille. Refer to [Air Inlet Grille Panel Replacement](#) .
3. Remove the wiper motor bolts.
4. Pry the wiper arm linkage off the motor driveshaft.
5. Disconnect the wiper module electrical connector at the motor.

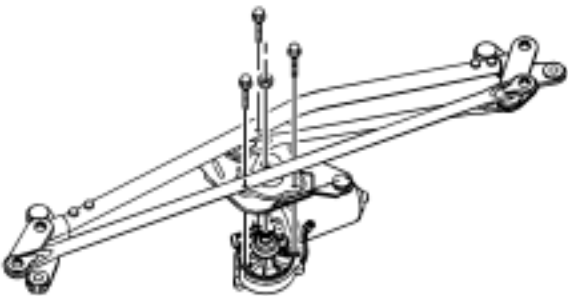

6. Remove the bolts and the wiper motor.

Installation Procedure

Notice: Refer to [Fastener Notice](#) in the Preface section.

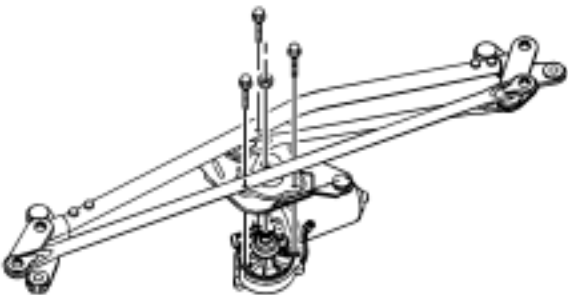

1. Install the wiper motor with the bolts.

Tighten
Tighten the wiper motor bolts to 4 N·m (35 lb in).

2. Connect the electrical connector.