


Liftgate Outside Handle Replacement (C100/Long Body)


Removal Procedure

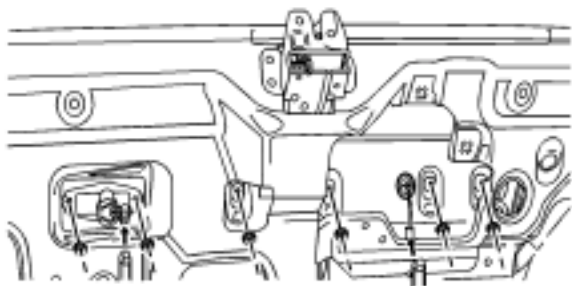

1. Disconnect the negative battery cable. Refer to [Battery Negative Cable Disconnection and Connection](#) .
2. Remove the liftgate lower trim. Refer to [Liftgate Trim Panel Replacement](#) .
3. Disconnect the electrical connector.
4. Remove the nuts and the liftgate outside handle.

Installation Procedure

Notice: Refer to [Fastener Notice](#) in the Preface section.

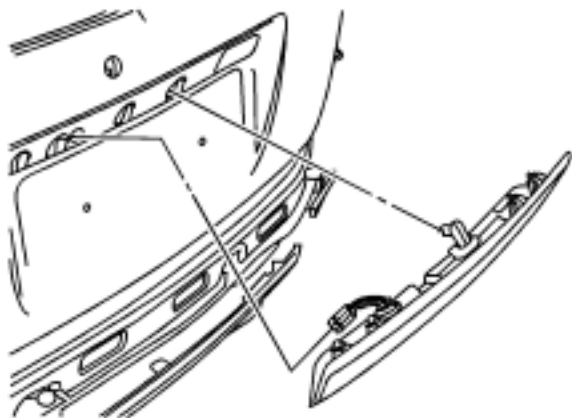

1. Install the liftgate outside handle with the nuts.

Tighten

Tighten the liftgate outside handle nut to 3 N·m (27 lb in).

2. Connect the electrical connector.
3. Remove the liftgate lower trim. Refer to [Liftgate Trim Panel Replacement](#) .
4. Connect the negative battery cable. Refer to [Battery Negative Cable Disconnection and Connection](#) .