


Knee Bolster Replacement

Removal Procedure



Important: Left - Hand Drive Shown, Right - Hand Drive Similar.

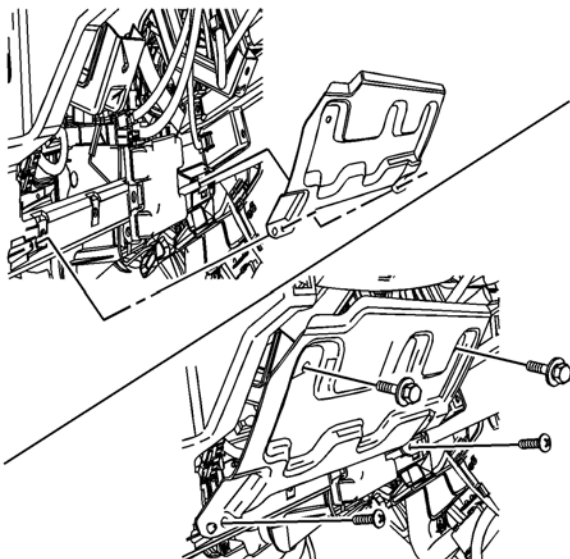

1. Remove the instrument panel lower left trim. Refer to [Instrument Panel Lower Trim Panel Replacement - Left Side](#) .
2. Remove the screws and bolts.
3. Remove the driver knee bolster.

Installation Procedure

Notice: Refer to [Fastener Notice](#) in Cautions and Notices.

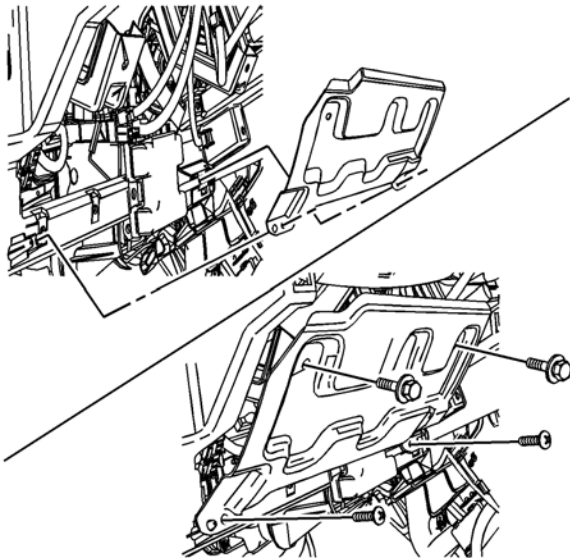

1. Install the driver knee bolster with the screws and bolts.
Tighten
 - Tighten the driver knee bolster screws to 2.5 N·m (23 lb in).
 - Tighten the driver knee bolster bolts to 20 N·m (15 lb ft).
2. Install the instrument panel lower left trim. Refer to [Instrument Panel Lower Trim Panel Replacement - Left Side](#) .