



# Seat Belt Retractor Replacement - No. 1 Rear


## Removal Procedure

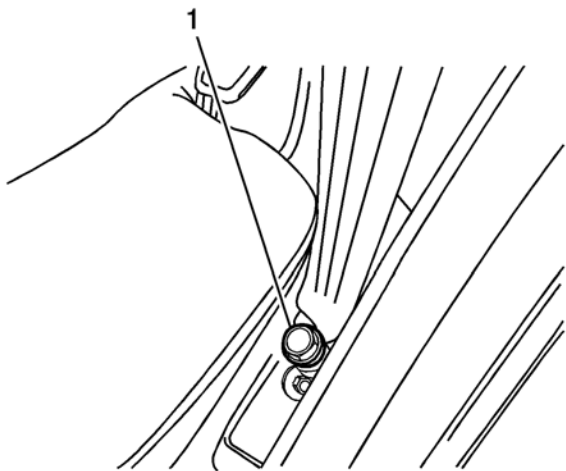

- 1. Remove the bolt (1) and the seat belt anchor on the wheelhouse trim panel.
- 2. Remove the quarter window trim panel.
- 3. Remove the wheelhouse trim panel.

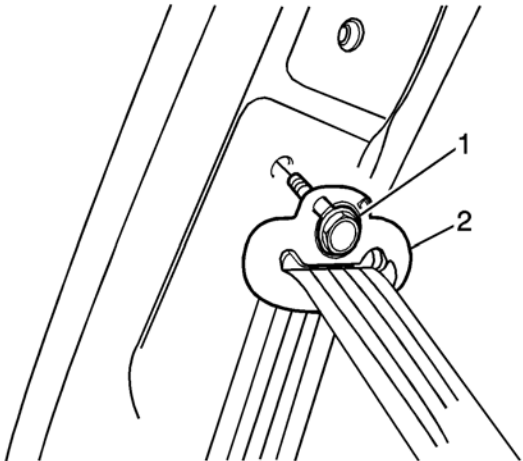

- 4. Remove the bolt (1) and the seat belt anchor (2).

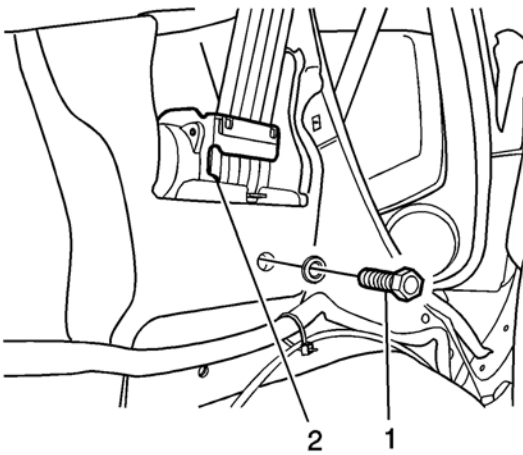

- 5. Remove the bolt (1) and the seat belt retractor (2).

## Installation Procedure

**Notice:** Refer to [Fastener Notice](#) in Cautions and Notices.