



# Liftgate Weatherstrip Replacement

## Removal Procedure

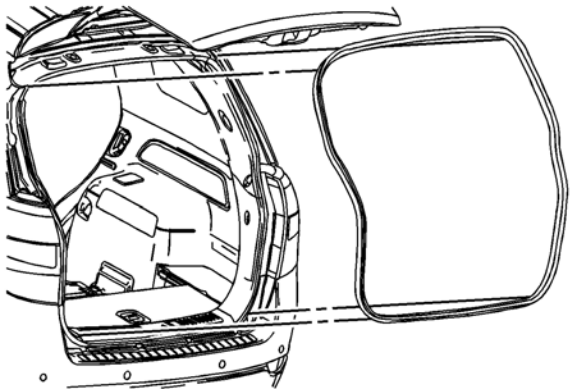

1. Open the liftgate.
2. Remove the weather strip from around the gutter.

## Installation Procedure

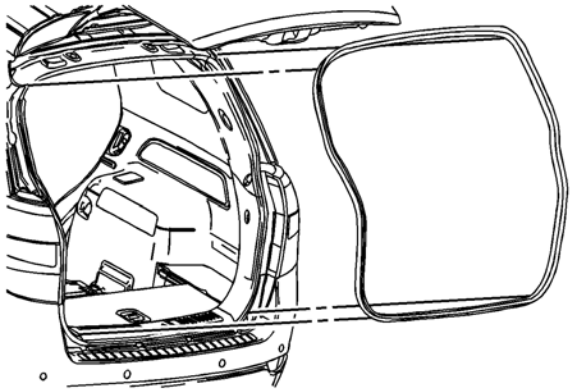

1. Install the weather strip onto the gutter flange.
2. Inspect the weather strip. Make sure that the clinch is completely seated onto the flange.
3. Install the new weather strip onto the gutter flange.