


Hood Hinge Replacement


Removal Procedure

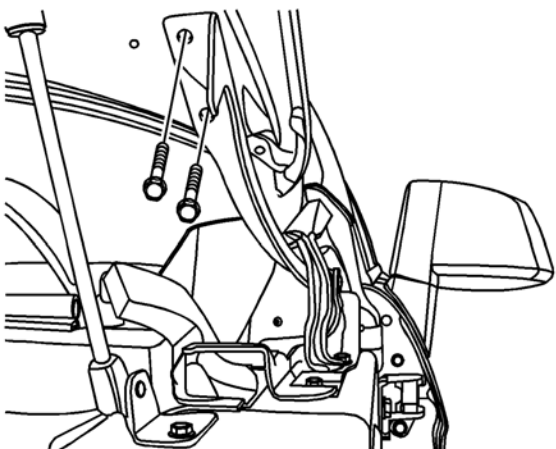

1. Remove the hood. Refer to [Hood Replacement](#) .
2. Remove the fender. Refer to [Front Fender Replacement](#) .
3. Remove the bolts and the hinge.

Installation Procedure

Notice: Refer to [Fastener Notice](#) in Cautions and Notices.

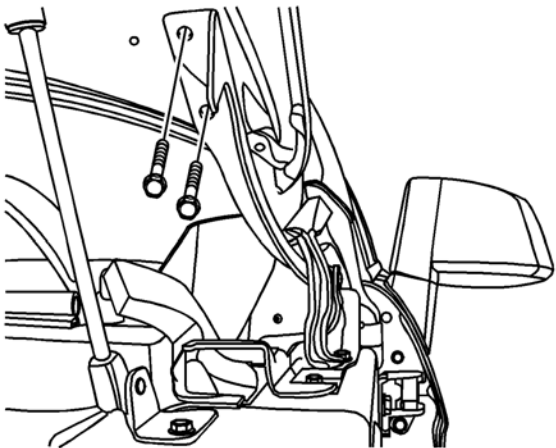

1. Install the hinge with the bolts.

Tighten

Tighten the hinge bolts to 24 N·m (18 lb ft).

2. Install the fender. Refer to [Front Fender Replacement](#) .
3. Install the hood. Refer to [Hood Replacement](#) .