



# Liftgate Window Latch Replacement

## Removal Procedure

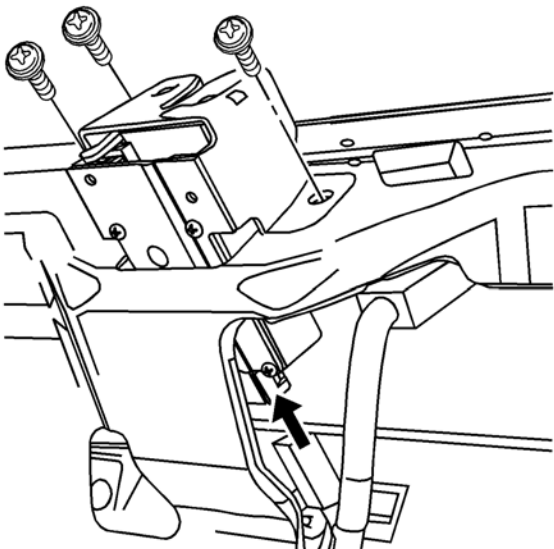

1. Remove the liftgate lower trim. Refer to [Liftgate Trim Panel Replacement](#) .
2. Remove the bolts and the liftgate window latch.
3. Disconnect the electrical connector.

## Installation Procedure

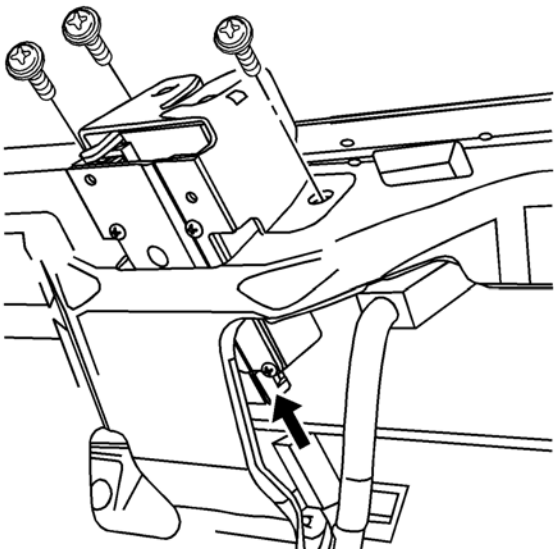

1. Connect the electrical connector.
2. Install the liftgate window latch with the bolts.
3. Install the liftgate lower trim. Refer to [Liftgate Trim Panel Replacement](#) .