



Front Seat Head Restraint Replacement

Removal Procedure

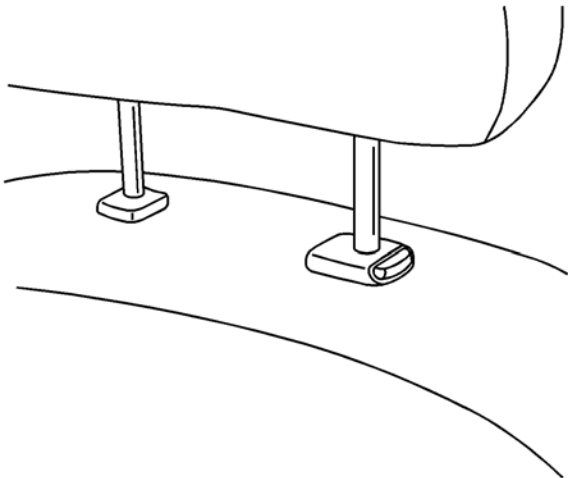


1. Press in the hand into the restraint adjust button and remove the head restraint from the seatback.

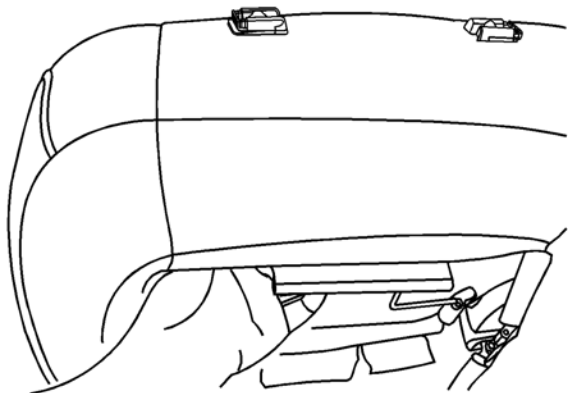

2. Insert the head back side of the seat and press the sleeve.
3. Remove the head restraint.

Installation Procedure

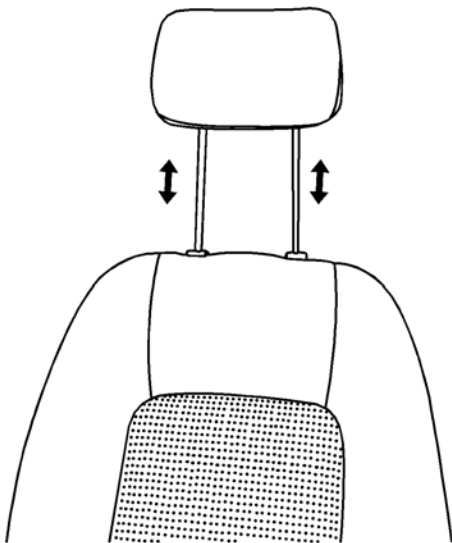

1. Install the guide sleeves into the seatback and press them down to engage the guide sleeve retaining latches.
2. Install the front seatback cover.
3. Install the head restraint into the guide sleeves.