


# Liftgate Applique Replacement


## Removal Procedure

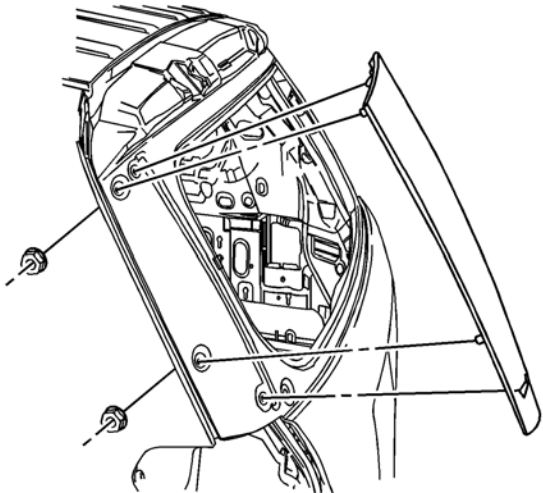

1. Remove the nuts from the applique.
2. Remove the liftgate applique from the vehicle.

## Installation Procedure

**Notice:** Refer to [Fastener Notice](#) in Cautions and Notices.

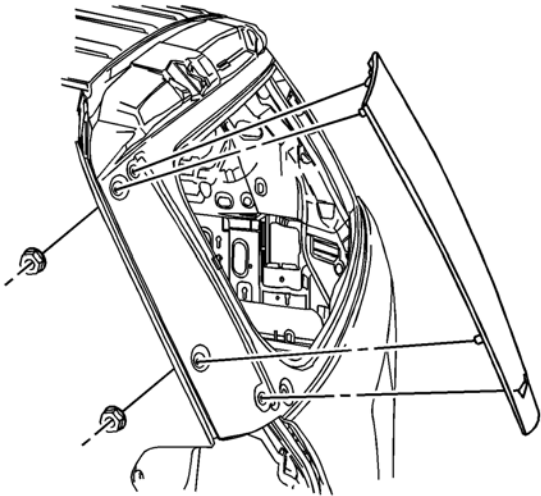

Install the liftgate applique with the nuts.

### Tighten

Tighten the liftgate applique nuts to 6 N·m (53 lb in).