



Front Seat Back Replacement

Removal Procedure

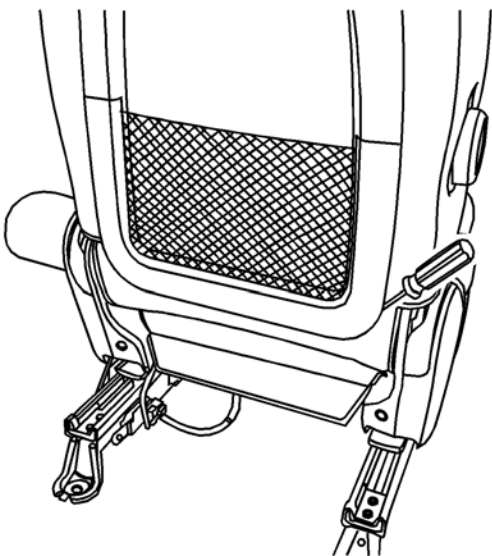


1. Remove the front seat from the vehicle. Refer to [Bucket Seat Replacement](#) .
2. Remove the back panel.

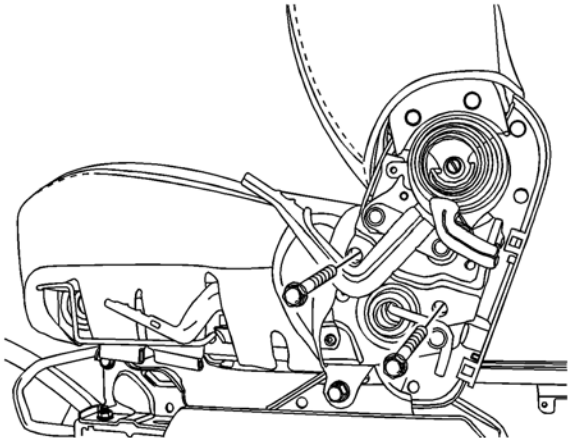

3. Remove the each seat trim.
4. Disconnect the electrical connectors.
5. Remove the bolts and the seatback.

Installation Procedure

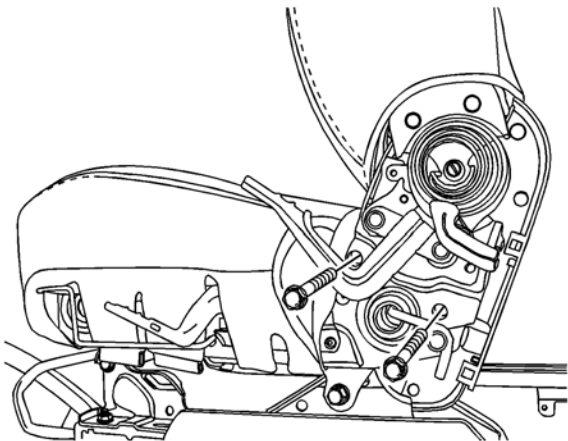

1. Install the seatback onto the seat cushion.

Notice: Refer to [Fastener Notice](#) in Cautions and Notices.

2. Install the front seatback bolts.

Tighten