



Important: Keep the cutting edge of the tool against the window.

8. Remove the window from the urethane adhesive.
- Leave a base of urethane approximately 2 mm (0.078 in) on the pinch-weld flange.
 - The only suitable lubrication is clear water.
 - Use [J 24402-A](#) , [J 39032](#) , or equivalent to remove the window.

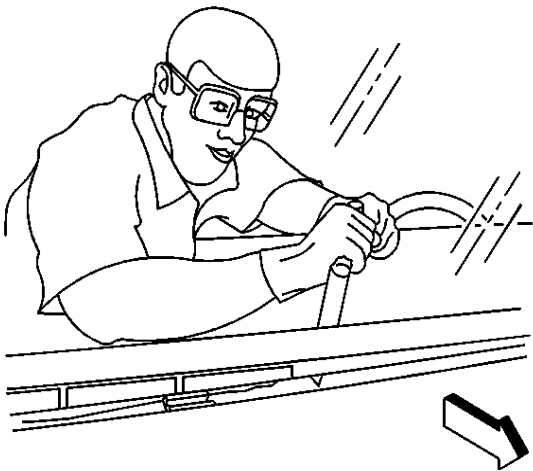

Important: Keep the cutting edge of the knife/tool against the window. Do this from inside the vehicle.

9. If necessary, use a long utility knife or similar tool to remove the bottom corners of the windshield from the urethane adhesive.

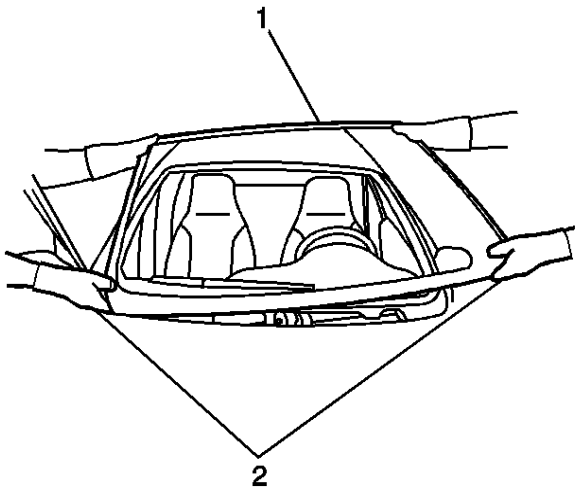

10. With the aid of an assistant (2), remove the windshield (1) from the vehicle.

Installation Procedure