



Door Lock Cylinder Replacement

Removal Procedure

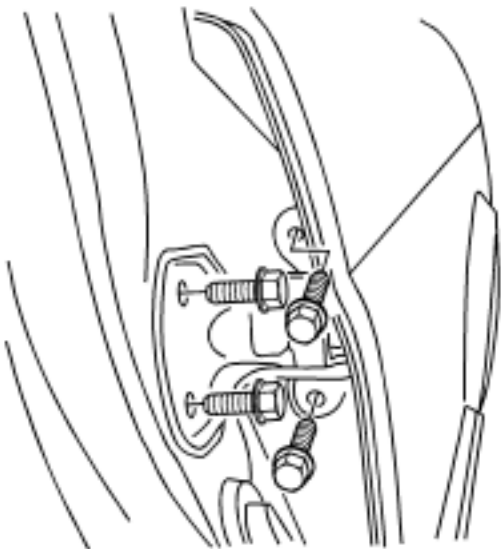

1. Remove the door water deflector. Refer to [Door Water Deflector Replacement](#) .
2. Disconnect the outside door handle lock rod.
3. Remove the retaining clip and the lock cylinder.

Installation Procedure

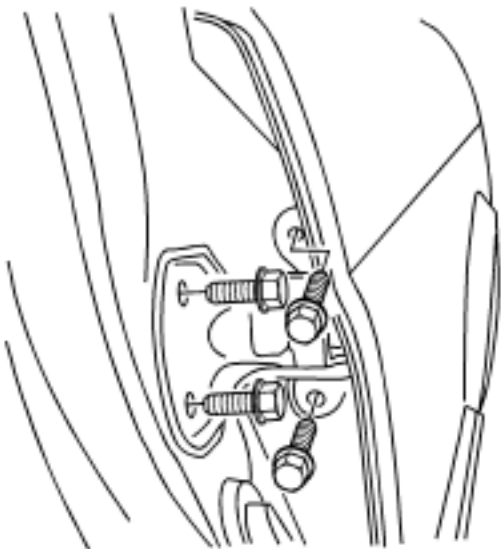

1. Install the lock cylinder with the retaining clip.
2. Connect the outside door handle lock rod.
3. Install the door water deflector. Refer to [Door Water Deflector Replacement](#) .