


Engine Shield Replacement


Removal Procedure

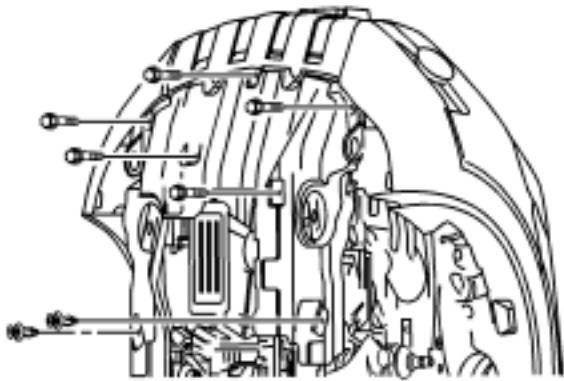

1. Raise and suitably support the vehicle. Refer to [Lifting and Jacking the Vehicle](#) .
2. Remove the bolts and the engine shield.

Installation Procedure

Notice: Refer to [Fastener Notice](#) in Cautions and Notices.

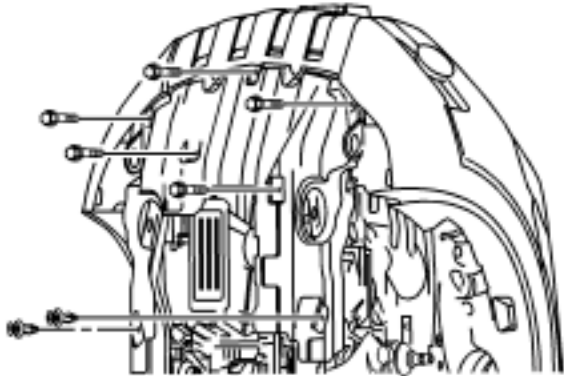

1. Install the engine shield with the bolts.

Tighten
Tighten the engine shield bolts to 10 N·m (89 lb in).

2. Lower the vehicle.