


Front Seat Trim Panel Replacement


Removal Procedure

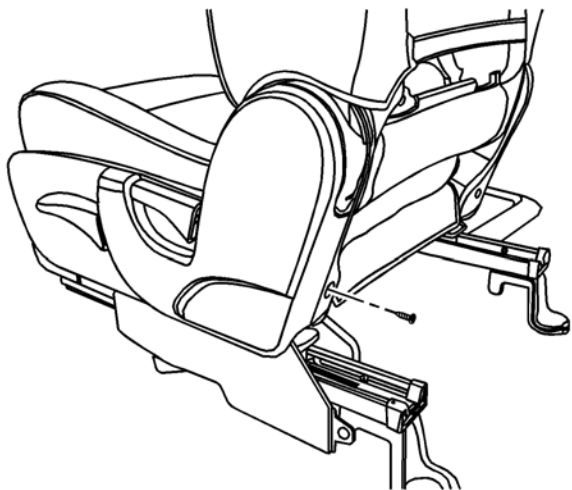

1. Remove the front seat from the vehicle. Refer to [Bucket Seat Replacement](#) .
2. Remove the screw and the recliner lever.
3. Remove the screws and the front seat trim.

Installation Procedure

Notice: Refer to [Fastener Notice](#) in Cautions and Notices.

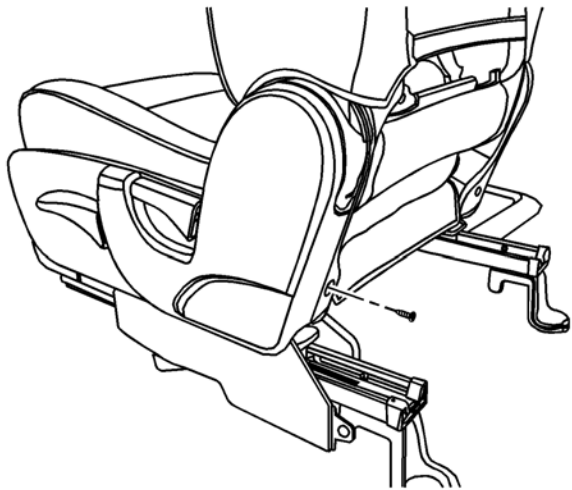

1. Install the front seat trim with the screws.

Tighten
Tighten the front seat trim screws to 12 N·m (9 lb ft).

2. Install the recliner lever.
3. Install the front seat in the vehicle. Refer to [Bucket Seat Replacement](#) .