


Windshield Wiper and Washer Switch Replacement


Removal Procedure

Caution: Refer to [Battery Disconnect Caution](#) in Cautions and Notices.

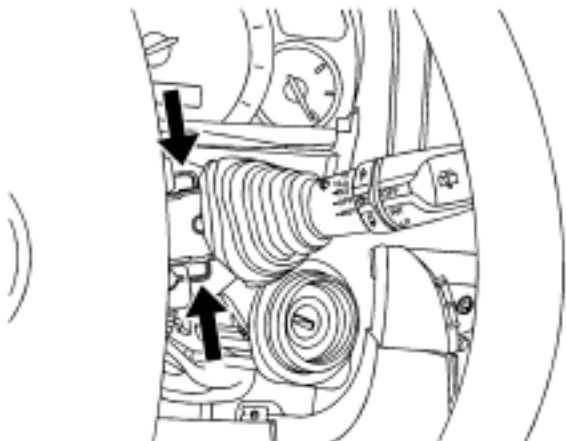

1. Disconnect the negative battery cable. Refer to [Battery Negative Cable Disconnection and Connection](#) .
2. Remove the steering column cover. Refer to [Steering Column Trim Covers Replacement](#) .
3. Remove the wiper switch by pushing in on the tabs on the top and the bottom of the switch housing.
4. Disconnect the electrical connectors from the wiper switch. Disconnect the cruise control connector, if equipped.

Installation Procedure

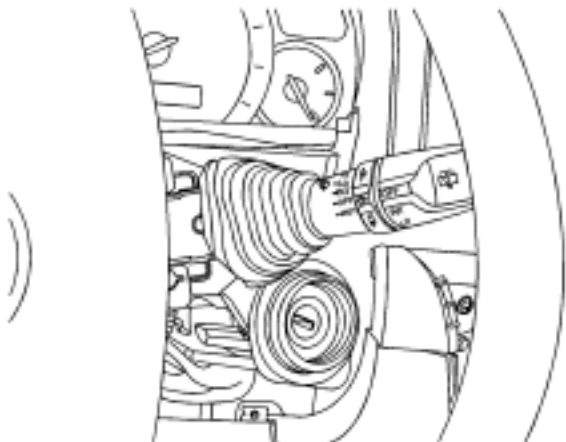

1. Connect the electrical connector to the wiper switch. Connect the cruise control connector, if equipped.
2. Install the wiper switch by snapping it into the switch housing.
3. Install the steering column cover. Refer to [Steering Column Trim Covers Replacement](#) .
4. Connect the negative battery cable. Refer to [Battery Negative Cable Disconnection and Connection](#) .