


Floor Panel Carpet Replacement


Removal Procedure

Caution: Refer to [Battery Disconnect Caution](#) in the Preface section.


1. Disconnect the negative battery cable. Refer to [Battery Negative Cable Disconnection and Connection](#) .
2. Remove the rear seat . Refer to [Rear Seat Replacement](#) and [Rear Number 2 Folding Seat Replacement](#) .
3. Remove the left and the right rear door sill plates. Refer to [Rear Side Door Sill Plate Replacement](#) .

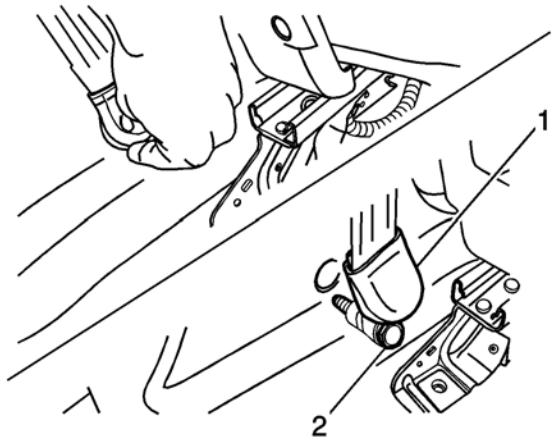

4. Remove the bolts (2) and the left and the right lower front seat belt anchors (1) from the center pillar garnish molding.
5. Remove the left and the right front door sill plates. Refer to [Front Side Door Sill Plate Replacement](#) .
6. Remove the left and the right center pillar lower garnish molding. Refer to [Center Pillar Lower Garnish Molding Replacement](#) .
7. Remove the front seats. Refer to [Bucket Seat Replacement](#) .
8. Remove the floor console. Refer to [Console Replacement](#) .

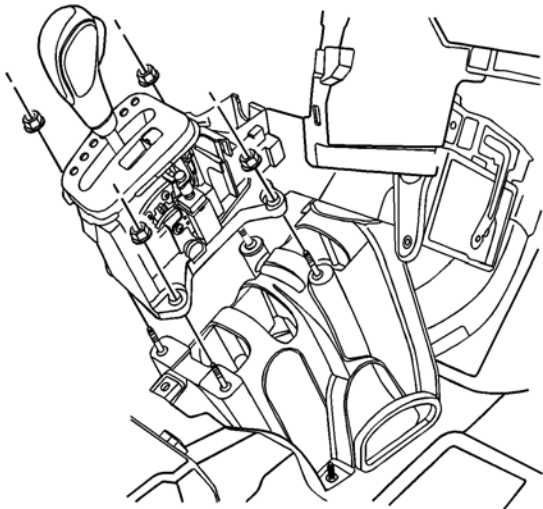

9. Remove the gearshift housing bolts and reposition the gearshift housing.
10. Remove the floor carpet retaining clips.

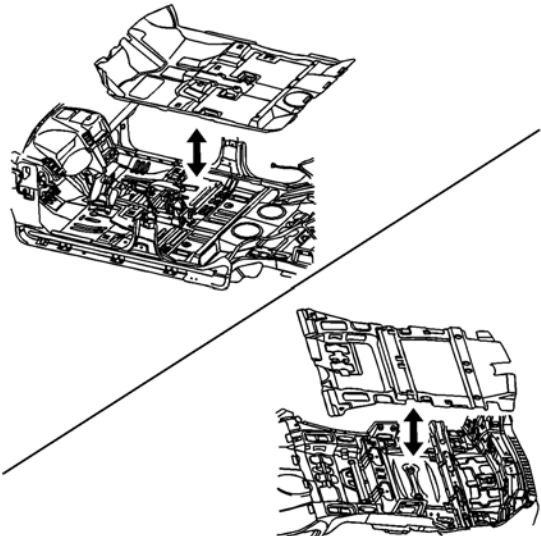

11. Remove the floor carpet.

Installation Procedure