



Hood Insulator Replacement

Removal Procedure

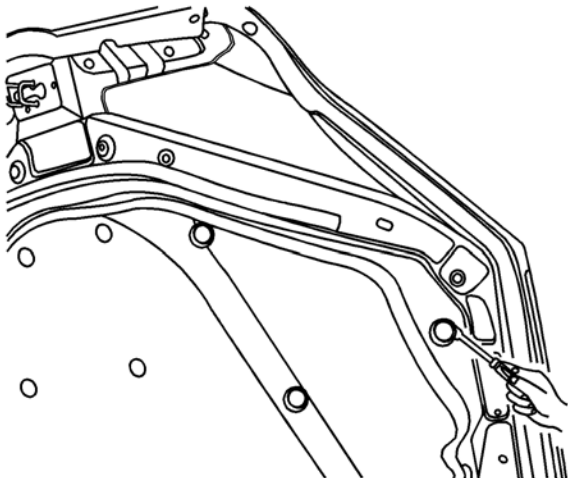

1. Open the hood.
2. Remove the washer hose from the hood.
3. Remove the retaining clips .
4. Remove the hood insulation.

Installation Procedure

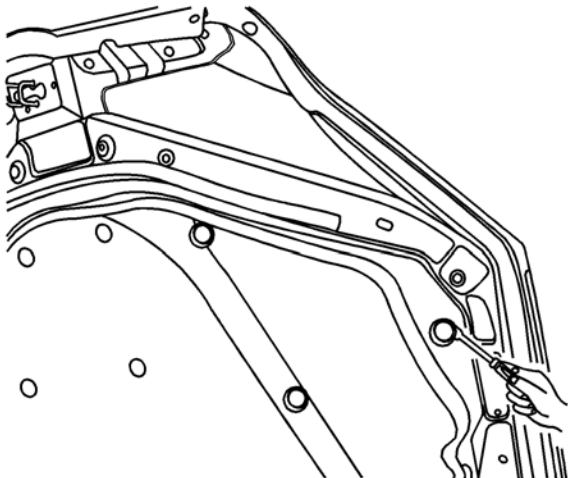

1. Install the hood insulation with the retaining clips.
2. Install the washer hose to the hood.
3. Close the hood.