


1. Secure the front muffler to the rubber hangers.


Notice: Refer to [Fastener Notice](#) in Cautions and Notices.

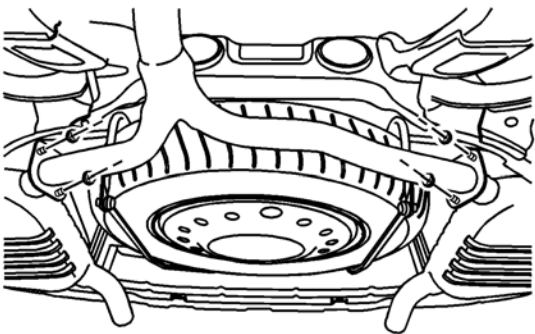

2. Install the nuts and the gaskets to the both rear muffler pipe flange. If damaged, replace the new gasket.

Tighten

Tighten the front muffler-to-rear muffler nuts to 40 N·m (30 lb ft).

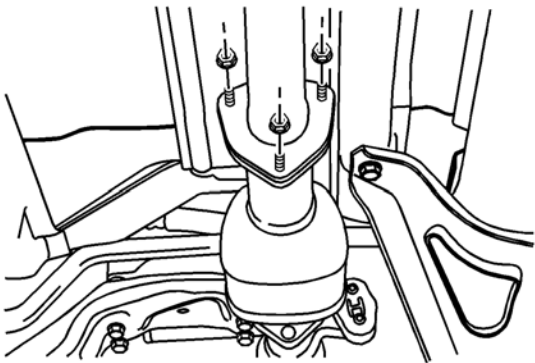

3. Install the nuts and gasket to the front muffler pipe-to-DPF. If damaged, replace the new gasket.

Tighten

Tighten the front muffler-to-DPF nuts to 30 N·m (22 lb ft).