


Quarter Window Replacement (Short Body C/105)

Removal Procedure


1. Disconnect the negative battery cable, if equipped with glass breakage detector. Refer to [Battery Negative Cable Disconnection and Connection](#) .

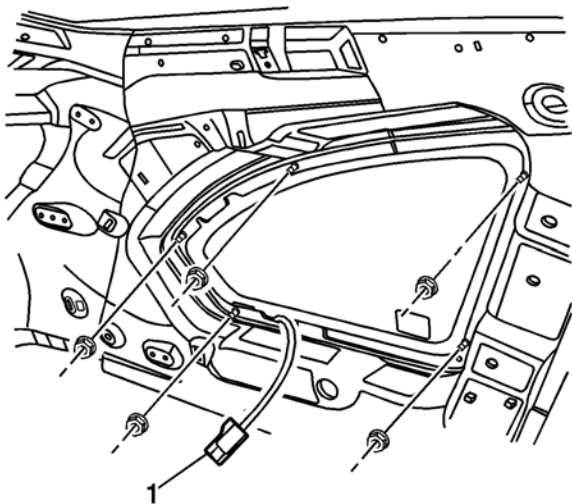

2. Remove the quarter window garnish molding. Refer to [Body Side Window Rear Garnish Molding Replacement](#) .
3. Disconnect the glass breakage detector connector (1), if equipped.
4. Remove the nuts and the outer window.

Installation Procedure

Notice: Refer to [Fastener Notice](#) in the Preface section.

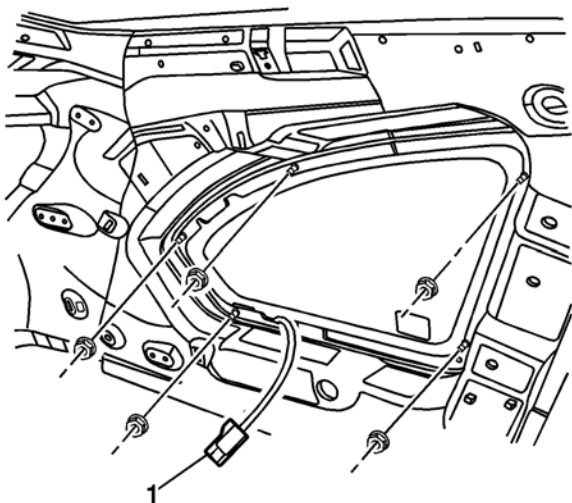

1. Install the outer window with the nuts.

Tighten

Tighten the outer window nuts to 6 N·m (53 lb in).

2. Connect the glass breakage detector connector (1), if equipped.
3. Install the quarter window garnish molding. Refer to [Body Side Window Rear Garnish Molding Replacement](#) .
4. Connect the negative battery cable. Refer to [Battery Negative Cable Disconnection and Connection](#) .