



# Rear Window Wiper Arm Replacement

## Removal Procedure

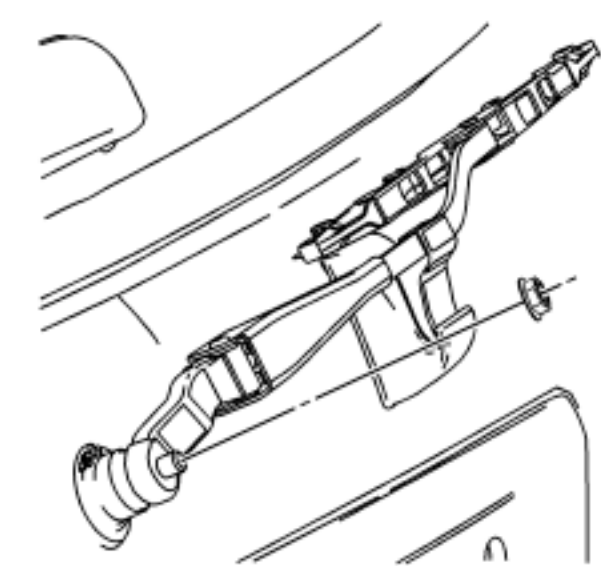

1. Remove the rear wiper arm finish cap to expose the wiper arm nut.
2. Remove the rear wiper arm nut.
3. Lift the rear wiper arm assembly away from the rear window and remove the wiper from pivot shaft.

## Installation Procedure

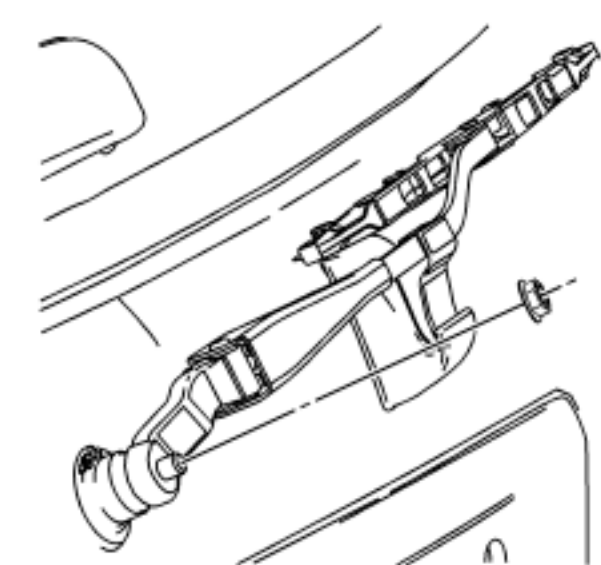

1. Position wiper blade assembly on the blackout strip as shown.

**Notice:** Refer to [Fastener Notice](#) in Cautions and Notices.

2. Install the rear wiper arm nut.

### Tighten

Tighten the nut to 22 N·m (16 lb ft).

3. Install the rear wiper arm finish cap.
4. Operate the windshield wipers and inspect for proper operation.