



Outer Belt Sealing Strip Replacement (C 100/Long Body)

Removal Procedure

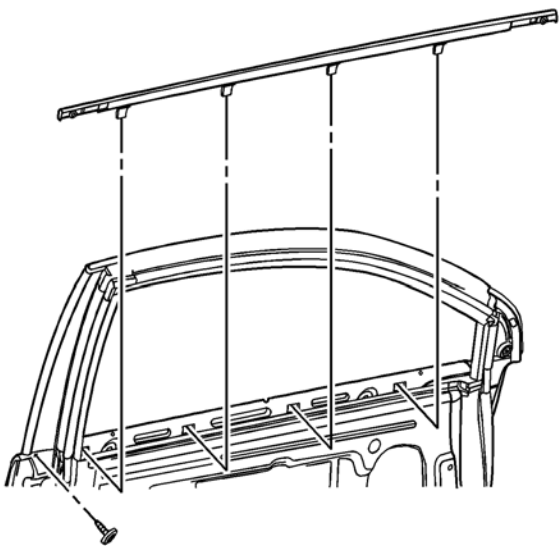

1. Lower the window completely.
2. Remove the window outer sealing strip screw.
3. Remove the outside rearview mirror. Refer to [Mirror Replacement](#) .
4. Lift the window outer sealing strip off the door.

Installation Procedure

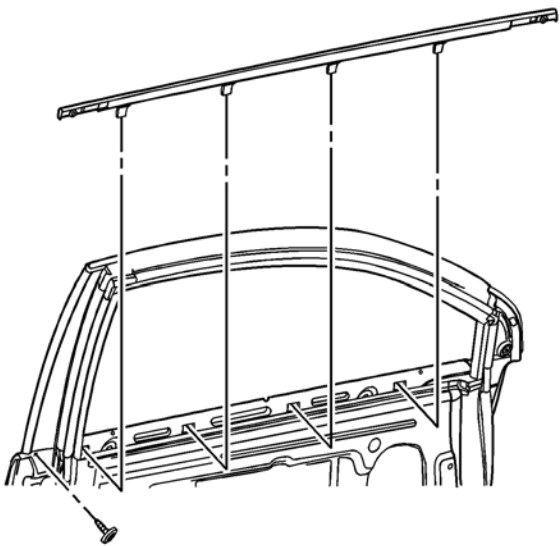

1. Press the outside channel molding onto the door.

Notice: Refer to [Fastener Notice](#) in the Preface section.

2. Install the window outer sealing strip screw.

Tighten

Tighten the window outer sealing strip screw to 1.3 N·m (12 lb in).

3. Install the outside rearview mirror. Refer to [Mirror Replacement](#) .
4. Raise the window.