


Outside Rear View Mirror Glass Replacement

Removal Procedure

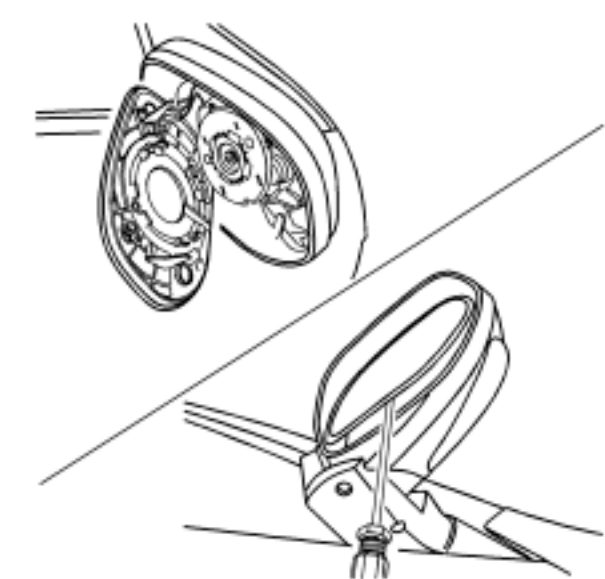


1. Disconnect the negative battery cable. Refer to [Battery Negative Cable Disconnection and Connection](#) .
2. Adjust the mirror glass so it is in the fully upward position.
3. Wrap the end of a flat-blade tool with tape or a clean shop rag.

Important: The heater element is fitted to the rear of the mirror glass and is susceptible to damage during mirror glass removal. Extreme care must be taken while removing the mirror glass.

4. Insert the flat-blade tool into the slot on the inside of the mirror glass.
5. Gently lever the mirror glass away from the motor assembly.
6. Remove the outside rearview mirror glass.
7. Disconnect the heating mirror connector.

Installation Procedure

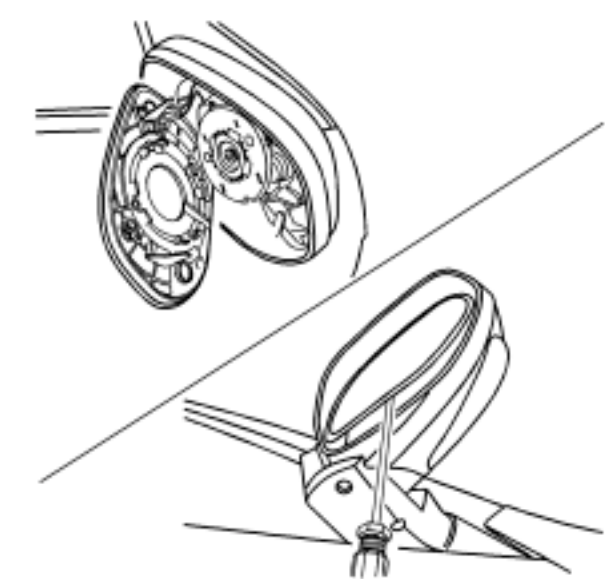

1. Connector the heating mirror connector.
2. Support the mirror housing and push the mirror glass squarely onto the motor assembly until it is.
3. Connector the negative battery cable. Refer to [Battery Negative Cable Disconnection and Connection](#) .