



# Air Inlet Grille Panel Replacement

## Removal Procedure

1. Raise the hood.
2. Remove the wiper arms. Refer to [Wiper Arm Replacement](#) .

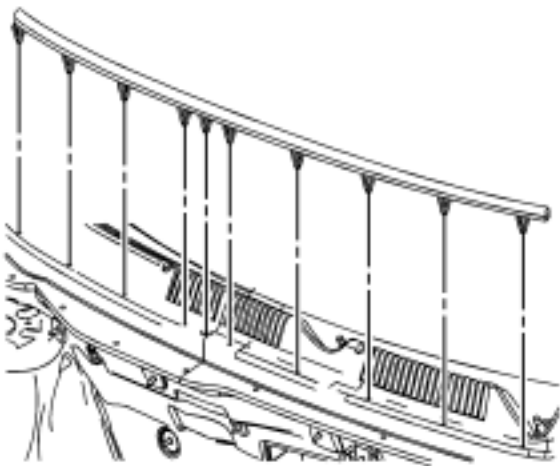


3. Remove the air inlet grille panel sealing strip.

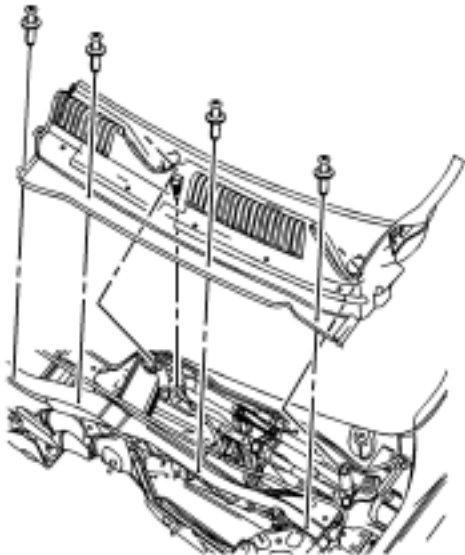

4. Remove the air inlet grille panel retaining clips, and the two-piece grille.

## Installation Procedure

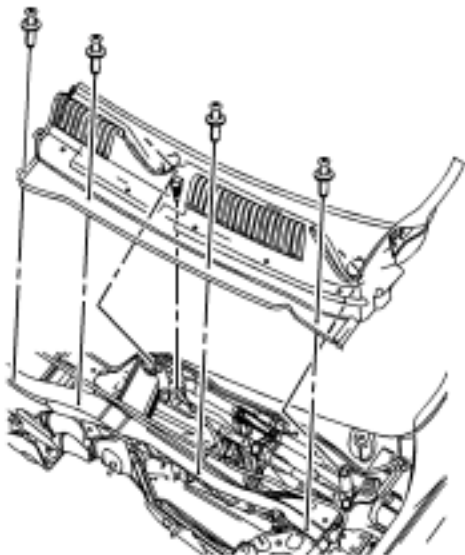

1. Install the two-piece grille with the air inlet grille panel retaining clips.