


Washer Pump Replacement


Removal Procedure

Caution: Refer to [Battery Disconnect Caution](#) in Cautions and Notices.

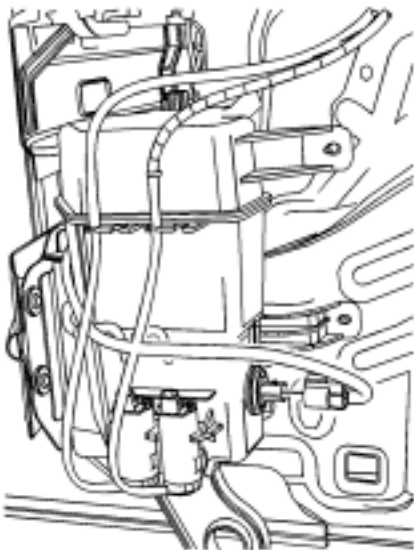

1. Disconnect the negative battery cable. Refer to [Battery Negative Cable Disconnection and Connection](#) .
2. Remove the right front wheel. Refer to [Tire and Wheel Removal and Installation](#) .
3. Remove the front fender liner. Refer to [Fender Liner Replacement](#) .
4. Remove the front bumper. Refer to [Front Bumper Fascia Replacement](#) .
5. Disconnect the electrical connector.
6. Disconnect the washer hose from the washer pump.
7. Remove the washer pump.

Installation Procedure

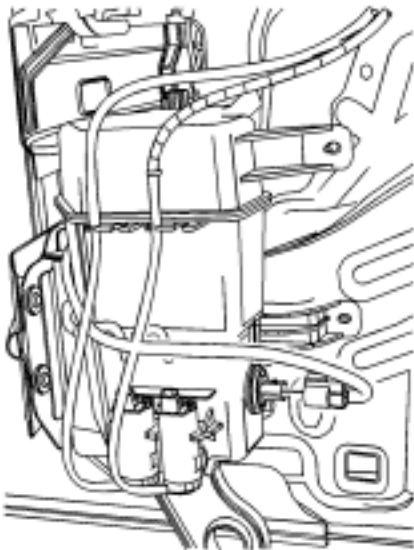

1. Install the washer pump.
2. Connect the washer hose to the washer pump.
3. Connect the electrical connector.
4. Install the front bumper. Refer to [Front Bumper Fascia Replacement](#) .
5. Install the front fender liner. Refer to [Fender Liner Replacement](#) .
6. Install the right front wheel. Refer to [Tire and Wheel Removal and Installation](#) .
7. Connect the negative battery cable. Refer to [Battery Negative Cable Disconnection and Connection](#) .