


Windshield Washer Solvent Container Replacement

Removal Procedure


Caution: Refer to [Battery Disconnect Caution](#) in the Preface section.

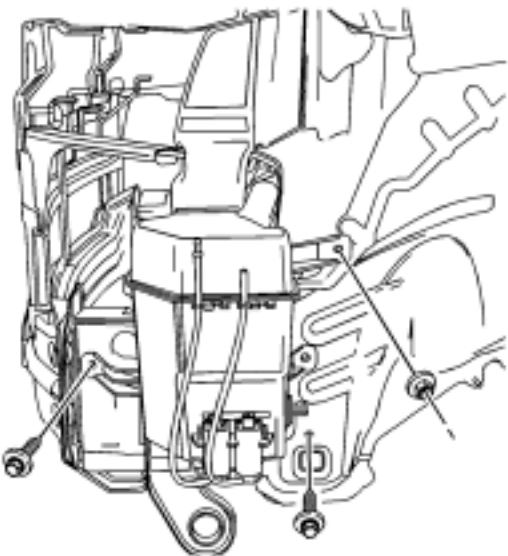

1. Disconnect the negative battery cable. Refer to [Battery Negative Cable Disconnection and Connection](#) .
2. Remove the front right wheel. Refer to [Tire and Wheel Removal and Installation](#) .
3. Remove the front fender liner. Refer to [Fender Liner Replacement](#) .
4. Remove the front fascia bumper. Refer to [Front Bumper Fascia Replacement](#) .
5. Disconnect the washer hose from the washer pump.
6. Disconnect the electrical connectors.
7. Remove the bolts and the reservoir.

Installation Procedure

Notice: Refer to [Fastener Notice](#) in the Preface section.

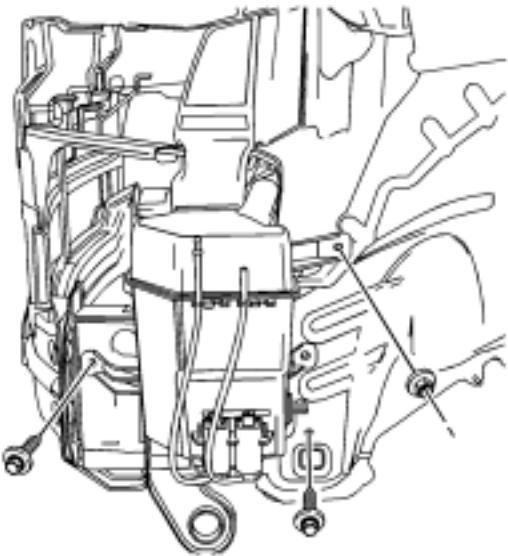

1. Install the reservoir with the bolts.

Tighten
Tighten the washer fluid reservoir bolts to 10 N·m (89 lb in).

2. Connect the electrical connector.
3. Connect the washer hose to the washer pump.
4. Install the front fascia bumper. Refer to [Front Bumper Fascia Replacement](#) .
5. Install the front fender liner. Refer to [Fender Liner Replacement](#) .
6. Install the front right wheel. Refer to [Tire and Wheel Removal and Installation](#) .
7. Connect the negative battery cable. Refer to [Battery Negative Cable Disconnection and Connection](#) .