



Hood Strut Replacement

Removal Procedure

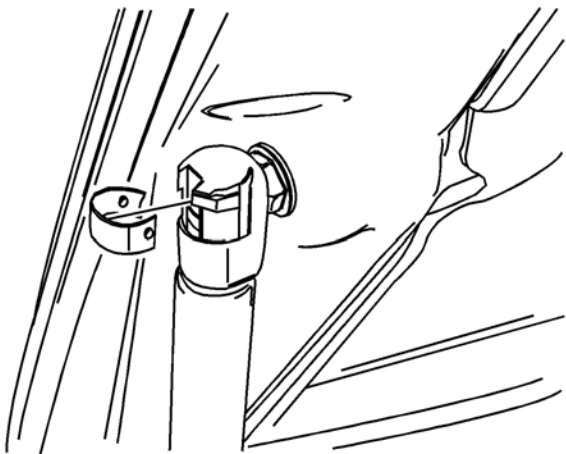

1. Raise and support the hood.
2. Remove the retaining clips and the hood strut.

Installation Procedure

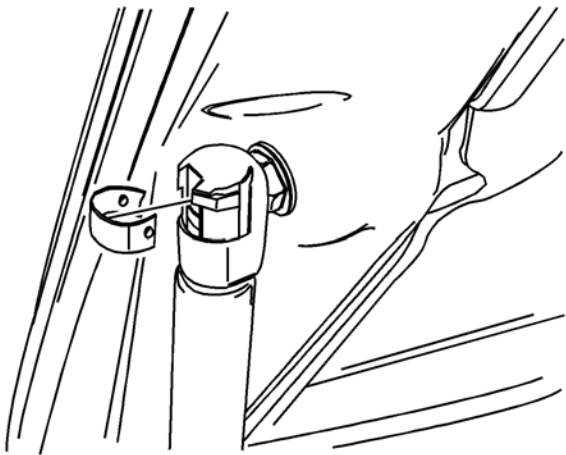

1. Install the retaining clips and the hood strut.
2. Close the hood.