



Door Bottom Auxiliary Sealing Strip Replacement

Removal Procedure

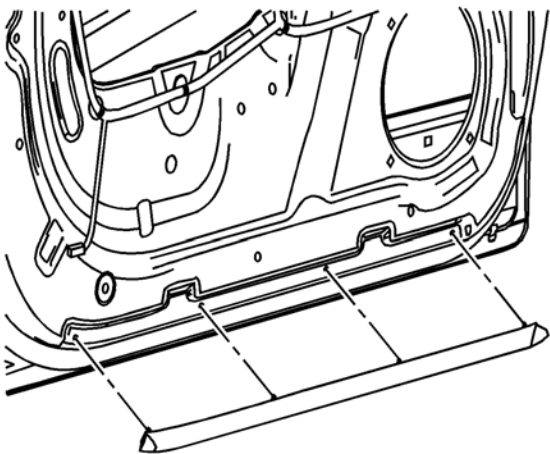

1. Open the door.
2. Remove the door lower weather-strip from the door.

Installation Procedure

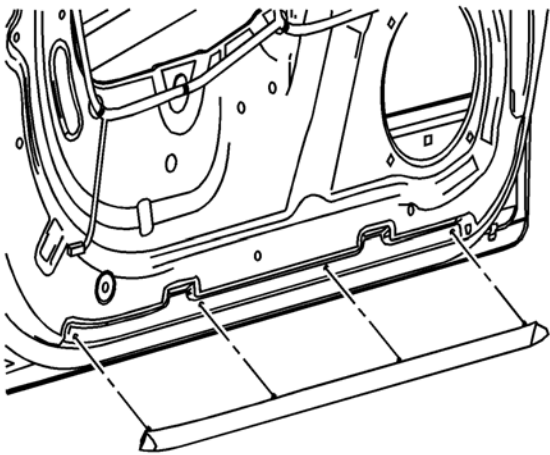

1. Install the door lower weather-strip.
2. Close door.