


Door Window Guide Replacement (Front)


Removal Procedure

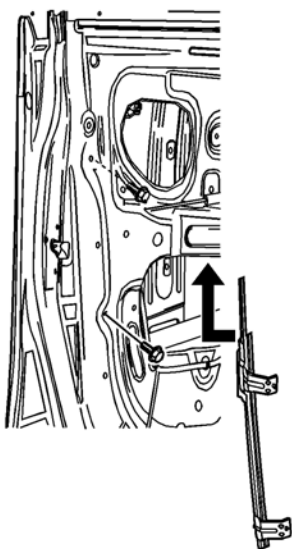

1. Disconnect the negative battery cable. Refer to [Battery Negative Cable Disconnection and Connection](#) .
2. Remove the front door glass. Refer to [Front Side Door Window Replacement](#) .
3. Remove the power window regulator. Refer to [Door Window Regulator Replacement](#) .
4. Remove the bolts and the front window guide.

Installation Procedure

Notice: Refer to [Fastener Notice](#) in the Preface section.

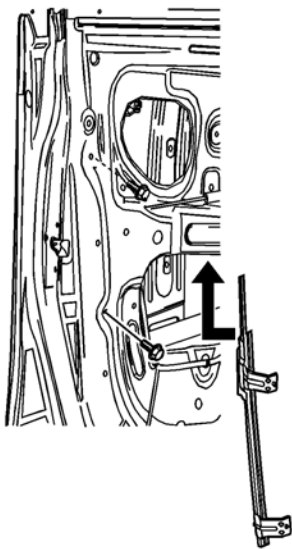

1. Install the front window guide with the bolts.

Tighten

Tighten the front window guide bolts to 10 N·m (89 lb in).

2. Install the power window regulator. Refer to [Door Window Regulator Replacement](#) .
3. Install the front door glass. Refer to [Front Side Door Window Replacement](#) .
4. Connect the negative battery cable. Refer to [Battery Negative Cable Disconnection and Connection](#) .